

ภาคผนวก ญ
ใบรายงานผลการวิเคราะห์



คุณภาพอากาศ



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@eco-thai.net
SAMPLING SOURCE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (UTM WGS 84 ZONE 47P 726659E 1735616N)
SAMPLE TYPE : AMBIENT
SAMPLING DATE : *, **
SAMPLING TIME : *, **
SAMPLING BY :
ANALYZED BY :

RECEIVED DATE : SEPTEMBER 12, 2022
ANALYTICAL DATE : SEPTEMBER 12-16, 2022
REPORT NO. : 2022-U073380
WORK NO. : 2022-006607
ANALYSIS NO. : T22AR979-0001 - T22AR979-0002

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT		REGULATORY STANDARD
			L33-8-A8 : MOO 10 BAN NA RAI DIEW		
			* T22AR979-0001	** T22AR979-0002	
TOTAL SUSPENDED PARTICULATE	mg/m³	GRAVIMETRIC (HIGH VOLUME METHOD)	0.031	0.029	≤ 0.33
PARTICULATE MATTER (≤ 10 µm)	mg/m³	GRAVIMETRIC (HIGH VOLUME METHOD)	0.012	0.014	≤ 0.12
SAMPLE CONDITION			COMPLETE	COMPLETE	

REMARK
TSP, PM10 : REFERENCE CONDITION IS 25 DEGREE CELSIUS AT 1 ATMOSPHERE.
TSP : US EPA, CODE OF FEDERAL REGULATION SEARCH RESULTS, 40 CFR-CHAPTER I PART 50, APPENDIX B.
PM10 : US EPA, CODE OF FEDERAL REGULATION SEARCH RESULTS, 40 CFR-CHAPTER I PART 50, APPENDIX J.
REGULATORY STANDARD : AMBIENT AIR QUALITY STANDARDS, NOTIFICATION OF THE NATIONAL ENVIRONMENT BOARD NO.24, B.E.2547 (2004).
* : SAMPLING FROM 09:00 HOUR ON SEPTEMBER 4, 2022 TO 09:00 HOUR ON SEPTEMBER 5, 2022.
** : SAMPLING FROM 09:00 HOUR ON SEPTEMBER 5, 2022 TO 09:00 HOUR ON SEPTEMBER 6, 2022.



LABORATORY SUPERVISOR

SEPTEMBER 22, 2022



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@eco-thai.net
SAMPLING SOURCE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (UTM WGS 84 ZONE 47P 726659E 1735616N)
SAMPLE TYPE : AMBIENT
SAMPLING DATE : *
SAMPLING TIME : *
SAMPLING BY :
ANALYZED BY :

RECEIVED DATE : SEPTEMBER 12, 2022
ANALYTICAL DATE : SEPTEMBER 12-16, 2022
REPORT NO. : 2022-U073381
WORK NO. : 2022-006607
ANALYSIS NO. : T22AR979-0003

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD
			L33-8-A8 : MOO 10 BAN NA RAI DIEW T22AR979-0003	
TOTAL SUSPENDED PARTICULATE	mg/m ³	GRAVIMETRIC (HIGH VOLUME METHOD)	0.026	≤ 0.33
PARTICULATE MATTER (≤ 10 µm)	mg/m ³	GRAVIMETRIC (HIGH VOLUME METHOD)	0.012	≤ 0.12
SAMPLE CONDITION			COMPLETE	

REMARK
TSP, PM10 : REFERENCE CONDITION IS 25 DEGREE CELSIUS AT 1 ATMOSPHERE.
TSP : US EPA, CODE OF FEDERAL REGULATION SEARCH RESULTS, 40 CFR-CHAPTER I PART 50, APPENDIX B.
PM10 : US EPA, CODE OF FEDERAL REGULATION SEARCH RESULTS, 40 CFR-CHAPTER I PART 50, APPENDIX J.
REGULATORY STANDARD : AMBIENT AIR QUALITY STANDARDS, NOTIFICATION OF THE NATIONAL ENVIRONMENT BOARD NO.24, B.E.2547 (2004).
* : SAMPLING FROM 09:00 HOUR ON SEPTEMBER 6, 2022 TO 09:00 HOUR ON SEPTEMBER 7, 2022.



LABORATORY SUPERVISOR

SEPTEMBER 22, 2022



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecohtai.net
MEASURING PLACE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)
MEASURING TYPE : AMBIENT (AIR) **RECEIVED DATE** : SEPTEMBER 4-7, 2022
MEASURING DATE : SEPTEMBER 4-7, 2022 **ANALYTICAL DATE** : SEPTEMBER 4-7, 2022
MEASURING TIME : * **REPORT NO.** : 2022-U072119
MEASURING METHOD : NON-DISPERSIVE INFRARED DETECTION **WORK NO.** : 2022-006607
MEASURED BY : [REDACTED] **ANALYSIS NO.** : T22AR979-0001 - T22AR979-0003

TIME*	RESULT		
	CARBON MONOXIDE		
	L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)		
	SEPTEMBER 4 - 5, 2022 T22AR979-0001	SEPTEMBER 5 - 6, 2022 T22AR979-0002	SEPTEMBER 6 - 7, 2022 T22AR979-0003
08:00-16:00 HOUR	0.62	1.53	1.25
16:00-00:00 HOUR	1.04	1.14	1.55
00:00-08:00 HOUR	1.32	1.08	1.08
UNIT	ppm		



SEPTEMBER 19, 2022

• DO NOT COPY PARTIAL OF THIS ANALYSIS REPORT WITHOUT OFFICIAL APPROVAL.
• REPORTED ANALYSIS REFERS TO SUBMITTED SAMPLE ONLY.

ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecohtai.net
MEASURING PLACE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)
MEASURING TYPE : AMBIENT (AIR) **RECEIVED DATE** : SEPTEMBER 4-7, 2022
MEASURING DATE : SEPTEMBER 4-7, 2022 **ANALYTICAL DATE** : SEPTEMBER 4-7, 2022
MEASURING TIME : * **REPORT NO.** : 2022-U072120
MEASURING METHOD : CHEMILUMINESCENCE **WORK NO.** : 2022-006607
MEASURED BY : [REDACTED] **ANALYSIS NO.** : T22AR979-0001 - T22AR979-0003

TIME *	RESULT (ppm)		
	NITROGEN DIOXIDE		
	L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)		
	SEPTEMBER 4 - 5, 2022 T22AR979-0001	SEPTEMBER 5 - 6, 2022 T22AR979-0002	SEPTEMBER 6 - 7, 2022 T22AR979-0003
08:00-09:00 HOUR	0.0064	0.0090	0.0078
09:00-10:00 HOUR	0.0053	0.0084	0.0093
10:00-11:00 HOUR	0.0045	0.0080	0.0093
11:00-12:00 HOUR	0.0045	0.0077	0.0090
12:00-13:00 HOUR	0.0040	0.0077	0.0081
13:00-14:00 HOUR	0.0037	0.0077	0.0082
14:00-15:00 HOUR	0.0031	0.0074	0.0075
15:00-16:00 HOUR	0.0031	0.0076	0.0073
16:00-17:00 HOUR	0.0032	0.0075	0.0068
17:00-18:00 HOUR	0.0035	0.0068	0.0072
18:00-19:00 HOUR	0.0035	0.0069	0.0076
19:00-20:00 HOUR	0.0034	0.0074	0.0079
20:00-21:00 HOUR	0.0040	0.0083	0.0076
21:00-22:00 HOUR	0.0040	0.0084	0.0066
22:00-23:00 HOUR	0.0050	0.0091	0.0057
23:00-00:00 HOUR	0.0056	0.0091	0.0056
00:00-01:00 HOUR	0.0064	0.0088	0.0058
01:00-02:00 HOUR	0.0065	0.0079	0.0059
02:00-03:00 HOUR	0.0062	0.0069	0.0055
03:00-04:00 HOUR	0.0067	0.0062	0.0057
04:00-05:00 HOUR	0.0074	0.0058	0.0057
05:00-06:00 HOUR	0.0082	0.0060	0.0060
06:00-07:00 HOUR	0.0085	0.0063	0.0061
07:00-08:00 HOUR	0.0087	0.0067	0.0068



SEPTEMBER 19, 2022

• DO NOT COPY PARTIAL OF THIS ANALYSIS REPORT WITHOUT OFFICIAL APPROVAL.
• REPORTED ANALYSIS REFERS TO SUBMITTED SAMPLE ONLY.



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecoantai.net
MEASURING PLACE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)
MEASURING TYPE : AMBIENT (AIR) **RECEIVED DATE** : SEPTEMBER 4-7, 2022
MEASURING DATE : SEPTEMBER 4-7, 2022 **ANALYTICAL DATE** : SEPTEMBER 4-7, 2022
MEASURING TIME : * **REPORT NO.** : 2022-U072122
MEASURING METHOD : UV FLUORESCENCE **WORK NO.** : 2022-006607
MEASURED BY : [REDACTED] **ANALYSIS NO.** : T22AR979-0001 - T22AR979-0003

TIME *	RESULT (ppm)		
	SULPHUR DIOXIDE		
	L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)		
	SEPTEMBER 4 - 5, 2022 T22AR979-0001	SEPTEMBER 5 - 6, 2022 T22AR979-0002	SEPTEMBER 6 - 7, 2022 T22AR979-0003
08:00-09:00 HOUR	0.0019	0.0015	0.0011
09:00-10:00 HOUR	0.0021	0.0012	0.0011
10:00-11:00 HOUR	0.0023	0.0012	0.0012
11:00-12:00 HOUR	0.0020	0.0012	0.0013
12:00-13:00 HOUR	0.0019	0.0010	0.0016
13:00-14:00 HOUR	0.0017	0.0009	0.0017
14:00-15:00 HOUR	0.0018	0.0008	0.0017
15:00-16:00 HOUR	0.0019	0.0008	0.0019
16:00-17:00 HOUR	0.0020	0.0009	0.0022
17:00-18:00 HOUR	0.0020	0.0011	0.0022
18:00-19:00 HOUR	0.0019	0.0014	0.0019
19:00-20:00 HOUR	0.0019	0.0017	0.0016
20:00-21:00 HOUR	0.0021	0.0018	0.0016
21:00-22:00 HOUR	0.0020	0.0020	0.0015
22:00-23:00 HOUR	0.0020	0.0020	0.0013
23:00-00:00 HOUR	0.0019	0.0020	0.0011
00:00-01:00 HOUR	0.0018	0.0017	0.0009
01:00-02:00 HOUR	0.0017	0.0017	0.0009
02:00-03:00 HOUR	0.0018	0.0016	0.0009
03:00-04:00 HOUR	0.0020	0.0018	0.0010
04:00-05:00 HOUR	0.0020	0.0017	0.0010
05:00-06:00 HOUR	0.0021	0.0017	0.0012
06:00-07:00 HOUR	0.0020	0.0014	0.0017
07:00-08:00 HOUR	0.0019	0.0012	0.0018
AVERAGE 24 HOUR	0.0019	0.0014	0.0014

SEPTEMBER 19, 2022



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL. 0 2937 1124-9 e-mail : anucha@ecoantai.net
SAMPLING SOURCE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)
SAMPLE TYPE : AMBIENT (AIR) **RECEIVED DATE** : SEPTEMBER 4-7, 2022
SAMPLING DATE : *, **, *** **ANALYTICAL DATE** : SEPTEMBER 4-7, 2022
SAMPLING METHOD : 1/ **REPORT NO.** : 2022-U072122
SAMPLING BY : [REDACTED] **WORK NO.** : 2022-006607
ANALYZED BY : [REDACTED] **ANALYSIS NO.** : T22AR979-0001 - T22AR979-0003

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT		
			L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P726659E 1735616N)		
			*	**	***
			T22AR979-0001	T22AR979-0002	T22AR979-0003
TOTAL HYDROCARBONS	ppm	BAG SAMPLING, TOTAL HYDROCARBON ANALYZER (FID) METHOD 1/	2.00	2.30	1.98
SAMPLE CONDITION			SAMPLING BAG		

REMARK

- * : SAMPLING FROM 08:00 HOUR ON SEPTEMBER 4, 2022 TO 08:00 HOUR ON SEPTEMBER 5, 2022
** : SAMPLING FROM 08:00 HOUR ON SEPTEMBER 5, 2022 TO 08:00 HOUR ON SEPTEMBER 6, 2022
*** : SAMPLING FROM 08:00 HOUR ON SEPTEMBER 6, 2022 TO 08:00 HOUR ON SEPTEMBER 7, 2022

LABORATORY SUPERVISOR

SEPTEMBER 19, 2022

ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecothai.net
MEASURING PLACE : L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)
MEASURING TYPE : AMBIENT (AIR) **RECEIVED DATE** : SEPTEMBER 4-7, 2022
MEASURING DATE : SEPTEMBER 4-7, 2022 **ANALYTICAL DATE** : SEPTEMBER 4-7, 2022
MEASURING TIME : * **REPORT NO.** : 2022-U072123
MEASURING METHOD : WIND SPEED & WIND DIRECTION EQUIPMENT **WORK NO.** : 2022-006607
MEASURED BY : [REDACTED] **ANALYSIS NO.** : T22AR979-0001 - T22AR979-0003

TIME *	RESULT (m/s)					
	L33-8-A8 : MOO 10 BAN NA RAI DIEW (2) (UTM WGS 84 ZONE 47P 726659E 1735616N)					
	SEPTEMBER 4 - 5, 2022		SEPTEMBER 5 - 6, 2022		SEPTEMBER 6 - 7, 2022	
	T22AR979-0001		T22AR979-0002		T22AR979-0003	
	WIND SPEED	WIND DIRECTION	WIND SPEED	WIND DIRECTION	WIND SPEED	WIND DIRECTION
08:00-09:00 HOUR	0.5	NNE	0.5	NNE	0.8	ENE
09:00-10:00 HOUR	0.8	E	0.6	NE	1.1	E
10:00-11:00 HOUR	0.7	E	0.9	E	1.1	ENE
11:00-12:00 HOUR	0.8	NNE	1.1	ENE	1.1	E
12:00-13:00 HOUR	0.6	NE	1.0	NE	0.9	ENE
13:00-14:00 HOUR	0.6	E	1.1	NE	0.7	ENE
14:00-15:00 HOUR	0.6	NE	0.8	NNE	0.6	NNE
15:00-16:00 HOUR	0.5	ENE	1.0	E	0.8	ENE
16:00-17:00 HOUR	0.6	ENE	0.7	ENE	0.7	ENE
17:00-18:00 HOUR	0.7	ENE	0.6	E	0.7	NE
18:00-19:00 HOUR	0.6	ENE	0.8	NNE	0.7	NE
19:00-20:00 HOUR	0.9	E	0.9	E	0.7	ENE
20:00-21:00 HOUR	0.7	NE	0.8	E	0.8	ENE
21:00-22:00 HOUR	0.9	NNE	0.9	ENE	0.7	ENE
22:00-23:00 HOUR	1.1	NNE	0.8	ENE	0.9	ENE
23:00-00:00 HOUR	1.1	NE	0.7	ENE	0.9	ENE
00:00-01:00 HOUR	0.8	NE	0.9	E	0.7	NE
01:00-02:00 HOUR	0.9	ENE	1.0	NE	1.0	NE
02:00-03:00 HOUR	0.9	E	1.0	NE	0.7	NE
03:00-04:00 HOUR	1.0	NE	1.1	E	0.9	E
04:00-05:00 HOUR	0.8	NNE	1.0	NNE	0.9	E
05:00-06:00 HOUR	0.9	ENE	1.1	NNE	0.8	NE
06:00-07:00 HOUR	0.8	NE	0.8	NNE	0.6	NE
07:00-08:00 HOUR	0.8	E	0.9	NNE	0.8	NNE

LABORATORY SUPERVISOR

SEPTEMBER 19, 2022



คุณภาพน้ำผิวดิน



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecothai.net
SAMPLING SOURCE : L33-8-SW11 (UTM WGS 84 ZONE 47P 726832E 1735730N)
SAMPLE TYPE : SURFACE WATER
SAMPLING DATE : SEPTEMBER 19, 2022
SAMPLING TIME : 15:00 HOUR
SAMPLING METHOD ° : GRAB, GRAB AND STERILE TECHNIQUE
SAMPLING BY ° : [REDACTED]
ANALYZED BY : [REDACTED]

RECEIVED DATE : SEPTEMBER 20, 2022
ANALYTICAL DATE : SEPTEMBER 20-29, 2022
REPORT NO. : 2022-U078524
WORK NO. : 2022-006607
ANALYSIS NO. : T22A5631-0001

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-SW11 T22A5631-0001		
pH °	-	ELECTROMETRIC METHOD AT SITE (SM:4500-H+ B)	8.0 (32°C)	5.0-9.0	-
TEMPERATURE °	°C	THERMOMETER AT SITE (SM: 2550 B)	32	n°	-
ELECTRICAL CONDUCTIVITY °	µmhos/cm	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2510 B)	244 (32°C)	-	0.1
SALINITY °	ppt	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2520 B)	0.2	-	0.1
TOTAL SUSPENDED SOLIDS °	mg/L	TOTAL SUSPENDED SOLIDS DRIED AT 103-105 °C (SM: 2540 D)	5.2	-	5.0
TOTAL DISSOLVED SOLIDS °	mg/L	TOTAL DISSOLVED SOLIDS DRIED AT 180 °C (SM: 2540 C)	136	-	25
FAT, OIL AND GREASE °	mg/L	LIQUID-LIQUID, PARTITION-GRAVIMETRIC METHOD (SM: 5520 B)	ND	-	3
TOTAL PETROLEUM HYDROCARBONS °	mg/L	SOXHLET EXTRACTION METHOD (SM: 5520 D AND 5520 F)	ND	-	3
METALS					
ARSENIC °	mg/L As	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	0.0003	≤ 0.01	0.0003
BARIUM °	mg/L Ba	NITRIC ACID-HYDROCHLORIC ACID DIGESTION AND INDUCTIVELY COUPLED PLASMA (ICP) METHOD (SM: 3030 F AND 3120 B)	0.165	-	0.003
CADMIUM °	mg/L Cd	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤0.005*, ≤ 0.05**	0.002
COPPER °	mg/L Cu	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.1	0.002
IRON °	mg/L Fe	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.194	-	0.005
LEAD °	mg/L Pb	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.05	0.003



PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-SW11 T22A5631-0001		
MANGANESE °	mg/L Mn	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.063	≤ 1.0	0.002
MERCURY °	mg/L Hg	IN-HOUSE METHOD: UAE.TP.HEM.002 (COLD VAPOUR ATOMIC ABSORPTION SPECTROMETRIC METHOD); SM: 3112 B	ND	≤ 0.002	0.0001
NICKEL °	mg/L Ni	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.1	0.005
SELENIUM °	mg/L Se	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	-	0.0005
TOTAL CHROMIUM °	mg/L Cr	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	-	0.005
ZINC °	mg/L Zn	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 1.0	0.003
MICROBIOLOGY					
FAECAL COLIFORM BACTERIA °	MPN/100 mL	MULTIPLE-TUBE FERMENTATION TECHNIQUE (SM: 9221 E)	130	≤ 4,000	18

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-SW11 T22AS631-0001		
VOLATILE ORGANIC COMPOUNDS					
BENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	-	0.20
ETHYLBENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	-	0.20
TOLUENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	-	0.20
TOTAL XYLENES °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.60	-	0.60
SAMPLE CONDITION					
WATER'S COLOUR/TURBID SEDIMENT			YELLOW/CLEAR YELLOW		

° : ISO/IEC 17025 ACCREDITED BY THAI INDUSTRIAL STANDARDS INSTITUTE (TISI)

° : ISO/IEC 17025 ACCREDITED BY DEPARTMENT OF SCIENCE SERVICE (DSS)

° : VERIFIED BY OWN LABORATORY QUALITY SYSTEM, BUT STILL NOT ACCREDITED

IN-HOUSE : BASED ON STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23RD EDITION, 2017.

SM : STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23RD EDITION, 2017.

REGULATORY STANDARD : SURFACE WATER QUALITY STANDARDS CLASS 3, NOTIFICATION OF THE NATIONAL ENVIRONMENT BOARD, NO.8, B.E. 2537 ISSUED UNDER THE ENHANCEMENT AND CONSERVATION OF NATIONAL ENVIRONMENTAL QUALITY ACT, B.E. 2535, PUBLISHED IN THE ROYAL GOVERNMENT GAZETTE, VOL. 111, PART 16, DATED FEBRUARY 24, B.E. 2537 (1994).

CLASS 3 : MEDIUM CLEAN FRESH SURFACE WATER RESOURCES USED FOR
(1) CONSUMPTION, BUT PASSING THROUGH ON ORDINARY TREATMENT PROCESS BEFORE USING
(2) AGRICULTURE

n° : NATURALLY BUT CHANGING NOT MORE THAN 3°C

≤ 0.005° : WHEN WATER HARDNESS NOT MORE THAN 100 mg/L AS CaCO₃

≤ 0.05° : WHEN WATER HARDNESS MORE THAN 100 mg/L AS CaCO₃

ND : NON-DETECTABLE.

LABORATORY SUPERVISOR

OCTOBER 6, 2022

ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecothai.net
SAMPLING SOURCE : L33-8-SW12 (UTM WGS 84 ZONE 47P 727197E 1735790N)
SAMPLE TYPE : SURFACE WATER
SAMPLING DATE : SEPTEMBER 19, 2022
SAMPLING TIME : 15:20 HOUR
SAMPLING METHOD ° : GRAB, GRAB AND STERILE TECHNIQUE
SAMPLING BY ° : [REDACTED]
ANALYZED BY : [REDACTED]

RECEIVED DATE : SEPTEMBER 20, 2022
ANALYTICAL DATE : SEPTEMBER 20-29, 2022
REPORT NO. : 2022-U078525
WORK NO. : 2022-006607
ANALYSIS NO. : T22AS631-0002

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-SW12 T22AS631-0002		
pH °	-	ELECTROMETRIC METHOD AT SITE (SM:4500-H° B)	7.8 (30°C)	5.0-9.0	-
TEMPERATURE °	°C	THERMOMETER AT SITE (SM: 2550 B)	30	n°	-
ELECTRICAL CONDUCTIVITY °	µmhos/cm	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2510 B)	141 (30°C)	-	0.1
SALINITY °	ppt	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2520 B)	0.1	-	0.1
TOTAL SUSPENDED SOLIDS °	mg/L	TOTAL SUSPENDED SOLIDS DRIED AT 103-105 °C (SM: 2540 D)	ND	-	5.0
TOTAL DISSOLVED SOLIDS °	mg/L	TOTAL DISSOLVED SOLIDS DRIED AT 180 °C (SM: 2540 C)	96	-	25
FAT, OIL AND GREASE °	mg/L	LIQUID-LIQUID, PARTITION-GRAVIMETRIC METHOD (SM: 5520 B)	ND	-	3
TOTAL PETROLEUM HYDROCARBONS °	mg/L	SOXHLET EXTRACTION METHOD (SM: 5520 D AND 5520 F)	ND	-	3
METALS					
ARSENIC °	mg/L As	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	0.0006	≤ 0.01	0.0003
BARIUM °	mg/L Ba	NITRIC ACID-HYDROCHLORIC ACID DIGESTION AND INDUCTIVELY COUPLED PLASMA (ICP) METHOD (SM: 3030 F AND 3120 B)	0.046	-	0.003
CADMIUM °	mg/L Cd	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.005°, ≤ 0.05°	0.002
COPPER °	mg/L Cu	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.1	0.002
IRON °	mg/L Fe	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.269	-	0.005
LEAD °	mg/L Pb	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.05	0.003



PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-SW12 T22A5631-0002		
MANGANESE ^c	mg/L Mn	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.101	≤ 1.0	0.002
MERCURY ^b	mg/L Hg	IN-HOUSE METHOD: UAE.TP.HEM.002 (COLD VAPOUR ATOMIC ABSORPTION SPECTROMETRIC METHOD); SM: 3112 B	ND	≤ 0.002	0.0001
NICKEL ^c	mg/L Ni	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.1	0.005
SELENIUM ^c	mg/L Se	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	-	0.0005
TOTAL CHROMIUM ^c	mg/L Cr	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	-	0.005
ZINC ^c	mg/L Zn	IN-HOUSE METHOD: UAE.TP.SW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 1.0	0.003
MICROBIOLOGY					
FAECAL COLIFORM BACTERIA ^b	MPN/100 mL	MULTIPLE-TUBE FERMENTATION TECHNIQUE (SM: 9221 E)	790	≤ 4,000	1.8

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-SW12 T22A5631-0002		
VOLATILE ORGANIC COMPOUNDS					
BENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	-	0.20
ETHYLBENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	-	0.20
TOLUENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	-	0.20
TOTAL XYLENES °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.60	-	0.60
SAMPLE CONDITION					
WATER'S COLOUR/TURBID SEDIMENT			YELLOW/TURBID YELLOW		

^a : ISO/IEC 17025 ACCREDITED BY THAI INDUSTRIAL STANDARDS INSTITUTE (TISI)

^b : ISO/IEC 17025 ACCREDITED BY DEPARTMENT OF SCIENCE SERVICE (DSS)

^c : VERIFIED BY OWN LABORATORY QUALITY SYSTEM, BUT STILL NOT ACCREDITED

IN-HOUSE : BASED ON STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23rd EDITION, 2017.

SM : STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23rd EDITION, 2017.

REGULATORY STANDARD : SURFACE WATER QUALITY STANDARDS CLASS 3, NOTIFICATION OF THE NATIONAL ENVIRONMENTAL BOARD, NO.8, B.E. 2537 ISSUED UNDER THE ENHANCEMENT AND CONSERVATION OF NATIONAL ENVIRONMENTAL QUALITY ACT, B.E. 2535, PUBLISHED IN THE ROYAL GOVERNMENT GAZETTE, VOL. 111, PART 16, DATED FEBRUARY 24, B.E. 2537 (1994).

CLASS 3 : MEDIUM CLEAN FRESH SURFACE WATER RESOURCES USED FOR
(1) CONSUMPTION, BUT PASSING THROUGH ON ORDINARY TREATMENT PROCESS BEFORE USING
(2) AGRICULTURE

n¹ : NATURALLY BUT CHANGING NOT MORE THAN 3°C

≤ 0.005* : WHEN WATER HARDNESS NOT MORE THAN 100 mg/L AS CaCO₃

≤ 0.05** : WHEN WATER HARDNESS MORE THAN 100 mg/L AS CaCO₃

ND : NON-DETECTABLE.



LABORATORY SUPERVISOR

OCTOBER 6, 2022

คุณภาพน้ำใต้ดิน



ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecothai.net
SAMPLING SOURCE : L33-8-GW8 (UTM WGS 84 ZONE 47P 725021E 1733681N)
SAMPLE TYPE : GROUNDWATER
SAMPLING DATE : SEPTEMBER 19, 2022
SAMPLING TIME : 15:50 HOUR
SAMPLING METHOD ° : GRAB
SAMPLING BY ° : [REDACTED]
ANALYZED BY : [REDACTED]

RECEIVED DATE : SEPTEMBER 20, 2022
ANALYTICAL DATE : SEPTEMBER 20-29, 2022
REPORT NO. : 2022-U078230
WORK NO. : 2022-006607
ANALYSIS NO. : T22AS632-0001

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-GW8 T22AS632-0001		
pH °	-	ELECTROMETRIC METHOD AT SITE (SM:4500-H° B)	7.0 (29°C)	-	-
TEMPERATURE °	°C	THERMOMETER AT SITE (SM: 2550 B)	29	-	-
ELECTRICAL CONDUCTIVITY °	µmhos/cm	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2510 B)	1,089 (29°C)	-	0.1
SALINITY °	ppt	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2520 B)	0.7	-	0.1
TOTAL SUSPENDED SOLIDS °	mg/L	TOTAL SUSPENDED SOLIDS DRIED AT 103-105 °C (SM: 2540 D)	ND	-	5.0
TOTAL DISSOLVED SOLIDS °	mg/L	TOTAL DISSOLVED SOLIDS DRIED AT 180 °C (SM: 2540 C)	508	-	25
FAT, OIL AND GREASE °	mg/L	LIQUID-LIQUID, PARTITION-GRAVIMETRIC METHOD (SM: 5520 B)	ND	-	3
TOTAL PETROLEUM HYDROCARBONS °	mg/L	SOXHLET EXTRACTION METHOD (SM: 5520 D AND 5520 F)	ND	-	3
METALS					
BARIUM °	mg/L Ba	NITRIC ACID-HYDROCHLORIC ACID DIGESTION AND INDUCTIVELY COUPLED PLASMA (ICP) METHOD (SM: 3030 F AND 3120 B)	0.059	-	0.003
ARSENIC °	mg/L As	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	≤ 0.01	0.0003
CADMIUM °	mg/L Cd	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.003	0.002
COPPER °	mg/L Cu	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 1.0	0.002
IRON °	mg/L Fe	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.439	-	0.005
LEAD °	mg/L Pb	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.01	0.003

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-GW8 T22AS632-0001		
MANGANESE °	mg/L Mn	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.028	≤ 0.5	0.002
MERCURY °	mg/L Hg	IN-HOUSE METHOD: UAE.TP.HEM.002 (COLD VAPOUR ATOMIC ABSORPTION SPECTROMETRIC METHOD); SM: 3112 B	ND	≤ 0.001	0.0001
NICKEL °	mg/L Ni	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.02	0.005
SELENIUM °	mg/L Se	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	≤ 0.01	0.0005
TOTAL CHROMIUM °	mg/L Cr	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	-	0.005
ZINC °	mg/L Zn	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 5.0	0.003
VOLATILE ORGANIC COMPOUNDS					
BENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 5	0.20
ETHYLBENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 700	0.20
TOLUENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 1,000	0.20



PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			L33-8-GW8 T22AS632-0001		
TOTAL XYLENES °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.60	≤ 10,000	0.60
SAMPLE CONDITION WATER'S COLOUR/TURBID SEDIMENT			YELLOW/CLEAR YELLOW		

° : ISO/IEC 17025 ACCREDITED BY THAI INDUSTRIAL STANDARDS INSTITUTE (TISI)

° : ISO/IEC 17025 ACCREDITED BY DEPARTMENT OF SCIENCE SERVICE (DSS)

° : VERIFIED BY OWN LABORATORY QUALITY SYSTEM, BUT STILL NOT ACCREDITED

IN-HOUSE : BASED ON STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23RD EDITION, 2017.

SM : STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23RD EDITION, 2017.

REGULATORY STANDARD : GROUNDWATER QUALITY STANDARDS, NOTIFICATION OF THE NATIONAL ENVIRONMENT BOARD NO.20 (B.E. 2543) ISSUED UNDER THE ENHANCEMENT AND CONSERVATION OF NATIONAL ENVIRONMENTAL QUALITY ACT B.E. 2535.

ND : NON-DETECTABLE.

< LOQ : < LIMIT OF QUANTITATION (COPPER ≥ 0.002 AND < 0.025 mg/L, ZINC ≥ 0.003 AND < 0.025 mg/L).

LABORATORY SUPERVISOR

OCTOBER 6, 2022

ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@eco-thai.net
SAMPLING SOURCE : MWL33-8 (DOWN GRADIENT) (UTM WGS 84 ZONE 47P 726932E 1735827N)
SAMPLE TYPE : GROUNDWATER
SAMPLING DATE : SEPTEMBER 19, 2022
SAMPLING TIME : 13:50 HOUR
SAMPLING METHOD ° : SUBMERSIBLE PUMP
SAMPLING BY ° : [REDACTED]
ANALYZED BY : [REDACTED]
RECEIVED DATE : SEPTEMBER 20, 2022
ANALYTICAL DATE : SEPTEMBER 20-29, 2022
REPORT NO. : 2022-U078472
WORK NO. : 2022-006607
ANALYSIS NO. : T22AS630-0002

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			MWL33-8 (DOWN GRADIENT) T22AS630-0002		
pH °	-	ELECTROMETRIC METHOD AT SITE (SM:4500-H° B)	7.3 (29°C)	-	-
TEMPERATURE °	°C	THERMOMETER AT SITE (SM: 2550 B)	29	-	-
ELECTRICAL CONDUCTIVITY °	µmhos/cm	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2510 B)	1,050 (29°C)	-	0.1
SALINITY °	ppt	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2520 B)	0.7	-	0.1
TOTAL SUSPENDED SOLIDS °	mg/L	TOTAL SUSPENDED SOLIDS DRIED AT 103-105 °C (SM: 2540 D)	ND	-	5.0
TOTAL DISSOLVED SOLIDS °	mg/L	TOTAL DISSOLVED SOLIDS DRIED AT 180 °C (SM: 2540 C)	592	-	25
FAT, OIL AND GREASE °	mg/L	LIQUID-LIQUID, PARTITION-GRAVIMETRIC METHOD (SM: 5520 B)	ND	-	3
TOTAL PETROLEUM HYDROCARBONS °	mg/L	SOXHLET EXTRACTION METHOD (SM: 5520 D AND 5520 F)	ND	-	3
METALS					
ARSENIC °	mg/L As	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	≤ 0.01	0.0003
BARIUM °	mg/L Ba	NITRIC ACID-HYDROCHLORIC ACID DIGESTION AND INDUCTIVELY COUPLED PLASMA (ICP) METHOD (SM: 3030 F AND 3120 B)	0.379	-	0.003
CADMIUM °	mg/L Cd	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.003	0.002
COPPER °	mg/L Cu	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 1.0	0.002
IRON °	mg/L Fe	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	-	0.005
LEAD °	mg/L Pb	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 0.01	0.003



PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			MWL33-8 (DOWN GRADIENT) T22AS630-0002		
MANGANESE ^c	mg/L Mn	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 0.5	0.002
MERCURY ^b	mg/L Hg	IN-HOUSE METHOD: UAE.TP.HEM.002 (COLD VAPOUR ATOMIC ABSORPTION SPECTROMETRIC METHOD); SM: 3112 B	ND	≤ 0.001	0.0001
NICKEL ^c	mg/L Ni	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.02	0.005
SELENIUM ^c	mg/L Se	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	≤ 0.01	0.0005
TOTAL CHROMIUM ^c	mg/L Cr	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	-	0.005
ZINC ^c	mg/L Zn	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 5.0	0.003

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			MWL33-8 (DOWN GRADIENT) T22AS630-0002		
VOLATILE ORGANIC COMPOUNDS					
BENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 5	0.20
ETHYLBENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 700	0.20
TOLUENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 1,000	0.20
TOTAL XYLENES °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.60	≤ 10,000	0.60
SAMPLE CONDITION					
WATER'S COLOUR/TURBID SEDIMENT			COLOURLESS/CLEAR YELLOW		

^a : ISO/IEC 17025 ACCREDITED BY THAI INDUSTRIAL STANDARDS INSTITUTE (TISI)

^b : ISO/IEC 17025 ACCREDITED BY DEPARTMENT OF SCIENCE SERVICE (DSS)

^c : VERIFIED BY OWN LABORATORY QUALITY SYSTEM, BUT STILL NOT ACCREDITED

IN-HOUSE : BASED ON STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23rd EDITION, 2017.

SM : STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23rd EDITION, 2017.

REGULATORY STANDARD : GROUNDWATER QUALITY STANDARDS, NOTIFICATION OF THE NATIONAL ENVIRONMENT BOARD NO.20 (B.E. 2543) ISSUED UNDER THE ENHANCEMENT AND CONSERVATION OF NATIONAL ENVIRONMENTAL QUALITY ACT B.E. 2535.

ND : NON-DETECTABLE.

< LOQ : < LIMIT OF QUANTITATION (IRON ≥ 0.005 AND < 0.050 mg/L, LEAD ≥ 0.003 AND < 0.100 mg/L, MANGANESE ≥ 0.002 AND < 0.025 mg/L).

[REDACTED]

LABORATORY SUPERVISOR

OCTOBER 6, 2022

ANALYSIS REPORT

CUSTOMER NAME : ECO ORIENT RESOURCES (THAILAND) LTD.
ADDRESS : 555 RASA TOWER II, 12TH FLOOR, UNIT 1203 PHAHOLYOTHIN ROAD CHATUCHAK CHATUCHAK BANGKOK 10900
CONTACT INFORMATION : TEL : 0 2937 1124-9 e-mail : anucha@ecothai.net
SAMPLING SOURCE : MWL33-8 (UP GRADIENT) (UTM WGS 84 ZONE 47P 726941E 1735662N)
SAMPLE TYPE : GROUNDWATER
SAMPLING DATE : SEPTEMBER 19, 2022
SAMPLING TIME : 14:40 HOUR
SAMPLING METHOD ° : SUBMERSIBLE PUMP
SAMPLING BY ° : [REDACTED]
ANALYZED BY : [REDACTED]

RECEIVED DATE : SEPTEMBER 20, 2022
ANALYTICAL DATE : SEPTEMBER 20-29, 2022
REPORT NO. : 2022-U078471
WORK NO. : 2022-006607
ANALYSIS NO. : T22AS630-0001

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT MWL33-8 (UP GRADIENT) T22AS630-0001	REGULATORY STANDARD	DETECTION LIMIT
pH °	-	ELECTROMETRIC METHOD AT SITE (SM:4500-H° B)	7.4 (30°C)	-	-
TEMPERATURE °	°C	THERMOMETER AT SITE (SM: 2550 B)	30	-	-
ELECTRICAL CONDUCTIVITY °	µmhos/cm	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2510 B)	887 (30°C)	-	0.1
SALINITY °	ppt	ELECTRICAL CONDUCTIVITY METHOD AT SITE (SM: 2520 B)	0.6	-	0.1
TOTAL SUSPENDED SOLIDS °	mg/L	TOTAL SUSPENDED SOLIDS DRIED AT 103-105 °C (SM: 2540 D)	219	-	5.0
TOTAL DISSOLVED SOLIDS °	mg/L	TOTAL DISSOLVED SOLIDS DRIED AT 180 °C (SM: 2540 C)	718	-	25
FAT, OIL AND GREASE °	mg/L	LIQUID-LIQUID, PARTITION-GRAVIMETRIC METHOD (SM: 5520 B)	ND	-	3
TOTAL PETROLEUM HYDROCARBONS °	mg/L	SOXHLET EXTRACTION METHOD (SM: 5520 D AND 5520 F)	ND	-	3
METALS					
ARSENIC °	mg/L As	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	≤ 0.01	0.0003
BARIUM °	mg/L Ba	NITRIC ACID-HYDROCHLORIC ACID DIGESTION AND INDUCTIVELY COUPLED PLASMA (ICP) METHOD (SM: 3030 F AND 3120 B)	0.192	-	0.003
CADMIUM °	mg/L Cd	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.003	0.002
COPPER °	mg/L Cu	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 1.0	0.002
IRON °	mg/L Fe	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	0.174	-	0.005
LEAD °	mg/L Pb	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 0.01	0.003

PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT MWL33-8 (UP GRADIENT) T22AS630-0001	REGULATORY STANDARD	DETECTION LIMIT
MANGANESE °	mg/L Mn	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	< LOQ	≤ 0.5	0.002
MERCURY °	mg/L Hg	IN-HOUSE METHOD: UAE.TP.HEM.002 (COLD VAPOUR ATOMIC ABSORPTION SPECTROMETRIC METHOD); SM: 3112 B	ND	≤ 0.001	0.0001
NICKEL °	mg/L Ni	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 0.02	0.005
SELENIUM °	mg/L Se	HYDRIDE GENERATION AAS METHOD (SM: 3114 C)	ND	≤ 0.01	0.0005
TOTAL CHROMIUM °	mg/L Cr	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	-	0.005
ZINC °	mg/L Zn	IN-HOUSE METHOD: UAE.TP.GW.01 (NITRIC ACID DIGESTION AND DIRECT AIR ACETYLENE FLAME METHOD); SM: 3030 E AND 3111 B	ND	≤ 5.0	0.003



PARAMETER	UNIT	METHOD OF ANALYSIS	RESULT	REGULATORY STANDARD	DETECTION LIMIT
			MWL33-8 (UP GRADIENT) T22A5630-0001		
VOLATILE ORGANIC COMPOUNDS					
BENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 5	0.20
ETHYLBENZENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 700	0.20
TOLUENE °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.20	≤ 1,000	0.20
TOTAL XYLENES °	µg/L	PURGE AND TRAP GAS CHROMATOGRAPHIC/MASS SPECTROMETRIC METHOD (SM: 6200 B)	< 0.60	≤ 10,000	0.60
SAMPLE CONDITION					
WATER'S COLOUR/TURBID SEDIMENT			COLOURLESS/CLEAR BROWN		

^a : ISO/IEC 17025 ACCREDITED BY THAI INDUSTRIAL STANDARDS INSTITUTE (TISI)

^b : ISO/IEC 17025 ACCREDITED BY DEPARTMENT OF SCIENCE SERVICE (DSS)

^c : VERIFIED BY OWN LABORATORY QUALITY SYSTEM, BUT STILL NOT ACCREDITED

IN-HOUSE : BASED ON STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23rd EDITION, 2017.

SM : STANDARD METHODS FOR THE EXAMINATION OF WATER AND WASTEWATER, APHA, AWWA, WEF, 23rd EDITION, 2017.

REGULATORY STANDARD : GROUNDWATER QUALITY STANDARDS, NOTIFICATION OF THE NATIONAL ENVIRONMENT BOARD NO.20 (B.E. 2543)
ISSUED UNDER THE ENHANCEMENT AND CONSERVATION OF NATIONAL ENVIRONMENTAL QUALITY ACT B.E. 2535.

ND : NON-DETECTABLE.

< LOQ : < LIMIT OF QUANTITATION (COPPER ≥ 0.002 AND < 0.025 mg/L, LEAD ≥ 0.003 AND < 0.100 mg/L,
MANGANESE ≥ 0.002 AND < 0.025 mg/L).



LABORATORY SUPERVISOR

OCTOBER 6, 2022

ภาคผนวก ฎ
เอกสารสอบเทียบเครื่องมือ



List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Ambient									
1	Orifice Transfer Standard Calibrator	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀)	Thermo Scientific	G25A 1270	Tisch Environmental, Inc.	28062021	28 Jun 21	27 Jun 23	-
2	U-Tube Manometer	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀)	Dwyer	1221-36-W/M -	Technology Promotion Association (Thailand-Japan)	22P802	12 Mar 22	11 Mar 23	-
3	Aneroid Barometer	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀)	Barigo, Germany	-	Technology Promotion Association (Thailand-Japan)	22P2722	22 Jul 22	21 Jul 23	-
4	Dial Thermo-Hygrometer	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀)	Barigo, Germany	-	Technology Promotion Association (Thailand-Japan)	22H1583	27 Jul 22	26 Jul 23	-
5	Nitrogen Dioxide Analyzer	Nitrogen Dioxide	Thermo	42C 42C-0508011076	UAE Consultant Co., Ltd.	19042022	19 Apr 22	18 Apr 23	-
6	Standard Gases (Mixture)	Nitrogen Dioxide	Airgas	EB0143262 2015PSIG	Airgas an Air Liquide company	E04NI99E15A01D3	21 Jun 21	21 Jun 24	-
7	Sulphur Dioxide Analyzer	Sulphur Dioxide	Thermo Scientific	43C 43C-0607415779	UAE Consultant Co., Ltd.	18102022	18 Oct 22	17 Oct 23	-
8	Standard Gases (Mixture)	Sulphur Dioxide	Airgas	EB0143262 2015PSIG	Airgas an Air Liquide company	E04NI99E15A01D3	21 Jun 21	21 Jun 24	-
9	Carbon Monoxide Analyzer	Carbon Monoxide	Thermo	48i CM08140003	UAE Consultant Co., Ltd.	26042022	26 Apr 22	25 Apr 23	-
10	Standard Gases (Mixture)	Carbon Monoxide	Airgas	EB0143262 2015PSIG	Airgas an Air Liquide company	E04NI99E15A01D3	21 Jun 21	21 Jun 24	-
11	Wind Speed/Wind Direction	WS/WD	LSI LASTEM	E-LOG305 19040405	Thai Meteorological Department	148/22	7 Apr 22	6 Apr 23	-
12	Carbon Monoxide Analyzer	Carbon Monoxide	Thermo	48i 1180540068	UAE Consultant Co., Ltd.	29042022	29 Apr 22	28 Apr 23	-

List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Ambient									
13	Total Hydrocarbons Analyzer	Total Hydrocarbons	HORIBA	APHA-370 PDXEGXF7	UAE Consultant Co.,Ltd.	09032022	9 Mar 22	8 Mar 23	-
14	Standard Gas	Total Hydrocarbons	Linde	D824432	Linde	09042013	4 Aug 20	4 Aug 28	-

List of Instruments Certification for Water Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Water									
1	pH Meter	pH	Horiba	LAQUA-PH210 HA0C0025	Technology Promotion Association (Thailand-Japan)	22CH639	11 May 22	10 May 23	-
2	Conductivity Meter	Conductivity	YSI	Pro30 17B101802	Technology Promotion Association (Thailand-Japan)	22CH996	26 Jul 22	25 Jul 23	-

โครงการผลิตปิโตรเลียมบนบก พื้นที่ผลิตท่าโรงเหนือ แปลงสำรวจบนบกหมายเลข L33/43 อำเภอเวียงบุรี จังหวัดเพชรบูรณ์
ระหว่างเดือนกรกฎาคม - ธันวาคม พ.ศ. 2565
บริษัท อีโค โอเรียนท์ รีซอสเซส (ประเทศไทย) จำกัด

ใบรับรองสอบเทียบเครื่องมือประจำห้องปฏิบัติการ สำหรับตรวจวัดคุณภาพสิ่งแวดล้อม

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration*	Remark
เครื่องมือประจำห้องปฏิบัติการวิเคราะห์ สำหรับวิเคราะห์คุณภาพอากาศในบรรยากาศโดยทั่วไป									
1	Analytical Balance (Readability 0.1 mg)	ฝุ่นละอองรวม (TSP) ฝุ่นละอองขนาดไม่เกิน 10 ไมครอน	Mettler-Toledo	AB204-S / 1128312528	Mettler-Toledo (Thailand) Ltd.	TH2058-097-040722- ACC-TH	7 Apr 22	6 Apr 23	-
2	Analytical Balance (Readability 0.1 mg)	(PM-10)	Mettler-Toledo	AB204-S/FACT / B108115858	Mettler-Toledo (Thailand) Ltd.	TH2058-098-040722- ACC-TH	7 Apr 22	6 Apr 23	-
เครื่องมือประจำห้องปฏิบัติการวิเคราะห์ สำหรับวิเคราะห์คุณภาพน้ำ									
3	Gas Chromatography - Mass Spectrometer (GC-MS)	สารกลุ่ม BTEX เบนซีน (Benzene), โทลูอิน (Toluene), เอทิลเบนซีน (Ethylbenzene), ไซลีนทั้งหมด (Total Xylene)	Bruker Scion	451-GC / BR1201M099 Scion-SQ / GQS1203F021 CP8400 / BR1203M331	World Tech Enterprise Co.,Ltd.	Certificate of Calibration PM/OQ	19 May 22	18 May 23	-
4	Inductively Coupled Plasma- Optical Emission (ICP-OES)	กลุ่มโลหะหนัก : ตะกั่ว (Pb), นิกเกิล (Ni), แบเรียม (Ba), ปรอททั้งหมด (Total Hg), ซีลีเนียม (Se),	Agilent Technologies	System ID:G8015A G8015AA / MY1803001	Agilent Technologies (Thailand) Co.,Ltd.	Preventive Maintenance Checklist	30 Nov 22	29 Nov 23	-
5	Atomic Absorption Spectrometer (AAS)	ทองแดง (Cu),แมงกานีส (Mn),สังกะสี (Zn), เหล็ก (Fe), สารหนู (As), แคดเมียม (Cd), โครเมียมเฮกซะวาเลนต์ (Cr6+)	Agilent Technologies	System ID:G8432A AA240FS / MY13160001	Thailand Institute Of Science And Technological Research (TISTR)	MTC.ACL. No. 486/65	7 Mar 22	6 Mar 23	-
6	Conductivity Meter	การนำไฟฟ้า(EC) ความเค็ม (Salinity)	SI Analytics	Lab955 / 16300356	SPC Calibration Center Co.,Ltd.	C24220084	22 Mar 22	21 Mar 23	-
7	pH Meter	ค่าความเป็นกรด-ด่าง (pH) อุณหภูมิ (Temperature)	Mettler-Toledo	Seven Easy S20 / 1231155210	National Food Institute, Ministry of Industry, Thailand	2201793-001-01	1 Mar 22	28 Feb 23	-

โครงการผลิตปิโตรเลียมบนบก พื้นที่ผลิตท่าโรงเหนือ แปลงสำรวจบนบกหมายเลข L33/43 อำเภอวิเชียรบุรี จังหวัดเพชรบูรณ์
ระหว่างเดือนกรกฎาคม - ธันวาคม พ.ศ. 2565
บริษัท อีโค่ โอเรียนท์ รีซอสเซส (ประเทศไทย) จำกัด

ใบรับรองสอบเทียบเครื่องมือประจำห้องปฏิบัติการ สำหรับตรวจวัดคุณภาพสิ่งแวดล้อม

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration*	Remark
8	pH Meter		Hanna Instrument	HI2211 / 8165345	National Food Institute, Ministry of Industry, Thailand	2202097-001-01	16 Mar 22	15 Mar 23	-

โครงการผลิตปิโตรเลียมบนบก พื้นที่ผลิตท่าโรงเหนือ แปลงสำรวจบนบกหมายเลข L33/43 อำเภอวิเชียรบุรี จังหวัดเพชรบูรณ์
ระหว่างเดือนกรกฎาคม - ธันวาคม พ.ศ. 2565
บริษัท อีโค โอเรียนท์ รีซอสเซส (ประเทศไทย) จำกัด

ใบรับรองสอบเทียบเครื่องมือประจำห้องปฏิบัติการ สำหรับตรวจวัดคุณภาพสิ่งแวดล้อม

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration*	Remark
เครื่องมือประจำห้องปฏิบัติการวิเคราะห์ สำหรับวิเคราะห์คุณภาพน้ำผิวดิน และน้ำใต้ดิน									
9	Analytical Balance (Readability 0.1 mg)	ปิโตรเลียมไฮโดรคาร์บอนทั้งหมด (TPH), น้ำมันและไขมัน (Oil & Grease)	Mettler-Toledo	AB-204S/FACT / 1129361010	National Food Institute, Ministry of Industry, Thailand	2203120-001-01	1 Jun 22	31 May 23	-
10	Analytical Balance (Readability 0.01 mg)	ของแข็งแขวนลอย (Total Suspended Solids : TSS)	Mettler-Toledo	XSR205DU / C009071872	Technology Promotion Association (Thailand-Japan)	22MM210	26 Apr 22	25 Apr 23	-
11	Hot Air Oven	ของแข็งละลายน้ำทั้งหมด (Total Dissolved Solids : TDS)	Memmert	UF55 / B216.1666	Technology Promotion Association (Thailand-Japan)	22TM1490	19 Oct 22	18 Oct 23	-
12	Incubator	แบคทีเรียกลุ่มฟีคอลโคลิฟอร์ม (Fecal Coliform Bacteria)	Memmert	IPP 260 / V615.0187	Technology Promotion Association (Thailand-Japan)	22TM563	7 Apr 22	6 Apr 23	-
13	Incubator		Memmert	IPP 260 / V616.0066	Technology Promotion Association (Thailand-Japan)	22TM672	5 May 22	4 May 23	-
14	Water Bath		Memmert	WNE 14 / L416.0606	Technology Promotion Association (Thailand-Japan)	22TM333	17 Feb 22	16 Feb 23	-
15	Water Bath		Memmert	WNE 14 / L416.0612	Technology Promotion Association (Thailand-Japan)	22TM334	17 Feb 22	16 Feb 23	-
16	Analytical Balance		Mettler-Toledo	MS603S / B0070110311	Mettler-Toledo (Thailand) Ltd.	2058-096-040722-ACC-	7 Apr 22	6 Apr 23	-
17	Auto Clave		ALP	CL-40L / 808763	Technology Promotion Association (Thailand-Japan)	22TM681	27 May 22	26 May 23	-

Due Date of Calibration* : กำหนดตามแผนการสอบเทียบประจำปี อย่างน้อยปีละ 1 ครั้ง

ภาคผนวก ฎ
หนังสือขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์



ที่ อก ๐๓๑๐(๑)/ ๑๘๗ ๙



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๐ ๙ กุมภาพันธ์ ๒๕๖๕

เรื่อง ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

เรียน กรรมการผู้จัดการ บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๗ ธันวาคม ๒๕๖๔

- สิ่งที่ส่งมาด้วย ๑. รายชื่อผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๔๐ ราย
๒. รายชื่อเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๐๖ ราย
๓. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม

ตามหนังสือที่อ้างถึง บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด ขอต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๔๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ๔๑ ถนนสุขุมวิท แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร ต่อกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน โดยมีองค์ประกอบดังนี้

- ก. ผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๔๐ ราย ตามสิ่งที่ส่งมาด้วย ๑
ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๐๖ ราย ตามสิ่งที่ส่งมาด้วย ๒
ค. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนให้วิเคราะห์ในน้ำเสีย น้ำใต้ดิน อากาศเสีย สิ่งปฏิกูล หรือวัสดุที่ไม่ใช้แล้ว และดิน ตามสิ่งที่ส่งมาด้วย ๓

หนังสือฉบับนี้จะหมดอายุในวันที่ ๒ กุมภาพันธ์ ๒๕๖๘ หากประสงค์จะต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ให้ยื่นคำขอต่ออายุพร้อมเอกสารประกอบคำขอต่อกรมโรงงานอุตสาหกรรมภายใน ๓๐ วัน ก่อนวันสิ้นสุดของหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ทั้งนี้ สามารถยื่นคำขอผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม ตาม QR Code ห้ายหนังสือฉบับนี้

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ



ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการทางเทคโนโลยีกรมโรงงานอุตสาหกรรม



ยื่นคำขอผ่านระบบอิเล็กทรอนิกส์

กองวิจัยและเตือนภัยมลพิษโรงงาน


กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๕๙

ไปรษณีย์อิเล็กทรอนิกส์ saraban@div.gmail.go.th

-๒-



ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการทางเทคโนโลยีกรมโรงงานอุตสาหกรรม


เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด เลขทะเบียน ๖-๑๔๕

ที่ อก ๐๓๑๐(๑)/ ๑๘๗ ๙

ลงวันที่ ๐ ๙ กุมภาพันธ์ ๒๕๖๕


ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๐๖ ราย

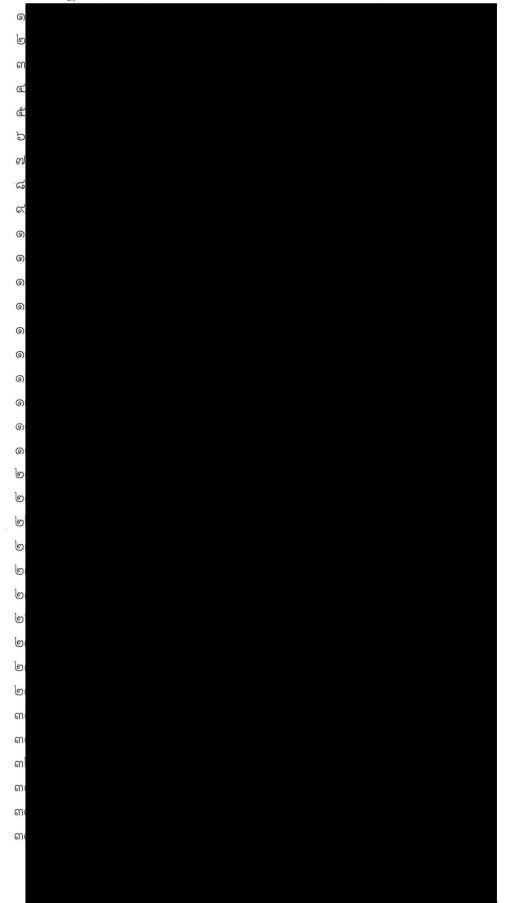

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการทางเทคโนโลยีกรมโรงงานอุตสาหกรรม



ผู้อำนวยการกองวิจัยและพัฒนาสิ่งแวดล้อมพิษ
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม



ผู้อำนวยการกองวิจัยและพัฒนาสิ่งแวดล้อมพิษ
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

สิ่งที่ส่งมาด้วย ๓

เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท ยูโนเด็ค แอนนาลิซิส แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด เลขทะเบียน ๖-๑๔๔
ที่ ออก ๐๓๑๐(๑)/ ๑๘๗๕ ลงวันที่ ๐๙ กุมภาพันธ์ ๒๕๖๕

ขอขยายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๓๕๗ รายการ

น้ำเสีย จำนวน 46 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
2	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
3	Barium	Digestion, Inductively Coupled Plasma Method ^[4]
4	α-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
5	β-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
6	δ-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
7	γ-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
8	Biochemical Oxygen Demand	1) 5-Day BOD Test, Azide Modification Method ^[4] 2) 5-Day BOD Test, Membrane Electrode Method ^[4]
9	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
10	Chemical Oxygen Demand	1) Closed Reflux, Titrimetric Method ^[4] 2) Closed Reflux, Colorimetric Method ^[4] 3) Open Reflux, Titrimetric Method ^[4]
11	Chlordane	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
12	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
13	Color	ADMI Weighted-Ordinate Spectrophotometric Method ^[4]
14	Copper	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
15	Cyanide	1) Distillation, Colorimetric Method ^[4] 2) Flow Injection Analysis Method ^[4]

-๒-

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
16	o,p'-DDT	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
17	4,4'-DDD	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
18	4,4'-DDE	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
19	4,4'-DDT	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
20	Dieldrin	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
21	Endosulfan I	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
22	Endosulfan II	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
23	Endosulfan sulfate	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
24	Endrin	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
25	Endrin aldehyde	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
26	Formaldehyde	Distillation, Colorimetric Method ^[3]
27	Free Chlorine	1) Iodometric Method ^[4] 2) DPD Ferrous Titrimetric Method ^[4]
28	Heptachlor	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
29	Heptachlor Epoxide	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
30	Hexavalent Chromium	1) Colorimetric Method ^[4] 2) Extraction, Direct Air-Acetylene Flame Method ^[4]
31	Lead	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
32	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
33	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[4]
34	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
35	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
36	Oil & Grease	1) Liquid-Liquid, Partition-Gravimetric Method ^[4] 2) Soxhlet Extraction Method ^[4]
37	pH	Electrometric Method ^[4]
38	Phenols	1) Distillation, Chloroform Extraction Method ^[4] 2) Distillation, Direct Photometric Method ^[4]
39	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
40	Sulfide	1) Iodometric Method ^[4] 2) Methylene Blue Method ^[4]
41	Temperature	Laboratory and Field Methods ^[4]
42	Total Dissolved Solids	Dried at 180 °C ^[4]
43	Total Kjeldahl Nitrogen	Semi-Micro-Kjeldahl Method ^[4]
44	Total Suspended Solids	Dried at 103-105 °C ^[4]
45	Trivalent Chromium	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ^[4] 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ^[4]
46	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]

น้ำใต้ดิน จำนวน 126 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
2	Acetone	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
3	Aldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

4 Anthracene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
4	Anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
5	Antimony	Digestion, Inductively Coupled Plasma Method ^[4]
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
7	Atrazine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
8	Barium	1) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
9	Benz(a)anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
10	Benzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
11	Benzo(b)fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
12	Benzo(k)fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
13	Benzoic acid	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
14	Benzo(a)pyrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

15 Benzo(g,h,i)perylene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
15	Benzo(g,h,i)perylene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
16	Beryllium	Digestion, Inductively Coupled Plasma Method ^[4]
17	Bis(2-chloroethyl)ether	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
18	Bis(2-ethylhexyl)phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
19	Bromodichloromethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
20	Bromoform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
21	Butanol	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
22	Butyl benzyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
23	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
24	Carbazole	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
25	Carbon disulfide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
26	Carbon tetrachloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
27	Chlordane	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
28	p-Chloroaniline	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
29	Chlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]

30 Chlorodibromomethane...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
30	Chlorodibromomethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
31	Chloroform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
32	2-Chlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
33	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
34	Chromium (III)	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ^[4] 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ^[4]
35	Chromium (VI)	1) Colorimetric Method ^[4] 2) Extraction, Air-Acetylene Flame Method ^[4]
36	Chrysene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
37	Cyanide	Distillation, Colorimetric Method ^[4]
38	2,4-D	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
39	DDD	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
40	DDE	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
41	DDT	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

42 Dibenz(a,h)anthracene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
42	Dibenz(a,h)anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
43	Di-n-butyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
44	1,2-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
45	1,3-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
46	1,4-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
47	3,3'-Dichlorobenzidine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
48	1,1-Dichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
49	1,2-Dichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
50	1,1-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
51	cis-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
52	trans-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
53	2,4-Dichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
54	1,2-Dichloropropane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
55	1,3-Dichloropropane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
56	1,3-Dichloropropene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
57	Dieldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

58 Diethyl phthalate...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
58	Diethyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
59	2,4-Dimethylphenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
60	2,4-Dinitrophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
61	2,4-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
62	2,6-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
63	Di-n-Octyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
64	Endosulfan	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
65	Endrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
66	Ethylbenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
67	Fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
68	Fluorene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
69	Heptachlor	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

70 Heptachlor epoxide...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
70	Heptachlor epoxide	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
71	Hexachlorobenzene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
72	Hexachloro-1,3-butadiene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
73	n-Hexane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
74	α-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
75	β-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
76	γ-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
77	Hexachlorocyclopentadiene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
78	Hexachloroethane	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
79	Indeno(1,2,3-cd)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
80	Isophorone	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
81	Lead	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]

82 Manganese...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
82	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
83	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[4]
84	Methanol	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
85	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
86	Methyl bromide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
87	Methylene chloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
88	2-Methylphenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
89	2-Methylnaphthalene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
90	Methyl tert-butyl ether	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
91	Naphthalene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
92	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
93	Nitrobenzene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
94	N-Nitrosodiphenylamine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
95	N-Nitrosodi-n-propylamine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

96 Polychlorinated Biphenyls...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
96	Polychlorinated Biphenyls - PCB 1016 - PCB 1221 - PCB 1232 - PCB-1242 - PCB-1248 - PCB-1254 - PCB-1260	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
97	Pentachlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
98	pH	Electrometric Method ^[4]
99	Phenanthrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
100	Phenol	1) Distillation, Chloroform Extraction Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
101	Pyrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
102	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
103	Silver	Digestion, Inductively Coupled Plasma Method ^[4]
104	Styrene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
105	1,1,2,2-Tetrachloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
106	Tetrachloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
107	Toluene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]

108 Toxaphene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
108	Toxaphene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
109	TPH (C ₅ - C ₈)	1) Purge and Trap, Gas Chromatographic Method ^[11,21] 2) Purge and Trap, Gas Chromatographic/Mass spectrometric Method ^[11,25]
110	TPH (C ₉ - C ₁₆)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[9,21]
111	TPH (C ₁₆ - C ₃₅)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[9,21]
112	1,2,4-Trichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
113	1,1,1-Trichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
114	1,1,2-Trichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
115	Trichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
116	2,4,5-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
117	2,4,6-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
118	1,3,5-Trimethylbenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
119	Vanadium	Digestion, Inductively Coupled Plasma Method ^[4]
120	Vinyl acetate	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
121	Vinyl chloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
122	m-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
123	o-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]

124 p-Xylene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
124	p-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
125	Xylene (Total)	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
126	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]

อากาศเสีย (ต่อเนื่อง) จำนวน 25 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Antimony	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
2	Arsenic	1) Isokinetic Sampling, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
3	Cadmium	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
4	Carbon Monoxide	Instrumental Analyzer Method ^[5]
5	Chlorine	Isokinetic Sampling, Ion Chromatographic Method ^[5]
6	Chromium	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
7	Cobalt	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
8	Copper	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
9	Cresol	Absorption Sampling, Gas Chromatographic Method ^[5]

10 Dioxins/Furans...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
10	Dioxins/Furans	Isokinetic Sampling ^[5]
11	Hydrogen Chloride	Isokinetic Sampling, Ion Chromatographic Method ^[5]
12	Hydrogen Fluoride	Isokinetic Sampling, Ion Chromatographic Method ^[5]
13	Hydrogen Sulfide	Absorption Sampling, Iodometric Method ^[5]
14	Lead	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
15	Manganese	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
16	Mercury	Isokinetic Sampling, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[5]
17	Nickel	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
18	Opacity	Ringelmann's Method ^[11]
19	Oxides of Nitrogen	1) Absorption Sampling, Phenoldisulfonic acid Method ^[5] 2) Instrumental Analyzer Method ^[5]
20	Selenium	1) Isokinetic Sampling, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
21	Sulfur Dioxide	1) Absorption Sampling, Barium-Thorin Titrimetric Method ^[5] 2) Instrumental Analyzer Method ^[5]
22	Sulfuric Acid	Isokinetic Sampling, Barium-Thorin Titrimetric Method ^[5]
23	Total Suspended Particulate	Isokinetic Sampling, Gravimetric Method ^[5]
24	Vanadium	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
25	Xylene	1) Bag Sampling, Gas Chromatographic Method ^[5] 2) Adsorption Sampling, Gas Chromatographic Method ^[5]

สิ่งปฏิกูล...

สิ่งปลูกสรหรือวัสดุที่ไม่ใช้แล้ว จำนวน 35 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
2	Antimony	Digestion, Inductively Coupled Plasma Method ^[7,13]
3	Arsenic	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[2,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,13]
4	Barium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
5	Beryllium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
6	Cadmium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[2,6,14] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 4) Digestion, Inductively Coupled Plasma Method ^[7,13]
7	Chlordane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
8	Chromium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[2,6,14] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13]

3) Digestion,...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
9	Chromium (III)	3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 4) Digestion, Inductively Coupled Plasma Method ^[7,13] 1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method; Waste Extraction, Colorimetric Method; Calculation ^[2,6,14,16] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method; Waste Extraction, Colorimetric Method; Calculation ^[2,6,13,14] 3) Digestion, Flame Atomic Absorption Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation ^[7,8,14,16] 4) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation ^[7,8,13,16]
10	Chromium (VI)	1) Waste Extraction, Colorimetric Method ^[2,16] 2) Alkaline Digestion, Colorimetric Method ^[8,16]
11	Cobalt	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
12	Copper	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[2,6,14] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 4) Digestion, Inductively Coupled Plasma Method ^[7,13]
13	2,4-D	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
14	DDD	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]

15 DDE...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
15	DDE	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
16	DDT	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
17	Dieldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
18	Endrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
19	Heptachlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
20	Lead	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[2,6,14] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 4) Digestion, Inductively Coupled Plasma Method ^[7,13]
21	Lindane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
22	Mercury	1) Waste Extraction, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[2,17] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13]

3) Digestion,...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
23	Methoxychlor	3) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[18] 4) Digestion, Inductively Coupled Plasma Method ^[7,13] 5) Thermal Decomposition Amalgamation and Atomic Absorption Spectrometric Method ^[19]
24	Molybdenum	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,22] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
25	Nickel	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 2) Digestion, Inductively Coupled Plasma Method ^[7,13] 1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[2,6,14] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[2,6,13] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 4) Digestion, Inductively Coupled Plasma Method ^[7,13]
26	Polychlorinated Biphenyls - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260 - 2-Chlorobiphenyl - 2,3-Dichlorobiphenyl - 2,2',5'-Trichlorobiphenyl - 2,4',5'-Trichlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'-Pentachlorobiphenyl	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[2,9,23] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]

- 2,2',4,5,5'...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
27	- 2,2',4,5,5'-Pentachlorobiphenyl - 2,3,3',4',6-Pentachlorobiphenyl - 2,2',3,4,4',5'-Hexachlorobiphenyl - 2,2',3,4,5,5'-Hexachlorobiphenyl - 2,2',3,5,5',6-Hexachlorobiphenyl - 2,2',4,4',5,5'-Hexachlorobiphenyl - 2,2',3,3',4,4',5-Heptachlorobiphenyl - 2,2',3,4,4',5,5'-Heptachlorobiphenyl - 2,2',3,4,4',5,6-Heptachlorobiphenyl - 2,2',3,4',5,5',6-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6-Nonachlorobiphenyl Pentachlorophenol	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(2,9,28) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) Electrometric Method ^(31,32)
28	pH	
29	Selenium	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(2,6,20) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,20) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)

30 Silver...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
30	Silver	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
31	Thallium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
32	Toxaphene	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
33	Trichloroethylene	1) Waste Extraction, Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(2,12,25) 2) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
34	Vanadium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
35	Zinc	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(2,6,14) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)

ดิน จำนวน 125 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
2	Acetone	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

3 Aldrin...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
3	Aldrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
4	Anthracene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
5	Antimony	Digestion, Inductively Coupled Plasma Method ^(7,13)
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,15) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
7	Atrazine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
8	Barium	Digestion, Inductively Coupled Plasma Method ^(7,13)
9	Benz(a)anthracene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
10	Benzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
11	Benzo(b)fluoranthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
12	Benzo(k)fluoranthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
13	Benzoic acid	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
14	Benzo(a)pyrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

15 Benzo(g,h,i)perylene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
15	Benzo(g,h,i)perylene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
16	Beryllium	Digestion, Inductively Coupled Plasma Method ^(7,13)
17	Bis(2-chloroethyl)ether	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
18	Bis(2-ethylhexyl)phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
19	Bromodichloromethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
20	Bromoform	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
21	Butanol	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
22	Butyl benzyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
23	Cadmium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
24	Carbazole	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
25	Carbon disulfide	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
26	Carbon tetrachloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
27	Chlordane	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
28	p-Chloroaniline	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
29	Chlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
30	Chlorodibromomethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)

31 Chloroform...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
31	Chloroform	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
32	2-Chlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
33	Chromium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
34	Chromium (III)	1) Digestion, Flame Atomic Absorption Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation ^[7,8,14,16] 2) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation ^[7,8,13,16]
35	Chromium (VI)	Alkaline Digestion, Colorimetric Method ^[8,16]
36	Chrysene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
37	Cyanide	Extraction, Distillation, Colorimetric Method ^[28,29,30]
38	2,4-D	Ultrasonic Extraction, Gas Chromatographic Method ^[27]
39	DDD	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
40	DDE	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
41	DDT	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
42	Dibenz(a,h)anthracene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]

43 Di-n-butyl phthalate...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
43	Di-n-butyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
44	1,2-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
45	1,3-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
46	1,4-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
47	3,3'-Dichlorobenzidine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
48	1,1-Dichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
49	1,2-Dichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
50	1,1-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
51	cis-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
52	trans-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
53	2,4-Dichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
54	1,2-Dichloropropane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
55	1,3-Dichloropropane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
56	1,3-Dichloropropene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
57	Dieldrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
58	Diethyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
59	2,4-Dimethylphenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]

60 2,4-Dinitrophenol...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
60	2,4-Dinitrophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
61	2,4-Dinitrotoluene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
62	2,6-Dinitrotoluene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
63	Di-n-Octyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
64	Endosulfan	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
65	Endrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
66	Ethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
67	Fluoranthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
68	Fluorene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
69	Heptachlor	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
70	Heptachlor epoxide	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]

71 Hexachlorobenzene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
71	Hexachlorobenzene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
72	Hexachloro-1,3-butadiene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
73	n-Hexane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
74	α-HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
75	β-HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
76	γ-HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
77	Hexachlorocyclopentadiene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
78	Hexachloroethane	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
79	Indeno(1,2,3-cd)pyrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
80	Isophorone	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
81	Lead	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
82	Manganese	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]

83 Mercury...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
83	Mercury	1) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[18] 2) Digestion, Inductively Coupled Plasma Method ^[7,13] 3) Thermal Decomposition Amalgamation and Atomic Absorption Spectrometric Method ^[19]
84	Methanol	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
85	Methoxychlor	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
86	Methyl bromide	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
87	Methylene chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
88	2-Methylphenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
89	2-Methylnaphthalene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
90	Methyl tert-butyl ether	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
91	Naphthalene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
92	Nickel	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
93	Nitrobenzene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
94	N-Nitrosodiphenylamine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
95	N-Nitrosodi-n-propylamine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]

96 Polychlorinated Biphenyls...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
96	Polychlorinated Biphenyls - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1254 - Aroclor 1260 Polychlorinated Biphenyls - 2-Chlorobiphenyl - 2,3-Dichlorobiphenyl - 2,2',5-Trichlorobiphenyl - 2,4',5-Trichlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'-Pentachlorobiphenyl - 2,2',4,5,5'-Pentachlorobiphenyl - 2,3,3',4',6-Pentachlorobiphenyl - 2,2',3,4,4',5'-Hexachlorobiphenyl - 2,2',3,4,5,5'-Hexachlorobiphenyl - 2,2',3,5,5',6-Hexachlorobiphenyl - 2,2',4,4',5,5'-Hexachlorobiphenyl - 2,2',3,3',4,4',5-Heptachlorobiphenyl - 2,2',3,4,4',5,5'-Heptachlorobiphenyl - 2,2',3,4,4',5,6-Heptachlorobiphenyl	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,23] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26] Ultrasonic Extraction, Gas Chromatographic Me

- 2,2',3,4',5,5',6...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
	- 2,2',3,4',5,5',6-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6-Nonachlorobiphenyl	
97	Pentachlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
98	Phenanthrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
99	Phenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
100	Pyrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^[10,24] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
101	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,22] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]
102	Silver	Digestion, Inductively Coupled Plasma Method ^[7,13]
103	Styrene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
104	1,1,2,2-Tetrachloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
105	Tetrachloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
106	Toluene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
107	Toxaphene	Ultrasonic Extraction, Gas Chromatographic Method ^[10,22]
108	TPH (C ₅ -C ₈)	1) Purge and Trap, Gas Chromatographic Method ^[12,21] 2) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
109	TPH (C ₈ -C ₁₆)	Ultrasonic Extraction, Gas Chromatographic Method ^[10,21]
110	TPH (C ₁₆ -C ₃₅)	Ultrasonic Extraction, Gas Chromatographic Method ^[10,21]
111	1,2,4-Trichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]

112 1,1,1-Trichloroethane...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
112	1,1,1-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
113	1,1,2-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
114	Trichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
115	2,4,5-Trichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
116	2,4,6-Trichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26]
117	1,3,5-Trimethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
118	Vanadium	Digestion, Inductively Coupled Plasma Method ^[7,13]
119	Vinyl acetate	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
120	Vinyl chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
121	m-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
122	o-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
123	p-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
124	Xylene (Total)	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
125	Zinc	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,13]

เอกสารอ้างอิง

1. กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2549. เรื่อง กำหนดค่าปริมาณเคมีภัณฑ์ที่เจือปนในอากาศที่ระบายออกจากรถยนต์ของรถยนต์นั่งส่วนบุคคลไม่เกิน 7 คน.

ราชกิจจานุเบกษา. 4 ธันวาคม 2549. เล่มที่ 123 ตอนพิเศษ 125 ง.

2. กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2548. เรื่อง การจำกัดสิ่งเคมีภัณฑ์หรือวัสดุที่ไม่ใช้แล้ว.ราชกิจจานุเบกษา. 25 มกราคม 2549. เล่มที่ 123 ตอนพิเศษ 125 ก.

3. สมาคมวิศวกรรมสิ่งแวดล้อมแห่งประเทศไทย. คู่มือวิเคราะห์น้ำเสีย. พิมพ์ครั้งที่ 4. กรุงเทพฯ: เรือนแก้วการพิมพ์, 2547.
4. APHA, AWWA, WEF. **Standard Methods for the Examination of Water and Wastewater**. 23rd ed. Washington, DC: APHA, 2017.
5. United States Environmental Protection Agency. **Standards of Performance for New Stationary Sources**. 40 CFR 60. Appendix A, 2019.
6. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods**. SW-846, 1997.
7. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Acid Digestion of Sediments, Sludges, and Soils**. SW-846 Method 3050B, 1996.
8. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Alkaline Digestion for Hexavalent Chromium**. SW-846 Method 3060A, 1996.
9. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste 3. Physical/Chemical Methods. Separatory Funnel Liquid-Liquid Extraction**. SW-846 Method 3510C, 1996.
10. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Ultrasonic Extraction**. SW-846 Method 3550C, 2007.
11. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Purge and Trap for Aqueous Samples**. SW-846 Method 5030C, 2003.
12. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Closed System Purge and Trap and Extraction for Volatile Organics in Soil and Waste Sample**. SW-846 Method 5035A, 2000.
13. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Inductively Coupled Plasma-Optical Emission Spectrometry**. SW-846 Method 6010D, 2014.
14. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Flame Atomic Absorption Spectrophotometry**. SW-846 Method 7000B, 2007.
15. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Arsenic (Atomic Absorption, Gaseous Hydride)**. SW-846 Method 7061A, 1996.

16. United States...

28. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Total and Amenable Cyanide : Distillation**. SW-846 Method 9010C, 2004.
29. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Cyanide Extraction Procedure for Solids and Oils**. SW-846 Method 9013A, 2014.
30. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Cyanide in Waters and Extracts using Titrimetric and Manual Spectrophotometric Procedures**. SW-846 Method 9014, 2014.
31. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. pH Electrometric Measurement**. SW-846 Method 9040C, 2004.
32. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Soil and Waste pH**. SW-846 Method 9045D, 1996.

16. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Chromium, Hexavalent (Colorimetric)**. SW-846 Method 7196A, 1992.
17. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Liquid Waste (Manual Cold Vapor Technique)**. SW-846 Method 7470A, 1994.
18. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Solid or Semisolid Waste (Manual Cold-Vapor Technique)**. SW-846 Method 7471B, 1998.
19. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Solids and Solutions by Thermal Decomposition, Amalgamation, and Atomic Absorption Spectrophotometry**. SW-846 Method 7473, 2007.
20. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Selenium (Atomic Absorption, Borohydride Reduction)**. SW-846 Method 7742, 1994.
21. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Nonhalogenated Organics Using GC/FID**. SW-846 Method 8015D, 2003.
22. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Organochlorine Pesticides by Gas Chromatography**. SW-846 Method 8081B, 2007.
23. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Polychlorinated Biphenyls (PCBs) by Gas Chromatography**. SW-846 Method 8082A, 2007.
24. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Polynuclear Aromatic Hydrocarbons**. SW-846 Method 8100, 1980.
25. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Volatile Organic Compounds by Gas Chromatography/Mass Spectrometry**. SW-846 Method 8260D, 2018.
26. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Semivolatile Organic Compounds by Gas Chromatography/Mass Spectrometry**. SW-846 Method 8270E, 2018.
27. United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Chlorinated Herbicides by GC Using Methylation or Pentafluorobenzoylation Derivatization**. SW-846 Method 8151A, 1996.

28. United States...