

ภาคผนวก จ

ข้อมูลการตรวจเทียบเครื่องมือ
(Calibration Data Sheets)



CONTROL UNIT CALIBRATION

(Metric units, mm)

Date 5 Jan 24

Initial Final Average
Barometric press, Pb 759 759 759 mmHg

Dry Gas Meter Data

Console No. M50-08

Metering System ID

DGM Number 975906

DGM Model ES-110

Calibrated by : Montri P.

Reference Dry Gas Meter Data

Serial No. 358794

Model S110

Correction factor (Yr) 1.0068

Last Calibration Date 26 Oct 23

Orifice manometer setting, ΔH mm H2O	Ref. DGM Volume V _r Liters	DGM Volume V _m Liters	Temperature (°C)				Time Θ min	DGM Correction factor (Y)	ΔH@ mm
			Ref DGM T _r	Dry Gas Meter					
				Inlet T _i	Outlet T _o	Avg T _m			
12.5	100.1	102.2	25	25	24	24.5	9.22	0.9844	48.0841
25.0	100.1	100.1	25	25	24	24.5	6.52	1.0041	48.0479
50.0	100.2	102.6	25	25	24	24.5	4.82	0.9775	52.4775
76.0	100.2	100.1	25	25	24	24.5	3.88	0.9998	51.8067
100.0	99.9	99.4	25	25	24	24.5	3.88	1.0019	50.9929
150.0	100.1	98.6	25	25	24	24.5	2.73	1.0073	50.7076

Average 0.9958 50.3527

Approved by :



CONTROL UNIT CALIBRATION

(Metric units, mm)

Date 6 Jan 24

Initial Final Average
Barometric press, Pb 759 759 759 mmHg

Dry Gas Meter Data

Console No. M50-09

Metering System ID

DGM Number 333249

DGM Model ES-110

Calibrated by : Montri P.

Reference Dry Gas Meter Data

Serial No. 358794

Model S110

Correction factor (Yr) 1.0068

Last Calibration Date 26 Oct 23

Orifice manometer setting, ΔH mm H ₂ O	Ref. DGM Volume V _r Liters	DGM Volume V _m Liters	Temperature (°C)				Time Θ min	DGM Correction factor (Y)	ΔH@ mm
			Ref DGM T _r	Dry Gas Meter					
				Inlet T _i	Outlet T _o	Avg T _m			
12.5	100.3	99.0	25	25	24	24.5	8.53	1.0165	41.1799
25.0	100.0	99.5	25	25	24	24.5	6.08	1.0073	42.0742
50.0	100.1	99.8	25	25	24	24.5	4.47	1.0041	45.2483
76.0	100.4	99.1	25	25	24	24.5	3.55	1.0114	43.2112
100.0	100.1	99.4	25	25	24	24.5	3.55	1.0024	44.6038
150.0	100.1	98.9	25	25	24	24.5	2.57	1.0022	44.8941

Average 1.0073 43.5352

Approved by :



CONTROL UNIT CALIBRATION

(Metric units, mm)

Date 12 Jan 24

Barometric press, Pb

Initial	Final	Average
758	758	758

 mmHg

Dry Gas Meter Data

Console No. M50-07

Metering System ID

DGM Number 90331

DGM Model MST-C2-1

Calibrated by Montri P.

Reference Dry Gas Meter Data

Serial No. 358794

Model S110

Correction factor (Yr) 1.0068

Last Calibration Date 26 Oct 23

Orifice manometer setting, ΔH mm H2O	Ref. DGM Volume V _r Liters	DGM Volume V _m Liters	Temperature (°C)				Time Θ min	DGM Correction factor (Y)	ΔH@ mm
			Ref DGM T _r	Dry Gas Meter					
				Inlet T _i	Outlet T _o	Avg T _m			
12.5	100.0	100.6	25	25	24	24.5	9.72	0.9981	53.7523
25.0	100.2	100.2	25	25	24	24.5	6.48	1.0029	47.6709
50.0	100.0	100.8	25	25	24	24.5	4.77	0.9919	51.7327
76.0	100.2	100.9	25	25	24	24.5	3.90	0.9908	52.4606
100.0	100.1	99.6	25	25	24	24.5	3.90	1.0005	53.0627
150.0	100.2	98.9	25	25	24	24.5	2.82	1.0032	54.0289

Average 0.9979 52.1180

Approved by :



PITOT TUBE CALIBRATION

Calibration Location: SECOT

Calibration Duct No.: CD-0123

Calibration Standard Pitot tube data

Pitot No. : Std-02

Type S Pitot No. : PS10-01

Calibration Date : 09-01-2024

Coefficient (Cp) : 0.99

Calibrated by : Mr. Montri P.

A Side Calibration

Run No.	ΔPstd (mm H ₂ O)	ΔPs (mm H ₂ O)	Cp(s)	Deviation, δ Cp(s) - Cp(A)
1	15.00	21.00	0.8367	0.0000
2	15.00	21.00	0.8367	0.0000
3	15.00	21.00	0.8367	0.0000

C_{P(A)} avg 0.8367

B Side Calibration

Run No.	ΔPstd (mm H ₂ O)	ΔPs (mm H ₂ O)	Cp(s)	Deviation, δ Cp(s) - Cp(B)
1	15.00	21.00	0.8367	0.0000
2	15.00	21.00	0.8367	0.0000
3	15.00	21.00	0.8367	0.0000

C_{P(B)} avg 0.8367

| CP(A) - CP(B) | = 0.0000

C_{P(Avg)} = 0.8367

Approved by :

*** δ must be ≤ 0.01 for the test to be acceptable ***
*** | Cp(A) - Cp(B) | must also be < 0.01 if average of Cp(A) and Cp(B) is not used ***



PITOT TUBE CALIBRATION

Calibration Location: SECOT

Calibration Date : 09-01-2024

Calibration Duct No.: CD-0123

Calibration Standard Pitot tube data

Pitot No. : Std-02

Coefficient (Cp) : 0.99

Type S Pitot No. : PS20-02

Calibrated by : Mr. Montri P.

A Side Calibration

Run No.	ΔP_{std} (mm H ₂ O)	ΔP_s (mm H ₂ O)	Cp(s)	Deviation, δ Cp(s) - Cp(A)
1	15.00	21.00	0.8367	-0.0068
2	15.00	20.50	0.8468	0.0034
3	15.00	20.50	0.8468	0.0034

C_{P(A)},avg 0.8435

B Side Calibration

Run No.	ΔP_{std} (mm H ₂ O)	ΔP_s (mm H ₂ O)	Cp(s)	Deviation, δ Cp(s) - Cp(B)
1	15.00	21.00	0.8367	0.0000
2	15.00	21.00	0.8367	0.0000
3	15.00	21.00	0.8367	0.0000

C_{P(B)},avg 0.8367

| CP(A)-CP(B) | = 0.0068

C_{P(Avg)} = 0.8401

Approved by :

*** δ must be ≤ 0.01 for the test to be acceptable ***
 *** | Cp(A)-Cp(B) | must also be < 0.01 if average of Cp(A) and Cp(B) is not be used ***



PITOT TUBE CALIBRATION

Calibration Location: SECOT

Calibration Date : 09-01-2024

Calibration Duct No.: CD-0123

Calibration Standard Pitot tube data

Pitot No. : Std-02

Coefficient (Cp) : 0.99

Type S Pitot No. : LL10-01

Calibrated by : Mr. Montri P.

A Side Calibration

Run No.	ΔP_{std} (mm H ₂ O)	ΔP_s (mm H ₂ O)	Cp(s)	Deviation, δ Cp(s) - Cp(A)
1	15.00	20.50	0.8468	0.0000
2	15.00	20.50	0.8468	0.0000
3	15.00	20.50	0.8468	0.0000

C_{P(A)},avg 0.8468

B Side Calibration

Run No.	ΔP_{std} (mm H ₂ O)	ΔP_s (mm H ₂ O)	Cp(s)	Deviation, δ Cp(s) - Cp(B)
1	15.00	20.50	0.8468	0.0000
2	15.00	20.50	0.8468	0.0000
3	15.00	20.50	0.8468	0.0000

C_{P(B)},avg 0.8468

| CP(A)-CP(B) | = 0.0000

C_{P(Avg)} = 0.8468

Approved by :

*** δ must be ≤ 0.01 for the test to be acceptable ***
 *** | Cp(A)-Cp(B) | must also be < 0.01 if average of Cp(A) and Cp(B) is not be used ***

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239 Rimklongprapa Rd. Bangsue Khet Bangsue Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0484/23 Date of Issue: 22-Feb-2023 Expiry date: 21-Feb-2027
Material Details
Production Order: 90176403 Material Code: 478100-J-62 Cylinder No.: 12360
Gas content: 6.520 M³ (nominal) Filling pressure: 145 bar (g) Valve: CGA 590 BRASS
Cylinder Owner: LINDE Cylinder Material: STEEL Cylinder Size: 47 L

Laboratory Report

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³
Oxygen	8.00%	7.94%	± 2% relative	(1) SG-O-01
In Nitrogen				

Recommend usage condition

Minimum utilization: 5% of actual content or before expiry date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified.
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasoontorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

Page 1 of 1

This report shall not be reproduced except in full

PB-002/F004

Iss:K/2, 15 Oct 2021

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

เลขที่จดทะเบียนการค้า 0107237000785

ชั้น 15 อาคารทาวเวอร์ เอ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 แขวงบางนา

เขตคลองเตย กรุงเทพมหานคร 10540 โทรศัพท์ (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 ตำบลบางนา อำเภอบางนา จังหวัดชลบุรี 24180

โทรศัพท์ (66) 38.570-479-93

โทรสาร (66) 38.570-323

Linde (Thailand) Public Company Limited

P.L.C. Registration no. 0107237000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkew

Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239 Rimklongprapa Rd., Bangsue, Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0528/23 Date of Issue: 8-Mar-2023 Expiry date: 8-Mar-2026
Material Details
Production Order: 90176406 Material Code: 511600-SK-34 Cylinder No.: A00722SK
Gas content: 5.20 M³ Filling pressure: 137.0 bar Valve: CGA 660 SS
Cylinder Owner: LINDE Cylinder Material: Spectra seal Cylinder Size: 40 L

Laboratory Report

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Nitric Oxide	40.0 ppm	39.6 ppm	± 1% relative	(6) I-PB-352	1-Mar & 8-Mar-23
Other NOx impurity		Less than 1.9 ppm			
Carbon Monoxide	40.0 ppm	41.9 ppm	± 1% relative	(6) I-PB-352	1-Mar-2023
In Nitrogen					

Analytical Result

Reference Standard used in Assay

Reference Standard	Cylinder number	Concentration	Expiry date:
Nitric Oxide	1332615G	25.61 ± 0.13 ppm	6-May-2023
Carbon Monoxide	ND52320	25.03 ± 0.13 ppm	7-Oct-2023
In Nitrogen			

Analytical Instruments used in Assay

Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-NO	28-Feb-2023
FTIR Spectrometers Nicolet iS50	FTIR-CO	25-Feb-2023

Recommend usage condition

Minimum utilization: 5% of actual content or before expiry date whichever comes first.

Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Page 1 of 1

This report shall not be reproduced except in full

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

เลขที่จดทะเบียนการค้า 0107237000785

ชั้น 15 อาคารทาวเวอร์ เอ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 แขวงบางนา

เขตคลองเตย กรุงเทพมหานคร 10540 โทรศัพท์ (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 ตำบลบางนา อำเภอบางนา จังหวัดชลบุรี 24180

Sukanya Parinyasoontorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

PB-002/F006

Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021

P.L.C. Registration no. 0107237000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkew

Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

THE LINDE GROUP

Linde

Certificate Of Analysis
Special Gases Mixture

Customer Details		Customer Tag No.:	
Name:	Address:		
Secot Co.,Ltd.	239 Rimklongprapa Rd., Bangsue, Bangkok 10800		

Certificate Details		Expiry date:	
Number:	0610/23	21-Mar-2023	21-Mar-2031
Material Details		Cylinder No.:	
Production Order:	90176409	445100-SK-44	D869384
Gas content:	5.52 M ³	Filling pressure:	145.0 bar
Cylinder Owner:	LINDE	Cylinder Material:	Spectra seal
		Valve:	CGA 660 SS
		Cylinder Size:	40 L

Laboratory Report					
Analytical Result					
Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Sulphur Dioxide In Nitrogen	80.0 ppm	83.5 ppm	± 1% relative	(6) I-PB-352	14-Mar & 21-Mar-23

Reference Standard used in Assay			
Reference Standard	Cylinder number	Concentration	Expiry date:
Sulphur Dioxide In Nitrogen	256240	52.73 ± 0.42 ppm	6-May-2023

Analytical Instruments used in Assay		
Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-SO2	16-Feb & 17-Mar-23

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.

Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

1. All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
 2. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
 3. (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Page 1 of 1

This report shall not be reproduced except in full

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

หรือโดยวิธีการใดๆ 0107537000785

ชั้น 15 อาคารทาวเวอร์ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 แขวงคลอง

บางนา เขตคลองเตย กรุงเทพมหานคร 10540 โทรศัพท์ (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 ตำบลบางนา อำเภอบางนา จังหวัดชลบุรี 24180

โทรศัพท์ (66) 38.570-479-93

โทรสาร (66) 38.570-323

Sukanya Parinyasoonporn
Signatory for and on behalf of Linde (Thailand) Co., Ltd.

Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021

PLC Registration no. 0107537000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad Km. 6.5 Road, Bangkaew

Banglee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

PB-002/F006

Iss:K/2, 15 Oct 2021

THE LINDE GROUP

Linde

Certificate Of Analysis
Special Gases Mixture

Customer Details		Customer Tag No.:	
Name:	Address:		
Secot Co.,Ltd.	239 Rimklongprapa Rd., Bangsue, Bangkok 10800		

Certificate Details		Expiry date:	
Number:	0529/23	7-Mar-2023	7-Mar-2026
Material Details		Cylinder No.:	
Production Order:	90176407	436700-SK-34	A00818SK
Gas content:	5.23 M ³	Filling pressure:	137.0 bar
Cylinder Owner:	LINDE	Cylinder Material:	Spectra seal
		Valve:	CGA 660 SS
		Cylinder Size:	40 L

Laboratory Report					
Analytical Result					
Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Nitric Oxide	80.0 ppm	79.5 ppm	± 1% relative	(6) I-PB-352	27-Feb & 7-Mar-23
Other NOx impurity		Less than 3.9 ppm			
Carbon Monoxide In Nitrogen	80.0 ppm	81.1 ppm	± 1% relative	(6) I-PB-352	27-Feb-2023

Reference Standard used in Assay			
Reference Standard	Cylinder number	Concentration	Expiry date:
Nitric Oxide	256003SG	50.89 ± 0.41 ppm	13-Dec-2024
Carbon Monoxide In Nitrogen	ND46423	50.20 ± 0.26 ppm	4-May-2024

Analytical Instruments used in Assay		
Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-NO	27-Jan & 1-Mar-23
FTIR Spectrometers Nicolet iS50	FTIR-CO	22-Feb-2023

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.

Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

1. All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
 2. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
 3. (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Page 1 of 1

This report shall not be reproduced except in full

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

หรือโดยวิธีการใดๆ 0107537000785

ชั้น 15 อาคารทาวเวอร์ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 แขวงคลอง

บางนา เขตคลองเตย กรุงเทพมหานคร 10540 โทรศัพท์ (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 ตำบลบางนา อำเภอบางนา จังหวัดชลบุรี 24180

โทรศัพท์ (66) 38.570-479-93

โทรสาร (66) 38.570-323

Sukanya Parinyasoonporn
Signatory for and on behalf of Linde (Thailand) Co., Ltd.

Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021

PLC Registration no. 0107537000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad Km. 6.5 Road, Bangkaew

Banglee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

PB-002/F006

Iss:K/2, 15 Oct 2021

THE LINDE GROUP

Linde

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239 Rimklongprapa Rd., Bangsue, Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 2135/20 Date of Issue: 19-May-2020 Expiry date: 18-May-2028
Material Details
Production Order: 90160199 Material Code: 477200-AL-44 Cylinder No.: D595120
Gas content: 6.90 M³ Filling pressure: 145.0 bar Valve: CGA 660 SS
Cylinder Owner: LINDE Cylinder Material: Aluminum Cylinder Size: 50 L

Laboratory Report

Analytical Result

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Sulphur Dioxide In Nitrogen	800 ppm	802 ppm	± 1% relative	(6) I-PB-352	12-May & 19-May-20

Reference Standard used in Assay

Reference Standard	Cylinder number	Concentration	Expiry date:
Sulphur Dioxide In Nitrogen	26583856	514.9 ± 2.4 ppm	18-Dec-2020

Analytical Instruments used in Assay

Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-SO2	11-May-2020

Recommend usage condition

Minimum utilization: 5% of actual content or before expiry date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Page 1 of 1

This report shall not be reproduced except in full

PB-002/F006

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

P.L.C. Registration no. 0107537000755

ชั้น 15 อาคารทาวเวอร์ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 บางนา

Banglae, Samutprakarn 10540 โทร (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 คลองบางนา อำเภอบางนา จังหวัดสมุทรปราการ 24180

โทร (66) 38.570-479-93

โทรสาร (66) 38.570-323

Linde (Thailand) Public Company Limited Issd/1, 01 October 2019

P.L.C. Registration no. 0107537000755

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkaew

Banglae, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

THE LINDE GROUP

Linde

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239 Rimklongprapa Rd. Bangsue Khet Bangsue Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0499/23 Date of Issue: 23-Feb-2023 Expiry date: 22-Feb-2027
Material Details
Production Order: 90176404 Material Code: 429900-J-62 Cylinder No.: 44157
Gas content: 6.560 M³ (nominal) Filling pressure: 145 bar (g) Valve: CGA 590 BRASS
Cylinder Owner: LINDE Cylinder Material: STEEL Cylinder Size: 47 L

Laboratory Report

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³
Oxygen In Nitrogen	15.0%	15.1%	± 2% relative	(2) I-PB-354

Recommend usage condition

Minimum utilization: 5% of actual content or before expiry date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified.
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasoonorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

PB-002/F004

Iss:K/2, 15 Oct 2021

Page 1 of 1

This report shall not be reproduced except in full

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

P.L.C. Registration no. 0107537000755

ชั้น 15 อาคารทาวเวอร์ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 บางนา

Banglae, Samutprakarn 10540 โทร (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 คลองบางนา อำเภอบางนา จังหวัดสมุทรปราการ 24180

โทร (66) 38.570-479-93

โทรสาร (66) 38.570-323

Linde (Thailand) Public Company Limited

P.L.C. Registration no. 0107537000755

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkaew

Banglae, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239, Rimklongprapa Rd., Bangsue, Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0527/23 Date of Issue: 8-Mar-2023 Expiry date: 8-Mar-2026
Material Details
Production Order: 90176406 Material Code: 511600-SK-34 Cylinder No.: A00878SK
Gas content: 5.20 M³ Filling pressure: 137.0 bar Valve: CGA 660 SS
Cylinder Owner: LINDE Cylinder Material: Spectra seal Cylinder Size: 40 L

Laboratory Report

Analytical Result

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Nitric Oxide	40.0 ppm	39.8 ppm	± 1% relative	(6) I-PB-352	1-Mar & 8-Mar-23
Other NOx impurity		Less than 1.9 ppm			
Carbon Monoxide	40.0 ppm	42.0 ppm	± 1% relative	(6) I-PB-352	1-Mar-2023
In Nitrogen					

Reference Standard used in Assay

Reference Standard	Cylinder number	Concentration	Expiry date:
Nitric Oxide	1332615G	25.61 ± 0.13 ppm	6-May-2023
Carbon Monoxide	ND52320	25.03 ± 0.13 ppm	7-Oct-2023
In Nitrogen			

Analytical Instruments used in Assay

Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-NO	28-Feb-2023
FTIR Spectrometers Nicolet iS50	FTIR-CO	25-Feb-2023

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.

Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/S31 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasoonorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021

PLC Registration no. 0107537000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkaew

Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239, Rimklongprapa Rd., Bangsue, Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0741/23 Date of Issue: 29-Mar-2023 Expiry date: 29-Mar-2027
Material Details
Production Order: 90176408 Material Code: 608400-SK-44 Cylinder No.: D519508
Gas content: 5.52 M³ Filling pressure: 145.0 bar Valve: CGA 660 SS
Cylinder Owner: LINDE Cylinder Material: Spectra seal Cylinder Size: 40 L

Laboratory Report

Analytical Result

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Sulphur Dioxide	40.0 ppm	40.2 ppm	± 1% relative	(6) I-PB-352	22-Mar & 29-Mar-23
In Nitrogen					

Reference Standard used in Assay

Reference Standard	Cylinder number	Concentration	Expiry date:
Sulphur Dioxide	256240	52.73 ± 0.42 ppm	6-May-2023
In Nitrogen			

Analytical Instruments used in Assay

Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-SO2	17-Mar-2023

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.

Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/S31 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasoonorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021

PLC Registration no. 0107537000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkaew

Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details		Address:	Customer Tag No.:
Name:	Secot Co.,Ltd.	239, Rimklongprapa Rd., Bangsue, Bangkok 10800	

Certificate Details		Date of Issue:	Expiry date:
Number:	0530/23	7-Mar-2023	7-Mar-2026
Material Details		Material Code:	Cylinder No.:
Production Order:	90176407	436700-SK-34	A00929SK
Gas content:	5.23 M ³	Filling pressure:	137.0 bar
Cylinder Owner:	LINDE	Valve:	CGA 660 SS
		Cylinder Material:	Spectra seal
		Cylinder Size:	40 L

Laboratory Report		Analytical Result			
Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Nitric Oxide	80.0 ppm	79.8 ppm	± 1% relative	(6) I-PB-352	27-Feb & 7-Mar-23
Other NOx impurity		Less than 3.9 ppm			
Carbon Monoxide	80.0 ppm	81.1 ppm	± 1% relative	(6) I-PB-352	27-Feb-2023
In Nitrogen					

Reference Standard used in Assay		Cylinder number	Concentration	Expiry date:
Reference Standard	Nitric Oxide	256003SG	50.89 ± 0.41 ppm	13-Dec-2024
	Carbon Monoxide	ND46423	50.20 ± 0.26 ppm	4-May-2024
	In Nitrogen			

Analytical Instruments used in Assay		Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
	FTIR Spectrometers Nicolet iS50	FTIR-NO		27-Jan & 1-Mar-23
	FTIR Spectrometers Nicolet iS50	FTIR-CO		22-Feb-2023

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

1. All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
2. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
3. (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasontorn
Signatory for and on behalf of Linde (Thailand) Co., Ltd.

PB-002/F006
Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021
P.C. Registration no 0107537000785
15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkaew
Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333
Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180
Thailand, Tel (66) 38.570-479-93 Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details		Address:	Customer Tag No.:
Name:	Secot Co.,Ltd.	239, Rimklongprapa Rd., Bangsue, Bangkok 10800	

Certificate Details		Date of Issue:	Expiry date:
Number:	0273/22	4-Feb-2022	4-Feb-2030
Material Details		Material Code:	Cylinder No.:
Production Order:	90169723	445100-SK-44	D636047
Gas content:	5.52 M ³	Filling pressure:	145.0 bar
Cylinder Owner:	LINDE	Valve:	CGA 660 SS
		Cylinder Material:	Spectra seal
		Cylinder Size:	40 L

Laboratory Report		Analytical Result			
Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Sulphur Dioxide	80.0 ppm	81.0 ppm	± 1% relative	(6) I-PB-352	28-Jan & 4-Feb-22
In Nitrogen					

Reference Standard used in Assay		Cylinder number	Concentration	Expiry date:
Reference Standard	Sulphur Dioxide	256240	52.73 ± 0.42 ppm	6-May-2023
	In Nitrogen			

Analytical Instruments used in Assay		Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
	FTIR Spectrometers Nicolet iS50	FTIR-SO2		10-Jan-2022

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

1. All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
2. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
3. (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasontorn
Signatory for and on behalf of Linde (Thailand) Co., Ltd.

PB-002/F006
Linde (Thailand) Public Company Limited Iss:K/2, 15 Oct 2021
P.C. Registration no 0107537000785
15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad KM. 6.5 Road, Bangkaew
Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333
Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180
Thailand, Tel (66) 38.570-479-93 Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239 Rimklongprapa Rd. Bangsue Khet Bangsue Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0484/23 Date of Issue: 22-Feb-2023 Expiry date: 21-Feb-2027
Material Details
Production Order: 90176403 Material Code: 478100-J-62 Cylinder No.: 12360
Gas content: 6.520 M³ (nominal) Filling pressure: 145 bar (g) Valve: CGA 590 BRASS
Cylinder Owner: LINDE Cylinder Material: STEEL Cylinder Size: 47 L

Laboratory Report

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³
Oxygen	8.00%	7.94%	± 2% relative	(1) SG-O-01
In Nitrogen				

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified.
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Sukanya Parinyasoontorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

Page 1 of 1

This report shall not be reproduced except in full

PB-002/F004

Iss:K/2, 15 Oct 2021

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

เลขที่ทะเบียนการค้า: 0107537000785

ชั้น 15 อาคารทาวเวอร์ เอ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 แขวงบางนา

อำเภอเมืองสมุทรปราการ 10540 โทรศัพท์ (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 แขวงบางนา อำเภอบางนา จังหวัดนครราชสีมา 24180

โทรศัพท์ (66) 38.570-479-93

โทรสาร (66) 38.570-323

Linde (Thailand) Public Company Limited

P.L.C. Registration no. 0107537000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad Km. 6.5 Road, Bangkwaew

Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

Certificate Of Analysis
Special Gases Mixture

Customer Details

Name: Secot Co., Ltd. Address: 239 Rimklongprapa Rd., Bangsue, Bangkok 10800 Customer Tag No.:

Certificate Details

Number: 0275/22 Date of Issue: 4-Feb-2022 Expiry date: 4-Feb-2026
Material Details
Production Order: 90169722 Material Code: 631500-SK-44 Cylinder No.: D636195
Gas content: 5.52 M³ Filling pressure: 145.0 bar Valve: CGA 660 SS
Cylinder Owner: LINDE Cylinder Material: Spectra seal Cylinder Size: 40 L

Laboratory Report

Analytical Result

Component	Normal Concentration	Analysis Result ¹	Uncertainty ²	Method of Analysis ³	Assay Date
Sulphur Dioxide	20.0 ppm	20.4 ppm	± 1% relative	(6) I-PB-352	28-Jan & 4-Feb-22
In Nitrogen					

Reference Standard used in Assay

Reference Standard	Cylinder number	Concentration	Expiry date:
Sulphur Dioxide In Nitrogen	1457545G	25.03 ± 0.25 ppm	18-Aug-2022

Analytical Instruments used in Assay

Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
FTIR Spectrometers Nicolet iS50	FTIR-SO2	27-Jan-2022

Recommend usage condition

Minimum utilization: 5% of actual content or before expire date whichever comes first.
Storage condition: Keep in well ventilation and secure area.

Comments

When reordering, please quote the material number

Note:

- All results expressed in this report are on mole/mole basis, unless otherwise specified. The Assay of this Standard has been performed in accordance with the EPA Traceability Protocol EPA-600/R-12/531 for the Assay and Certification of Gaseous Calibration Standards using procedure G1
- The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a level of confidence of approximately 95%. The measurement of this material is traceable to the SI through the reference gas standard which is traceable to Swiss National Standard of Mass or other recognised national metrology institutes.
- (1) Gas Chromatography, (2) Paramagnetic Oxygen Analyzer, (3) Electrochemical Oxygen Analyzer, (4) Electrochemical Moisture Analyzer, (5) Total Hydrocarbon Analyzer, (6) Other - Specified

Page 1 of 1

This report shall not be reproduced except in full

บริษัท ลินด์ (ประเทศไทย) จำกัด (มหาชน)

เลขที่ทะเบียนการค้า: 0107537000785

ชั้น 15 อาคารทาวเวอร์ เอ 2/3 หมู่ 14 ถนนบางนา-ตราด กม. 6.5 แขวงบางนา

อำเภอเมืองสมุทรปราการ 10540 โทรศัพท์ (66) 2338-6100 โทรสาร (66) 2338-6333

โรงงานผลิต: 105 หมู่ 5 แขวงบางนา อำเภอบางนา จังหวัดนครราชสีมา 24180

โทรศัพท์ (66) 38.570-479-93

โทรสาร (66) 38.570-323

Sukanya Parinyasoontorn

Signatory for and on behalf of Linde (Thailand) Co., Ltd.

PB-002/F006

Linde (Thailand) Public Company Limited

P.L.C. Registration no. 0107537000785

15th Floor, Bangna Tower A, 2/3 Moo 14, Bangna Trad Km. 6.5 Road, Bangkwaew

Bangplee, Samutprakarn 10540, Tel (66) 2338-6100 Fax (66) 2338-6333

Wellgrow Plant: 105 Moo 5, T.Bangsamak, A.Bangpakong, Chachoengsao 24180

Thailand, Tel (66) 38.570-479-93

Fax (66) 38.570-323

CERTIFICATE OF ANALYSIS

Grade of Product: EPA Protocol

Part Number: E04NI99E15AC084 Reference Number: 82-401409170-1
Cylinder Number: EB0102326 Cylinder Volume: 144.4 CF
Laboratory: 124 - Riverton (SAP) - NJ Cylinder Pressure: 2015 PSIG
PGVP Number: B52019 Valve Outlet: 660
Gas Code: CO,NO,NOX,SO2,BALN Certification Date: Feb 05, 2019

Expiration Date: Feb 05, 2027

Certification performed in accordance with "EPA Traceability Protocol for Assay and Certification of Gaseous Calibration Standards (May 2012)" document EPA 600/R-12/531, using the assay procedures listed. Analytical Methodology does not require correction for analytical interference. This cylinder has a total analytical uncertainty as stated below with a confidence level of 95%. There are no significant impurities which affect the use of this calibration mixture. All concentrations are on a volume/volume basis unless otherwise noted.

Do Not Use This Cylinder below 100 psig, i.e. 0.7 megapascals.

ANALYTICAL RESULTS					
Component	Requested Concentration	Actual Concentration	Protocol Method	Total Relative Uncertainty	Assay Dates
NOX	50.00 PPM	51.01 PPM	G1	+/- 0.9% NIST Traceable	01/28/2019, 02/05/2019
NITRIC OXIDE	50.00 PPM	50.86 PPM	G1	+/- 0.9% NIST Traceable	01/28/2019, 02/05/2019
SULFUR DIOXIDE	50.00 PPM	50.87 PPM	G1	+/- 1.0% NIST Traceable	01/28/2019, 02/05/2019
CARBON MONOXIDE	0.5000 %	0.5050 %	G1	+/- 0.7% NIST Traceable	01/31/2019
NITROGEN	Balance				

CALIBRATION STANDARDS					
Type	Lot ID	Cylinder No	Concentration	Uncertainty	Expiration Date
NTRM	13060206	CC401947	4950 PPM CARBON MONOXIDE/NITROGEN	+/- 0.4%	Feb 15, 2019
PRM	12367	APEX1099237	9.82 PPM NITROGEN DIOXIDE/AIR	+/- 2.0%	Jun 02, 2017
NTRM	12010724	KAL004497	50.03 PPM NITRIC OXIDE/NITROGEN	+/- 0.8%	Mar 12, 2024
GMIS	1114201601	CC506710	4.971 PPM NITROGEN DIOXIDE/NITROGEN	+/- 2.0%	Nov 14, 2019
NTRM	14010327	KAL004376	49.08 PPM SULFUR DIOXIDE/NITROGEN	+/- 1.0%	Apr 17, 2024

The SRM, PRM or RGM noted above is only in reference to the GMIS used in the assay and not part of the analysis.

ANALYTICAL EQUIPMENT		
Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
Siemens Ultramat 6 J3-599 COHIGH	NDIR	Jan 18, 2019
Nicolet 6700 APW1100391 NO	FTIR	Jan 10, 2019
Nicolet 6700 APW1100391 NO2	FTIR	Jan 10, 2019
Nicolet 6700 APW1100391 SO2	FTIR	Jan 10, 2019

Triad Data Available Upon Request

PERMANENT NOTES: PRODUCED IN ACCORDANCE WITH ISO17025 REQUIREMENTS

NOTES:

Gross Weight: 27806.3 grams

Net Weight: 4733.2 grams

This calibration std. has been certified in accordance with the May 2012 EPA Traceability Protocol. Document EPA-600/R-12/531. All testing processes and measurements conform to the requirements of ISO/IEC 17025 and to Airgas ISO 9001:2008 and relate only to items identified on this certificate. All items are certified to be NIST Traceable with total uncertainty as detailed under Analytical Uncertainty. This document shall not be reproduced in full without written approval of the issuer.



TESTING CERT No. 3082.05

[Signature]
Approved for Release



High Volume TSP & PM-10 Calibration Data Sheet

Calibration Location : SECOT Co.,Ltd. Calibration Date : Jan 8, 2024

Hi-Vol Pump No. : BH-025 Indicator No. : CM-01

Amb. Temp (°C) : 34 Press (mmHg) : 757

Calibration by : Mr.Suphanut I.

Plate	Indicate (X) (cm.)	True H ₂ O (in.)	Actual Flow (Y) (cfm)	XY	X ²	Remark
18	14.20	9.50	51.46	730.73	201.64	
13	11.80	7.70	46.61	550.00	139.24	
10	9.00	5.80	40.62	365.58	81.00	
7	5.80	3.70	32.70	189.66	33.64	
5	3.40	2.40	26.59	90.41	11.56	
Sum	44.20	29.10	197.98	1,926.38	467.08	

Calibrated by : *Suphanut I.* Approved by : *mitaya k.*



High Volume TSP & PM-10 Calibration Data Sheet

Calibration Location : SECOT Co.,Ltd. Calibration Date : Jan 6, 2024
Hi-Vol Pump No. : BH-005 Indicator No. : CM-01
Amb. Temp (°C) : 33 Press (mmHg) : 761
Calibration by : Mr.Suphanut I.

Plate	Indicate (X) (cm.)	True H ₂ O (in.)	Actual Flow (Y) (cfm)	XY	X ²	Remark
18	19.60	13.30	60.66	1,188.94	384.16	
13	15.60	10.50	54.21	845.68	243.36	
10	12.40	8.00	47.48	588.75	153.76	
7	8.20	5.10	38.17	312.99	67.24	
5	5.20	3.10	30.04	156.21	27.04	
Sum	61.00	40.00	230.56	3,092.57	875.56	

Calibrated by : Suphanut I. Approved by : Wittaya K.



High Volume TSP & PM-10 Calibration Data Sheet

Calibration Location : SECOT Co.,Ltd. Calibration Date : Jan 6, 2024
Hi-Vol Pump No. : BH-003 Indicator No. : CM-01
Amb. Temp (°C) : 30 Press (mmHg) : 761
Calibration by : Mr.Suphanut I.

Plate	Indicate (X) (cm.)	True H ₂ O (in.)	Actual Flow (Y) (cfm)	XY	X ²	Remark
18	18.40	11.30	56.01	1,030.58	338.56	
13	14.80	9.00	50.29	744.29	219.04	
10	12.00	6.90	44.19	530.28	144.00	
7	7.80	4.80	37.07	289.15	60.84	
5	4.80	2.70	28.12	134.98	23.04	
Sum	57.80	34.70	215.68	2,729.28	785.48	

Calibrated by : Suphanut I. Approved by : Wittaya K.



High Volume TSP & PM-10 Calibration Data Sheet

Calibration Location : SECOT Co.,Ltd. Calibration Date : Jan 11, 2023
 Hi-Vol Pump No. : BH-033 Indicator No. : CM-01
 Amb. Temp (°C) : 27 Press (mmHg) : 760
 Calibration by : Mr.Nattachai C.

Plate	Indicate (X) (cm.)	True H ₂ O (in.)	Actual Flow (Y) (cfm)	XY	X ²	Remark
18	17.80	13.60	61.32	945.20	256.00	
13	14.20	10.80	54.96	748.30	196.00	
10	11.00	8.40	48.63	528.60	125.40	
7	7.00	5.30	38.89	274.80	51.80	
5	4.20	3.20	30.50	120.20	17.64	
Sum	54.20	41.30	234.30	2,617.10	646.84	

Calibrated by : Nattachai C. Approved by : Mr. Haya K.



High Volume TSP & PM-10 Calibration Data Sheet

Calibration Location : SECOT Co.,Ltd. Calibration Date : Jan 8, 2024
 Hi-Vol Pump No. : BH-014 Indicator No. : CM-01
 Amb. Temp (°C) : 34 Press (mmHg) : 757
 Calibration by : Mr.Suphanut I.

Plate	Indicate (X) (cm.)	True H ₂ O (in.)	Actual Flow (Y) (cfm)	XY	X ²	Remark
18	16.20	11.90	57.45	930.69	262.44	
13	14.20	9.80	52.42	744.36	201.64	
10	10.60	7.10	44.81	474.99	112.36	
7	6.80	4.50	35.93	244.32	46.24	
5	4.60	2.70	28.12	129.35	21.16	
Sum	52.40	36.00	218.73	2,523.72	643.84	

Calibrated by : Suphanut I. Approved by : Mr. Haya K.



High Volume TSP & PM-10 Calibration Data Sheet

Calibration Location : SECOT Co.,Ltd. Calibration Date : Jan 11, 2023
 Hi-Vol Pump No. : BH-006 Indicator No. : CM-01
 Amb. Temp (°C) : 27 Press (mmHg) : 760
 Calibration by : Mr.Nattachai C..

Plate	Indicate (X) (cm.)	True H ₂ O (in.)	Actual Flow (Y) (cfm)	XY	X ²	Remark
18	19.20	12.80	59.53	1,142.98	368.64	
13	15.60	9.90	52.68	821.81	243.36	
10	12.20	7.70	46.61	568.64	148.84	
7	7.80	4.90	37.44	292.03	60.84	
5	4.60	3.10	30.04	138.18	21.16	
Sum	59.40	38.40	226.30	2,963.64	842.84	

Calibrated by : Nattachai C. Approved by : Mr. Haya K.



ELECTRICAL AND ELECTRONICS INSTITUTE
 FOUNDATION FOR INDUSTRIAL DEVELOPMENT
 975 Moo 4, Bangpoo Industrial Estate, Soi 8, Sukhumvit Road km 37,
 Phraek Sa, Mueang Samut Prakan, Samut Prakan 10280
 Tel: +66 2709 4860 Fax: +66 2324 0917



Certificate No.: CP20230345EA
 Operation No.: CP2023080023

Certificate of Calibration

Equipment: Sound Calibrator
 Manufacturer: Cirrus Research Plc
 Model/Type: CR:515
 Serial No.: 97097
 ID No.: -
 Customer: SECOT Co.,Ltd.
 Address: 239 Rimklongprapa Rd., Bangsue,
 Bangkok 10800 Thailand
 Received Date: 28 August 2023
 Calibrated Date: 4 September 2023
 Issued Date: 8 September 2023
 Calibrated by: Ms. Juntaporn Kunhakom

Approved by: (Signature)
 (Mr. Sittichai Swaksuriyawong)
 Group Manager

This report was prepared electronically using applicable electronic signature. Printing or copy of file are considered as a copy of the document.

The reported uncertainty of measurement was based on standard uncertainty multiplied by a coverage factor (k) providing a level of confidence of approximately 95%. This certificate may not be reproduced other than in full except with the prior written approval of the Electrical and Electronics Institute, Foundation for Industrial Development.

Certificate No.: CP20230345EA

Calibration Report

Equipment: Sound Calibrator
Manufacturer: Cirrus Research Plc
Model/Type: CR:515
Serial No.: 97097
ID No.: -
Ambient Temperature: (23 ± 2) °C
Relative Humidity: (50 ± 15) %
Pressure: (101.3 ± 1.5) kPa

Method of Calibration :-
IEC 60942:2017

Condition of this result of calibration

1. Reference standards instrument :-

Instrument	Model	Serial No.	Cert. No.	Due Date
1) Standard microphone	4180	2787490	AA-1024-22	6 November 2023
2) Waveform Generator	33511B	MY52302264	CK20230039EA	27 June 2024
3) Audio Analyzing DMM	2015-P	000136E	E1U225466	2 December 2023
4) Pressure humidity and Temperature Transmitter	PTU301	F0640002	CL1-P230024 CD20230196EA	20 March 2024 23 July 2024

2. This result of calibration was found accurate as shown on date and place of calibration only.

3. This certification is traceable to the international system of unit maintained at :-

Reference standards instrument for Acoustic function

- National Institute of Metrology (Thailand)

Reference standards instrument for Electrical function

- Electrical and Electronics Institute; NSC Accredited Calibration No.0119

Result of Calibration:-

1. Function : Sound pressure level

Normal	Specified Sound	Measured value	Deviated value ^[1]	Acceptance limit ^[3]
Frequency (Hz)	Pressure level (dB)	(dB)	(dB)	(dB)
1000	94	94.13	0.13	±0.25

2. Function : Frequency

Normal Sound	Specified Frequency	Measured value	Deviated value ^[2]	Acceptance limit ^[3]
Pressure level (dB)	(Hz)	(Hz)	(%)	(%)
94	1000	1000.3	0.0	±0.7

Certificate No.: CP20230345EA

Calibration Report

3. Function : Total distortion + noise

Normal	Normal	Measured value ^[4]	Acceptance limit ^[5]
Sound Pressure level (dB)	Frequency (Hz)	(%)	(%)
94	1000	1.0	2.5

Uncertainty of measurement

Function	Uncertainty	Maximum-permitted uncertainty of measurement
Sound pressure level	0.10 dB	0.15 dB
Frequency	0.10 %	0.20 %
Total distortion + noise	0.40 %	0.50 %

Note: [1] The deviated value is the absolute value of the difference between the measured value and the corresponding specified sound pressure level.

[2] The deviated value is the absolute value of the difference in percent between the measured value and the corresponding specified frequency.

[3] The acceptance limit is for the deviated value.

[4] The measured value is the total distortion + noise, measured over the frequency range from 20 Hz to 20 kHz.

[5] The acceptance limit is for the Measured value.

Remarks: 1. Acceptance limit was IEC 60942:2017 Class 1.

2. Maximum-permitted uncertainty of measurement was IEC 60942:2017 Class 1.

3. The coverage factor $k = 2.00$

-- End of Report --



SOUND LEVEL METER CALIBRATION

Calibration Location: SECOT

Calibration Date: Apr 17, 24

ACOUSTIC CALIBRATOR

Brand	Model	Serial No.	Frequency (Hz)	Ref.Calibrated (dB)	Eff.Calibrated (dB)
Cirrus	CR:515	97097	1000.00	94.0	93.7

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
15	Cirrus	CR162B	G300769	93.1	0.6
16	Cirrus	CR162B	G300833	92.6	1.1
17	Cirrus	CR162B	G300846	93.5	0.2
18	Cirrus	CR162B	G300892	93.2	0.5
19	Cirrus	CR162B	G300990	92.5	1.2
23	Cirrus	CR162B	G301027	92.7	1.0
25	Cirrus	CR162C	G300838	93.5	0.2
39	Cirrus	CR162B	G302743	92.6	1.1
42	Cirrus	CR162B	G302738	93.1	0.6
43	Cirrus	CR162B	G302741	93.0	0.7
48	Cirrus	CR162B	G302237	93.1	0.6

Calibrated by :

Approved by :

Preeda S.



SOUND LEVEL METER CALIBRATION

Calibration Location: SECOT

Calibration Date: Feb 28, 24

ACOUSTIC CALIBRATOR

Brand	Model	Serial No.	Frequency (Hz)	Ref.Calibrated (dB)	Eff.Calibrated (dB)
Cirrus	CR:515	97097	1000.00	94.0	93.8

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
1	SCARLET	ST-21D	820722	93.8	0.0
2	SCARLET	ST-21D	820723	93.7	0.1
4	SCARLET	ST-21D	820725	93.7	0.1
5	SCARLET	ST-21D	820726	93.7	0.1
6	SCARLET	ST-21D	820727	94.0	-0.2
7	SCARLET	ST-21D	820728	93.7	0.1
8	SCARLET	ST-21D	820729	93.7	0.1
10	SCARLET	ST-21D	820731	93.8	0.0

Calibrated by :

Approved by :

Suk S.



SOUND LEVEL METER CALIBRATION

Calibration Location: SECOT

Calibration Date: May 28, 24

ACOUSTIC CALIBRATOR

Brand	Model	Serial No.	Frequency (Hz)	Ref.Calibrated (dB)	Eff.Calibrated (dB)
Cirrus	CR:515	97097	1000.00	94.0	93.7

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
17	Cirrus	CR162B	G300846	93.7	0.0
18	Cirrus	CR162B	G300892	93.7	0.0
23	Cirrus	CR162B	G301027	93.7	0.0
25	Cirrus	CR162C	G300838	93.7	0.0
28	Cirrus	CR162C	G301065	93.6	0.1
39	Cirrus	CR162B	G302743	93.7	0.0
43	Cirrus	CR162B	G302741	93.7	0.0
44	Cirrus	CR162B	G302742	93.7	0.0

Calibrated by :

Approved by :



SOUND LEVEL METER CALIBRATION

Calibration Location: SECOT

Calibration Date: Jun 20, 24

ACOUSTIC CALIBRATOR

Brand	Model	Serial No.	Frequency (Hz)	Ref.Calibrated (dB)	Eff.Calibrated (dB)
Cirrus	CR:515	97097	1000.00	94.0	93.7

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
20	Cirrus	CR162B	G301014	93.8	-0.1

Calibrated by :

Approved by :

CERTIFICATE OF CALIBRATION

ISSUED BY Noisemeters
DATE OF ISSUE 16 March 2023 CERTIFICATE NUMBER 189327

NoiseMeters

NoiseMeters
Acoustic House
Bridlington Road
Hunmanby
YO14 0PH
United Kingdom
www.noisemeters.com

Page 1 of 1

Test engineer:
Nigel Smith
Electronically signed:

Nigel Smith

doseBadge Reader

Instrument

Manufacturer: Cirrus Research plc Serial Number: 95168
Model Number: RC:110A Notes:

Calibration Procedure

The tests were carried out in accordance with the requirements of IEC 60942:2003 where applicable.

Date of Calibration: 16 March 2023

Functionality Results

Function	Result
Keypad	Pass
Battery Power	Pass
Display	Pass
Communication	Pass
2 way IR link	Pass
Clock	Pass

Calibration Results

	Level (dB)	Frequency (Hz)	Distortion (% THD + Noise)
Initial	113.90	999.3	0.61
Adjusted	114.00	999.2	0.61
Uncertainty	± 0.11	± 0.14	± 0.10
Tolerances	± 0.60	± 2.00	± 4.00

Environmental Conditions

Pressure: 99.27 kPa
Temperature: 23.3 °C
Humidity: 37.6 %

Notes

This certificate provides traceability of measurement to the SI system of units and/or to units of measurement realised at the National Physical Laboratory or other recognised national metrology institutes. This certificate may not be reproduced other than in full, except with the prior written approval of the issuing laboratory. The results within this certificate relate only to the items calibrated. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a coverage probability of approximately 95%.

Sheet No. : NC-CIRRUS-2024-017



NOISE DOSE METER CALIBRATION

Calibration Location: SECOT

Calibration Date: Feb 28, 24

ACOUSTIC CALIBRATOR

Brand	Model	Serial No.	Calibrated (dB)	Frequency (Hz)
CIRRUS	RC 110A	95168	114.00	1000

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
1	Cirrus	CR110A	CB1052	113.6	0.4
2	Cirrus	CR110A	CB1053	114.2	-0.2
3	Cirrus	CR110A	CB1054	113.5	0.5
4	Cirrus	CR110A	CB1055	112.6	1.4
5	Cirrus	CR110A	CB1056	114.0	0.0

Calibrated by :

[Signature]

Approved by :

Suk Suthmanon

NC-CIRRUS-2024-017/SPRC 1H/04/03/2024

SECOT CO., LTD.
239 Rimklongprapa Rd. Bangsue, Bangkok, 10800, THAILAND
Tel: (662)959-3600 Fax: (662) 959-3535
E-Mail: envserv@secot.co.th

CERTIFICATE OF CALIBRATION

ISSUED BY Noisemeters


DATE OF ISSUE 28 April 2023 CERTIFICATE NUMBER 191319

NoiseMeters

NoiseMeters
Acoustic House
Bridlington Road
Hunmanby
YO14 0PH
United Kingdom
www.noisemeters.com

Page 1 of 1

Test engineer:
Rebecca Thomas
Electronically signed:

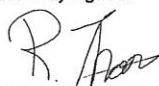

doseBadge Reader

Instrument

Manufacturer: Pulsar Instruments Plc Serial Number: 79781
Model Number: Model 22R Notes:

Calibration Procedure

The tests were carried out in accordance with the requirements of IEC 60942:2003 where applicable.

Date of Calibration: 26 April 2023

Functionality Results

Function	Result
Keypad	Pass
Battery Power	Pass
Display	Pass
Communication	Pass
2 way IR link	Pass
Clock	Pass

Calibration Results

	Level (dB)	Frequency (Hz)	Distortion (% THD + Noise)
Result	114.00	999.0	0.47
Uncertainty	± 0.11	± 0.14	± 0.10
Tolerances	± 0.60	± 2.00	± 4.00

No adjustments were made during this calibration.

Environmental Conditions

Pressure: 101.00 kPa
Temperature: 22.4 °C
Humidity: 33.7 %

Notes

This certificate provides traceability of measurement to the SI system of units and/or to units of measurement realised at the National Physical Laboratory or other recognised national metrology institutes. This certificate may not be reproduced other than in full, except with the prior written approval of the issuing laboratory. The results within this certificate relate only to the items calibrated. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2, providing a coverage probability of approximately 95%.

Sheet No. : NC-PULSAR-2024-028



NOISE DOSE METER CALIBRATION

Calibration Location: SECOT

Calibration Date: Mar 28, 24

ACOUSTIC CALIBRATOR


Brand	Model	Serial No.	Calibrated (dB)	Frequency (Hz)
PULSAR	22R	79781	114.00	1000

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
1	Pulsar	22	PB614	112.9	1.1
2	Pulsar	22	PB617	113.2	0.8
3	Pulsar	22	PB618	113.7	0.3

Calibrated by :



Approved by :

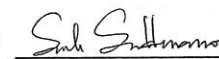

CERTIFICATE OF CALIBRATION

ISSUED BY **Noisemeters**

DATE OF ISSUE **26 March 2024**

CERTIFICATE NUMBER **211259**

NoiseMeters

NoiseMeters
Acoustic House
Bridlington Road
Hunmanby
YO14 0PH
United Kingdom
www.noisemeters.com

Page 1 of 2

Approved signatory
N. Smith
Electronically signed:



doseBadge Reader : IEC 60942:2003

Instrument information

Manufacturer: Cirrus Research plc

Notes:

Model: RC:110A

Serial number: 95167

Class: 2

Test summary

Date of calibration: 25 March 2024

The doseBadge reader detailed above has been calibrated to the published data as described in the operating manual and in the half-inch configuration. The procedures and techniques used are as described in IEC60942_2003 Annex B – Periodic Tests and three determinations of the sound pressure level, frequency and total distortion were made.

The sound pressure level was measured using a WS2F condenser microphone type MK:224 manufactured by Cirrus Research plc.

The results have been corrected to the reference pressure of 101.33 kPa using the manufacturer's data.

The doseBadge Reader has been shown to conform to the Class 2 requirements for periodic testing, described in Annex B of IEC 60942:2003 for the sound pressure level(s) and frequency(ies) stated, for the environmental conditions under which the tests were performed.

However, as public evidence was not available, from a testing organisation responsible for pattern approval, to demonstrate that the model of doseBadge Reader conformed to the requirements for pattern evaluation described in Annex A of IEC 60942:2003, no general statement or conclusion can be made about conformance of the doseBadge Reader to the requirements of IEC 60942:2003.

Notes:

This certificate provides traceability of measurement to the SI system of units and/or to units of measurement realised at the National Physical Laboratory or other recognised national metrology institutes. This certificate may not be reproduced other than in full, except with the prior written approval of the issuing laboratory. The results within this certificate relate only to the items calibrated. The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor $k=2$, providing a coverage probability of approximately 95%.

CERTIFICATE OF CALIBRATION

Certificate Number:

211259

Page 2 of 2

Environmental conditions

The following conditions were recorded at the time of the test:

Before Pressure: 99.26 kPa Temperature: 22.1 °C Humidity: 33.4 %
After Pressure: 99.26 kPa Temperature: 22.1 °C Humidity: 34.6 %

Test equipment

Equipment	Manufacturer	Model	Serial number
Distortion Meter	Keithley	2015	0839263
Acoustic Calibrator	Bruel and Kjaer	4231	2610257
Environmental Monitor	Comet	T7510	21962628

Initial Acoustic Results

	Expected	Sample 1	Sample 2	Sample 3	Average	Deviation	Tolerance	Uncertainty
Level (dB)	114.00	113.41	113.54	113.55	113.50	-0.50	±0.75	0.11 dB
Distortion (%)	< 4.00	0.49	0.50	0.55	0.51	0.51	+4.00	0.13 %
Frequency (Hz)	1000.0	990.5	990.5	990.4	990.5	-9.5	±20.0	0.1 Hz

The measured quantities or deviations (as applicable), extended by the expanded combined uncertainty of measurement, must not exceed the corresponding tolerance.

Adjusted Acoustic Results

	Expected	Sample 1	Sample 2	Sample 3	Average	Deviation	Tolerance	Uncertainty
Level (dB)	114.00	113.99	113.99	113.98	113.99	-0.01	±0.75	0.11 dB
Distortion (%)	< 4.00	0.42	0.41	0.41	0.42	0.42	+4.00	0.13 %
Frequency (Hz)	1000.0	990.3	990.4	990.3	990.4	-9.6	±20.0	0.1 Hz

Functionality Results

Function	Result
Keypad	Pass
Battery Power	Pass
Display	Pass
Communication	Pass
2 way IR link	Pass
Clock	Pass

End of results



NOISE DOSE METER CALIBRATION

Calibration Location: SECOT

Calibration Date: May 28, 24

ACOUSTIC CALIBRATOR

Brand	Model	Serial No.	Calibrated (dB)	Frequency (Hz)
CIRRUS	RC 110A	95167	114.00	1000

No.	Brand	Model	Serial No.	Reading (dB)	dB Adjust
1	Cirrus	CR110A	CB1041	113.8	0.2
2	Cirrus	CR110A	CB1047	113.4	0.6
3	Cirrus	CR110A	CB1049	113.9	0.1
4	Cirrus	CR110A	CB1052	114.1	-0.1
5	Cirrus	CR110A	CB1053	114.2	-0.2

Calibrated by :

Approved by :

CAL

Calibratech Co.,Ltd.

7/106-7 Moo 2, Sukhaphrachasan 3 Rd., Bangpood, Pakkred, Nonthaburi 11120

Tel.(02) 964-6211 Fax.(02) 964-5155, e-mail : calibratech.cal@yahoo.com, calibratech.cal@hotmail.com



Certificate of Calibration

Certificate No. : 67-420019-1

Page : 1 of 2

Submitted by : Secot Co.,Ltd.

239 RimKlongprapa Road, Bangsue, Bangkok 10800 Thailand

Equipment : pH Meter with electrode

pH meter

Manufacturer : Mettler Toledo Model : Seven2Go S2

Range : N/A pH Resolution : 0.01 pH

Serial No. : B924795409 ID No. : PH No.12

Electrode

Model : InLab Expert Go Serial No. : 3051249

Environment : Ambient Temperature : (25 ± 2) °C

Relative Humidity : (50 ± 15) %

Date of Received : 13 February 2024

Date of Calibration : 20 February 2024

Date of Issue : 20 February 2024

Calibrated by : Permpon Chanpu

Calibration Method : In-house method CAL-M4201 direct measurement by using standard voltage calibrator and using certified reference material (CRM)

Reference Standard Instruments : This certification is traceable to the International System of Units

1. Multiproduct Calibrator

ID No.	Cert. No.	Due Date	Traceability
440001	23E1240	24 Mar 2025	National Institute of Metrology Thailand (NIMT)

2. Standard Buffer Solution

pH	Cert. No.	Lot No.	Exp. Date	Traceability
4.008	61293328	944535	27 Nov 2025	CPA Chem Ltd. Accredited to ISO 17034 and ISO/IEC 17025
6.986	61281486	944537	17 Nov 2024	CPA Chem Ltd. Accredited to ISO 17034 and ISO/IEC 17025
9.997	61281073	944536	17 Nov 2024	CPA Chem Ltd. Accredited to ISO 17034 and ISO/IEC 17025

Approved by :

(Surachai Promthong)

Laboratory Manager

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full except with the prior written approval of the Calibratech Co.,Ltd.



Certificate of Calibration

Certificate No. : 67-420019-1

Page : 2 of 2

Result of Calibration :

UUC Condition As-Received : Good

Function : Electrical measurement
pH meter

Performing standard curve by Multiproduct Calibrator at pH (4,7,10)

Adjustment Curve at nominal pH	Applied Voltage (mV)	Nominal Value (pH)	UUC Reading		Correction (mV)	Uncertainty (± mV)
			(pH)	(mV)		
4, 7, 10	177.4800	4	4.00	177	0	0.58
	0.0000	7	7.00	0	0	0.58
	-177.4800	10	10.00	-177	0	0.58

Function : pH meter with electrode

Performing a three - buffer standard curve using buffer nominal pH (4,7,10)

Adjustment Curve at nominal pH	Standard Buffer (pH)	UUC Reading (pH)	Correction (pH)	Uncertainty (± pH)
4, 7, 10	4.008	4.01	0.00	0.0097
	6.986	7.00	-0.01	0.011
	9.997	10.01	-0.01	0.014

Remark

UUC : Unit Under Calibration

This result of calibration was found accurate as shown on date and place of calibration only.

This reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k = 2,

providing a level of confidence of approximately 95%

- o O o -

Handwritten signature



Request Service No. 099/67

Page 1 of 3

Calibration Certificate

Nomenclature : Brand : Mettler Toledo Type : Top-Loading Electronic Balance

Model : AG245 Serial No. : 1117293916 (198129-0)

Submitted by : Laboratory of SECOT CO., LTD.

Location of Calibration : BAL Room , 6th Floor, Secot Co., Ltd.

Calibration range : 0 – 200 g Scale division : 0.00001 g (41g)/ 0.0001 g (210g)

Calibration date : May 24,2024

Reference Standard No. M2310081S,M2402083S,M2302167S,M2403062N,M2303005N

Traceable to : Metrological Center SCI ECO Services Company Limited.

Thai Calibration Services CO., LTD.

Ambient Condition : Temperature 24.20 – 24.70 °C

Humidity 50.70 – 52.00 % RH

Calibrated By : *Handwritten signature*

Approved By : *Handwritten signature*

(Miss Pornnapa Budthum)

(Miss Narisa Poowasanpetch)

Testing Officer

Chief of Technical Management

Date : 25/05/2024

Date : 25/05/2024

Issued Date : May 25,2024

Measurement Report

Request Service No. 099/67

Page 2 of 3

Description : Brand : Mettler Toledo

Type : Top-Loading Electronic Balance

Model : AG245

Serial No. : 1117293916 (198129-0)

Calibration range : 0 – 200 g

Scale division : 0.00001 g (41g)/ 0.0001 g (210g)

Calibration date : May 24,2024

Ambient Condition : Temperature 24.20-24.70 °C Relative humidity 50.70-52.00 .% RH

Measurement data :

1. Repeatability of Reading :

Load (g)	Standard Deviation of Reading (g)	Maximum Difference between Successive Reading (g)
50	0.000125	0.0004
100	0.000105	0.0003
150	0.000125	0.0003
200	0.000173	0.0005

2. Off-Center Loading :

A Mass of 50.0000 g was placed and moved to various position on the pan.

Unit : g

Center	Front	Left	Back	Right	Center	Maximum Difference
50.00010	50.00032	50.00048	50.00002	50.00008	50.00020	0.00038

Issued Date : May 25,2024

Request Service No.099/67

Page 3 of 3

3. Departure from Nominal Value :

Reading (g)	Correction (g)	Uncertainty (+/- g)
0	0.000000	± 0.000034
0.5	0.000022	± 0.000033
1	0.000037	± 0.000018
10	-0.000067	± 0.000036
20	-0.000060	± 0.000044
40	-0.000193	± 0.000072
60	-0.00032	± 0.00011
80	-0.00033	± 0.00013
100	-0.00048	± 0.00015
120	-0.00049	± 0.00017
140	-0.00040	± 0.00022
160	-0.00054	± 0.00023
180	-0.00053	± 0.00024
200	-0.00084	± 0.00027

Calibrated by : *Pornnapa Budthum*

(Miss Pornnapa Budthum)

Testing Officer

Date : 25/05/2024

Approved By : *Narisa Poowasanpetch*

(Miss Narisa Poowasanpetch)

Chief of Technical Management

Date : 25/05/2024

Issued Date : May 25,2024



Request Service No.100/67

Page 1 of 3

Calibration Certificate

Nomenclature : Brand : Sartorius Type : Top-Loading Electronic Balance

Model : BSA224S-CW Serial No. : 32191636

Submitted by : Laboratory of SECOT CO., LTD.

Location of Calibration : BAL Room , 6th Floor, Secot Co., Ltd.

Calibration range : 0 – 200 g Scale division : 0.0001 g (220 g)

Calibration date : May 22,2023

Reference Standard No. M2402083S, M2302167S, M2403062N, M2303005N

Traceable to : Thai Calibration services Co.,Ltd

Ambient Condition : Temperature 23.41-24.71 °C

Humidity 48.2-53.1 % RH

Calibrated By : *Khemchuda Insorn*

(Miss Khemchuda Insorn)

Approved By : *Na-Na Poowasanpetch*

(Miss Narisa Poowasanpetch)

Testing Officer

Chief of Technical Management

Date : *23/05/2024*

Date : *23/05/2024*

Issued Date : May 23,2024

Measurement Report

Request Service No.100/67

Page 2 of 3

Description : Brand : Sartorius

Type : Top-Loading Electronic Balance

Model : BSA224S-CW

Serial No. : 32191636

Calibration range : 0 – 200 g

Scale division : 0.0001 g (220 g)

Calibration date : May 22,2023

Ambient Condition : Temperature 23.41-24.71 °C Relative humidity 48.2-53.1 % RH

Measurement data :

1. Repeatability of Reading :

Load (g)	Standard Deviation of Reading (g)	Maximum Difference between Successive Reading (g)
50	0.00007	0.0002
100	0.00005	0.0001
150	0.00005	0.0001
200	0.00005	0.0001

2. Off-Center Loading :

A Mass of 50.0000 g was placed and moved to various position on the pan.

Unit : g

Center	Front	Left	Back	Right	Center	Maximum Difference
49.99990	49.99992	49.99988	49.99992	49.99990	49.99992	0.00004

Issued Date : May 24,2024

3. Departure from Nominal Value :

Reading (g)	Correction (g)	Uncertainty (+/- g)
0	0.00000	± 0.00007
1	+ 0.00003	± 0.00007
5	+ 0.00004	± 0.00008
10	+ 0.00008	± 0.00008
20	+ 0.00003	± 0.00009
40	+ 0.00012	± 0.00010
60	+ 0.00004	± 0.00012
80	+ 0.00005	± 0.00013
100	+ 0.00006	± 0.00016
120	+ 0.00007	± 0.00018
140	+ 0.00008	± 0.00020
160	+ 0.00006	± 0.00022
180	+ 0.00007	± 0.00024
200	+ 0.00010	± 0.00027

Calibrated by : *Khemchuda Insorn*

(Miss Khemchuda Insorn)

Testing Officer

Date : 23/05/2024

Approved By : *Narisa Poowasanpetch*

(Miss Narisa Poowasanpetch)

Chief of Technical Management

Date : 23/05/2024

Issued Date : May 23, 2024



Calibration Certificate

Nomenclature : Brand : Mettler Toledo Type : Top-Loading Electronic Balance

Model : AB204-S Serial No. : 1123163292 (209359)

Submitted by : Laboratory of SECOT CO., LTD.

Location of Calibration : BAL Room , 6th Floor, Secot Co., Ltd.

Calibration range : 0 – 200 g Scale division : 0.0001 g (220 g)

Calibration date : May 24, 2024

Reference Standard No. M2402083S, M2302167S, M2403062N, M2303005N

Traceable to : THAI CALIBRATION SERVICES CO., LTD.

Ambient Condition : Temperature 24.21 – 24.41 °C

Humidity 41.8 – 49.5 % RH

Calibrated By : *Janista Kui-on*

(Miss Janista Kui-on)

Testing Officer

Date : 24/05/2024

Approved By : *Narisa Poowasanpetch*

(Miss Narisa Poowasanpetch)

Chief of Technical Management

Date : 24/05/2024

Issued Date : May 24, 2024

Measurement Report

Request Service No. 101/67

Page 2 of 3

Description : Brand : Mettler Toledo

Type : Top-Loading Electronic Balance

Model : AB204-S

Serial No. : 1123163292 (209359)

Calibration range : 0 – 200 g

Scale division : 0.0001 g (220 g)

Calibration date : May 24,2024

Ambient Condition : Temperature 24.21-24.41 °C Relative humidity 41.8-49.5 % RH

Measurement data :

1. Repeatability of Reading :

Load (g)	Standard Deviation of Reading (g)	Maximum Difference between Successive Reading (g)
50	0.00005	0.0001
100	0.00004	0.0001
150	0.00007	0.0002
200	0.00007	0.0002

2. Off-Center Loading :

A Mass of 50.0000 g was placed and moved to various position on the pan.

Unit : g

Center	Front	Left	Back	Right	Center	Maximum Difference
50.00016	50.00016	50.00028	50.00014	50.00010	50.00012	0.00016

Issued Date : May 24,2024


Request Service No.101/67

Page 3 of 3

3. Departure from Nominal Valve :

Reading (g)	Correction (g)	Uncertainty (+/- g)
0	0.00000	± 0.00007
1	+0.00003	± 0.00007
5	+0.00002	± 0.00008
10	-0.00004	± 0.00008
20	-0.00003	± 0.00009
40	-0.00002	± 0.00010
60	-0.00016	± 0.00012
80	-0.00021	± 0.00014
100	-0.00020	± 0.00016
120	-0.00023	± 0.00018
140	-0.00030	± 0.00020
160	-0.00034	± 0.00022
180	-0.00037	± 0.00024
200	-0.00022	± 0.00027

Calibrated by : Janista Kui-on

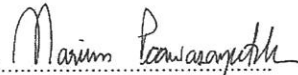Approved By : 

(Miss Janista Kui-on)

(Miss Narisa Poowasanpetch)

Testing Officer

Chief of Technical Management

Date : 24/05/2024

Date : 24/05/2024

Issued Date : May 24,2024



Request Service No. 001/67

Page 1 of 3

Calibration Certificate

Nomenclature : Brand : Sartorius Type : Top-Loading Electronic Balance

Model : BP 2100 Serial No. : 71003651

Submitted by : Laboratory of SECOT CO., LTD.

Location of Calibration : BAL Room , 6th Floor, Secot Co., Ltd.

Calibration range : 0 - 2000 g Scale division : 0.1 g

Calibration date : January 15, 2024

Reference Standard No. M220177, M2302167S, M2303005N, 23M1070

Traceable to : Metrological Center SCI ECO Services Company Limited , Technology Promotion Association (Thailand-Japan)

Thai Calibration Services Co., Ltd.

Ambient Condition : Temperature 24.50-25.10 °C

Humidity 45.6-51.9 % RH

Calibrated By : *Khemchuda Insorn* Approved By : *Narisa Poowasanpetch*

(Miss Khemchuda Insorn)

(Miss Narisa Poowasanpetch)

Testing Officer

Chief of Technical Management

Date : 16/01/2024

Date : 16/01/2024

Issued Date : Jan 16, 2024

Measurement Report

Request Service No. 001/67

Page 2 of 3

Description: Brand : Sartorius

Type : Top-Loading Electronic Balance

Model : BP2100

Serial No. : 71003651

Calibration range : 0 - 2000 g

Scale division : 0.1 g

Calibration date : January 15, 2024

Ambient Condition : Temperature 24.50-25.10°C Relative humidity 45.6-51.9 % RH

Measurement data :

1. Repeatability of Reading :

Load (g)	Standard Deviation of Reading (g)	Maximum Difference between Successive Reading (g)
500	0.032	0.10
1000	0.042	0.10
1500	0.052	0.10
2000	0.052	0.10

2. Off-Center Loading :

A Mass of 1000.00 g was placed and moved to various position on the pan.

Unit : g

Center	Front	Left	Back	Right	Center	Maximum Difference
999.98	999.96	999.98	999.92	999.92	999.98	0.060

Issued Date : Jan 16, 2024

Request Service No.001/67

Page 3 of 3

3. Departure from Nominal Value :

Reading (g)	Correction (g)	Uncertainty (+/- g)
0	0.00	± 0.07
100	0.02	± 0.07
200	0.02	± 0.07
500	0.04	± 0.08
700	0.02	± 0.07
1000	0.06	± 0.08
1200	0.02	± 0.07
1500	0.04	± 0.08
1700	0.06	± 0.08
2000	0.04	± 0.08

Calibrated by :

(Miss Khemchuda Insorn)

Testing Officer

Date : 16/01/2024


Approved By :

(Miss Narisa Poowasanpetch)

Chief of Technical Management

Date : 16/01/2024

Issued Date : Jan 16,2024

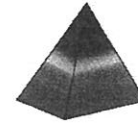

Bangkok High Lab Co.,Ltd.

4/176 Soi Ladplakao 66, Ladplakao Rd., Anusawari, Bangkhen, Bangkok 10220

Tel: (662) 971-5800

Fax: (662) 971-5300

Website: www.bangkokhighlab.com

E-mail: info@bangkokhighlab.com



CERTIFICATE OF CALIBRATION

Certificate No : S2024/033

Page : 1/5

Order No : 010/2024

Customer : SECOT COMPANY LIMITED

Address : 239 Rimklongprapa Road, Bangsue, Bangkok 10800, Thailand

Instrument : UV/VIS spectrophotometer

Manufacture : Thermo Scientific

Model : Genesys 150 UV-VIS

Serial Number : 9A5Y332022

Environment : Temperature (25.1 - 24.8) °C

Humidity (52 - 55) %RH

Received Date : February 20, 2024

Calibration Date : February 20, 2024

Issued Date : February 22, 2024

Calibrate Status : No Adjustment

Calibration Area : Customer area

Roomname : Laboratory Room of SECOT COMPANY LIMITED

Calibrated By : Pacharapol

(Mr. Pacharapol Kwanbang)

Calibration Engineer

Approved By :

(Mr. Teerasak Aulphat)

Authorized signatory

This calibration certificate shall not be reproduced other than in full except with the prior written approval of the Bangkok High Lab Co.,Ltd.

Effective Date: 08/05/2023

F-SER-030 Rev.26



Certificate No : S2024/033
Page : 2/5

1. Photometric Accuracy

CRMs: Neutral Density Glass Filters

CRMs Serial Number: 10563

Traceability: Traceable to NIST, U.S.A. through Neutral density filters NIST SRM 930e & 1930, Double Aperture method through Starna certificate report no.113594

Spectral slit width : 2.00 nm

1.1 Reading scale at 420.0 nm

Filter STDs (Abs) Certificate	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
0.0000	0.000	0.0000	0.0028
0.5604	0.559	0.0014	0.0044
1.0723	1.073	-0.0007	0.0038
2.1753	2.179	-0.0037	0.0064

1.2 Reading scale at 440.0 nm

Filter STDs (Abs) Certificate	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
0.0000	0.000	0.0000	0.0028
0.5503	0.548	0.0023	0.0040
1.0467	1.047	-0.0003	0.0040
2.1117	2.114	-0.0023	0.0064

1.3 Reading scale at 465.0 nm

Filter STDs (Abs) Certificate	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
0.0000	0.000	0.0000	0.0028
0.4996	0.498	0.0016	0.0034
0.9649	0.963	0.0019	0.0040
1.9646	1.966	-0.0014	0.0060

1.4 Reading scale at 546.1 nm

Filter STDs (Abs) Certificate	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
0.0000	0.000	0.0000	0.0028
0.5136	0.511	0.0026	0.0028
0.9765	0.976	0.0005	0.0028
1.9848	1.984	0.0008	0.0064



Certificate No : S2024/033
Page : 3/5

1.5 Reading scale at 590.0 nm

Filter STDs (Abs) Certificate	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
0.0000	0.000	0.0000	0.0028
0.5424	0.540	0.0024	0.0029
1.0130	1.011	0.0020	0.0029
2.0238	2.021	0.0028	0.0061

1.6 Reading scale at 635.0 nm

Filter STDs (Abs) Certificate	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
0.0000	0.000	0.0000	0.0028
0.5265	0.524	0.0025	0.0030
0.9667	0.963	0.0037	0.0031
1.9145	1.910	0.0045	0.0062

2. Photometric Accuracy

CRMs: Potassium Dichromate in Perchloric acid


CRMs Serial Number: 109966

Blank Serial Number: 110516

Traceability: Traceable to NIST, U.S.A. through crystalline potassium dichromate NIST SRM 935a through Starna certificate report no.113596

Spectral slit width : 2.00 nm

Wavelength (nm)	Certificate (Abs)	Average Measured Value (A)	Correction (A)	Uncertainty ± (A)
235	0.0000	0.000	0.0000	0.0050
	0.7428	0.738	0.0048	0.0056
257	0.0000	0.000	0.0000	0.0050
	0.8605	0.856	0.0045	0.0055
313	0.0000	0.000	0.0000	0.0050
	0.2885	0.288	0.0005	0.0054
350	0.0000	0.000	0.0000	0.0050
	0.6376	0.635	0.0026	0.0056

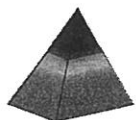

Certificate No : S2024/033
Page : 4/5

3. Wavelength Accuracy

Spectral slit width : 2.00 nm

3.1 CRMs: Holmium Glass Filter

CRMs Serial Number: 10763

Traceability: Traceable to NIST Holmium oxide filter NIST SRM 2034, through Starna certificate report no. 113607


Filter STDs (nm) Certificate	Average Measured Value (nm)	Correction (nm)	Uncertainty ± (nm)
241.74	241.301	0.439	0.12
279.44	279.243	0.197	0.12
287.98	287.555	0.425	0.12
334.10	333.778	0.322	0.12
361.00	360.913	0.087	0.12
418.61	418.457	0.153	0.12
453.63	453.543	0.087	0.12
460.05	459.911	0.139	0.12
536.66	536.327	0.333	0.12
637.98	637.449	0.531	0.12

3.2 CRMs: Didymium Glass Filter

CRMs Serial Number: 10764

Traceability: Traceable to NIST Didymium filter NIST SRM 2034, through Starna certificate report no. 113608

Filter STDs (nm) Certificate	Average Measured Value (nm)	Correction (nm)	Uncertainty ± (nm)
585.29	584.949	0.341	0.12
684.49	683.901	0.589	0.12
740.18	739.646	0.534	0.12
748.48	747.844	0.636	0.12
807.03	806.832	0.198	0.12
879.27	878.923	0.347	0.12

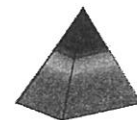

Certificate No : S2024/033
Page : 5/5

4. *Stray Light

CRMs: Potassium Chloride aqueous solution

CRMs Serial Number: 14912

Blank Serial Number: 14958

Traceability: Traceable to NIST, U.S.A. potassium chloride NIST SRM2032, through Starna certificate report no.113597

Spectral slit width : 2.00 nm

Wavelength (nm)	Certificate	Average Measured
201.13	>2A	2.0170
201.13	<1%T	0.9818

5. *Spectral Resolution

CRMs: Toluene in Hexane

CRMs Serial Number: 14812

Blank Serial Number: 14803

Traceability: Traceable to toluene in hexane NIST SRM2034, through Starna certificate report no. 113598

Spectral slit width (nm)	Abs Ratio
0.5	#N/A
1.0	#N/A
1.5	#N/A
2.0	1.401
3.0	#N/A

Note : * "Not TISI Accredited" in this certificate have been included for completeness

Remark:

1. Calibrate Method
 - 1.1 Photometric and Wavelength accuracy: In-house method W-SER-001 based on ASTM E925-02 and ASTM E275-01
 - 1.2 Stray light: Measuring the CRMs in both absorbance and transmittance unit at wavelength 201.23 nm. Base on European Pharmacopoeia V.6.19.3 1984
 - 1.3 Spectral resolution: Measuring the CRMs. The maximum absorbance values were read at closest to 268.7nm and the minimum absorbance values were read at closest 267.0 nm. Refer to European Pharmacopoeia V.6.19.3 1984
2. N/A = not available.
3. Uncertainty of Measurement: The reported uncertainty of measurement was based on standard uncertainty multiplied by a coverage factor $k = 2$, providing a level of confidence of approximately 95%.
4. This result of calibration was found accurate as shown on date and place of calibration only.
5. This report will certify of calibrated equipment only.

- End of Report -


Calibration Certificate

Certificate No.: 2402881-001-01
Client name: SECOT CO., LTD.
Address: 239 Rimklongprapa Road, Bangsue,
Bangsue, Bangkok 10800

Page 1 of 3

Equipment: CHAMBER (Hot Air Oven)
Manufacturer: MEMMERT
Model: UF55
Serial No.: B213.0295
ID No.: N/A
Order No.: 2402881
Operation No.: 2402881-001
Date of Receipt: 24 May 2024
Date of Calibration: 24 May 2024

Calibrated by Mr.Pheraphat Tuanjit
Scientist

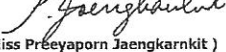Approved by 
(Miss Preeyaporn Jaengkarnkit)
Vice President, Department of Laboratory Services
Responsible for the Technical Management Team

Date of Issue: 30 May 2024

The uncertainties are for a confidence probability of approximately 95 %.

This Certificate is issued in accordance with the conditions of accreditation granted by the Thai Laboratory Accreditation scheme which has assessed the measurement capability of the laboratory and its traceability to recognized national standards and to the units of measurement realized at the corresponding national standards laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the National Food Institute.

F-CS-009 Revision: 01 Date: 20-04-65



Calibration Report

Certificate No.: 2402881-001-01
Equipment: CHAMBER (Hot Air Oven)
Model: UF55 Serial No.: B213.0295
Resolution: 0.1 °C ID No.: N/A
Manufacturer: MEMMERT

Date of Calibration: 24 May 2024

Page 2 of 3

Location: Laboratory, SECOT CO., LTD.
Environment Condition: Ambient Temperature (31.0 ± 1) °C
Relative Humidity (68 ± 5) %
Line Voltage (220 ± 3) Volt

Condition of this results of Calibration:

- This instrument was calibrated by insert 9 standard thermometer into its chamber and calibration according to W-TE-014 Based on TLAS G-20-1/02-08 (E): Guidelines for Calibration and Checks of Temperature Controlled Enclosures.
- The temperature scale used was based on ITS - 90.
- All data show below were final values and the initial data may be obtained upon request.
- Reference Standard Instrument :


Instrument	Model	Serial No./ID No.	Certificate No.	Due Date	Through
Digital Thermometer with sensor	34972A	MY59003377	TE 670223-01	13 January 2025	NATIONAL FOOD INSTITUTE
	RTD	CH#101-109/ RTD#101-109			

- This certificate is traceable to International System of Units (SI Units).
- This certificate was certified only for the instrument we calibrated.
- This result of calibration was found accurate as shown on date and place of calibration only.
- Condition of Calibrated item : Good

UUC Description :

Time of Record 1 Hour 9 Minute At 80.0, 104.0 and 180.0 °C
Fresh air Damper - Open Position -
X Close Fan 60%
- Not Available

- Result of Calibration : ☒ Without adjustment ☐ After adjustment

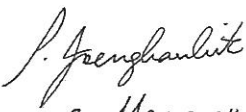
30 May 2024

F-CS-012 Revision: 01 Date: 20-04-65



Calibration Report

Certificate No.: 2402881-001-01
Equipment: CHAMBER (Hot Air Oven)
Model: UF55 Serial No.: B213.0295
Resolution: 0.1 °C ID No.: N/A
Manufacturer: MEMMERT

Date of Calibration: 24 May 2024 Page 3 of 3

Calibration point: 80.0, 104.0 and 180.0 °C

Calibration result:

Calibration Condition	Temperature (°C)	Relative Humidity (%)	Line Voltage (Volt)
MIN	30.7	63.6	217.0
MAX	31.4	73.1	223.0

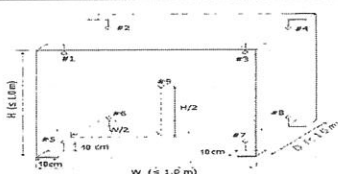


Table 1 : Reporting of Temperature

Calibration point (°C)	Measured Temperature (°C) @ Sensor No. (Sensor No.9 is REF)									Uncertainty ± (°C)
	# 1	# 2	# 3	# 4	# 5	# 6	# 7	# 8	# 9	
80.0	79.99	79.94	80.08	80.08	80.13	79.95	79.90	80.17	80.13	0.46
104.0	103.86	103.80	104.00	103.99	104.10	103.83	103.81	104.18	104.10	0.53
180.0	179.73	179.73	180.01	180.00	180.44	179.81	180.20	180.56	180.25	0.90

Table 2 : Reporting of Characterization Result

UUC* Setting (°C)	UUC* reading (°C)			Stability ± (°C)	Uniformity (°C)	Overall Variation (°C)
	MIN	MAX	Average			
80.0	80.0	80.0	80.0	0.06	0.23	0.37
104.0	104.0	104.0	104.0	0.10	0.30	0.53
180.0	180.0	180.0	180.0	0.10	0.52	0.98

Note The quoted uncertainty include " Stability " and " Loading effect (20% of Temp Uniformity) "

UUC* = Unit Under Calibration

Stability = One-half of the greatest maximum difference of measured temperatures at any one sensors, for at least half an hour after reaching steady state.

Uniformity = The maximum difference of measured temperatures at any sensors and the measured temperature at the reference location which are observed at the same time.

Overall Variation = The difference of the maximum and minimum measured temperatures throughout observation time.

The report uncertainty of measurement was based on standard uncertainty multiplied by coverage factor k= 2, providing a level of confidence of approximately 95 %.

----- End -----

P. Jongsakul
30 May 2024



Certificate of Testing

Equipment : DO Meter
Manufacturer : Hanna
Model : HI98193
Serial No. : 06110066101
ID No. : DO No.9
Received Date : 14 November 2023
Test Date : 15 November 2023
Reference : 2311-0451DN-1
Submitted by : Secot Co.,Ltd.
239 Rimklongprapa Road,
Bangsue, Bangkok 10800
Laboratory Condition : Temperature (25 ± 5) °C
Humidity (50 ± 20) %
Test Procedure : In - house method : CP-CH9
by Comparison Technique with Azide Modification Method

Tested by : Walalak Sirithean

Approved by :

Saithip
Approved Signatory

(✓) Saithip Meangmai
() Warakorn Lernagatrakul
() Ponpan Paipim

Issue Date : 16 November 2023

Cert.No.: 23TW242
Page.: 1 of 2



Cert.No.: 23TW242
Page.: 2 of 2

Condition of this result of calibration

1. Reference Standard Instruments :

This certification is traceable to the International System of Unit through the reference standards laboratory of Industrial Calibration Center, Technology Promotion Association (Thailand-Japan).

Instruments	Serial No.	ID No.	Certificate No.	Due Date
1) Burette	-	130BU10	23CG1172	22 Mar 2025
2) Balance	1124013382	140RC006	23MM18	20 Feb 2024

2. Standard Material :-

Material	Manufacturer	Lot.No.	Assay
Sodium Thiosulfate pentahydrate	Merck	AM1763316	100.2%

Result : Dissolved Oxygen Meter Adjustment With Air 100 %
Dissolved Oxygen Probe No.: KC1N2993N

Titration Method (Azide Modification Method) (mg/L)	DO Meter Reading (mg/L)	Standard Deviation (mg/L)
8.18	8.17	0.0055

This report was certified only for the instrument we tested. It is allowable to use for study the system efficiency. The environmental impact control and present to organization it may concerned Intend to use for advertising and referral purpose is prohibited. This report may not be reproduced other in full, without written approval of the laboratory

-o0o-

Saithip

a 1190074



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL. 0-2717-3000-29 FAX. 0-2719-9484



Cert.No.: 23CH1456
Page.: 1 of 2

Certificate of Calibration

Equipment : Conductivity Meter
Manufacturer : Hanna
Model : HI98192
Serial No. : 05200045101
ID No. : Conduct No.8
Condition As-Received: Used Item
Received Date : 14 November 2023
Calibration Date : 15 November 2023
Reference : 2311-0451DN-2
Submitted by : Secot Co., Ltd.
239 Rimklongprapa Road,
Bangsue, Bangkok 10800
Ambient Temperature : (25 ± 2.5) °C
Relative Humidity : (50 ± 15) %
Calibration Procedure: In -house method :
- CP-CH6 : based on direct measurement by
using certified reference material (CRM)
Calibrated by : Walalak Sirithean
Approved by : *Saithip*
Approved Signatory
(✓) Saithip Meangmai
() Warakorn Lerngagrakul
() Ponpan Paipim
Issue Date : 16 November 2023

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.

A 0060562



Page.: 2 of 2

Calibration Certificate

1. Reference Standard Instrument :-

1. Reference Standard Instrument :-

- This Certification is traceable to SI Throught Technology Promotion Association (Thailand - Japan)

- Conductivity calibration solution, CPA chem Ltd., The measurement results are traceable to SI through CPA chem Ltd., ANSI-ASQ National Accreditation Board, Accredited No. AR-1835
- Conductivity calibration solution, Thermo Scientific (traceable to NIST)

- Control Conductivity calibration solution temperature by Water bath (25 ± 0.1) °C

3. This certificate is valid only to the item calibrated on date and place of calibration.

Function : Conductivity Measurement

(*) After Adjustment at 1.413, 12.880 mS/cm
Conductivity Electrode Serial No.: 0932016N

Standard Conductivity Solution	Before Adjustment UUC* Reading	After Adjustment UUC* Reading	Uncertainty of Measurement (±)	Coverage factor k
*100 µS/cm	97.60 µS/cm	104.8 µS/cm	5.1 µS/cm	2.00
1.413 mS/cm	1.285 mS/cm	1.413 mS/cm	0.0092 mS/cm	2.00
12.880 mS/cm	12.15 mS/cm	12.88 mS/cm	0.086 mS/cm	2.00

Remark

- UUC* = Unit Under Calibration
- * = Not NSC - ONSC Accredited

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-000-

Sailhip

a 1190075

Certificate No.: 2304081-001-01
Client name: SECOT CO., LTD.
Address: 239 Rimklongprapa Road,
 Bangsue, Bangsue, Bangkok 10800

Page 1 of 3

Equipment: CHAMBER (Incubator)

Manufacturer: MEMMERT

Model: ICP 400

Serial No.: K406.0004

ID No.: N/A


Order No.: 2304081

Operation No.: 2304081-001

Date of Receipt: 27 July 2023

Date of Calibration: 27 July 2023

Calibrated by Mr. Worapob Sooktong
Scientist

Approved by 
(Mr.Pheraphat Tuanjit)

Manager, Division of Calibration Laboratory
Responsible for the Technical Management Team

Date of Issue: 7 August 2023

The uncertainties are for a confidence probability of approximately 95 %.

This Certificate is issued in accordance with the conditions of accreditation granted by the Thai Laboratory Accreditation scheme which has assessed the measurement capability of the laboratory and its traceability to recognized national standards and to the units of measurement realized at the corresponding national standards laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the National Food Institute.

F-CS-009 Revision: 01 Date: 20-04-65



Calibration Report

Certificate No.: 2304081-001-01
Equipment: CHAMBER (Incubator)
Model: ICP 400 Serial No.: K406.0004
Resolution: 0.1 °C ID No.: N/A
Manufacturer: MEMMERT
Date of Calibration: 27 July 2023

Page 2 of 3

Location: Laboratory, SECOT CO., LTD.
Environment Condition:
Ambient Temperature (30 ± 1) °C
Relative Humidity (54 ± 1) %
Line Voltage (228 ± 0) Volt

Condition of this results of Calibration:

- This instrument was calibrated by insert 9 standard thermometer into its chamber and calibration according to W-TE-014 Based on TLAS G-20-1/02-08 (E): Guidelines for Calibration and Checks of Temperature Controlled Enclosures.
- The temperature scale used was based on ITS - 90.
- All data show below were final values and the initial data may be obtained upon request.

2. Reference Standard Instrument :

Instrument	Model	Serial No./ID No.	Certificate No.	Due Date	Through
Digital Thermometer with sensor	34972A	MY49016894	TE 660380-01	22 April 2024	NATIONAL FOOD INSTITUTE
	RTD	CH#301-309/ RTD#301-309			

- This certificate is traceable to International System of Units (SI Units).
- This certificate was certified only for the instrument we calibrated.
- This result of calibration was found accurate as shown on date and place of calibration only.
- Condition of Calibrated item : Good

UUC Description :

Time of Record 1 Hour 9 Minute At 20.0 °C
Fresh air Damper - Open Position -
X Close
- Not Available

7. Result of Calibration : ☒ Without adjustment ☐ After adjustment

Handwritten signature



Calibration Report

Certificate No.: 2304081-001-01
Equipment: CHAMBER (Incubator)
Model: ICP 400 Serial No.: K406.0004
Resolution: 0.1 °C ID No.: N/A
Manufacturer: MEMMERT
Date of Calibration: 27 July 2023

Page 3 of 3

Calibration point: 20.0 °C

Calibration result:

Calibration Condition	Temperature (°C)	Relative Humidity (%)	Line Voltage (Volt)
MIN	28.6	53.0	227.3
MAX	31.4	54.1	228.1

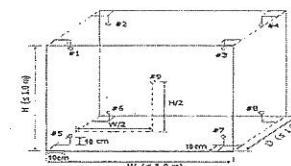


Table 1 : Reporting of Temperature

Calibration point (°C)	Measured Temperature (°C) @ Sensor No. (Sensor No.9 is REF)									Uncertainty ± (°C)
	# 1	# 2	# 3	# 4	# 5	# 6	# 7	# 8	# 9	
20.0	20.42	20.39	20.40	20.43	20.47	20.49	20.42	20.41	20.43	0.27

Table 2 : Reporting of Characterization Result

UUC* Setting (°C)	UUC* reading (°C)			Stability ± (°C)	Uniformity (°C)	Overall Variation (°C)
	MIN	MAX	Average			
20.0	20.0	20.1	20.0	0.065	0.053	0.220

Note The quoted uncertainty include " Stability " and " Loading effect (20% of Temp Uniformity) "

UUC* = Unit Under Calibration

Stability = One-half of the greatest maximum difference of measured temperatures at any one sensors, for at least half an hour after reaching steady state.

Uniformity = The maximum difference of measured temperatures at any sensors and the measured temperature at the reference location which are observed at the same time.

Overall Variation = The difference of the maximum and minimum measured temperatures throughout observation time.

The report uncertainty of measurement was based on standard uncertainty multiplied by coverage factor k= 2, providing a level of confidence of approximately 95 %.

----- End -----

Handwritten signature



Calibration Certificate

Certificate No.: 2304081-002-01
Client name: SECOT CO., LTD.
Address: 239 Rimklongprapa Road,
Bangsue, Bangsue, Bangkok 10800

Page 1 of 3

Equipment: Water Bath
Manufacturer: MEMMERT
Model: WB 29
Serial No.: I698.0051
ID No.: N/A
Order No.: 2304081
Operation No.: 2304081-002
Date of Receipt: 27 July 2023
Date of Calibration: 27 July 2023

Calibrated by Mr.Worapob Sookkong
Scientist

Approved by 
(Mr.Pheraphat Tuanjit)

Manager, Division of Calibration Laboratory
Responsible for the Technical Management Team

Date of Issue: 7 August 2023

The uncertainties are for a confidence probability of approximately 95 %.

This Certificate is issued in accordance with the conditions of accreditation granted by the Thai Laboratory Accreditation scheme which has assessed the measurement capability of the laboratory and its traceability to recognized national standards and to the units of measurement realized at the corresponding national standards laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the National Food Institute.

F-CS-009 Revision: 01 Date: 20-04-65



nfi.or.th

Calibration Report

Certificate No.: 2304081-002-01
Equipment: Water Bath
Model: WB 29 Serial No.: I698.0051
Resolution: 0.1 °C ID No.: N/A
Manufacturer: MEMMERT
Date of Calibration: 27 July 2023

Page 2 of 3

Location: Laboratory, SECOT CO., LTD.
Environment Condition: Ambient Temperature (24 ± 1) °C
Relative Humidity (58 ± 2) %
Line Voltage (229 ± 1) Volt

Condition of this results of Calibration:

- This instrument was calibrated by insert 5 standard thermometer into its liquid bath and calibration according to W-TE-011 based on ASTM E715-80 (2016): Standard Specification for Gravity-Convection and Forced-Circulation Water Baths.
- The temperature scale used is ITS - 90.
- All data show below were final values and the initial data may be obtained upon request.

2. Reference Standard Instrument :

Instrument	Model	Serial No./ID No.	Certificate No.	Due Date	Through
Digital Thermometer with sensor	34972A	MY49016894	TE 660380-01	22 April 2024	NATIONAL FOOD INSTITUTE
	RTD	RTD#201-205 / CH#201-205			

- This certificate is traceable to International System of Units (SI Units).
- This certificate was certified only for the instrument we calibrated.
- This result of calibration was found accurate as shown on date and place of calibration only.
- Condition of Calibrated item : Good

UUC Description:

Time of Record 1 Hour 9 Minute At 95.0 °C
7. Result of Calibration : ☒ Without adjustment
☐ After adjustment



F-CS-012 Revision: 01 Date: 20-04-65



nfi.or.th

Calibration Report


Certificate No.: 2304081-002-01
Equipment: Water Bath
Model: WB 29 Serial No.: I698.0051
Resolution: 0.1 °C ID No.: N/A
Manufacturer: MEMMERT
Date of Calibration: 27 July 2023

Page 3 of 3

Calibration point: 95.0 °C

Calibration result:

Calibration Condition	Temperature (°C)	Relative Humidity (%)	Line Voltage (Volt)
Min	23.0	56.3	227.5
Max	25.0	60.2	229.6

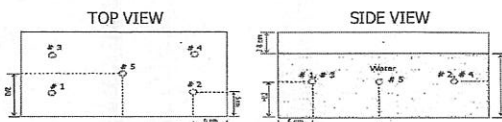

Sensor Installation Location

Table1 : Reporting of Temperature

Calibration Point (°C)	Measured Temperature (°C) @ Sensor No. (Sensor No.5 is REF)					Uncertainty ± (°C)
	# 1	# 2	# 3	# 4	# 5	
95.0	95.03	94.96	95.10	94.97	95.02	0.28

Table 2 : Reporting of Characterization Result

UUC* Setting (°C)	UUC* reading (°C)			Stability ± (°C)	Uniformity (°C)	Overall Variation (°C)
	MIN	MAX	Average			
95.0	94.9	95.1	95.0	0.18	0.080	0.47

Note The quoted uncertainty include " Stability " and " Loading effect (20% of Temp Uniformity)"
UUC* = Unit Under Calibration
Stability = One-half of the greatest maximum difference of measured temperatures at any one sensors,
for at least half an hour after reaching steady state.
Uniformity = The maximum difference of measured temperatures at any sensors and the measured
temperature at the reference location which are observed at the same time.
Overall Variation = The difference of the maximum and minimum measured temperatures throughout observation time.
The report uncertainty of measurement was based on standard uncertainty multiplied by coverage factor k= 2,
providing a level of confidence of approximately 95 %.

----- End -----

Handwritten signature




PinAAcle 900T Preventive Maintenance Report

Company Name: Secot.co.th.
Instrument Location: Instrument room.
239 Rimkhlong Prapa Road, Bang Sue, Bangkok 10800
Instrument Serial No.: PTDS23051001
Date: 27-Mar-2024

PinAAcle 900T Preventive Maintenance (PM)

Company Name:	Secot.co.th.		
Address (Instrument Location):	239 Rimkhlong Prapa Road, Bang Sue, Bangkok 10800		
Serial Number:	PTDS23051001	PM Number:	1 OF 2 W
Customer Name (if applicable):	K.Araya	Telephone Number:	0-2910-5021-6
Customer Support Engineer Name:	K.Piyawit	Service Order Number:	WO-02706368
Date PM Performed: (DD-MMM-YYYY)	27-Mar-2024	Next PM Due Date: (DD-MMM-YYYY)	27-Sep-2024
Standard Labor Hours to Complete PM :		5 hours	

Part Number	Release	Publication Date	
09370143 Rev.9	A	January 2018	

Scope

The purpose of this PM is to ensure the continued functionality of the PinAAcle 900T by inspecting and replacing any worn or damaged parts. This service should only be performed by a trained representative of PerkinElmer.

The customer should save their method before the PM begins.

General Instructions:

The customer must provide the engineer operational data to demonstrate recent instrument performance prior to starting the PM. Always check with the customer before making any changes that may affect the customer's analysis or calibration, including a current back-up of system software and/or data files. The completed document should be signed by an authorized PerkinElmer and customer representative and left with the customer. Update the PM sticker and instrument logbook as required.

Copyright Information

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this publication may be reproduced in any form whatsoever or translated into any language without the prior, written permission of PerkinElmer, Inc. Copyright © 2013 PerkinElmer, Inc.

Trademarks

Registered names, trademarks, etc. used in this document, even when not specifically marked as such, are protected by law. PerkinElmer is a registered trademark of PerkinElmer, Inc. All other trademarks and registered trademarks not owned by PerkinElmer, Inc. or its subsidiaries that are depicted herein are the property of their respective owners.

Except as specifically set forth in its terms and conditions of sale, PerkinElmer makes no Warranty of any kind with regard to this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

PerkinElmer shall not be liable for incidental or consequential damages in connection with the furnishing or use of this document.

Component List

Component / Specific Model	Serial #	Configuration Notes
PinAAcle 900T	PTDS23051001	Syngistix v.5.10

Parts Lists

Parts Included with the PM		
Part Number (if applicable)	Description	Quantity
B0501696	Fan Filters	N/A
B3002013	THGA Contact Cylinders	N/A
B3141064	Glycerol for THGA Cooling	N/A
N3160156	O-Ring Kits for Sampling Introduction (Stainless Steels Nebulizer)	N/A
N3160157	O-Ring Kits for Sampling Introduction (Plastic Nebulizer)	N/A
N9301714	Replacement Acetylene Filter Cartridge	N/A
TH001022	Replacement Air Filter Cartridge	N/A

Additional Reagents and Standards Required for PM				
Part Number (if applicable)	Description	Quality	Batch/Lot #	Expired Date (MM/YY)
N9300183	1000 mg/L Copper Standard	AR	27-39CRY1	30-Apr-2025
N9300244	GFAAS Mixed Standard	AR	60-004CRY1	28-Feb-2025

Additional Reagents and Standards Required for PM (Customer Support Solution)				
Part Number (if applicable)	Description	Quantity	Batch/Lot #	Expiration Date (MM/YY)
N/A	DI Water	250 ml.	AR	AR
N/A	0.5% HNO ₃	250 ml.	AR	AR

Additional Tools Required for PM			
Part Number (if applicable)	Description	Quantity	Serial #
N1013000	0.2A Neutral density filter	1	MGO-056
N1013002	1.0A Neutral density filter	1	MG2-258
B3100652 Or N9307029	Electronic Flow Meter	1	MY2231FC07
B0505495	Test Jig	1	N/A
03030997	System 2 EDL Driver	1	03030997
N3050605	As System 2 EDL	1	16148
N3050121	Cu Lumina HCL	1	092216-010130
N3050109	Ba Lumina HCL	1	102416-040160
N3050139	K Lumina HCL	1	110716-010060
N3050152	Ni Lumina HCL	1	100516-030190
N3050119	Cr Lumina HCL	1	030621-020190

Procedure Checklist

Use (✓) to check off those steps in the checklist that have been completed.

1. General:

- ☒ Review the instrument performance with the customer and document any recent problems.
- ☒ Inspect the customer log book and make any appropriate PM entries.
- ☒ Perform general inspection of system for cleanliness.

2. PC Instrument Software:

- ☒ Instrument Software user files/databases archived, packed, and/or deleted as needed.

3. Mechanical:

- ☒ Inspect and clean all fans and filters. Replace filters if necessary
- ☒ Inspect all gas and water lines for leaks and/or wear. Replace if needed. Thoroughly inspect all quick connects. Replace the Y connector, P/N 09921079, if needed.
- ☒ Clean exterior of the instrument.

3.1 Flame Technique

- ☒ Inspect the burner head, burner chamber, and nebulizer. Clean if needed as stated in the Hardware Guide.
- ☒ Check burner head dimensions with the feeler gauge as stated in the Hardware Guide in the Maintenance chapter section on cleaning the burner head and checking slot width. Replace if out of specification
- ☒ Check the condition of the end cap, burner head, and nebulizer O-rings. Replace if necessary.
- ☒ Check the drain system for signs of wear. Replace worn or damaged parts.
- ☒ Visually check for proper flame conditions when igniting the Air-C₂H₂ and N₂O-C₂H₂ flames (if applicable).

3.2 THGA Technique

- ☒ Inspect the pole pieces and clean where the pole pieces contact the furnace. Replace the pole piece p-rings as needed, P/N's B0501018 & B0501250. Grease the O-rings as needed with Apiezon L grease, P/N 09905148
- ☒ Inspect the four insulation pads on the front contact housing of the THGA in furnace. If the pads are missing replace the THGA furnace or replace the insulator pads on the furnace.
- ☒ Inspect the graphite tube and clean the contact cylinders. Replace if necessary.
- ☒ Check internal and external gas flows with the Electronic Gas Flow Meter and the Gas Flow Test Probe as described in the Service Manual. Correct if necessary.
- ☒ Check furnace open/close function.
- ☒ Verify the operation of the GFTV Camera for proper operation and viewing alignment in the furnace camera Tube View window. Align if needed.
- ☒ Check the operation of the Halogen Light ASSY for the GFTV Camera. Replace if needed.
- ☒ Check the water level/quality in the recirculation (if applicable). Add distilled water if necessary.
- ☒ Check the cooling system fluid flow rate with the FCS In-Line Flow Meter for proper levels if needed. Refer to SDB# COSY008.STN

- ☒ Perform Cooling System maintenance if needed per SDB# COSY005.STN.
- ☒ Check auto sampler operation.
- ☒ Perform an auto sampler check valve test as described in the Service Manual.
- ☒ Lubricate the spindles of the auto sampler pumps and all moving parts of the tray mechanics as described in the Service Manual.
- ☒ Inspect the auto sampler sampling capillary as described in the Service Manual. Replace if necessary.

4. Electrical:

- ☒ Inspect PC boards. Clean if necessary.
- ☒ Carefully check all internal and external cable connections.
- ☒ Check instrument firmware revisions upgrade to current levels (if necessary)
- ☒ Run Diagnostics Test within the Advanced function of the Spectrometer page. Check the results in the service log folder in the Spectrometer BM Log Viewer.

5. Optics:

- ☒ Inspect and clean the sample compartment windows, if needed.
- ☒ Inspect and clean the furnace windows, if needed.
- ☒ Inspect and clean the GFTV camera lens, if needed.
- ☒ Inspect optics. Clean or replace if necessary,

6. Gasses:

- ☒ Verify that the Gasses supplied to the instrument are within the pressure and purity specifications found in the PinAAcle 900 Series Pre-installation Checklist SDB.
- ☒ Verify that the air filter element is dry. Replace if necessary.

7. Flame Interlock Check:

Description: Check to ensure that all safety interlocks are closed.

Parameter	Specification	Test Results	Pass/Fail
Flame Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active	Passed
Drain Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active	Passed
Nebulizer Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active	Passed
C ₂ H ₂ Pressure Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active	Passed
Air Pressure Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active	Passed
Burner Head Sensor	Choosing Nitrous Oxide as the oxidant should trigger an interlock shuts down	Active	Passed

8. After PM Performance tests [Flame]:

8.1 Detector Linearity with Barium

Description: Ensures that the detector is linear in the Visible Range.

Parameter	Specification	Certificate Value at 553.6 nm (Abs.)	Test Results	Pass/Fail
1.0 A ND Filter	± 5% from Cert.	1.0154	0.9921	Passed
0.2 A ND Filter	± 5% from Cert.	0.1806	0.2037	Passed

8.2 Baseline Noise at 1.0 Absorbance with Barium

Description: Ensures that a high absorbance will not produce excessive noise.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.010	0.0031	Passed

8.3 AA Baseline Noise with Copper

Description: Check baseline noise.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.001	0.0005	Passed

8.4 D₂ Background Compensation with Copper

Description: Verifies the instruments ability to compensate for Background absorption.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.010	0.0004	Passed

8.5 AA-BG Baseline Noise with Copper

Description: Ensures that background correction does not produce excessive noise.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.005	0.0001	Passed

8.6 AA-BG Baseline Noise with Arsenic

Description: Ensures that background correction does not produce excessive noise at a low wavelength.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.005	0.0004	Not Applicable

8.7 Flame Sensitivity

Description: Instrument Sensitivity checked against Copper standard.

Standard Copper Sensitivity	Specification	Results (Abs.)	Pass/Fail
5 mg/L Sensitivity SS Neb (if applicable)	> 0.250 Abs.	N/A	Not Applicable
2 mg/L Sensitivity HS Neb (if applicable)	> 0.250 Abs.	0.3541	Passed

9. After PM Performance tests [THGA]:

9.1 Furnace Gas Flows

Description: Ensures the flow rates are within specification.

Parameter	Specification	Test Results	Pass/Fail
Internal Flow Rate	250 mL/min ± 25 mL/min	250	Passed
External Flow Rate	100 mL/min ± 10 mL/min	99	Passed

9.2 Chromium Baseline Noise

Description: Signal to noise check.

Parameter	Specification	Results	Pass/Fail
Baseline Noise	≤ 0.005 Abs.	0.0004	Passed
Standard Deviation	≤ 0.005	0.0001	Passed

9.3 Chromium Characteristic Mass and Precision

Description: Calculate the characteristic mass using the characteristic mass tool and precision from the integrated absorbance values.

Parameter	Specification	Results	Pass/Fail
Cr m ₀ Results	≤ 7.0 pg/0.0044 A-s	4.90	Passed
Precision	≤ 2.0 %	0.82	Passed

9.4 Copper Characteristic Mass and Zeeman Ratio

Description: Calculate the characteristic mass using the characteristic mass tool and check the Zeeman Ratio.

Parameter	Specification	Results	Pass/Fail
Cu m ₀ Result	≤ 16.5 pg/0.0044 A-s	14.20	Passed
Zeeman Ratio	0.52 ± 0.04	0.5430	Passed

10. Review:

- ☒ Review with the customer PM work performed.
- ☒ Review with the customer routine maintenance procedures.
- ☒ Discuss recommended customer supplied materials to have on hand.
- ☒ Attach PM sticker.

Additional Comments

Additional Comments Regarding the PM	
Zeeman Ratio	$= \frac{\text{Atomic Signal (Peak area)}}{\text{Atomic Signal (Peak area)} + \text{Background Signal (Peak area)}}$
	$= \frac{0.1545}{0.1545 + 0.1300}$
	$= 0.5430$

Agilent CrossLab Start Up Services Agilent 7890 Gas Chromatograph Preventive Maintenance Checklist

Agilent Preventive Maintenance provides factory recommended service for your analytical instruments to assure reliable operation and the accuracy of your results.


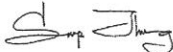
Delivered by highly trained and certified service engineers using genuine Agilent parts and supplies, Agilent Preventive Maintenance provides everything you need to reduce unplanned downtime and keep your systems operating at their peak. This checklist will be completed at the end of the service and provided to you as a record of the preventive maintenance activities.

Review

The preventive maintenance checks and if applicable performance tests for PinAAcle 900T have been completed.

This PinAAcle 900T Passes ☐ Fails ☐ the preventive maintenance.

Review of Preventive Maintenance:

Authorized PerkinElmer Representative:		Date: 27-Mar-2024 (DD-MMM-YYYY)
Authorized Customer Representative:		Date: 27-Mar-2024 (DD-MMM-YYYY)

Introduction

Customer Information

- Customers should provide all necessary operating supplies upon request of the engineer.
- A customer representative should be available to the engineer while performing the preventive maintenance procedures.
- Any parts, not included in the Parts Lists section of this document, are not part of the recommended Preventive Maintenance service, nor are they included in the price of this service.
- If a system requires the use of extra or special procedures and/or parts for the maintenance service, then these must be ordered separately and charged as a repair, which may incur additional costs.

Important Customer Web Links

- For more information about **Agilent Technologies services**, please visit our website using the following URL: <http://www.agilent.com/en-us/products/crosslab-instrument-services/service-repair>
- The **Agilent Community** is an excellent place to get answers, collaborate with others about applications and Agilent products, and find in-depth documents and videos relevant to Agilent technologies. Visit <https://community.agilent.com/welcome>.
- To access **Agilent University**, visit <http://www.agilent.com/crosslab/university/> to learn about training options, which include online, classroom and onsite delivery. A training specialist can work directly with you to help determine your best options.
- A useful **Agilent Resource Center** web page is available, which includes short videos on maintenance, quick lists of consumables for new instruments, and other valuable information. Check out the Resource Page here: <https://www.agilent.com/en-us/agilentresources>.
- Need technical support, FAQs, supplies? – visit our **Support Home page** <http://www.agilent.com/search/support>.
- **Videos** about specific preparation requirements for your instrument can be found by searching the **Agilent YouTube** channel at <https://www.youtube.com/user/agilent>.
- **7890B Manuals** are also available on Agilent.com:
 - **Safety**
https://www.agilent.com/cs/library/usermanuals/public/7890B_Safety.pdf
 - **Installation and First Startup**
https://www.agilent.com/cs/library/usermanuals/Public/7890B_Installation.pdf
 - **Operation Manual**
https://www.agilent.com/cs/library/usermanuals/Public/7890B_Operation.pdf
 - **Maintaining Your GC**
https://www.agilent.com/cs/library/usermanuals/public/G3430-90052%207890B_Maintaining%20Guide.pdf

Service Engineer's Responsibilities

- Contact the customer and ensure that all necessary supplies are available before the preventive maintenance visit.
- Only select those pages that relate to the system or module being serviced.
- Complete empty fields with the relevant information.
- Complete the relevant checkboxes in the checklist using either a "X" or tick mark "✓".
- Check "**Section not applicable**" check boxes to indicate services/tasks not delivered, as appropriate.
- Complete the Preventive Maintenance service in the order of the tasks listed.
- Complete the Service Review section together with the customer.
- Complete the fields for page numbers at the foot of each selected page
- Complete the total number of pages field in the Service Completion section
- **Ask the customer to sign the Service Completion section including the customer's and your signature.**

Additional Instruction Notes

- Check for any active service notes for this unit. If there are any applicable "Safety" or "Modification Recommended" Service notes, plan to implement the changes on this unit before doing any qualification service.
- Do not implement firmware updates, unless you get approval from the customer and are sure that they are compatible with the instrument control software.

System Information

- ☐ Check this box if an instrument configuration report is attached instead of completing the table below.

Instrument System Name and ID	7890A GC System / GCMS
Instrument System Site and Location	SECOT Co., Ltd.

List System Component Product Numbers	List the Serial Numbers of each Component
1. G3440A	CN10750035
2. N/A	N/A
3. N/A	N/A
4. N/A	N/A
5. N/A	N/A
6. N/A	N/A
7. N/A	N/A
8. N/A	N/A
9. N/A	N/A
10. N/A	N/A

Preparation

- ☒ Discuss any specific issues with the customer before starting.
- ☒ Review the instrument logbook for recorded problems and comments.
- ☒ Save instrument control settings before starting the procedure.
- ☒ Perform a general inspection of the system for cleanliness.
- ☒ Check for proper installation of parts, assemblies, sensors etc.
- ☒ Check system for required installation of components, settings as defined by current Service Notes.
- ☒ Check for required firmware updates and verify with customers if they would like them installed.
- ☐ Before starting the following procedures, record the Detector Signal Output(s) in the results table. If the GC is turned OFF or in a service mode, comparing the detector outputs before and after the service is not possible.

Preventive Maintenance Procedure

Clean and inspect GC

- ☒ Unplug power cord from the power source.
- ☒ Open GC covers and vacuum/remove any dust/debris. Pay particular attention to cooling fans.
- ☒ Inspect internal connectors for proper contact and placement.
- ☒ Reconnect Power to the GC. Power the GC on and verify the power on self-test passed.
- ☒ Verify oven motor spins freely and turns on with the oven door closed; off when the door is opened.
- ☒ Verify operation of all other fans - the inlet and EPC cooling fans.
- ☒ Verify oven intake/outlet flap assembly is operating smoothly while heating and cooling the oven

Inlet and detector consumable replacement

- ☒ For the inlets installed, perform inlet maintenance as defined in the 7890 manual – "Maintaining Your GC" - for the inlet(s) installed.
- ☒ Replace the split vent trap cartridge filter on units with these inlets: Split/Splitless Capillary (SSL), Multi-Mode Inlet (MMI), Programmed Temperature Vaporizer (PTV), Volatiles Interface (VI).
- ☒ If the inlet system is used in Split Mode with viscous samples, inspect and clean the split vent tube on the inlet and flush or replace the tubing between the inlet and the split vent trap.
- ☐ If the GC includes a Flame Ionization Detector (FID), replace the jet. If the ignitor shows any buildup of sample or corrosion, replace the ignitor. Examine the FID collector and castle assemblies for contamination – clean as necessary.

Zero Sensors and Leak test

- ☒ Zero all pressure sensors per the procedure in the 7890 "Advanced User Guide".
- ☒ Perform inlet pressure decay test(s) as defined in the 7890 "Troubleshooting Manual". If the PM is done in preparation for an Operational Qualification, then the pressure decay test defined within that protocol can be used for the PM.
- ☒ Record if test passed or failed in the results table.

ALS Maintenance

☒ Section NOT applicable

- ☐ Check all cabling and configuration settings between GC, tray, and injectors.
- ☐ Vacuum or remove any dust, especially around fans.
- ☐ Check operation of all fans.
- ☐ Check syringe for smooth plunger operation.
- ☐ Check for smooth operation of the needle support – clean if necessary

Restore Instrument

- ☒ Restore the normal operating conditions or customer method using the Data System.
- ☒ Purge the system with carrier flow for 15 minutes
- ☒ Bake out the system, then restore the normal operating conditions
- ☒ After equilibration, check and record the post PM detector signal output values.
Results should be similar or lower than the detector outputs recorded prior to PM.
- ☐ Perform a chemical checkout. If this is a routine PM, inject the customer's sample using the ALS if applicable. This will act as a final checkout of both the ALS and the GC.

Note: If the PM Service is performed prior to a qualification service, then use the qualification procedure as a guide for final instrument set up and checkout.

Signature Page

Service Review

- ☒ Attach available reports/printouts of all tests to this documentation.
- ☒ Record the Preventive Maintenance service activity in the customer's records/logbook.
- ☒ Update/reset instrument maintenance counters as appropriate.
- ☒ Affix the PM sticker to the system or instrument logbook based on the customer's request.
- ☒ Complete the Service Engineer Comments section if there are additional comments.
- ☒ Review with the customer this service, parts replaced, and test results obtained.
- ☐ If the instrument firmware was updated, record the details of the change in the Service Engineer's Comments box or if necessary, in the customer's IQ records.
- ☐ Supply the customer with a copy of the Smart Alerts flyer.
- ☐ Describe Smart Alerts to the customer.
- ☐ Install Smart Alerts if requested.

7890 GC Test Results Table

Detector Signal Outputs	Before PM Service	After PM Service
Front detector output	N/A	N/A
Back detector output	N/A	N/A
AUX detector output	N/A	N/A
Pressure decay test	Expected test result	Actual test result
Front Inlet pressure decay test	Pass	Pass
Back Inlet pressure decay test	Pass	Pass

7890 Parts List Table

The following kits are recommended for capillary and purged packed inlets. If this is a general PM and the customer has a preferred set of consumables, you may use the customer's consumables.

Part description	Part number	Product or model# where used	Quantity consumed
SSL Capillary Inlet PM kit, Splitless	5188-6497	7890A/B	1
SSL Capillary Inlet PM kit, split	5188-6496	7890A/B	1
SSL Capillary Ultra Inert Inlet Gold Seal with Washer	5190-6144	7890A/B	N/A
SSL Capillary Ultra Inert Inlet Splitless Liner - Single taper with Glass Wool	5190-2293	7890A/B	N/A
SSL Capillary Ultra Inert Inlet Low Pressure Drop Split Liner - with Glass Wool	5190-2295	7890A/B	N/A
PP Inlet PM kit	5188-6498	7890A/B	N/A
Split vent trap PM kit, single cartridge (for MMI, PTV & VI)	5188-6495	7890A/B	N/A
MMI Cleaning Kit	G3510-60820	7890A/B	N/A
PTV Septumless Head Rebuild Kit	5182-9747	7890A/B	N/A
PTV Septumless Head Teflon Guide	5182-9748	7890A/B	N/A
Ignitor (glow plug) assembly with O-ring	19231-60680	7890A/B	N/A
FID Collector Rebuild/Cleaning Kit	G1531-67000	7890A/B	N/A
Standard .011-inch FID Jet for capillary FID base	G1531-80560	7890A/B	N/A
High Temperature .018-inch FID Jet for capillary FID base	G1531-80620	7890A/B	N/A
Standard .018-inch FID Jet for packed column with packed FID base	18710-20119	7890A/B	N/A
Standard .011-inch FID Jet for capillary column with packed/adaptable FID base	19244-80560	7890A/B	N/A
High Temperature .018-inch FID Jet for capillary column with packed/adaptable FID base	19244-80620	7890A/B	N/A
NPD Jet, universal fit, .011-inch ID	G1534-80580	7890A/B	N/A
NPD Jet, universal fit, .011-inch ID Extended tip	G1534-80590	7890A/B	N/A
SSL Capillary Ultra Inert Inlet Gold Seal with Washer	5190-6144	7890A/B	N/A
SSL Capillary Ultra Inert Inlet Splitless Liner - Single taper with Glass Wool	5190-2293	7890A/B	N/A
**FID Collector Replacement Kit, if needed	G1531-67001	7890A/B	N/A

Service Engineer Comments

If there are any specific points you wish to note as part of performing the service or other items of interest for the customer, please write include them in this box.

N/A

Service Completion

Service request number 60680758 Date service completed 12 Jun 2024

Agilent signature Simon Th. Customer signature Spring C.

Total number of pages in this document 10

Do not include this section/page in the published, customer-facing PDF version.

This page is only relevant for Agilent source documents for document control purposes and is NOT intended for customer viewing. Refer to the SPIFPM checklist Authoring Guide for more information.

Document Control Logs

Revision Log

Revision	Date	Author	Reason for update
Revision of document	Date of issuance	Author of document	Author to describe main features/changes made for this specific revision
1.0 Draft	4-Mar-2011	Dave Park	Migrated the content of revision A.01.05 to the new Agilent template. Reviewed by subject matter expert, Dave Park.
1.1 Draft	20-Jan-2015	Dave Park	Added Split Vent trap to MMI, PTV and VE - also PTV and FID PM Parts
1.2 Draft	31-March-2015	Dave Park	Added Ultra Inert Gold Seal and Liner to SS Consumables
A.01.11	10-Dec-2015	Dave Park	Added step to perform maintenance on the Split Vent Tube and .018" FID Jet part numbers - Fixed broken web links
2.00	30-Dec-2020	Gary Boardman	Updated New Template and terminology change: Familiarization to Introduction. Create New Agile Document Number: D0007063

Approval Log

Revision	Approver	Title of approver
Add revision number	Add approver name here	Add approver's function or title here
A.01.06	Don Gage	Product support manager
A.01.09	Kai Meng	Product support manager
A.01.10	Suneetha Tippireddy	Product support manager
A.01.11	Suneetha Tippireddy	Product support manager
2.00	Josh Roark	GC Product Support Manager

Designated Evaluation Log

Revision	Designated Evaluator (DE)	Title of DE	DE Number
Add revision number	Add name	Add function or title	Add DE number here
2.00	Michael Zumwalt	CrossLab Start Up Services Application Consulting Lead	44166.7597222222

Agilent CrossLab Start Up Services Agilent GCMS Preventive Maintenance Checklist

Agilent Preventive Maintenance provides factory recommended service for your analytical instruments to assure reliable operation and the accuracy of your results.

Delivered by highly trained and certified service engineers using genuine Agilent parts and supplies, Agilent Preventive Maintenance provides everything you need to reduce unplanned downtime and keep your systems operating at their peak. This checklist will be completed at the end of the service and provided to you as a record of the preventive maintenance activities.

Introduction

Select the appropriate PM to be done and then perform the checklist under that section

- ☐ Interim Preventive Maintenance 6 months
- ☒ Major Preventive Maintenance Yearly

This checklist covers the following model(s):

Type	Model
SQ	5973 Series MSD
SQ	5975 Series MSD
SQ	5977 Series MSD
TQ	7000 Series MS/MS
TQ	7010 Series MS/MS
QTOF	7200 Series QTOF
QTOF	7250 Series QTOF

Customer Information

- Customers should provide all necessary operating supplies upon request of the engineer.
- A customer representative should be available to the engineer while performing the preventive maintenance procedures. Customers are responsible for regular maintenance and are encouraged to observe the service representative.
- Any parts not included in the Parts Lists section of this document are not part of the recommended Preventive Maintenance service nor are they included in the price of this service.
- If a system requires the use of extra or special procedures and/or parts for the maintenance service, then these must be ordered separately and charged as a repair, which may incur additional costs.

Important Customer Web Links

- For more information about Agilent Technologies services, please visit our website using the following URL: <http://www.agilent.com/en-us/products/crosslab-instrument-services/service-repair>
- To access Agilent University, visit <http://www.agilent.com/crosslab/university/> to learn about training options, which include online, classroom and onsite delivery. A training specialist can work directly with you to help determine your best options.
- A useful Agilent Resource Center web page is available, which includes short videos on maintenance, quick lists of consumables for new instruments, and other valuable information. Check out the Resource Page here: <https://www.agilent.com/en-us/agilentresources>
- Need technical support, FAQs, supplies? – visit our Support Home page at <http://www.agilent.com/search/support>
- Get answers. Share insights. Build connections:
Join the Agilent Community at <https://community.agilent.com/welcome>

Service Engineer's Responsibilities

- Contact the customer and ensure that all necessary supplies are available before the preventive maintenance visit.
- Complete empty fields with the relevant information.
- Complete the relevant checkboxes in the checklist using either a "X" or tick mark "✓".
- Check "Section not applicable" check boxes to indicate services/tasks not delivered, as appropriate.
- Complete the Preventive Maintenance services in the most logical order relevant to the individual system service in the order of the tasks listed.
- Complete the Service Review section together with the customer.
- Ask the customer to sign the Service Completion section including the customer's and your signature.

Additional Instruction Notes

- Preventive maintenance is a factory recommended procedure designed to reduce the likelihood of electromechanical failures. Failure to perform preventive maintenance may reduce the long-term reliability of certain instruments and systems. **Two preventative maintenances (PMs) per year are recommended, the Major PM Service will be performed annually with an Interim PM performed 6 months after the Major PM.**

System Information

- ☐ Check this box if an instrument configuration report is attached instead of completing the table.

Instrument System Name and ID	5975C MSD
Instrument System Site and Location	SECOT Co., Ltd.

List System Component Product Numbers	List the Serial Numbers of each Component
1. G3172A	US74838080
2. N/A	N/A
3. N/A	N/A
4. N/A	N/A
5. N/A	N/A
6. N/A	N/A
7. N/A	N/A
8. N/A	N/A

Preparation

- ☒ Discuss any specific issues with the customer before starting.
- ☒ Review the instrument logbook for recorded problems and comments.
- ☒ Save instrument control settings before starting the procedure.
- ☒ Perform a general inspection of the system for cleanliness.
- ☒ Check for proper installation of parts, assemblies, sensors etc.
- ☒ Check system for required installation of components and settings as defined by current Service Notes
- ☒ Check for firmware updates and verify with customers if they would like them installed. Firmware update(s) are strongly recommended.

Customer Responsibilities

Customers should ensure that all necessary operating supplies, consumables, and usage-dependent items such as gases, vials, syringes, calibrant solution and solvents required for successful preventive maintenance are available. A customer representative should be available while the preventive maintenance is being performed.

Important notice for customers

The customer should complete the following before the Support Provider arrives on site:

- ☒ Perform an autotune and retain the printed tune report just prior to the start of the PM to verify performance of the equipment.

Note: it is recommended to have the customer run the autotune and tune evaluation prior to the PM and then start the vent cycle so that the instrument will be ready for the service representative.

Definition of the Task/Recommended items within the document

Task	Recommended	
Yes	No	Interim / Major / As needed
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Yes selected means that the task was done or the part was required.

No selected means that the task was not done or the part was not required.

Interim selected means that this task is recommended to be done at 6-month intervals.

Major selected means that this task is recommended to be done yearly; if the customer would like a service to be done at the 6-month interval then the service could be purchased.

As needed selected means that the task was done or the part was used as needed. For example, there could be two types of filters that could be used and this was the one selected.

Preventive Maintenance Procedures

Yes/No	Interim/Major	Description
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Perform general inspection of system for cleanliness
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Discuss any problems the customer is having with the instrument
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Review customer maintenance records and exclude maintenance on recently serviced items
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Review the most recent autotune report. This will give a starting point for evaluating spectral peaks, baseline noise, peak shape, mass assignments and resolution.

Yes/No	Interim/Major	GCMS
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Record Instrument model no.
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Record Instrument serial no.
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Record Rough Vacuum
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Record Manifold Vacuum
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Type of Column installed

System Checks			
Yes/No	Interim/Major	Description	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Verify that calibration peaks were seen prior to starting the PM	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Vent the instrument	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Inspect vacuum hoses, pump, exhaust tubing, and power cords for excessive wear.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Visually inspect calibrant levels – PFTBA PFDTD (if appl.), IRM (if appl.). Refill if available.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Look for any obvious external damage or problems.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Clean air intake(s). Cosmetic cover(s) may need to be removed.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Verify system line voltage meets instrument specifications: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/>	

Yes/No	<input checked="" type="checkbox"/>	<input type="checkbox"/>	Wet Mechanical vacuum pumps	
Yes/No	Interim/Major	Description		
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Check for evidence of oil leakage. Check pump gasket for leakage.
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Drain and replace mechanical pump oil.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Replace Oil Mist Filter if applicable.
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Discuss with customer the need for more frequent oil changes if the oil is dirty
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Don't use mist filters with Chemical Ionization.
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Perform anti-suckback valve test. Power on until side plate is held closed, power off and check that side plate holds closed. Visually confirm that no oil returns up vacuum hose.
Yes/No	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Dry Mechanical vacuum pumps - Diaphragm	
Yes/No	Interim/Major	Description		
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Check for evidence of poor vacuum – Turbo power demand, poor manifold vacuum, etc.
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Clear air flow paths of dust.
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	If vacuum is poor, then replace the diaphragm pump.
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Perform anti-suckback valve test. Power on until side plate is held closed, power off and check that side plate holds closed.

Dry Mechanical vacuum pumps - Scroll			
Yes/No	Interim/Major	Description	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Replace the tips seal on the IDP pump.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Check for evidence of poor vacuum – Turbo power demand, poor manifold vacuum, etc.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Replace the Exhaust Filter if required.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Discuss with customer the need for more frequent changes, if needed.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Inform customer that pump gas ballast should be installed all the time.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Perform anti-suckback valve test. Power on until side plate is held closed, power off and check that side plate holds closed.	

				Cleaning System and Filters	
Yes/No	Interim/Major	Description			
		Fans			
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Remove dust from fans and vent covers.	
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Verify fans are functional and that there is enough space around the instrument for proper cooling.	
		Source cleaning			
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Open analyzer and remove the source.	
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Disassemble, Clean, Re-assemble source.	
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Re-install source and close analyzer.	
		Filters			
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Replace RMSH-2 Helium gas filter – if applicable.	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Replace RSMN-2 Nitrogen gas filter – if applicable.	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Replace RSMHY-2 Hydrogen gas filter – if applicable.	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CP17988 – Gas Clean Carrier Gas Kit for 7890 for Nitrogen or Helium; Bracket, Mount, and Filter – if applicable.	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CP17974 – Gas Clean Filter Kit GC/MS 1/8", Mount and Filter – if applicable.	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CP17973 – Gas Clean Filter; Replacement Filter – if applicable.	
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	5190-9071 – Methane Gas Filter – if applicable	

Guidance: If gas filter is replaced, write the change date on the filter using a permanent marker.

System post-check			
Yes/No	Interim/Major	Description	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Pump system back down. Wait until system stability has been achieved.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Verify system vacuum reading(s) via the gauge controller.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Leak Check	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Verify system in manual tune	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Compare against previous tune file report(s)	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Change to Tune and verify that all temperatures, pressures, and gas flows reach method set points	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Check manually that you have calibration peaks.	
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	EI Autotune Performed	

Guidance: If the PM Service is performed prior to a qualification service, then use the qualification procedure as a guide for final instrument setup and checkout.

Service Review

- ☒ Attach available reports/printouts of all tests to this documentation.
- ☒ Record the Preventive Maintenance service activity in the customer's records/logbook. Record the PM event in the Smart Alerts logbook, if applicable.
- ☒ Update/reset instrument maintenance counters as appropriate.
- ☒ Affix the PM sticker to the system or instrument logbook based on the customer's request.
- ☒ Complete the Service Engineer Comments section if there are additional comments.
- ☒ Review this service, parts replaced, and test results obtained with the customer.
- ☐ If the instrument firmware was updated, record the details of the change in the Service Engineer's Comment box. Systems in a compliant environment may need additional documentation.

Agilent Test Results Table

Test Description	Expected Test Result	Actual Test Result
Atune and Evaluation	Pass	Pass
/		
N/A	N/A	N/A
/		

Agilent Consumed Parts List Table

☐ Section not applicable

Part Description	Part Number	Product or Model# where used	Quantity consumed
Agilent Vacuum Fluid	5191-5851	Rough Pump	1
N/A	N/A	N/A	N/A

Signature Page

Service Engineer Comments (optional)

If there are any specific points you wish to note as part of performing the installation or other items of interest for the customer, please write in this box.

N/A

Service Completion

Service request number 6006807758 Date service completed 12 Jun 2024

Agilent signature Samira Th. Customer signature Siriman C.

Total number of pages in this document 12

Parts – As needed as part of the PM

Common MS Filters and Seals – 5973/5975/5977/7000/7010/7200/7250 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	Helium gas filter – if required	RMSH-2
<input type="checkbox"/>	<input type="checkbox"/>	Nitrogen gas filter – if required	RMSN-2
<input type="checkbox"/>	<input type="checkbox"/>	Big Universal Trap, 1/8" fittings, Hydrogen, if required	RMSHY-2
<input type="checkbox"/>	<input type="checkbox"/>	Gas Clean Carrier Gas Kit for 7890 for Nitrogen or Helium; Bracket, Mount and Filter – if required	CP17988
<input type="checkbox"/>	<input type="checkbox"/>	Gas Clean Filter Kit GC/MS 1/8 in (complete replacement kit) – if required	CP17974
<input type="checkbox"/>	<input type="checkbox"/>	Gas Clean GS/MS Filter – if required	CP17973
<input type="checkbox"/>	<input type="checkbox"/>	Chemical Ionization Gas Purifier (CI systems) – if required	5190-9071
<input checked="" type="checkbox"/>	<input type="checkbox"/>	Agilent AVF Platinum, 1 quart	5191-5851

Gas filters need to be changed only if required

MS Maintenance Supplies for 5973/5975/5977 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	Diffusion pump fluid (Diffusion Pump Models)	6040-0809 Qty 2
<input type="checkbox"/>	<input type="checkbox"/>	IDP-3 Tip Seal Replacement Kit (IDP-3 Dry Pump Models)	G7077-67018
<input type="checkbox"/>	<input type="checkbox"/>	IDP-3 Tip Seal Replacement Kit (no tools – CSD P/N)	5190-9561
<input type="checkbox"/>	<input type="checkbox"/>	IDP-3 Tip Seal Replacement Kit (no tools – VPD P/N)	IDP3TS
<input type="checkbox"/>	<input type="checkbox"/>	Filter element for IDP-3	REPLSLRFILTER2
<input type="checkbox"/>	<input type="checkbox"/>	DS42 Oil Mist Eliminator 3/4G & 3/8	SR03706556
<input type="checkbox"/>	<input type="checkbox"/>	Exhaust oil mist trap (thread) Edwards/Pfeiffer	G1099-80039

MS Maintenance Supplies for 7000/7010 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	Nitrogen gas filter	RMSN-2
<input type="checkbox"/>	<input type="checkbox"/>	IDP-10 Tip Seal Replacement Kit (IDP-10 Dry Scroll Pump Models)	G7004-67023
<input type="checkbox"/>	<input type="checkbox"/>	IDP-10 Tip Seal Replacement Kit (no tools – VPD P/N)	X3807-67000
<input type="checkbox"/>	<input type="checkbox"/>	Oil Mist Filter RV5	G6600-80043
<input type="checkbox"/>	<input type="checkbox"/>	Filter element for the IDP-10	REPLSLRFILTER1

MS Maintenance Supplies for 7200/7250 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	Nitrogen gas filter – if required	RMSN-2
<input type="checkbox"/>	<input type="checkbox"/>	RIS Probe Maintenance Kit (7200 Series only)	G7005-60170
<input type="checkbox"/>	<input type="checkbox"/>	DS202 Oil Mist Eliminator	SR03706800
<input type="checkbox"/>	<input type="checkbox"/>	IDP-15 Tip Seal Replacement Kit (IDP-15 Dry Pump Models)	5190-9613
<input type="checkbox"/>	<input type="checkbox"/>	IDP-15 Tip Seal Replacement Kit (no tools – VPD P/N)	X3815-67000
<input type="checkbox"/>	<input type="checkbox"/>	Filter element, for SH-110/SH-112/IDP-15 exhaust silencer	REPLSLRFILTER
<input type="checkbox"/>	<input type="checkbox"/>	DS 3/8 MAG. PLUG AND GASKET	SR03701824

MS Maintenance Supplies for JetClean

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>		

<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Big Universal Trap, 1/8" fittings, Hydrogen, if required	RMSHY-2
--------------------------	--------------------------	--------------------------	-------------------------------------	--	---------

Consumable Parts Reference – Purchasable by customer, not included as part of PM

Common MSD Maintenance Supplies 5973/5975/5977/7000/7010/7200/7250 Series

Yes/No	Interim/Major/As needed	Common Recommended Consumables Parts	Part number
<input checked="" type="checkbox"/>	<input type="checkbox"/>	El High Temperature Filaments	G7005-60061 Qty 2
<input type="checkbox"/>	<input type="checkbox"/>	HES El Filaments	G7002-60001
<input type="checkbox"/>	<input type="checkbox"/>	LE-El Filaments	G3850-60021
<input type="checkbox"/>	<input type="checkbox"/>	CI High Temperature Filament – all MSDs	G7005-60072
<input type="checkbox"/>	<input type="checkbox"/>	PFTBA GCMS Tuning Standard calibrant	05971-60571
<input type="checkbox"/>	<input type="checkbox"/>	PFTD calibrant, 1 mL	8500-8510
<input type="checkbox"/>	<input type="checkbox"/>	PFET, IRM calibrant for GC QTOF 0.5 mL	5190-0531

MSD Maintenance Supplies 5973/5975/5977 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal (tip and spring combo)	G1999-60412
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal (tip only)	G3870-20542
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal spring (spring only)	G1999-20023
<input type="checkbox"/>	<input type="checkbox"/>	Repeller insulator	G1099-20133 Qty 2
<input type="checkbox"/>	<input type="checkbox"/>	Lens insulator/holder (HES)	G7002-20074
<input type="checkbox"/>	<input type="checkbox"/>	Ring heater/sensor assembly (HES)	G7002-60043
<input type="checkbox"/>	<input type="checkbox"/>	Ceramic insulator for Extractor (HES)	G7002-20064
<input type="checkbox"/>	<input type="checkbox"/>	Transfer-Line Tip Cap, Threaded	G3870-20547
<input type="checkbox"/>	<input type="checkbox"/>	Transfer-Line Tip Base, Threaded	G3870-20548

MS Maintenance Supplies for 7000/7010 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal - 7000	G1999-60412
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal - 7010	G7002-60412
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal (tip only)	G3870-20542
<input type="checkbox"/>	<input type="checkbox"/>	CI interface tip seal spring (spring only)	G1999-20023
<input type="checkbox"/>	<input type="checkbox"/>	Repeller insulator - 7000	G1099-20133 Qty 2
<input type="checkbox"/>	<input type="checkbox"/>	Lens insulator/holder (HES)	G7002-20074
<input type="checkbox"/>	<input type="checkbox"/>	Ring heater/sensor assembly (HES)	G7002-60043
<input type="checkbox"/>	<input type="checkbox"/>	Ceramic insulator for Extractor (HES)	G7002-20064
<input type="checkbox"/>	<input type="checkbox"/>	Transfer-Line Tip Cap, Threaded	G3870-20547
<input type="checkbox"/>	<input type="checkbox"/>	Transfer-Line Tip Base, Threaded	G3870-20548

MS Maintenance Supplies for 7200 Series

Yes/No	Interim/Major/As needed	Supplies	Part number
<input type="checkbox"/>	<input type="checkbox"/>	Extractor Lens Insulator	G7005-20133
<input type="checkbox"/>	<input type="checkbox"/>	Ion Focus Insulator	G7005-20442
<input type="checkbox"/>	<input type="checkbox"/>	Ring Heater/Sensor Assembly	G7005-60110
<input type="checkbox"/>	<input type="checkbox"/>	RIS Xfer Tip	G7005-20542
<input type="checkbox"/>	<input type="checkbox"/>	RIS Xfer Tip Spring	G7005-20024

MS Maintenance Supplies for 7250 Series

Yes/No	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Supplies	
Yes/No	Interim/Major/As needed		Description	Part number
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Lens insulator/holder (HES)	G7002-20074
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Ring heater/sensor assembly (HES)	G7002-60043
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Ceramic insulator for Extractor (HES)	G7002-20064
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Transfer-Line Tip Cap, Threaded	G3870-20547
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Transfer-Line Tip Base, Threaded	G3870-20548
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	EI Extractor Transfer Tip	G3870-20542
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	CI Tip Compression Spring	G1999-20023

MS Maintenance Supplies for Intuvo 9000 MS Systems

Yes/No	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Supplies	
Yes/No	Interim/Major/As needed		Description	Part number
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Swaged MS Tail - Packaged	G4590-60009
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Swaged MS Tail (HES) - Packaged	G4590-60109

Common MS Maintenance Supplies

Parts required				
Yes/No	Interim/Major/As needed		Description	Part number
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Abrasive paper, 30 um	5061-5896
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Alumina powder	393706201
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cloths, clean (pkg of 15)	05980-60051
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cloths, cleaning (pkg of 300)	9310-4828
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Cotton swabs (pkg of 100)	5080-5400
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Gloves, clean, large	8650-0030
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	Gloves, clean, small	8650-0029

ภาคผนวก จ

หนังสืออนุญาตขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
จากกรมโรงงานอุตสาหกรรม



ที่ อก ๐๓๑๐(๑)/ ๑๑ ๐๑ ๖

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๐ กรกฎาคม ๒๕๖๖

เรื่อง ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

เรียน กรรมการผู้จัดการ บริษัท ซีคอต จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๗ เมษายน ๒๕๖๖

- สิ่งที่ส่งมาด้วย ๑. รายชื่อผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๑ แผ่น
๒. รายชื่อเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑ แผ่น
๓. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๓๙ แผ่น

ตามหนังสือที่อ้างถึง บริษัท ซีคอต จำกัด ขอต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ว-๒๓๙ สถานที่ตั้งเลขที่ ๒๓๙ ถนนริมคลองประปา แขวงบางซื่อ เขตบางซื่อ กรุงเทพมหานคร ต่อกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้บริษัท ซีคอต จำกัด ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน โดยมีองค์ประกอบดังนี้

- ก. ผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๑๐ ราย ตามสิ่งที่ส่งมาด้วย ๑
ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๓๘ ราย ตามสิ่งที่ส่งมาด้วย ๒
ค. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนให้วิเคราะห์ในน้ำเสีย น้ำใต้ดิน อากาศเสีย สิ่งปฏิกูล หรือวัสดุที่ไม่ใช้แล้ว และดิน ตามสิ่งที่ส่งมาด้วย ๓

หนังสือฉบับนี้จะหมดอายุในวันที่ ๒ พฤษภาคม ๒๕๖๙ หากประสงค์จะต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ให้ยื่นคำขอต่ออายุพร้อมเอกสารประกอบคำขอต่อกรมโรงงานอุตสาหกรรมภายใน ๓๐ วัน ก่อนวันสิ้นอายุของหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ซึ่งคำขอต่ออายุดังกล่าวขอรับได้ที่กรมโรงงานอุตสาหกรรม ทั้งนี้ สามารถยื่นคำขอผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นายประสม ดำรงพงษ์)

กองวิจัยและเตือนภัยมลพิษโรงงาน
กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ
โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕
โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๙
ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”



สิ่งที่ส่งมาด้วย ๑

เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

บริษัท ซีคอต จำกัด

เลขทะเบียน ว-๒๓๙

ที่ อก ๐๓๑๐(๑)/ ๑๑ ๐๑ ๖

ลงวันที่ ๒๐ กรกฎาคม ๒๕๖๖

ก. ผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๑๐ ราย

- ๑) นายขรรชัย เกรียงไกรอุดม
- ๒) นางสมฤดี เกรียงไกรอุดม
- ๓) นางสาวธนา ทิพรักษ์
- ๔) นางสาวเมษชุตตา อินทร์ศรี
- ๕) นางสาวปรีดา สมใจ
- ๖) นางสาวอริญญา มาตา
- ๗) นางสาวลดาวัลย์ วงศ์เจริญ
- ๘) นางสาวณัฏฐวรรณ เกตวันดี
- ๙) นางสาวนริสา ภูวสรพีชญ์
- ๑๐) นางสาวศิริวรรณ ฉิมสง่า

- ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๒
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๓
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๔
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๕
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๖
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๗
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๘
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๐๙
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๑๐
ทะเบียนเลขที่ ว-๒๓๙-ค-๐๐๑๑

เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท ชีคอฟ จำกัด

เลขทะเบียน ว-๒๓๙

ที่ อก ๐๓๑๐(๑)/ ๑๑ ๐๑ ๖

ลงวันที่ ๒๐ กรกฎาคม ๒๕๖๖

ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๓๘ ราย

๑) นางสาวสุดาพร สุนทร	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๑
๒) นางสาวสุธาทิพย์ เทียนเตี้ย	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๓
๓) นางสาวสุนันทา ศิริวัฒนานนท์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๔
๔) นายบวร ดีชัยยะ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๕
๕) นางสาวเกศรินทร์ วรเดโชวิทยา	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๖
๖) นายอนันต์วัน พิมวันนา	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๗
๗) นายชิตพล สมประสงค์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๘
๘) นางสาวศศิธร พรหมประเสริฐ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๐๙
๙) นายศิวนนท์ กุลวงษ์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๐
๑๐) นางสาวอลิษา คณิวรานนท์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๑
๑๑) นางสาวสิริวรรณ แก้วชิงดวง	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๒
๑๒) นางสาวปัทมวรรณ สุวรรณวิโรจน์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๓
๑๓) นางสาวกนิษฐา เจริญเชื้อ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๔
๑๔) นายวัชรกานต์ ประมาคเต	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๕
๑๕) นายชอง เฮงชวลกุล	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๖
๑๖) นางสาวกฤษณา จันทม	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๗
๑๗) นางสาวพรนภา บุตรธรรม	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๘
๑๘) นางสาวธาริณี อาจปลิว	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๑๙
๑๙) นายอนันต์ ช่างลื้อ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๐
๒๐) นางสาวพัชรา สมานอันท์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๑
๒๑) นางสาวจุฑาทิพย์ แจ่มเรือน	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๒
๒๒) นางสาวณิศา กุ้ยอ่อน	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๓
๒๓) นายกิตติพงษ์ ณะเกิงสุข	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๔
๒๔) นายจิรวัฒน์ โคตรคำหาญ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๕
๒๕) นายชนะพล อัครผล	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๖
๒๖) นางสาวทิพย์สุดา วรรณการ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๗
๒๗) นายสิทธิชัย สว่างวงศ์ไชย	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๘
๒๘) นายพิษณุ สีนามเพ็ง	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๒๙
๒๙) นายรัตนชัย ขอบทำกิจ	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๐
๓๐) นายธนาวุฒิ ด่วนแสง	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๑
๓๑) นายณัฐชัย ไชยโคตร	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๒
๓๒) นายณัฐดนัย กฤษณะโสม	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๓
๓๓) นายศุภชัย สุขใหม่	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๔
๓๔) นายรอมฎอน เหลี่ยมหมาด	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๕
๓๕) นางสาวสุภาวดี บัวแก้ว	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๖
๓๖) นางสาวมาริยาณี ฮาแว	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๗
๓๗) นางสาววิระยา ปัจฉิมบุรณ์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๘
๓๘) นางสาวศลิษา อินริย์	ทะเบียนเลขที่	ว-๒๓๙-จ-๐๐๓๙

31/7/2566

เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท ชีคอฟ จำกัด

เลขทะเบียน ว-๒๓๙

ที่ อก ๐๓๑๐(๑)/ ๑๑ ๐๑ ๖

ลงวันที่ ๒๐ กรกฎาคม ๒๕๖๖

ขอขยายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๓๕๕ รายการ

น้ำเสีย จำนวน 45 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
2	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
3	Barium	1) Digestion, Direct Nitrous Oxide-Acetylene Flame Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
4	α-BHC	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
5	β-BHC	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
6	δ-BHC	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
7	γ-BHC	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

31/7/2566

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
8	Biochemical Oxygen Demand	1) 5-Day BOD Test, Azide Modification Method ^[4] 2) 5-Day BOD Test, Membrane Electrode Method ^[4]
9	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
10	Chemical Oxygen Demand	1) Open Reflux, Titrimetric method ^[4] 2) Closed Reflux, Colorimetric method ^[4] 3) Closed Reflux, Titrimetric Method ^[4]
11	Chlordane	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
12	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
13	Color	ADMI Weighted-Ordinate Spectrophotometric Method ^[4]
14	Copper	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
15	Cyanide	Distillation, Colorimetric method ^[4]
16	4,4'-DDD	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

17 4,4'-DDE...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
17	4,4'-DDE	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
18	4,4'-DDT	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
19	Dieldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
20	Endosulfan I	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
21	Endosulfan II	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
22	Endosulfan Sulfate	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
23	Endrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
24	Endrin Aldehyde	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

25 Formaldehyde...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
25	Formaldehyde	Distillation, Colorimetric Method ^[3]
26	Free Chlorine	1) Iodometric Method ^[4] 2) DPD Colorimetric Method ^[4]
27	Heptachlor	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
28	Heptachlor epoxide	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
29	Hexavalent Chromium	1) Colorimetric Method ^[4] 2) Extraction, Air-Acetylene Flame Method ^[4]
30	Lead	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
31	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
32	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[4]
33	Methoxychlor	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
34	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] <i>จำกัด</i>

3) Digestion...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
		3) Digestion, Inductively Coupled Plasma Method ^[4]
35	Oil & Grease	1) Liquid-Liquid, Partition-Gravimetric Method ^[4] 2) Soxhlet Extraction Method ^[4]
36	pH	Electrometric Method ^[4]
37	Phenols	1) Distillation, Chloroform Extraction Method ^[4] 2) Distillation, Direct Photometric Method ^[4]
38	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
39	Sulfide	1) Iodometric method ^[4] 2) Methylene blue method ^[4]
40	Temperature	Laboratory and Field Methods ^[4]
41	Total Dissolved Solids	Dried at 180 °C ^[4]
42	Total Kjeldahl Nitrogen	1) Macro Kjeldahl Method ^[4] 2) Semi-Micro Kjeldahl Method ^[4]
43	Total Suspended Solids	Dried at 103-105 °C ^[4]
44	Trivalent Chromium	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method; Colorimetric Method; Calculation ^[4] 3) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ^[4]
45	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4] <i>จำกัด</i>

น้ำใต้ดิน...

น้ำใต้ดิน จำนวน 125 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
2	Acetone	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
3	Aldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
4	Anthracene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
5	Antimony	Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
7	Atrazine	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
8	Barium	1) Digestion, Direct Nitrous Oxide-Acetylene Flame Method ^[4] 2) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
9	Benz(a)anthracene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
10	Benzene	Purge and Trap Gas Chromatographic/Mass spectrometric Method ^[4]
11	Benzo(b)fluoranthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
12	Benzo(k)fluoranthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4] 30mg)

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
13	Benzoic acid	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
14	Benzo(a)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
15	Benzo(g,h,i)perylene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
16	Beryllium	Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
17	Bis(2-chloroethyl)ether	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
18	Bis(2-ethylhexyl)phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
19	Bromodichloromethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
20	Bromoform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
21	Butanol	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
22	Butyl benzyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
23	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
24	Carbazole	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
25	Carbon disulfide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
26	Carbon tetrachloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4] 30mg)

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
27	Chlordane	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
28	p-Chloroaniline	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
29	Chlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
30	Chlorodibromomethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
31	Chloroform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
32	2-Chlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
33	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
34	Chromium (III)	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method; Colorimetric Method; Calculation ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method; Colorimetric Method; Calculation ^[4]
35	Chromium (VI)	1) Colorimetric Method ^[4] 2) Extraction, Air-Acetylene Flame Method ^[4]
36	Chrysene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4] <i>สมย</i>

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
37	Cyanide	1) Distillation, Titrimetric Method ^[4] 2) Distillation, Colorimetric Method ^[4]
38	2,4-D	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
39	DDD	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
40	DDE	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
41	DDT	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
42	Dibenz(a,h)anthracene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
43	Di-n-butyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
44	1,2-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
45	1,3-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
46	1,4-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
47	3,3'-Dichlorobenzidine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
48	1,1-Dichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
49	1,2-Dichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4] <i>สมย</i>

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
50	1,1-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
51	cis-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
52	trans-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
53	2,4-Dichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
54	1,2-Dichloropropane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
55	1,3-Dichloropropane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
56	1,3-Dichloropropene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
57	Dieldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
58	Diethyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
59	2,4-Dimethylphenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
60	2,4-Dinitrophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
61	2,4-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
62	2,6-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
63	Di-n-Octyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
64	Endosulfan	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid...

2) Liquid-Liquid...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
		2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
65	Endrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
66	Ethylbenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
67	Fluoranthene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
68	Fluorene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
69	Heptachlor	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
70	Heptachlor epoxide	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
71	Hexachlorobenzene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
72	Hexachloro-1,3-butadiene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
73	n-Hexane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
74	α-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
75	β-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid...

2) Liquid-Liquid...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
76	γ-HCH	2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4] 1) Liquid-Liquid Extraction, Gas Chromatographic/ Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
77	Hexachlorocyclopentadiene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
78	Hexachloroethane	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
79	Indeno(1,2,3-cd)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
80	Isophorone	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
81	Lead	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
82	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
83	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[4]
84	Methanol	Purge and Trap Gas Chromatographic/ Mass spectrometric Method ^[4]
85	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
86	Methyl bromide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]

87 Methylene chloride...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
87	Methylene chloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
88	2-Methylphenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
89	2-Methylnaphthalene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
90	Methyl tert-butyl ether	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
91	Naphthalene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
92	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
93	Nitrobenzene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
94	N-Nitrosodiphenylamine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
95	N-Nitrosodi-n-propylamine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
96	Polychlorinated Biphenyls - PCB-1016 - PCB-1221 - PCB-1232 - PCB-1242 - PCB-1248 - PCB-1254 - PCB-1260	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
97	Pentachlorophenol	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
98	pH	Electrometric method ^[4]

99 Phenanthrene...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
99	Phenanthrene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
100	Phenol	1) Distillation, Chloroform Extraction Method ^[4] 2) Distillation, Direct Photometric Method ^[4] 3) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
101	Pyrene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
102	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
103	Silver	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
104	Styrene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
105	1,1,2,2-Tetrachloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
106	Tetrachloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
107	Toluene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
108	TPH (C ₅ -C ₈)	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,25]
109	TPH (C ₈ -C ₁₆)	1) Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[9,21] 2) Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass spectrometric Method ^[9,25]
110	TPH (C ₁₆ -C ₃₅)	1) Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[9,21] <i>พิมพ์</i>

2) Separatory...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
		2) Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass spectrometric Method ^[9,25]
111	1,2,4-Trichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
112	1,1,1-Trichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
113	1,1,2-Trichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
114	Trichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
115	2,4,5-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
116	2,4,6-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
117	1,3,5-Trimethylbenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
118	Vanadium	Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]
119	Vinyl acetate	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
120	Vinyl chloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
121	m-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
122	o-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
123	p-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
124	Xylene (Total)	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4] <i>พิมพ์</i>

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
125	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Spectrometric Method ^[4]

อากาศเสีย (ปล่องระบาย) จำนวน 27 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Antimony	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
2	Arsenic	1) Isokinetic Sampling, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
3	Beryllium	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
4	Cadmium	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
5	Carbon monoxide	Instrumental Analyzer Method ^[5]
6	Chlorine	1) Absorption Sampling, Ion Chromatographic Method ^[5] 2) Isokinetic Sampling, Ion Chromatographic Method ^[5]
7	Chromium	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]

8 Cobalt...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
8	Cobalt	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
9	Copper	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
10	Cresol	Adsorption Sampling, Gas Chromatographic Method ^[5]
11	Dioxin/Furans	Isokinetic Sampling ^[5]
12	Hydrogen chloride	1) Absorption Sampling, Ion Chromatographic Method ^[5] 2) Isokinetic Sampling, Ion Chromatographic Method ^[5]
13	Hydrogen Fluoride	1) Absorption Sampling, Ion Chromatographic Method ^[5] 2) Isokinetic Sampling, Ion Chromatographic Method ^[5]
14	Hydrogen Sulfide	Absorption Sampling, Iodometric Method ^[5]
15	Lead	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
16	Manganese	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
17	Mercury	Isokinetic Sampling, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[5]
18	Nickel	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]

19 Opacity...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
19	Opacity	Ringelmann's Method ^[2]
20	Oxides of Nitrogen	1) Absorption Sampling, Phenoldisulfonic acid Method ^[5] 2) Absorption Sampling, Ion Chromatographic Method ^[5] 3) Instrumental Analyzer Method ^[5]
21	Selenium	1) Isokinetic Sampling, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
22	Sulfur dioxide	1) Isokinetic Sampling, Barium-Thorin Titrimetric Method ^[5] 2) Absorption Sampling, Barium-Thorin Titrimetric Method ^[5] 3) Instrumental Analyzer Method ^[5]
23	Sulfuric acid	Isokinetic Sampling, Barium-Thorin Titrimetric Method ^[5]
24	Tin	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
25	Total Suspended Particulate	1) Isokinetic Sampling, Gravimetric Method ^[5] 2) Paired Train, Isokinetic Sampling, Gravimetric Method ^[5]
26	Vanadium	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5]
27	Xylene	1) Adsorption Sampling, Gas Chromatographic Method ^[5] 2) Adsorption Sampling, Gas Chromatographic/Mass Spectrometric Method ^[5]

สิ่งปฏิกูล...

สิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว จำนวน 34 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,6,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,6,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
2	Antimony	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[1,6,16] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,16] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]
3	Arsenic	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[1,6,16] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,16] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]
4	Barium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15]

2) Waste Extraction...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
5	Beryllium	2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]
6	Cadmium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
7	Chlordane	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]
8	Chromium	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27] 1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14]

3) Digestion...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
9	Chromium (III)	3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14] 1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method; Waste Extraction, Colorimetric Method; Calculation ^[1,6,15,17] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method; Waste Extraction, Colorimetric Method; Calculation ^[1,6,14,17] 3) Digestion, Flame Atomic Absorption Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation ^[7,8,15,17] 4) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation ^[7,8,14,17]
10	Chromium (VI)	1) Waste Extraction, Colorimetric Method ^[1,17] 2) Alkaline Digestion, Colorimetric Method ^[8,17]
11	Cobalt	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
12	Copper	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
13	2,4-D	1) Waste Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,25] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[25]
14	DDD	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
15	DDE	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
16	DDT	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]

17 Dieldrin...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
17	Dieldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
18	Endrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
19	Heptachlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
20	Lead	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14]

3) Digestion...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
21	Lindane	3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14] 1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
22	Mercury	1) Waste Extraction, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[1,18] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[19] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]
23	Methoxychlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,22] 2) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[1,9,27] 3) Soxhlet Extraction, Gas Chromatographic Method ^[10,22] 4) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]


24 Molybdenum...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
24	Molybdenum	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
25	Nickel	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]
26	Polychlorinated Biphenyls - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,9,23] 2) Soxhlet Extraction, Gas Chromatographic Method ^[10,23]
27	Pentachlorophenol	1) Waste Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[1,25] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[25]
28	pH	Electrometric Method ^[31,32]
29	Selenium	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[1,6,20] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,20]


4) Digestion...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
30	Silver	4) Digestion, Inductively Coupled Plasma Method ^[7,14] 1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
31	Thallium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
32	Trichloroethylene	1) Waste Extraction, Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[1,12,26] 2) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[12,26]
33	Vanadium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
34	Zinc	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,6,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,14] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 4) Digestion, Inductively Coupled Plasma Method ^[7,14]

ดิน จำนวน 124 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27] 

2 Acetone...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
2	Acetone	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
3	Aldrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
4	Anthracene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
5	Antimony	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,16] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,16] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
7	Atrazine	Ultrasonic Extraction, Gas Chromatographic Method ^[11,24]
8	Barium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
9	Benz(a)anthracene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
10	Benzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
11	Benzo(b)fluoranthene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
12	Benzo(k)fluoranthene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
13	Benzoic acid	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27] 

14 Benzo(a)pyrene...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
14	Benzo(a)pyrene	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
15	Benzo(g,h,i)perylene	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
16	Beryllium	Digestion, Inductively Coupled Plasma Method ^[7,14]
17	Bis(2-chloroethyl)ether	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
18	Bis(2-ethylhexyl)phthalate	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
19	Bromodichloromethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
20	Bromoform	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
21	Butanol	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
22	Butyl benzyl phthalate	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
23	Cadmium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
24	Carbazole	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
25	Carbon disulfide	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
26	Carbon tetrachloride	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
27	Chlordane	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
28	p-Chloroaniline	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
29	Chlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
30	Chlorodibromomethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
31	Chloroform	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
32	2-Chlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
33	Chromium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
34	Chromium (III)	1) Digestion, Flame Atomic Absorption Spectrometric Method; Colorimetric Method; Calculation ^[7,8,15,17] 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ^[7,8,14,17]
35	Chromium (VI)	Alkaline Digestion, Colorimetric Method ^[8,17]
36	Chrysene	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
37	Cyanide	1) Extraction, Distillation, Titrimetric Method ^[28,29,30] 2) Extraction, Distillation, Colorimetric Method ^[28,29,30]
38	2,4-D	Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[24]
39	DDD	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
40	DDE	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
41	DDT	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
42	Dibenz(a,h)anthracene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
43	Di-n-butyl phthalate	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
44	1,2-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
45	1,3-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
46	1,4-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
47	3,3'-Dichlorobenzidine	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
48	1,1-Dichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
49	1,2-Dichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
50	1,1-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
51	cis-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
52	trans-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
53	2,4-Dichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]

54 1,2-Dichloropropane...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
54	1,2-Dichloropropane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
55	1,3-Dichloropropane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
56	1,3-Dichloropropene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
57	Dieldrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
58	Diethyl phthalate	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
59	2,4-Dimethylphenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
60	2,4-Dinitrophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
61	2,4-Dinitrotoluene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
62	2,6-Dinitrotoluene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
63	Di-n-Octyl phthalate	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
64	Endosulfan	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
65	Endrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
66	Ethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]

67 Fluoranthene...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
67	Fluoranthene	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
68	Fluorene	Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,27]
69	Heptachlor	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
70	Heptachlor epoxide	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
71	Hexachlorobenzene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
72	Hexachloro-1,3-butadiene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
73	n-Hexane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[13,26]
74	α -HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
75	β -HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
76	γ -HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
77	Hexachlorocyclopentadiene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]

78 Hexachloroethane...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
78	Hexachloroethane	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
79	Indeno(1,2,3-cd)pyrene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
80	Isophorone	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
81	Lead	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
82	Manganese	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
83	Mercury	1) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[19] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
84	Methanol	Ultrasonic Extraction, Direct Aqueous Injection, Gas Chromatographic Method ^[11,21]
85	Methoxychlor	1) Ultrasonic Extraction, Gas Chromatographic Method ^[11,22] 2) Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
86	Methyl bromide	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
87	Methylene chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
88	2-Methylphenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
89	2-Methylnaphthalene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]

90 Methyl tert-butyl ether...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
90	Methyl tert-butyl ether	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
91	Naphthalene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
92	Nickel	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
93	Nitrobenzene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
94	N-Nitrosodiphenylamine	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
95	N-Nitrosodi-n-propylamine	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
96	Polychlorinated Biphenyls - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260	Soxhlet Extraction, Gas Chromatographic Method ^[10,23]
97	Pentachlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[24]
98	Phenanthrene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
99	Phenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,27]
100	Pyrene	Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,27]
101	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[7,20]

2) Digestion...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
102	Silver	2) Digestion, Inductively Coupled Plasma Method ^[7,14] 1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]
103	Styrene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
104	1,1,2,2-Tetrachloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
105	Tetrachloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
106	Toluene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
107	TPH (C ₅ -C ₈)	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
108	TPH (C ₈ -C ₁₆)	1) Soxhlet Extraction, Gas Chromatographic Method ^[10,21] 2) Soxhlet Extraction, Gas Chromatographic/Mass spectrometric Method ^[10,26]
109	TPH (C ₁₆ -C ₃₅)	1) Soxhlet Extraction, Gas Chromatographic Method ^[10,21] 2) Soxhlet Extraction, Gas Chromatographic/Mass spectrometric Method ^[10,26]
110	1,2,4-Trichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
111	1,1,1-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
112	1,1,2-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
113	Trichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]

114 2,4,5-Trichlorophenol...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
114	2,4,5-Trichlorophenol	Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
115	2,4,6-Trichlorophenol	Ultrasonic Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,27]
116	1,3,5-Trimethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
117	Vanadium	Digestion, Inductively Coupled Plasma Method ^[7,14]
118	Vinyl acetate	Purge and Trap, Gas Chromatographic/Mass spectrometric Method ^[13,26]
119	Vinyl chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
120	m-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
121	o-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
122	p-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
123	Xylene (Total)	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[13,26]
124	Zinc	1) Digestion, Flame Atomic Absorption Spectrometric Method ^[7,15] 2) Digestion, Inductively Coupled Plasma Method ^[7,14]

เอกสารอ้างอิง

- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2548. เรื่อง การกำจัดสิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว.ราชกิจจานุเบกษา. 25 มกราคม 2549. เล่มที่ 123 ตอนพิเศษ 11ง.
- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2549. เรื่อง กำหนดค่าปริมาณเขม่าควันที่เจือปนในอากาศที่ระบายออกจากปล่องของหม้อน้ำโรงสีข้าวที่ใช้กลบเป็นเชื้อเพลิง.ราชกิจจานุเบกษา. 4 ธันวาคม 2549. เล่มที่ 123 ตอนพิเศษ 125ง.
- สมาคมวิศวกรรมสิ่งแวดล้อมแห่งประเทศไทย. คู่มือวิเคราะห์น้ำเสีย. พิมพ์ครั้งที่ 4. กรุงเทพฯ: เรือนแก้วการพิมพ์, 2547.

4. APHA, AWWA, WEF. *Standard Methods for the Examination of Water and Wastewater*. 23rd ed. Washington, DC: APHA, 2017.
5. United States Environmental Protection Agency. *Standards of Performance for New Stationary Sources*. 40 CFR 60. Appendix A, 2023.
6. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. SW-846, 2020.
7. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Acid Digestion of Sediments, Sludges, and Soils*. SW-846 Method 3050B, 1996.
8. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Alkaline Digestion for Hexavalent Chromium*. SW-846 Method 3060A, 1996.
9. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Separatory Funnel Liquid-Liquid Extraction*. SW-846 Method 3510C, 1996.
10. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Soxhlet Extraction*. SW-846 Method 3540C, 1996.
11. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Ultrasonic Extraction*. SW-846 Method 3550C, 2007.
12. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Purge-and-Trap for Aqueous Samples*. SW-846 Method 5030C, 2003.
13. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Closed-System Purge-and-Trap and Extraction for Volatile Organics in Soil and Waste Samples*. SW-846 Method 5035, 1996.
14. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Inductively Coupled Plasma-optical Emission Spectrometry*. SW-846 Method 6010D, 2018.
15. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Flame Atomic Absorption Spectrophotometry*. SW-846 Method 7000B, 2007.
16. United States Environmental Protection Agency. *Test Methods for Evaluation Solid Waste Physical/Chemical Methods*. *Antimony and Arsenic (Atomic Absorption, Borohydride Reduction)*. SW-846 Method 7062, 1994.

17. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Chromium, Hexavalent (Colorimetric), SW-846 Method 7196A**, 1992.

18. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Mercury in Liquid Waste (Manual Cold-Vapor Technique, SW-846 Method 7470A**, 1994.

19. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Mercury in Solid or Semisolid Waste (Manual Cold-Vapor Technique, SW-846 Method 7471B**, 2007.

20. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Selenium (Atomic Absorption, Borohydride Reduction), SW-846 Method 7742**, 1994.

21. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Nonhalogenated Organics Using GC/FID. SW-846 Method 8015D**, 2003.

22. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Organochlorine Pesticide by Gas Chromatography. SW-846 Method 8081B**, 2007.

23. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Polychlorinated Biphenyls (PCBs) By Gas Chromatography. SW-846 Method 8082A**, 2007.

24. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Organophosphorus Compounds by Gas Chromatography. SW-846 Method 8141B**, 2007.

25. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Chlorinated Herbicides By GC Using Methylation or Pentafluorobenzoylation Derivatization. SW-846 Method 8151A**, 1996.

26. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Volatile Organic Compounds by Gas Chromatography/ Mass Spectrometry (GC/MS). SW-846 Method 8260D**, 2018.

27. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **SemiVolatile Organic Compounds by Gas Chromatography/Mass Spectrometry. SW-846 Method 8270E**, 2018. 

28. United States...

28. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Total and Amenable Cyanide: Distillation. SW-846 Method 9010C**, 2004.

29. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Cyanide Extraction Procedure for Solids and Oils. SW-846 Method 9013A**, 2014.

30. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Cyanide in Waters and Extracts Using Titrimetric and Manual Spectrophotometric. SW-846 Method 9014**, 2014.

31. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **pH Electrometric Measurement. SW-846 Method 9040C**, 2004.

32. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. **Solid and Waste pH. SW-846 Method 9045D**, 2004. 

ที่ อก ๐๓๑๐(๑)/ ๕๐๕๔



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๗ พฤษภาคม ๒๕๖๗

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ซีคอต จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๑ พฤษภาคม ๒๕๖๗

ตามคำขอที่อ้างถึง บริษัท ซีคอต จำกัด ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ว-๒๓๙
สถานที่ตั้งเลขที่ ๒๓๙ ถนนริมคลองประปา แขวงบางซื่อ เขตบางซื่อ กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากร
ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์
จำนวน ๒ ราย ได้แก่

๑) นายวัชรกานต์ ประมาคะเต

ทะเบียนเลขที่ ว-๒๓๙-จ-๐๐๑๕

๒) นายรัตนชัย ขอบทำกิจ

ทะเบียนเลขที่ ว-๒๓๙-จ-๐๐๓๐

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นายพรยศ กลั่นกรอง)

รองอธิบดี ปฏิบัติราชการแทน

อธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๙๙

ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



ภาคผนวก ช

ใบรับรองความสามารถห้องปฏิบัติการและขอบข่ายการรับรอง
ห้องปฏิบัติการทดสอบ ตามมาตรฐาน ISO/IEC 17025
จากสำนักงานมาตรฐานอุตสาหกรรม (สมอ.)



แบบ กมช./สมอ.๒
Form NSC/TISI 2

ใบรับรองเลขที่ 24-LB0026
(Certificate No.)

ใบรับรองระบบงาน

(Certificate of Accreditation)

อาศัยอำนาจตามความในพระราชบัญญัติการมาตรฐานแห่งชาติ พ.ศ. ๒๕๕๑
(By Virtue of National Standardization Act B.E. 2551 (2008))

เลขาธิการสำนักงานมาตรฐานผลิตภัณฑ์อุตสาหกรรม
(Secretary-General, Thai Industrial Standards Institute)

ออกใบรับรองฉบับนี้ให้

(Issues this certificate to)

บริษัท ซีคोट จำกัด ฝ่ายห้องปฏิบัติการทดสอบด้านสิ่งแวดล้อม
(Secot Company Limited, Environmental Laboratory Division)

ตั้งอยู่เลขที่
(Address)

๒๓๙ ถนนริมคลองประปา แขวงบางซื่อ เขตบางซื่อ กรุงเทพมหานคร
(239 Rimklongprapa Road, Bangsue, Bangkok)

ได้รับการรับรองความสามารถ

(Certificate of competence)

ตามมาตรฐานเลขที่ มอก. ๑๗๐๒๕ - ๒๕๖๑
(Standard No. TIS 17025-2561 (2018) (ISO/IEC 17025: 2017))

ข้อกำหนดทั่วไปว่าด้วยความสามารถของ ห้องปฏิบัติการทดสอบและห้องปฏิบัติการสอบเทียบ
(General requirements for the competence of testing and calibration laboratories)

หมายเลขการรับรองที่ ทดสอบ ๐๓๙๔
(Accreditation No. Testing 0394)

โดยมีรายละเอียดสาขาและขอบข่ายที่ใบรับรอง แสดงไว้ใน QR CODE และ www.tisi.go.th
(Details of the scheme and scope of the certificate are shown in QR CODE and www.tisi.go.th)

ออกให้ ณ วันที่ ๖ ธันวาคม พ.ศ. ๒๕๖๖
(Issue date : 6 December B.E. 2566 (2023))

(นายวีระศักดิ์ เพ็งหล่ง)

ผู้อำนวยการสำนักงานคณะกรรมการการมาตรฐานแห่งชาติ
ปฏิบัติราชการแทน

เลขาธิการสำนักงานมาตรฐานผลิตภัณฑ์อุตสาหกรรม



Signed by สำนักงานมาตรฐานผลิตภัณฑ์อุตสาหกรรม (สมอ.)
Thai Industrial Standards Institute (TISI)
Date: 2023-12-06T08:49:04.476+07:00

d68cb6eb

กระทรวงอุตสาหกรรม สำนักงานมาตรฐานผลิตภัณฑ์อุตสาหกรรม
(Ministry of Industry Thailand, Thai Industrial Standards Institute)



รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ
(Scope of Accreditation for Testing)
ใบรับรองเลขที่ 24-LB0026
(Certification No. 24-LB0026)



ชื่อห้องปฏิบัติการ
(Laboratory Name)

บริษัท ซีคोट จำกัด ฝ่ายห้องปฏิบัติการทดสอบด้านสิ่งแวดล้อม
(Secot Company Limited, Environmental Laboratory Division)

หมายเลขการรับรองที่
(Accreditation No.)

ทดสอบ 0394
(Testing 0394)

ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร (Permanent) ☐นอกสถานที่ (Site) ☐ชั่วคราว (Temporary) ☐เคลื่อนที่ (Mobile) ☐หลายสถานที่ (Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
สาขาสังแวดล้อม (environmental field) 1. น้ำและน้ำเสีย (water and wastewater)	- โลหะหนัก (heavy metals) • สารหนู (Arsenic, As) 0.000 5 mg/L ถึง 0.090 0 mg/L • สารหนู (Arsenic, As) 0.05 mg/L ถึง 4.50 mg/L • แบเรียม (Barium, Ba) 0.02 mg/L ถึง 4.50 mg/L • แคดเมียม (Cadmium, Cd) 0.01 mg/L ถึง 4.50 mg/L • โครเมียม (Chromium, Cr) 0.01 mg/L ถึง 4.50 mg/L	- Standard Methods for the Examination of Water and Wastewater, APHA, AWWA, WEF, 23 rd edition, 2017, Part 3030 F and Part 3114 C - Standard Methods for the Examination of Water and Wastewater, APHA, AWWA, WEF, 23 rd edition, 2017, Part 3030 E and Part 3120 B

กระทรวงอุตสาหกรรม สำนักงานมาตรฐานผลิตภัณฑ์อุตสาหกรรม
(Ministry of Industry, Thai Industrial Standards Institute)

หน้า 1/9

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ

(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026

(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ ถาวร
(Permanent)

☐ นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสสิ่งแวดล้อม (environmental field)</p> <p>1. น้ำและน้ำเสีย (ต่อ) (water and wastewater) (cont.)</p>	<p>- โลหะหนัก (heavy metals)</p> <ul style="list-style-type: none"> ทองแดง (Copper, Cu) 0.02 mg/L ถึง 4.50 mg/L เหล็ก (Iron, Fe) 0.05 mg/L ถึง 9.00 mg/L ตะกั่ว (Lead, Pb) 0.03 mg/L ถึง 4.50 mg/L แมงกานีส (Manganese, Mn) 0.01 mg/L ถึง 9.00 mg/L นิกเกิล (Nickel, Ni) 0.01 mg/L ถึง 4.50 mg/L สังกะสี (Zinc, Zn) 0.02 mg/L ถึง 9.00 mg/L 	<p>- Standard Methods for the Examination of Water and Wastewater, APHA , AWWA, WEF, 23rd edition , 2017, Part 3030 E and Part 3120 B</p>

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ

(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026

(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ ถาวร
(Permanent)

☐นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสสิ่งแวดล้อม (environmental field)</p> <p>1. น้ำและน้ำเสีย (ต่อ) (water and wastewater) (cont.)</p>	<p>- ซีโอดี (Chemical oxygen demand, COD) 100 mg/L ถึง 4 000 mg/L</p>	<p>- Standard Methods for the Examination of Water and Wastewater, APHA, AWWA, WEF, 23rd edition , 2017, Part 5220 D</p>
<p>2. บริเวณทำงาน (workplace)</p>	<p>- ฝุ่นละอองรวม (Total dust) 0.10 mg/filter ถึง 2.00 mg/filter</p> <p>- ฝุ่นละอองขนาดเล็ก (Respirable dust) 0.10 mg/filter ถึง 2.00 mg/filter</p>	<p>- NIOSH Manual of Analytical Methods (NMAM) , method 0500, 4th edition , 15th August 1994 (Exclude Sampling)</p> <p>- NIOSH Manual of Analytical Methods (NMAM) , method 0600, 4th edition , 15th January 1998 (Exclude Sampling)</p>

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ

(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026

(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร
(Permanent)

☐นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสังแวดล้อม (environmental field)</p> <p>2. บริเวณทำงาน (ต่อ) (workplace) (cont.)</p>	<ul style="list-style-type: none"> เบนซีน (Benzene) 1.10 µg/tube ถึง 420 µg/tube โทลูอีน (Toluene) 1.10 µg/tube ถึง 420 µg/tube โทโครไซลีน (Total xylenes) 2.20 µg/tube ถึง 840 µg/tube เมตา, พารา-ไซลีน (m, p- Xylene) 1.10 µg/tube ถึง 420 µg/tube ออร์โธ-ไซลีน (o- Xylene) 1.10 µg/tube ถึง 420 µg/tube 	<ul style="list-style-type: none"> NIOSH Manual of Analytical Methods (NMAM) , method 1501, 4th edition , 15th March 2003 (Exclude Sampling)
<p>3. ปล่องระบายอากาศ (stack)</p>	<ul style="list-style-type: none"> ซัลเฟอร์ไดออกไซด์ (Sulfur dioxide) 1.00 mg/L ถึง 16 000 mg/L (solution) 	<ul style="list-style-type: none"> US.EPA , Code of Federal Regulations , 40 CFR 60 appendix A , method 6 , July 2019 (Exclude Sampling)

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ

(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026

(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร
(Permanent)

☐นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสังแวดล้อม (environmental field)</p> <p>3. ปล่องระบายอากาศ (ต่อ) (stack) (cont.)</p>	<ul style="list-style-type: none"> ไฮโดรเจนฟลูออไรด์ (Hydrogen fluoride) 5 µg/sample ถึง 400 µg/sample ไฮโดรเจนคลอไรด์ (Hydrogen chloride) 5 µg/sample ถึง 400 µg/sample 	<ul style="list-style-type: none"> WI-7.2-1-22 based on US.EPA , Code of Federal Regulations , 40 CFR 60 appendix A, method 26 , 2019 (Exclude Sampling)

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ

(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026

(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร
(Permanent)

☒นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสสิ่งแวดล้อม (environmental field)</p> <p>4. บรรยากาศทั่วไป (ambient air)</p>	<p>- สารอินทรีย์ระเหยง่าย (Volatile organic compounds, VOCs)</p> <ul style="list-style-type: none"> คลอโรอีthin (Chloroethene) 0.05 $\mu\text{g}/\text{m}^3$ ถึง 51.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) 1,3-บิวทาไดเอิน (1,3-butadiene) 0.04 $\mu\text{g}/\text{m}^3$ ถึง 44.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) โบรมอมีเทน (Bromomethane) 0.08 $\mu\text{g}/\text{m}^3$ ถึง 77.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) อะครอลีน (Acrolein) 0.05 $\mu\text{g}/\text{m}^3$ ถึง 45.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) 	<p>- WI-7.2-1-24 based on US EPA , Compendium Method TO-15 , EPA/625/R-96/010b, Second edition, January 1999</p> <p><i>W</i></p>

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ

(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026

(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร
(Permanent)

☒นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสสิ่งแวดล้อม (environmental field)</p> <p>4. บรรยากาศทั่วไป (ต่อ) (ambient air) (cont.)</p>	<p>- สารอินทรีย์ระเหยง่าย (Volatile organic compounds, VOCs)</p> <ul style="list-style-type: none"> อะคริโลไนไตรล์ (Acrylonitrile) 0.04 $\mu\text{g}/\text{m}^3$ ถึง 43.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) ไดคลอโรมีเทน (Dichloromethane) 0.14 $\mu\text{g}/\text{m}^3$ to 69.00 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) คาร์บอนไดซัลไฟด์ (Carbon disulfide) 0.06 $\mu\text{g}/\text{m}^3$ ถึง 62.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) ไตรคลอโรมีเทน (Trichloromethane) 0.20 $\mu\text{g}/\text{m}^3$ ถึง 97.00 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) 1,2-ไดคลอโรอีเทน (1,2-dichloroethane) 0.08 $\mu\text{g}/\text{m}^3$ ถึง 80.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) 	<p>- WI-7.2-1-24 based on US EPA , Compendium Method TO-15 , EPA/625/R-96/010b, Second edition, January 1999</p> <p><i>W</i></p>

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ
(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026
(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร
(Permanent)

☒นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสสิ่งแวดล้อม (environmental field)</p> <p>4. บรรยากาศทั่วไป (ต่อ) (ambient air) (cont.)</p>	<p>- สารอินทรีย์ระเหยง่าย (Volatile organic compounds ,VOCs)</p> <ul style="list-style-type: none"> • เบนซีน (Benzene) 0.06 $\mu\text{g}/\text{m}^3$ ถึง 63.00 $\mu\text{g}/\text{m}^3$ (0.02 ppbv ถึง 20.00 ppbv) • คาร์บอนเตตระคลอไรด์ (Carbon tetrachloride) 0.25 $\mu\text{g}/\text{m}^3$ ถึง 125 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) • ไตรคลอโรเอทิลีน (Trichloroethylene) 0.21 $\mu\text{g}/\text{m}^3$ ถึง 107 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) • 1,2-ไดคลอโรโพรเพน (1,2-dichloropropane) 0.18 $\mu\text{g}/\text{m}^3$ ถึง 92.00 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) • เตตระคลอโรเอทิลีน (Tetrachloroethylene) 0.27 $\mu\text{g}/\text{m}^3$ ถึง 135 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) 	<p>- WI-7.2-1-24 based on US EPA , Compendium Method TO-15 , EPA/625/R-96/010b, Second edition, January 1999</p>

รายละเอียดสาขาและขอบข่ายใบรับรองห้องปฏิบัติการ
(Scope of Accreditation for Testing)

ใบรับรองเลขที่ 24-LB0026
(Certification No. 24-LB0026)



ฉบับที่ 02
(Issue No.02)

ออกให้ตั้งแต่วันที่ 30 ตุลาคม พ.ศ. 2566
(Valid from) (30 October B.E.2566 (2023))

ถึงวันที่ 8 กันยายน พ.ศ. 2571
(Until) (8 September B.E.2571 (2028))

สถานภาพห้องปฏิบัติการ
(Laboratory status)

☒ถาวร
(Permanent)

☒นอกสถานที่
(Site)

☐ชั่วคราว
(Temporary)

☐เคลื่อนที่
(Mobile)

☐หลายสถานที่
(Multisite)

สาขาการทดสอบ (Field of Testing)	รายการทดสอบ (Parameter)	วิธีทดสอบ (Test Method)
<p>สาขาสสิ่งแวดล้อม (environmental field)</p> <p>4. บรรยากาศทั่วไป (ต่อ) (ambient air) (cont.)</p>	<p>- สารอินทรีย์ระเหยง่าย (Volatile organic compounds ,VOCs)</p> <ul style="list-style-type: none"> • 1,2-ไดโบรมโอเอเทน (1,2-dibromoethane) 0.31 $\mu\text{g}/\text{m}^3$ ถึง 153 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) • 1,1,2,2-เตตระคลอโรเอเทน (1,1,2,2-tetrachloroethane) 0.69 $\mu\text{g}/\text{m}^3$ ถึง 137 $\mu\text{g}/\text{m}^3$ (0.10 ppbv ถึง 20.00 ppbv) • เบนซิลคลอไรด์ (Benzyl chloride) 0.52 $\mu\text{g}/\text{m}^3$ ถึง 103 $\mu\text{g}/\text{m}^3$ (0.10 ppbv ถึง 20.00 ppbv) • 1,4-ไดคลอโรเบนซีน (1,4-dichlorobenzene) 0.24 $\mu\text{g}/\text{m}^3$ ถึง 120 $\mu\text{g}/\text{m}^3$ (0.04 ppbv ถึง 20.00 ppbv) 	<p>- WI-7.2-1-24 based on US EPA , Compendium Method TO-15 , EPA/625/R-96/010b, Second edition, January 1999</p>