



cristalla

บริษัท ทิพย์สุโขทัย ไฮบริดเอนเนอจี จำกัด

ภาคผนวก จ
เอกสารสอบเทียบเครื่องมือ

List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Stack									
1	Pre-Test Console	Total Suspended Particulate	Apex Instruments, USA.	XC-572-V 1904011	Envi Equipment Service Co., Ltd.	E23-08066	5 Aug 23	4 Aug 24	-
2	Flue gas Analyzer	Sulphur Dioxide Oxide of Nitrogen as Nitrogen Dioxide Carbon Monoxide Carbon Dioxide Oxygen	Testo	Testo 350 60899615	Entech Industrial Sulation Co., Ltd.	G 660354	20 Jun 23	19 Jun 24	-

List of Opacity Training Certification for Opacity Mesurement

No.	Name	Training Couse	Train	Date	Remark
1	Mr.Pongthep Laokajorn	Opacity	Pollution Control Department	12-13 March 2015	-
2	Mr.Sompong Sakunthai	Opacity	Pollution Control Department	22-23 March 2018	-

CERTIFICATE OF CALIBRATION

Customer : United Analyst and Engineering Consultant Co., Ltd.
Address : 81 Soi Udomsuk 41, Sukhumvit Road, Bangchak, Phrakhanong, Bangkok 10260
Description of Equipment : Console meter
Manufacturer : Apex Instrument
Model Number : XC-572-V
Serial Number : 1904011
ID/Control No. : -
Environment Conditions : Temperature (25 ± 2) °C
Humidity (50 ± 15) % RH
Cal. Date : 05/08/2023
Issue Date : 05/08/2023

Calibration Method or Calibration Procedure Used

US EPA Method (United State Environmental Protection Agency)

This certificate is traceable to national standard, which realize the units of measurement according to the International System of Units (SI).

Result of Calibration

This certificate may not be reproduced other than in full except with prior Written approval of the Technical Manager, Envi Equipment Service Company Limited.

These reported uncertainties of measurement are expanded by a coverage factor of k=2, providing a 95% confidence level.

Calibrated by : Mr. Sanya Sangnil

Approved by :

(Mr. Mana Fuchlud)
Technical Manager

เอกสารไม่ควบคุม

METHOD 5 CONSOLE CALIBRATION
USING REFERENCE WET GAS METER W-NK-2.5-B-Z No.547425
5-POINT METRIC UNIT

Meter Console Information		Calibration Conditions				Factors/Conversions	
Console Model Number	XC-572-V	Date	Time	05/08/2023	09:50 AM	Std Temp	293 K
Console Serial Number	1904011	Calibration Reference No.	SER23-08027			Std Press	760 mm Hg
DGM Model Number	SK25EX	Barometric Pressure	758.99	mmHg		K _i	0.386
DGM Serial Number	00004114	Calibration Meter Gamma	0.999			Console Leak Check	PASS

Calibration Data									
Metering Console					Calibration Meter				
Run Time	DGM Orifice DH	Volume Initial	Volume Final	Outlet Temp Initial	Outlet Temp Final	Volume Initial	Volume Final	Outlet Temp Initial	Outlet Temp Final
Elapsed (Q)	(P ₀)	(V _{0i})	(V _{0f})	(t _{0i})	(t _{0f})	(V _{wi})	(V _{wf})	(t _{wi})	(t _{wf})
min	mm H ₂ O	m ³	m ³	°C	°C	m ³	m ³	°C	°C
12.35	13.0	1342.996	1343.136	29	29	155.32046	155.46168	27	27
12.42	13.0	1343.136	1343.276	29	29	155.46168	155.60264	27	27
8.80	26.0	1343.282	1343.422	29	29	155.60872	155.75014	27	27
8.80	26.0	1343.422	1343.562	30	30	155.75014	155.89098	26	26
13.95	40.0	1343.569	1343.849	30	30	155.89796	156.17902	26	26
13.95	40.0	1343.849	1344.129	31	31	156.17902	156.45838	26	26
10.50	70.0	1344.138	1344.418	31	31	156.46734	156.74556	26	26
10.47	70.0	1344.418	1344.698	32	32	156.74556	157.02264	26	26
9.12	90.0	1344.711	1344.991	32	32	157.03528	157.31088	26	26
9.12	90.0	1344.991	1345.271	32	32	157.31088	157.58638	25	25



เอกสารไม่ควบคุม

METHOD 5 CONSOLE CALIBRATION
USING REFERENCE WET GAS METER W-NK-2.5-B-Z No.547425
5-POINT METRIC UNIT

Meter Console Information		Calibration Conditions				Factors/Conversions	
Console Model Number	XC-572-V	Date	Time	05/08/2023	09:50 AM	Std Temp	293 K
Console Serial Number	1904011	Calibration Reference No.	SER23-08027			Std Press	760 mm Hg
DGM Model Number	SK25EX	Barometric Pressure	758.99	mmHg		K _i	0.386
DGM Serial Number	00004114	Calibration Meter Gamma	0.999			Console Leak Check	PASS


Calibration Data									
Results									
Standardized Data					Dry Gas Meter				
Dry Gas Meter		Calibration Meter		Calibration Factor	Flowrate		Std & Corr	.0212 m ³ /min	Variation
(V _{0i})	(Q _{0i})	(V _{wi})	(Q _{wi})	(Y)	(ΔY)	(Q _{int})	(ΔH _g)		
m ³	m ³ /min	m ³	m ³ /min			m ³ /min	mm H ₂ O		
0.137	0.011	0.138	0.011	1.006	0.014	0.011	46.171	-0.333	
0.137	0.011	0.137	0.011	1.005	0.012	0.011	46.843	0.339	
0.137	0.016	0.138	0.016	1.007	0.014	0.016	46.870	0.366	
0.137	0.016	0.138	0.016	1.002	0.010	0.016	47.099	0.595	
0.275	0.020	0.275	0.020	0.999	0.006	0.020	45.847	-0.657	
0.275	0.020	0.273	0.020	0.993	0.000	0.020	46.407	-0.097	
0.276	0.026	0.272	0.026	0.986	-0.007	0.026	46.656	0.152	
0.276	0.026	0.271	0.026	0.982	-0.011	0.026	46.743	0.239	
0.276	0.030	0.269	0.030	0.975	-0.018	0.030	46.263	-0.241	
0.277	0.030	0.270	0.030	0.974	-0.018	0.030	46.142	-0.362	
				0.993	Y Average			46.594	ΔH _g Average

Note: For Calibration Factor Y, the ratio of the reading of the calibration meter to the dry gas meter, acceptable tolerance of individual values from the average is ±0.02.
For ΔH_g, orifice pressure differential that equates to 0.75 cfm (0.0212 m³/min) at standard temperature and pressure, acceptable tolerance of individual values from the average is ±0.2 inches (5.1mm) H₂O.




เอกสารไม่ควบคุม

Meter Console Information		Calibration Conditions				Factors/Conversions	
Console Model Number	XC-572-V	Date	Time	05/08/2023	09:50 AM	Std Temp	293 K
Console Serial Number	1904011	Calibration Reference No.	SER23-08027			Std Press	760 mm Hg
DGM Model Number	SK25EX	Barometric Pressure	758.99	mmHg		K _i	0.386
DGM Serial Number	00004114	Calibration Meter Gamma	0.999			Console Leak Check	PASS

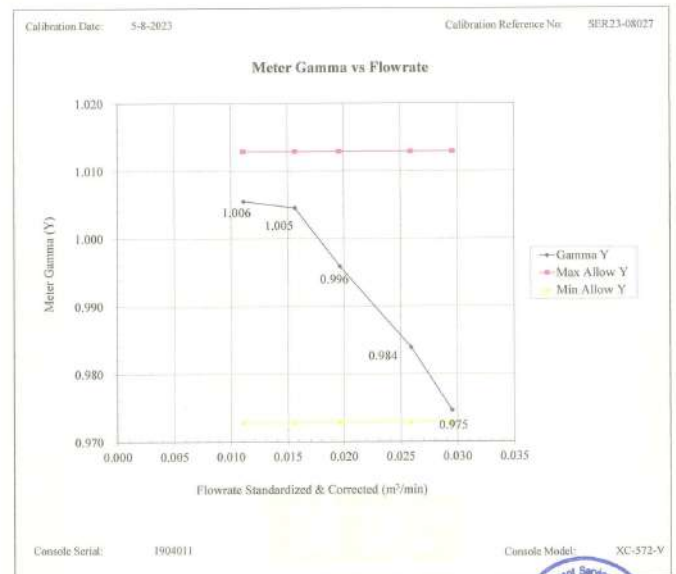

เอกสารไม่ควบคุม

Meter Console Information		Calibration Conditions				Factors/Conversions	
Console Model Number	XC-572-V	Date	Time	05/08/2023	09:50 AM	Std Temp	293 K
Console Serial Number	1904011	Calibration Reference No.	SER23-08027				
DGM Model Number	SK25EX	Barometric Pressure	758.99 mmHg				
DGM Serial Number	00004114	Calibration Meter Gamma	0.999				
		Console Leak Check	PASS				

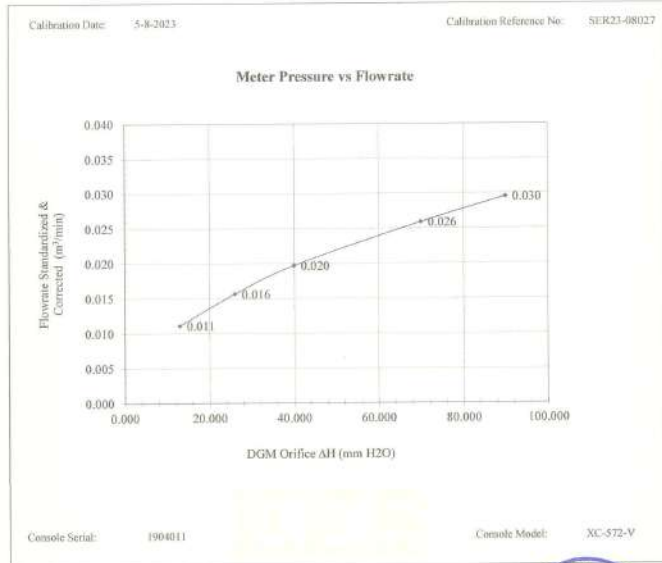

เอกสารไม่ควบคุม

THERMOCOUPLES SYSTEM CALIBRATION

Sampling System Equipment Information		Calibration Conditions			
Console Model Number	XC-572-V	Date	Time	05/08/2023	12:10 PM
Console Serial Number	1904011	Calibration Reference No.		SER23-08027	
DGM Model Number	SK25EX	Reference Thermometer		DIGICON	
DGM Serial Number	00004114	Serial Number		183169105	
Meter Box Model Number	JENCO 765 KF				
Meter Box Serial Number	JC 17215				

Results											
Console Thermocouple Simulator											
Channel and test point	Meter Box Channel Temperature Reading (°C)										
	-18.0	25.0	38.0	93.0	149.0	260.0	371.0	482.0	593.0	816.0	1038.0
Stack	-17.0	25.0	37.0	93.0	149.0	258.0	370.0	481.0	592.0	814.0	1037.0
Aux	-16.0	25.0	37.0	93.0	149.0						
Probe	-17.0	24.0	37.0	93.0	149.0						
Filter	-16.0	24.0	37.0	93.0	149.0						
Oven	-16.0	24.0	37.0	93.0	149.0						
Exit	-16.0	24.0	37.0								

Tolerance Range			
Stack	± 1.50%	Absolute	Meter ± 3.0 °C
Probe	± 3.0 °C		Exit ± 2.0 °C
Filter	± 3.0 °C		



เอกสารไม่ควบคุม

Certificate No: G 660354
Date of issue : 20-Jun-23

Instrument description	Flue gas Analyzer
Instrument model	Testo 350 New
Instrument serial no.	60899615
ID no. or control no.	UAE.EFM, 006/2560
Manufacturer	Testo SE & Co. KGaA
Probe description	-
Probe model	-
Probe serial	-
Customer name	United Analyst and Engineering Consultant Co., Ltd.
Customer address	81 Soi Udomsak 41, Sukhumvit Rd., Bangkok, Phrakhanong, Bangkok 10260
Total pages of certificate	3 Pages
Receiving no.	L-231754
Receiving date	20-Jun-23
Parameter of calibration	Gas Calibration (Oxygen 2.498, 10.04, 21.02 % Vol, Carbon Monoxide 80.14, 309.9, 1003 ppm, Nitrogen Dioxide 30.34, 80.96, 202.2 ppm, Nitric Oxide 30.01, 151.5, 320.6 ppm, Sulphur Dioxide 50.04, 100.8, 601.1 ppm)
Condition of UUC	Used
Ambient condition	All of the Measurement were carried out the stabilized laboratory Temperature : 23 ± 0.5 °C Humidity : 55 ± 15 %RH
Calibration place	17/121 Soi Ngamwongwan 47 Yeak 48, Toongsonghong, Laks, Bangkok 10210
Calibration procedure no.	This instrument was calibrated by comparison with Standard gas mixture according to calibration work instruction no. WI-CL-26-C

The calibration certificate expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by coverage factor $k=2$, which for a normal distribution corresponds to a coverage probability of approximately 95%.

This certificate is applied only to item under test Environmental condition.

This Calibration Certificate may not be reproduced other than in full except with the permission of the issuing laboratory.

Calibration certificates without signature and seal not valid and The results relate only to the items tested/calibrated.

This calibration certificate documents are traceability to national standards, which realize measurement according to the International System of Units (SI).

Date of calibration : 20-Jun-23

Mr. Kwanthai Khamdang
Calibration Technician

Mrs. Nongluck Wongsettee
Technical Manager

เอกสารไม่ควบคุม



Certificate No.: G 660354

Standard References (Table 1)

Standard	Certificate No.	Vendor	Due date
Oxygen (O2) 2.498 % Vol	4219/21	Linde	30-Sep-25
Oxygen (O2) 10.04 % Vol	CG-0153-21	Nimitt	18-Nov-26
Oxygen (O2) 21.02 % Vol	CG-0041-22	Nimitt	10-Feb-27
Carbon monoxide (CO) 80.14 ppm	CG-0040-22	Nimitt	14-Feb-27
Carbon monoxide (CO) 309.9 ppm	2803/21	Linde	22-Jun-23
Carbon monoxide (CO) 1003 ppm	45513	Linde	09-Aug-24
Nitrogen Dioxide (NO2) 30.34 ppm	2703/22	Nimitt	22-Aug-24
Nitrogen Dioxide (NO2) 80.96 ppm	3240/21	Linde	26-Jun-24
Nitrogen Dioxide (NO2) 202.2 ppm	3239/21	Linde	20-Jul-23
Nitric Oxide (NO) 30.01 ppm	CG-0014-23	Nimitt	19-Feb-25
Nitric Oxide (NO) 151.5 ppm	0161/23	Linde	22-Jan-25
Nitric Oxide (NO) 320.6 ppm	2944/21	Linde	02-Jul-23
Sulphur Dioxide (SO2) 50.04 ppm	3205/21	Linde	25-Jul-23
Sulphur Dioxide (SO2) 100.8 ppm	3507/22	Linde	09-Nov-24
Sulphur Dioxide (SO2) 601.1 ppm	3204/21	Linde	20-Jul-23

Measured room conditions

Temperature : 22.7 °C Humidity : 67.8 %RH Pressure : 1005.1 mbar

Calibration conditions

Gas Temperature : 23 °C Flow rate : 1,200 ml/min Gas pressure : 1020.2 mbar

Calibration Results (before adjustment) (Table 2)

Parameter of Standard	Standard		Error	Uncertainty
	Values	Mean of UUC		
O2 (%Vol)	2.498	2.56	0.062	0.15
O2 (%Vol)	10.04	10.11	0.07	0.20
O2 (%Vol)	21.02	21.10	0.08	0.30
CO (ppm)	80.14	78	-2.14	3.0
CO (ppm)	309.9	297	-12.9	6.0
CO (ppm)	1003	965	-38	12
NO2 (ppm)	30.34	27.9	-2.44	8.0
NO2 (ppm)	80.96	81.3	0.34	8.0
NO2 (ppm)	202.2	205.3	3.1	12
NO (ppm)	30.01	27	-3.01	8.0
NO (ppm)	151.5	143	-8.5	8.0
NO (ppm)	320.6	294	-26.6	12
SO2 (ppm)	50.04	53	2.96	6.0
SO2 (ppm)	100.8	111	10.2	6.0
SO2 (ppm)	601.1	665	63.9	13

เอกสารไม่ควบคุม

Calibration Results (after adjustment) (Table 3)

Parameter of Standard	Standard Values	Mean of UUC	Error	Uncertainty (±)
O2 (%Vol)	2.498	2.56	0.062	0.15
O2 (%Vol)	10.04	10.11	0.07	0.20
O2 (%Vol)	21.02	21.10	0.08	0.30
CO (ppm)	80.14	81	0.86	3.0
CO (ppm)	309.9	309	-0.9	6.0
CO (ppm)	1003	1001	-2	12
NO2 (ppm)	30.34	27.9	-2.44	8.0
NO2 (ppm)	80.96	81.3	0.34	8.0
NO2 (ppm)	202.2	205.3	3.1	12
NO (ppm)	30.01	32	1.99	8.0
NO (ppm)	151.5	155	3.5	8.0
NO (ppm)	320.6	318	-2.6	12
SO2 (ppm)	50.04	50	-0.04	6.0
SO2 (ppm)	100.8	100	-0.8	6.0
SO2 (ppm)	601.1	598	-3.1	13

Remark : 1 cmol/mol = 1 %vol , 1 µmol/mol = 1 ppm.

End of Report

List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Ambient									
1	Orifice Transfer Standard Calibrator	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀)	Tisch Environmental, Inc.	TE-5025A 3393	Jiranatee Associates Co., Ltd.	CL-004-65	26 Jul 22	25 Jul 24	-
2	U-Tube Manometer	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀)	Dwyer	1221-36-W/M -	Technology Promotion Association (Thailand-Japan)	23P1403	9 May 23	8 May 24	-
3	Air Flow Meter	Particular Matter (PM _{2.5})	Mesa Labs	DeltaCal DC1 160491	Innovative Instrument Co., Ltd.	23-AFM-204	27 Sep 23	26 Sep 24	-
4	Aneroid Barometer	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀) Particular Matter (PM _{2.5})	Barigo, Germany	-	Technology Promotion Association (Thailand-Japan)	23P1857	2 Jun 23	1 Jun 24	-
5	Dial Thermo-Hygrometer	Total Suspended Particulate (TSP) Particulate Matter < 10 µm (PM ₁₀) Particular Matter (PM _{2.5})	Barigo, Germany	-	Technology Promotion Association (Thailand-Japan)	23H1201	5 Jun 23	5 Jun 24	-
6	Nitrogen Dioxide Analyzer	Nitrogen Dioxide	Thermo Environmental Instrument	42C 42C-67174-356	UAE Consultant Co., Ltd.	01112023	1 Nov 23	31 Oct 24	-
7	Nitrogen Dioxide Analyzer	Nitrogen Dioxide	Thermo Environmental Instrument	42C 42C-78933-390	UAE Consultant Co., Ltd.	13112023	13 Nov 23	12 Nov 24	-
8	Nitrogen Dioxide Analyzer	Nitrogen Dioxide	Thermo Scientific	42i 1182920005	UAE Consultant Co., Ltd.	13112023	13 Nov 23	12 Nov 24	-
9	Nitrogen Dioxide Analyzer	Nitrogen Dioxide	Thermo Scientific	42i 1182920006	UAE Consultant Co., Ltd.	01112023	1 Nov 23	31 Oct 24	-
10	Standard Gases (Mixture)	Nitrogen Dioxide	Airgas	EB0143262 2015PSIG	Airgas an Air Liquide company	E04NI99E15A01D3	21 Jun 21	21 Jun 24	-
11	Sulphur Dioxide Analyzer	Sulphur Dioxide	Thermo Scientific	43i 1182920015	UAE Consultant Co., Ltd.	09112023	9 Nov 23	8 Nov 24	-
12	Sulphur Dioxide Analyzer	Sulphur Dioxide	Thermo Scientific	42i 1182920016	UAE Consultant Co., Ltd.	03112023	3 Nov 23	2 Nov 24	-
13	Sulphur Dioxide Analyzer	Sulphur Dioxide	Thermo Scientific	43i 1180540065	UAE Consultant Co., Ltd.	03112023	3 Nov 23	2 Nov 24	-

List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Ambient									
14	Sulphur Dioxide Analyzer	Sulphur Dioxide	Thermo Scientific	43i 1180540066	UAE Consultant Co.,Ltd.	09112023	9 Nov 23	8 Nov 24	-
15	Standard Gases (Mixture)	Sulphur Dioxide	Airgas	EB0143262 2015PSIG	Airgas an Air Liquide company	E04NI99E15A01D3	21 Jun 21	21 Jun 24	-
16	Wind Speed/Wind Direction	WS/WD	Scarlet Tech Ltd.	WL-21 2111DR0041	Thai Meteorological Department	119/24	13 Mar 24	12 Mar 25	-
17	Sound Level Calibrator (Acoustic Calibrator)	Calibrate Sound Level Meter	01dB	CAL31 82795	Innovative Instrument Co.,Ltd.	23-ACT-109	27 Jun 23	26 Jun 24	-
18	Sound Level Meter	L_{Aeq} 24 hrs ¹ L_{A90} ¹ L_{Amax} ¹ L_{Adn} ระดับเสียงรบกวน	Rion, Japan	NL-62 00130355	Sithiporn Associates Co., Ltd.	ACT23199	27 Jun 23	26 Jun 24	-
19	Sound Level Meter	L_{Aeq} 24 hrs ¹ L_{A90} ¹ L_{Amax} ¹ L_{Adn} ระดับเสียงรบกวน	Rion, Japan	NL-62 00130356	Innovative Instrument Co.,Ltd.	CP20230290EA	3 Aug 23	2 Aug 24	-
20	Sound Level Meter	L_{Aeq} 24 hrs ¹ L_{A90} ¹ L_{Amax} ¹ L_{Adn} ระดับเสียงรบกวน	Rion, Japan	NL-62 00130357	Innovative Instrument Co.,Ltd.	CP20230291EA	3 Aug 23	2 Aug 24	-
21	Sound Level Meter	L_{Aeq} 24 hrs ¹ L_{A90} ¹ L_{Amax} ¹ L_{Adn} ระดับเสียงรบกวน	Rion, Japan	NL-62 00391458	Sithiporn Associates Co., Ltd.	ACL24063	18 Jan 24	17 Jan 25	-
22	Sound Level Meter	L_{Aeq} 24 hrs ¹ L_{A90} ¹ L_{Amax} ¹ L_{Adn} ระดับเสียงรบกวน	Rion, Japan	NL-62 00391494	Sithiporn Associates Co., Ltd.	ACL24064	18 Jan 24	17 Jan 25	-
23	Sound Level Meter	L_{Aeq} 24 hrs ¹ L_{A90} ¹ L_{Amax} ¹ L_{Adn} ระดับเสียงรบกวน	Rion, Japan	NL-62 00881367	Sithiporn Associates Co., Ltd.	ACL24065	18 Jan 24	17 Jan 25	-

CERTIFICATE OF CALIBRATION

Certificate No. : CL-004-65

Page 1 of 2 Pages

MEASUREMENT ITEM : Tap Load Orifice
MANUFACTURER : Tisch Environmental, Inc.
MODEL/TYPE : TE-5025A
SERIAL NUMBER : 2393
ID NUMBER : UAE.FM.064/2560
CONDITION AS-RECEIVED : Used item
CUSTOMER : United Analyst and Engineering Consultant Co.,Ltd.
81 Soi Udomsak 41, Sukhumvit Road, Bangkok, Phrakhanong,
Bangkok 10260

RECEIVED DATE : 15 Jul 2022
MEASUREMENT DATE : 25 Jul 2022
ISSUE DATE : 26 Jul 2022

ENVIRONMENTAL CONDITIONS:

Ambient condition in the laboratory are as follow:
Temperature : 23.0 ± 3.0 °C
Relative Humidity : 55.0 ± 15.0 %RH
Atmospheric Pressure : 1010 ± 10 hPa

CALIBRATION CONDITION:

Preconditioning : 24 hours at ambient conditions.
Measurement Condition : The average values during measurement are 24.7 °C and 52.1 %RH.

TABULATION OF RESULTS:

The table on next page give the measured values.

Calibration procedure:
The Orifice gas flow device was calibrated against Standard Rotary Displacement Meter (Roots Meter) Model GS5/(MC/W2-4p, The WI-GI-004 was used as a calibration guideline.

Traceability:
This certificate provides a traceability of the measurement to recognition of the national standards, and to realization of the international system of units (SI) through the VSL (National Metrology Institute of Netherlands) via Certificate number: 02211901

Uncertainty of Measurement:
The reported uncertainty of measurement is based on the standard uncertainty multiplied by a coverage factor k=2, Which for a normal distribution corresponds to a coverage probability of approximately 95%. The standard uncertainty has been determined in accordance with the GUM "Evaluation of measurement data - Guide to the expression of uncertainty in measurement"

Table 1: The results of Q Standard calibration data

Plate	Flow rate m ³ /min	Pressure [Pa] mmHg	Temperature [Ta] °C	Temperature [Tm] °C	Ap_meter mmHg	Ap_Orifice inH ₂ O	γ	Standard Flow [Q _s] m ³ /min
1	0.699	756.468	24.680	23.730	55.667	1.705	1.303	0.647
2	1.001	756.479	24.910	24.180	61.363	3.454	1.855	0.918
3	1.114	756.494	24.550	23.970	41.751	4.535	2.126	1.051
4	1.166	756.510	24.470	23.900	30.652	6.538	2.264	1.118
5	1.816	756.534	24.400	24.150	30.200	7.619	2.757	1.357

Slope (m): 2.04689
Intercept (b): -0.02801
Correlation coefficient (r): 0.99987
Uncertainty (k=2): 0.010 m³/min

Table 2: The results of Q actual calibration data

Plate	Flow rate m ³ /min	Pressure [Pa] mmHg	Temperature [Ta] °C	Temperature [Tm] °C	Ap_meter mmHg	Ap_Orifice inH ₂ O	γ	Standard Flow [Q _s] m ³ /min
1	0.699	756.468	24.680	23.730	55.667	1.705	0.819	0.649
2	1.001	756.479	24.910	24.180	61.363	3.454	1.167	0.922
3	1.114	756.494	24.550	23.970	41.751	4.535	1.336	1.054
4	1.166	756.510	24.470	23.900	30.652	5.338	1.422	1.121
5	1.816	756.534	24.400	24.150	30.200	7.619	2.731	1.360

Slope (m): 1.28208
Intercept (b): -0.01449
Correlation coefficient (r): 0.99987
Uncertainty (k=2): 0.011 m³/min

End of Certificate of Calibration

Calibrated by:
☐ Mr. Sorawit Thachalad
☒ Miss Jiraporn Lertsomphol



Approved signatory:
Mr. Parinya Booncharoen
Calibration Department Manager



THIS CERTIFICATE REPORT MAY NOT BE REPRODUCED EXCEPT IN FULL UNLESS PERMISSION FOR REPRODUCTION IS GRANTED IN WRITING FROM THE LABORATORY

เอกสารไม่ควบคุม

เอกสารไม่ควบคุม

CERTIFICATE OF CALIBRATION

Certificate No. : CL-004-65

Page 1 of 2 Pages

MEASUREMENT ITEM : Tap Load Orifice
MANUFACTURER : Tisch Environmental, Inc.
MODEL/TYPE : TE-5025A
SERIAL NUMBER : 2393
ID NUMBER : UAE.FM.064/2560
CONDITION AS-RECEIVED : Used item
CUSTOMER : United Analyst and Engineering Consultant Co.,Ltd.
81 Soi Udomsak 41, Sukhumvit Road, Bangkok, Phrakhanong,
Bangkok 10260

RECEIVED DATE : 15 Jul 2022
MEASUREMENT DATE : 25 Jul 2022
ISSUE DATE : 26 Jul 2022

ENVIRONMENTAL CONDITIONS:

Ambient condition in the laboratory are as follow:
Temperature : 23.0 ± 3.0 °C
Relative Humidity : 55.0 ± 15.0 %RH
Atmospheric Pressure : 1010 ± 10 hPa

CALIBRATION CONDITION:

Preconditioning : 24 hours at ambient conditions.
Measurement Condition : The average values during measurement are 24.7 °C and 52.1 %RH.

TABULATION OF RESULTS:

The table on next page give the measured values.

Calibration procedure:
The Orifice gas flow device was calibrated against Standard Rotary Displacement Meter (Roots Meter) Model GS5/(MC/W2-4p, The WI-GI-004 was used as a calibration guideline.

Traceability:
This certificate provides a traceability of the measurement to recognition of the national standards, and to realization of the international system of units (SI) through the VSL (National Metrology Institute of Netherlands) via Certificate number: 02211901

Uncertainty of Measurement:
The reported uncertainty of measurement is based on the standard uncertainty multiplied by a coverage factor k=2, Which for a normal distribution corresponds to a coverage probability of approximately 95%. The standard uncertainty has been determined in accordance with the GUM "Evaluation of measurement data - Guide to the expression of uncertainty in measurement"

Table 1: The results of Q Standard calibration data

Plate	Flow rate m ³ /min	Pressure [Pa] mmHg	Temperature [Ta] °C	Temperature [Tm] °C	Ap_meter mmHg	Ap_Orifice inH ₂ O	γ	Standard Flow [Q _s] m ³ /min
1	0.699	756.468	24.680	23.730	55.667	1.705	1.303	0.647
2	1.001	756.479	24.910	24.180	61.363	3.454	1.855	0.918
3	1.114	756.494	24.550	23.970	41.751	4.535	2.126	1.051
4	1.166	756.510	24.470	23.900	30.652	6.538	2.264	1.118
5	1.816	756.534	24.400	24.150	30.200	7.619	2.757	1.357

Slope (m): 2.04689
Intercept (b): -0.02801
Correlation coefficient (r): 0.99987
Uncertainty (k=2): 0.010 m³/min

Table 2: The results of Q actual calibration data

Plate	Flow rate m ³ /min	Pressure [Pa] mmHg	Temperature [Ta] °C	Temperature [Tm] °C	Ap_meter mmHg	Ap_Orifice inH ₂ O	γ	Standard Flow [Q _s] m ³ /min
1	0.699	756.468	24.680	23.730	55.667	1.705	0.819	0.649
2	1.001	756.479	24.910	24.180	61.363	3.454	1.167	0.922
3	1.114	756.494	24.550	23.970	41.751	4.535	1.336	1.054
4	1.166	756.510	24.470	23.900	30.652	5.338	1.422	1.121
5	1.816	756.534	24.400	24.150	30.200	7.619	2.731	1.360

Slope (m): 1.28208
Intercept (b): -0.01449
Correlation coefficient (r): 0.99987
Uncertainty (k=2): 0.011 m³/min

End of Certificate of Calibration

Calibrated by:
☐ Mr. Sorawit Thachalad
☒ Miss Jiraporn Lertsomphol



Approved signatory:
Mr. Parinya Booncharoen
Calibration Department Manager



THIS CERTIFICATE REPORT MAY NOT BE REPRODUCED EXCEPT IN FULL UNLESS PERMISSION FOR REPRODUCTION IS GRANTED IN WRITING FROM THE LABORATORY

เอกสารไม่ควบคุม

เอกสารไม่ควบคุม

Certificate of Calibration

Customer
Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.
Address : 81 Soi Udomsak 41, Sukhumvit Road, Bangchak, Prakanong, Bangkok 10260

Certificate No : 23-AFM-204
Request No : Req-2023-1918

Unit Under Calibration Details

Measurement Item : Air Flow Meter
Manufacturer : BGI
Model : Delta Cal DC1
Serial Number : 160491
ID : UAE-EFM.175/2561
Sensor Model : -
Sensor Serial Number : -
Location of Calibration : LAB 4 AIR VELOCITY METER

Calibration Environment and Details

Temperature : 23 °C ± 3 °C
Humidity : 55 %RH ± 20 %RH
Barometric Pressure : 1013 hPa ± 10 hPa
Received Date : 7 September 2023
Calibration Date : 27 September 2023

Calibration Procedure : In-house method CP-AFM-01 by Comparison technique with Standard Primary Flow Calibrator


Reference Standard	Model	Serial Number	Traceable	Due Calibration
Air Flow Meter	Gilibrator 3 Standard flow	19031011003	Sensidyne	12 July 2024
Air Flow Meter	Gilibrator 3 High flow	18501012012	Sensidyne	12 July 2024
Temperature meter	GT 11	08000057	Orehorn	27 February 2024
Pressure meter	CPG2400	41006KDU/651882	TPA	7 November 2023


Traceability :

This Certificate is traceable to SI Unit through Sensidyne A2LA Accreditation No. 3943.01

Note :

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor $k=2$, providing a level of confidence approximately 95 %.

Calibration By : 
Mr. Noppadon Luangart
Service Calibration Engineer

Approved By : 
Mr. Pacit Mathavorn
Calibration Engineer Supervisor
Issue Date : 27 September 2023

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the **เอกสารไม่ควบคุม**
FM-708-AFM-01 Rev.00 Issue date 01/07/19

Certificate of Calibration

Customer
Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.
Address : 81 Soi Udomsak 41, Sukhumvit Road, Bangchak, Prakanong, Bangkok 10260

Certificate No : 23-TPM-460
Request No : Req-2023-1918
Page : 1/2

Unit Under Calibration Details

Calibration Parameter : Temperature
Instrument Name : Air Flow meter
Manufacturer : BGI
Model : Delta Cal DC1
Serial Number : 160491
Resolution : 0.1 °C
ID Number : UAE-EFM.175/2561
Range Calibration : 20 °C to 50 °C
Type of Sensor : RTD
Sensor Diameter (mm) : 3
Calibration Position (mm) : 45
Instrument Status : Used

Calibration Environment and Details

Temperature : 23 °C ± 3 °C
Humidity : 55 %RH ± 15 %RH
Received Date : 7 September 2023
Calibrated Date : 27 September 2023


Calibration Procedure : In-house method CP-TPM-01 by Comparison with Standard Thermometer.

Reference Standard : Digital Thermometer with Sensor, Manufacturer: GINGO/INGO, Model: GT11/RTD100, SN: 08000057, ID: 02-TPM Which was calibrated on 27 February 2023, Calibration Certificate No. : QR23-0494

Traceability : This Certificate is traceable to SI Unit through Quality Reborn Co., Ltd., NSC-ONSC Accreditation No.: Calibration 0292

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor $k=2$, providing a level of confidence approximately 95 %.

Approved By : 
Mr. Noppadon Luangart
Technical Manager
Issue Date : 27 September 2023

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the **เอกสารไม่ควบคุม**
FM-708-TPM-01 Rev.01 Issue date 13/02/20

Certificate No : 23-ATM-204

Request No : Req-2023-1918

Result of Calibration :

Temperature (°C)	Pressure (kPa)	STD (l/min)	UUC (l/min)	Error (l/min)	Uncertainty (l/min)
24.90	100.56	14.60	14.50	-0.10	0.20
24.90	100.56	15.08	15.00	-0.08	0.21
25.00	100.56	15.92	15.80	-0.12	0.22
24.90	100.58	16.81	16.67	-0.14	0.23
24.90	100.59	18.47	18.30	-0.17	0.26

Note : STD : Standard UUC : Unit Under Calibration
- UUC Reference Condition : At 25.0 °C, 101.3 kPa, Air
- Flow Rate was corrected for non-standard operating condition by using equation :

$$Q_{meas} = Q_{ref} \times \frac{P_{ref}}{P_{meas}} \times \frac{T_{meas}}{T_{ref}}$$

where Q = Flow Rate P = Absolute Pressure T = Absolute Temperature
Meas = Measurement Condition ref = Standard Condition

* Indicates non accredited

End of Certificate

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the **เอกสารไม่ควบคุม**
FM-708-AFM-01 Rev.00 Issue date 01/07/19

Calibration Note

UUC Adjustment : No Adjust

Certificate No : 23-TPM-460


Request No : Req-2023-1918

Page : 2/2

Result of Calibration :

UUC Sensor	Standard Temperature (°C)	UUC Reading (°C)	Correction (°C)	Uncertainty (±°C)
T _a	20.033	20.3	+0.3	0.13
	25.033	25.1	+0.1	0.13
	30.033	30.2	+0.2	0.13
	35.034	35.2	+0.2	0.13
	40.040	40.2	+0.2	0.13
	45.039	45.2	+0.2	0.13
T _T	50.043	50.2	+0.2	0.13
	20.033	19.9	+0.1	0.13
	25.033	24.9	+0.1	0.13
	30.033	30.0	0.0	0.13
	35.034	35.0	0.0	0.13
	40.040	39.9	+0.1	0.13
	45.039	45.0	0.0	0.13
	50.043	50.0	0.0	0.13

End of Certificate

Calibrated By : 
Mr. Simchok Jirapokdonsakul

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the **เอกสารไม่ควบคุม**
FM-708-TPM-01 Rev.01 Issue date 13/02/20



Certificate of Calibration

Certificate No.: 23P1857
Page: 1 of 2

Equipment: Aneroid Barometer

Manufacturer: Barigo

Model: -

Serial No.: -

ID No.: UAE/ANV.1512/2550

Condition As-Received: Used Item

Received Date: 26 May 2023

Calibration Date: 02 June 2023

Reference: 2305-0919WSC

Ambient Temperature: (23 ± 2) °C

Relative Humidity: (50 ± 15) %

Atmospheric Pressure: 1007 mbar

This certificate may not be reproduced other than in full,
except with the prior written approval of the head of
Corporate Services 3: Equipment Calibration and Testing Services.

Submitted by: United Analyst and Engineering Consultant Co.,Ltd.

81 Soi Udomsuk 41, Sukhumvit Road,
Bangchak, Phrakhanong, Bangkok 10260

Procedure used: The calibration was conducted by direct comparison method against Pressure Measuring Instruments Standard according to in-house calibration procedure CP-P10, using "DKD-R 6-1 : Calibration of Pressure Gauges, Edition 03/2014 " as a guidelines.

Condition of this result of calibration

1.Reference standards instruments :

Instrument	Model	Serial No.	Certificate No.	Due Date
1) Standard Barometer	DPI142	1422505046	MP-0094-23	03 May 2024

2.This instrument was installed in vertical orientation and center of the dial was used as the reference level.

3.This result of calibration was made on requested at the point specified by customer.

4.This result of calibration instrument was in absolute pressure.

5.This instrument was used clean air as pressure media.

6.The certificate is valid only to the item calibrated on date and place of calibration.

7.This Certification is traceable to the International System of Unit maintained through:-

-National Institute of Metrology Thailand (NIMT)

Calibrated by : Suksan Khankaew
Issue Date : 08 June 2023

Approved Signatory : *Attapol P.*
[] Phalinee Prabpaipal
[] Sura Suwanasari
[x] Attapol Panurach

เอกสารไม่ควบคุม
B 0316957



Result of calibration:- Without adjustment

Function:- Absolute Pressure Measurement

Range: 960 hPa to 1030 hPa

Scale Interval: 1 hPa (The Fifth Estimate)

Increasing Pressure

Applied Pressure (hPa)	960.27	971.66	982.37	994.32	1001.76	1010.97	1020.98	1030.52
UUC* Indication (hPa)	960.0	970.0	980.0	990.0	1000.0	1010.0	1020.0	1030.0
Error (hPa)	-0.27	-1.66	-2.37	-4.32	-1.76	-0.97	-0.98	-0.52

Decreasing Pressure

Applied Pressure (hPa)	1030.52	1021.07	1011.30	1001.83	992.38	982.43	971.77	960.50
UUC* Indication (hPa)	1030.0	1020.0	1010.0	1000.0	990.0	980.0	970.0	960.0
Error (hPa)	-0.52	-1.07	-1.30	-1.83	-2.38	-2.43	-1.77	-0.50

The uncertainty of measurement was ± 0.30 hPa

* UUC = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k = 2, providing a level of confidence of approximately 95 %.

-00-

Attapol P.
เอกสารไม่ควบคุม
a 1165501



Certificate of Calibration

Certificate No.: 23H1201
Page: 1 of 2

Equipment: Dial Thermo-Hygrometer

Manufacturer: Barigo

Model: -

Serial No.: -

ID No.: UAE/EMA2.014/2555

Condition As-Received: Used Item

Received Date: 26 May 2023

Calibration Date: 30 May 2023

Reference: 2305-0919WSC

Ambient Temperature: (25 ± 3) °C

Relative Humidity: (50 ± 20) %

This certificate may not be reproduced other than in full,
except with the prior written approval of the head of
Corporate Services 3: Equipment Calibration and Testing Services.

Submitted by: United Analyst and Engineering Consultant Co.,Ltd.

81 Soi Udomsuk 41, Sukhumvit Road,
Bangchak, Phrakhanong, Bangkok 10260

Procedure used: Calibration were conducted using in-house calibration procedure CP-H02 according to comparison with standard chilled mirror sensor for humidity measurement function and comparison with standard temperature probe for temperature measurement function into humidity / temperature chamber.

Condition of this result of calibration

1.Reference standards instruments :

Instrument	Model	Serial No.	Certificate No.	Due Date
1) Hygro-M2 Dew Point Monitor	5112	2360195	20703	02 Aug 2023
2) Handheld Thermometer With Sensor	1523	3240076	231305	15 Mar 2024

2.The certificate is valid only to the item calibrated on date and place of calibration.

3.This Certification is traceable to the International System of Unit maintained through:-

-National Institute of Standards and Technology (NIST) , The United States of America

-Technology Promotion Association (Thailand-Japan), NSO-ONSC Accredited No. Calibration 0008

Calibrated by : Somchai Durmwor
Issue Date : 07 June 2023

Approved Signatory : *Chakrit Waeewanjua*
[x] Chakrit Waeewanjua
[] Pornthippa Tameyskul
[] Viporn Tantiyawutti

เอกสารไม่ควบคุม
B 0316275



Result of Calibration:-

Function: Humidity Measurement

Before Adjustment

Reference Temperature (°C)	Standard Humidity (%R.H.)	UUC* Reading (%R.H.)	Error (%R.H.)	Uncertainty of Measurement (±%R.H.)
25.0	40.1	55	14.9	1.6
25.0	60.0	66	6.0	1.7
25.0	80.0	78	-2.0	1.9

Result of Calibration:-

Function: Humidity Measurement

After Adjustment

Reference Temperature (°C)	Standard Humidity (%R.H.)	UUC* Reading (%R.H.)	Error (%R.H.)	Uncertainty of Measurement (±%R.H.)
25.0	40.1	46	5.9	1.6
25.0	60.0	60	0.0	1.7
25.0	80.0	72	-8.0	1.9

Result of Calibration:-

Function: Temperature Measurement

Without Adjustment

Standard Temperature (°C)	UUC* Reading (°C)	Error (°C)	Uncertainty of Measurement (±°C)
19.987	20.0	0.013	0.72
30.016	30.0	-0.016	0.72
39.944	39.0	-0.944	0.72

UUC* : Unit Under Calibration

The reported uncertainty of measurement was base on standard uncertainty multiplied by coverage factor k = 2.00, providing confidence level approximately 95%.

-00-

เอกสารไม่ควบคุม
a 1165294

MULTI-POINT GAS TEST REPORT


Test Date : Nov 1, 2023

Equipment : Gas Analyzer (NO₂) Model : 42C
Manufacturer : Thermo Environmental Instruments Serial Number : 42C- 67174-356

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo Scientific
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 21, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.5	0.50	0.50	0.50
Level 2	20.00%	100.0	100.7	0.70	0.70	0.70
Level 3	40.00%	200.0	200.5	0.50	0.25	0.25
Level 4	60.00%	300.0	300.9	0.90	0.30	0.30
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.35

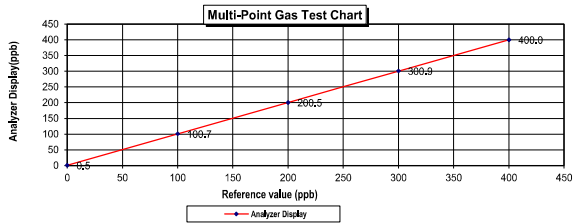

Calculate by
01 Nov 2023

Approve by
1 Nov 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 13, 2023

Equipment : Gas Analyzer (NO₂) Model : 42C
Manufacturer : Thermo Environmental Instruments Serial Number : 42C-78933-390

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo Scientific
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 21, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.7	0.70	0.70	0.70
Level 2	20.00%	100.0	100.9	0.90	0.89	0.89
Level 3	40.00%	200.0	200.8	0.80	0.40	0.40
Level 4	60.00%	300.0	300.7	0.70	0.23	0.23
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.44

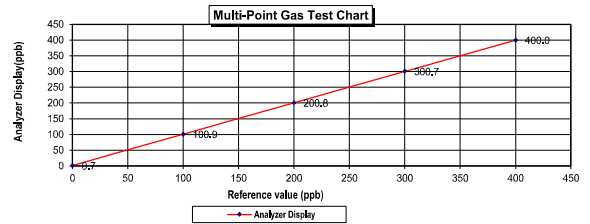

Calculate by
13 Nov 2023

Approve by
13 Nov 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 13, 2023

Equipment : Gas Analyzer (NO₂) Model : 42i
Manufacturer : Thermo Scientific Serial Number : 1182920005

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo Scientific
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 21, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.7	0.70	0.70	0.70
Level 2	20.00%	100.0	100.9	0.90	0.89	0.89
Level 3	40.00%	200.0	200.5	0.50	0.25	0.25
Level 4	60.00%	300.0	300.7	0.70	0.23	0.23
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.41

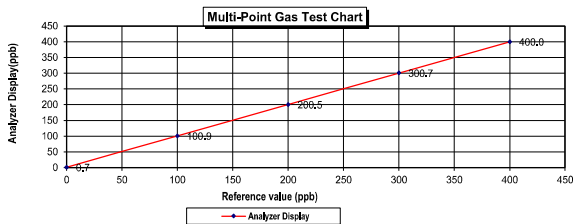

Calculate by
13 Nov 2023

Approve by
13 Nov 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 1, 2023

Equipment : Gas Analyzer (NO₂) Model : 42i
Manufacturer : Thermo Scientific Serial Number : 1182920006

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo Scientific
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 21, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.8	0.80	0.80	0.80
Level 2	20.00%	100.0	101.1	1.10	1.09	1.09
Level 3	40.00%	200.0	200.7	0.70	0.35	0.35
Level 4	60.00%	300.0	300.7	0.70	0.23	0.23
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.49

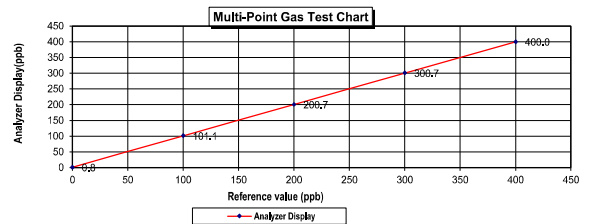

Calculate by
01 Nov 2023

Approve by
01 Nov 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 9, 2023

Equipment : Gas Analyzer (SO₂) Model : 43i
Manufacturer : Thermo SCIENTIFIC Serial Number : 1182920015

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo SCIENTIFIC
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 24, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.7	0.70	0.70	0.70
Level 2	20.00%	100.0	100.6	0.60	0.60	0.60
Level 3	40.00%	200.0	200.9	0.90	0.45	0.45
Level 4	60.00%	300.0	300.8	0.80	0.27	0.27
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.40

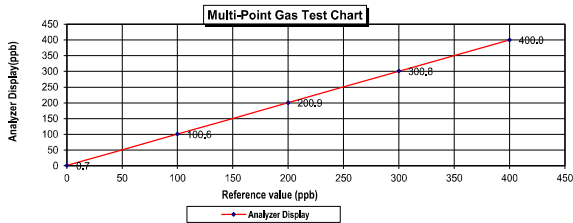

Calculate by

Approve by

9 / 11 / 66

9 / Nov / 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 3, 2023

Equipment : Gas Analyzer (SO₂) Model : 43i
Manufacturer : Thermo SCIENTIFIC Serial Number : 1182920016

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo SCIENTIFIC
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 24, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.7	0.70	0.70	0.70
Level 2	20.00%	100.0	100.9	0.90	0.89	0.89
Level 3	40.00%	200.0	200.8	0.80	0.40	0.40
Level 4	60.00%	300.0	300.7	0.70	0.23	0.23
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.44

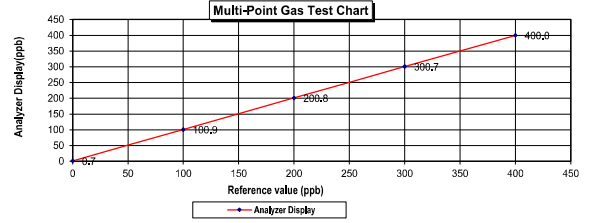

Calculate by

Approve by

03 / Nov / 2023

03 / Nov / 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 3, 2023

Equipment : Gas Analyzer (SO₂) Model : 43i
Manufacturer : Thermo SCIENTIFIC Serial Number : 1180540065

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo SCIENTIFIC
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 24, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.7	0.70	0.70	0.70
Level 2	20.00%	100.0	100.9	0.90	0.89	0.89
Level 3	40.00%	200.0	200.5	0.50	0.25	0.25
Level 4	60.00%	300.0	300.7	0.70	0.23	0.23
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.41

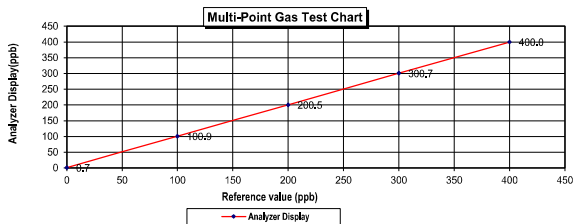

Calculate by

Approve by

03 / Nov / 2023

03 / Nov / 2023

MULTI-POINT GAS TEST REPORT


Test Date : Nov 3, 2023

Equipment : Gas Analyzer (SO₂) Model : 43i
Manufacturer : Thermo SCIENTIFIC Serial Number : CM22387066

Standard Gas Concentration			Dilutor Detail	
Sulphur Dioxide (SO ₂)	44.68	PPM	Manufacturer :	Thermo SCIENTIFIC
Nitric Oxide (NO)	45.94	PPM	Model :	146i
Methane (CH ₄)	-	PPM	Serial Number :	1180540071
Carbon Monoxide (CO)	984.8			
Cylinder No. :	EB0143262			
Expiration Date :	Jun 24, 2024			

Multi-point gas test data

Reference Value (ppb)			Analyzer Display (ppb)	Difference Error	Percent Error	[% Error]
Level 1	Zero	0.0	0.5	0.50	0.50	0.50
Level 2	20.00%	100.0	100.7	0.70	0.70	0.70
Level 3	40.00%	200.0	200.9	0.90	0.45	0.45
Level 4	60.00%	300.0	300.7	0.70	0.23	0.23
Level 5	80.00%	400.0	400.0	0.00	0.00	0.00
Remark : Measuring Range			500.0 ppb	Average Difference (%)		0.38

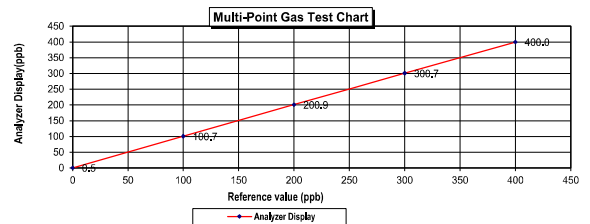

Calculate by

Approve by

03 / Nov / 2023

03 / Nov / 2023

CERTIFICATE OF ANALYSIS

Grade of Product: EPA Protocol

Part Number: ED4N00E-5A0105 Reference Number: 122-402135167-1
Cylinder Number: EB0143262 Cylinder Volume: 144.4 CF
Laboratory: 124 - Durham (SAF) - NC Cylinder Pressure: 2015 PSIG
PGVP Number: B2202 Valve Outlet: S60
Gas Code: CO,NO,NOX,SC2,BALN Certification Date: Jun 21, 2021
Expiration Date: Jun 21, 2024

Analysis performed in accordance with EPA Testability Protocol for Analysis and Certification of Gaseous Air Samples (May 2012) approved EPA GCR-1658-1. During the assay process, analytical methodology does not require cylinder for analytical verification. The cylinder has a special designed separator to deliver sample at a constant level of 40% There are no significant impurities which affect the use of this calibration certificate. All concentrations are in mole fractions unless otherwise noted.
Do Not Use This Certificate below 0.01% impurity, i.e. 0.01% impurity.

Component	Requested Concentration	Actual Concentration	Protocol Method	Total Relative Uncertainty	Assay Dates
NOX	45.00 PPM	45.96 PPM	G1	+/- 1.4% NIST Traceable	08/14/2021, 08/21/2021
NITRIC OXIDE	45.00 PPM	45.96 PPM	G1	+/- 1.4% NIST Traceable	08/14/2021, 08/21/2021
SULFUR DIOXIDE	45.00 PPM	44.58 PPM	G1	+/- 1.5% NIST Traceable	08/14/2021, 08/21/2021
CARBON MONOXIDE	1000 PPM	984.9 PPM	G1	+/- 0.7% NIST Traceable	08/14/2021
NITROGEN Balance					

Type	Lot ID	Cylinder No	Concentration	Uncertainty	Expiration Date
NTRM	2051110	CC7M308	49.35 PPM NITRIC OXIDE/NITROGEN	+/- 1.3%	Feb 02, 2025
PRM	7386	CE65055	9.91 PPM NITROGEN DIOXIDE/AIR	+/- 2.3%	Feb 20, 2020
GMS	00142362102	CC65051	4.343 PPM NITROGEN DIOXIDE/NITROGEN	+/- 2.1	Feb 08, 2023
NTRM	10011043	CC473277	45.02 PPM SULFUR DIOXIDE/NITROGEN	+/- 0.8%	Jun 17, 2022
NTRM	14038118	CC454277	350.9 PPM CARBON MONOXIDE/NITROGEN	+/- 0.6%	Nov 16, 2025

Instrument/Make/Model	Analytical Principle	Last Multipoint Calibration
N Code: 9700 AHR800-533 CO	FTIR	Jun 03, 2021
N Code: 9700 AHR800-533 NO	FTIR	Jun 03, 2021
N Code: 9700 AHR800-533 NO2	FTIR	Jun 03, 2021
N Code: 9700 AHR800-533 SO2	FTIR	Jun 03, 2021

Test Data Available Upon Request

NOTES: PO #522-007407
GROSS WT: 23.40kg
NET WT: 4.72kg



The analytical test results reported on this certificate relate only to the cylinder number specified above. This concludes the test report.

Approved for Release



เอกสารไม่ควบคุม



THAI METEOROLOGICAL DEPARTMENT

4353 Sukhumvit, Bangna, Bangkok 10260 Tel. 081-454-2804, 0-2399-0469

Calibration Certificate

Issued by: Calibration & Test Section: Meteorological Instruments Bureau

Date of Issue: 22 February, 2024

Certification No. 099/24

Page: 1 of 5

Object: Wind Speed & Wind Direction Data Logger

Manufacturer: SCARLET/TECH

Type: WL-21

Mfg Code: Wireless Receiver 2205DR0114

Wind Sensor 2205DT0114

Customer: United Analyst and Engineering Consultant Co., Ltd.

81 Soi Udomsuk 41, Sukhumvit Road,
Bangchak, Prakanong, Bangkok 10260.

Calibration Condition: Temperature 25.1 °C Barometric Pressure 1009.1 hPa

NATIONAL STANDARD WIND TUNNEL: Wind Afloat Plotting Board

Micromanometer Theodor Friedrichs FC014 Serial No. 9310119: HOOK GAGE NO 1425

N.I.S.T. Test Reference Number 731/241460: Standard Velocity at 20 - 30 m/sec

Ultrasonic Anemometer Model DA-650-3TV (sensor TR-90AH)
Serial Number 110730029 (sensor 120629586)

JAPAN QUALITY ASSURANCE ORGANIZATION: Standard Velocity at 0 - 20 m/sec

STANDARD THERMOMETER: Theodor Friedrich: Dry No.8390/94 Wet No. 8389/94

Tests, tests 645 Serial No. 02648057: Thermoschneider No.918802

STANDARD BAROMETER: Digital Barometer Vaisala Type PTB220.No. V1220015

Digital Barometer Vaisala Type PTB330 No. V14320001

Calibrated by: Hathaporn

Signed: Mr. Ploed Promsat

(Authorized Signatory)

Mr. Watcharapol Subwat

Mr. Ploed Promsat

for the Chief

Mechanical Engineer

Sub-Standard Instrument

เอกสารไม่ควบคุม



THAI METEOROLOGICAL DEPARTMENT

4353 Sukhumvit, Bangna, Bangkok 10260 Tel. 081-454-2804, 0-2399-0469

The Result of Calibration

22 February, 2024

Certification No. 099/24

Page: 3 of 5

Standard Barometer	Tested Barometer	Correction
Pressure	Pressure	mmbar
1010.84	1011	-0.16
1010.60	1011	-0.40
1011.71	1012	-0.29
1012.17	1012	0.17
1012.31	1012	0.31
1012.25	1012	0.25
1012.79	1013	-0.21
1012.95	1013	-0.05
1013.52	1014	-0.48
1014.16	1014	0.16
1015.79	1016	-0.21
1016.02	1016	0.02
1015.86	1016	-0.14
1015.69	1016	-0.31
1011.51	1011	0.51
1011.80	1012	-0.20
1012.06	1012	0.06
1012.81	1013	-0.19
1013.22	1013	0.22
1013.49	1013	0.49
Average		-0.02

Calibrated by: Hathaporn

Mr. Watcharapol Subwat

Mechanical Engineer

Calibration & Test Section

Meteorological Instruments Bureau

เอกสารไม่ควบคุม



THAI METEOROLOGICAL DEPARTMENT

4353 Sukhumvit, Bangna, Bangkok 10260 Tel. 081-454-2804, 0-2399-0469

The Result of Calibration

22 February, 2024

Certification No. 099/24

Page: 2 of 5

Standard	HOOK GAGE NO. 1425			TESTED ANEMOMETER	
Ultrasonic Anemometer	Pressure	Vacuum	Velocity	Velocity	Correction
m/sec	inches H2O	inches H2O	m/sec	m/sec	m/sec
1.00	-	-	-	1.0	0.00
3.02	-	-	-	3.0	0.02
5.00	-	-	-	5.0	0.00
7.04	-	-	-	7.0	0.04
9.02	-	-	-	9.0	0.02
11.02	-	-	-	11.0	0.02
13.01	-	-	-	13.0	0.01
15.01	-	-	-	15.0	0.01
17.02	-	-	-	17.0	0.02
20.02	-	-	-	20.0	0.02

Wind Afloat Plotting Board.	
US. DEPARTMENT OF COMMERCE WEATHER BUREAU	
WIND DIRECTION	TESTED WIND DIRECTION
0	0
90	90
180	180
270	270

Calibrated by: Hathaporn
Mr. Watcharapol Subwat
Mechanical Engineer

Calibration & Test Section
Meteorological Instruments Bureau

เอกสารไม่ควบคุม



The Result of Calibration

Certification No. 099/24

22 February, 2024

Page : 4 of 5

Standard Barometer	Tested Barometer	Correction
Pressure	Pressure	mmHg
758.19	758	0.19
758.01	758	0.01
758.84	759	-0.16
759.19	759	0.19
759.29	759	0.29
759.25	759	0.25
759.65	760	-0.35
759.77	760	-0.23
760.20	760	0.20
760.68	761	-0.32
761.90	762	-0.10
762.08	762	0.08
761.96	762	-0.04
761.83	762	-0.17
758.69	758	0.69
758.91	759	-0.09
759.11	759	0.11
759.67	760	-0.33
759.98	760	-0.02
760.16	760	0.16

Average

0.02

Calibrated by :

Mr. Watchanop Subwat

Mechanical Engineer



เอกสารไม่ควบคุม



The Result of Calibration

Certification No. 099/24

22 February, 2024

Page : 5 of 5

Standard Temp. °C	Temperature Sensor Reading	
	Reading °C	Correction °C
45.2	45	0.2
30.3	31	-0.7
15.8	16	-0.2

Calibrated by :

Mr. Watchanop Subwat

Mechanical Engineer



เอกสารไม่ควบคุม

INNOVATIVE INSTRUMENT CALIBRATION LAB
INNOVATIVE INSTRUMENT CO., LTD. HEAD OFFICE
7/19 MOO 13, SOI SUTINAKORN 11 TAMBON BANG KHAO,
AMPHOE BANG PHU SAMUT PRAKAN PROVINCE 10540 THAILAND
TEL: 0609-2116-5809-1 FAX: 0609-2116-7140



Page 1 of 2

Certificate of Calibration

Customer

Name : UNITED ANALYST AND ENGINEERING
CONSULTANT CO.,LTD.
Address : 81 Soi Udomsuk 41, Sukhumvit Road, Bangchak,
Prakanong, Bangkok 10260

Certificate No : 23-ACT-109
Request No : Req-2023-1406

Unit Under Calibration Details

Measurement item : Acoustic Calibrator
Manufacturer : 01dB
Model : CAL31
Serial Number : 82795
ID : UAE.EPM.113/2560

Class : I
Range : 94 dB / 1000 Hz
Instrument Status : Used

Calibration Environment and Details

Temperature : (23 ± 2 °C)
Humidity : (50 ± 20 %RH)
Barometric Pressure : (1013 ± 10.0 hPa)
Received Date : 26 June 2023
Calibration Date : 27 June 2023
Location of Calibration : LAB 1 Acoustic
Calibration Procedure : In-house method CP-ACT-02 based on IEC 60942:2017 Electroacoustics - Sound calibrators

Reference Standard	Model	Serial Number	Traceable	Due Calibration
Sound Calibrator	SV 35A	58079	EEL	31 May 2024
THD Multimeter	2015	1047765	NIMT	31 January 2024

Traceability : This certificate provides traceability of measurement to recognized national standard, and to the realization of the international System of Units (SI).

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor k=2, providing a level of confidence approximately 95 %.

Calibrated By :

Mr. Noppadon Luangart
Service Calibration Engineer

Approved By :

Mr. Pacit Mathavorn
Calibration Engineer Supervisor

Issue Date : 27 June 2023

INNOVATIVE INSTRUMENT CALIBRATION LAB
INNOVATIVE INSTRUMENT CO., LTD. HEAD OFFICE
7/19 MOO 13, SOI SUTINAKORN 11 TAMBON BANG KHAO,
AMPHOE BANG PHU SAMUT PRAKAN PROVINCE 10540 THAILAND
TEL: 0609-2116-5809-1 FAX: 0609-2116-7140



Page 2 of 2

Certificate No : 23-ACT-109
Request No : Req-2023-1406

Sound pressure level

Calibration Results : Without Adjustment

Calibration Range (dB)	Without Adjustment (dB)		Adjustment (dB)		Uncertainty (± dB)	Acceptance limit Class 1 (± dB)
	Measured	Error	Measured	Error		
94 dB / 1000 Hz	94.11	0.11	-	-	0.13	0.25

Frequency of Sound pressure level

Calibration Range (Hz)	Without Adjustment		Adjustment		Uncertainty (± %)	Acceptance limit Class 1 (± %)
	Measured (Hz)	Error (%)	Measured (Hz)	Error (%)		
94 dB / 1000 Hz	1000.00	0.00	-	-	0.01	0.70

Total Harmonic Distortion plus Noise of Sound pressure level (THD+N %)

Calibration Range (Hz)	Without Adjustment	Adjustment	Uncertainty (± %)	Acceptance limit Class 1 (± %)
	Measured (%)	Measured (%)		
94 dB / 1000 Hz	0.08	-	0.40	2.5

Note :

- Acceptance limit was IEC60942:2017 Class 1
- The calibration results exclude the calibrator pressure correction
- The calibration results exclude the microphone volume correction

End of Calibration

Calibration Certificate

Equipment : SOUND LEVEL METER
Manufacturer : RION
Model : NL-62 / Microphone UC-59L / Preamplifier NH-26
Serial No.: 00130355 / 02734 / 00389
ID No.: UAE.EMA2.102/2556

Condition As Found : GOOD

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT (UAE)
81 SOI UDOMSUK 41, SUKHUMVIT ROAD,
BANGCHAK SUB-DISTRICT,
PHRAKHANONG DISTRICT, BANGKOK 10260
THAILAND.

Location : -
Ambient Temperature : (23.0 ± 3) °C
Pressure : (101.3 ± 3) kPa
Relative Humidity : (50.0 ± 20) %

Received Date : 21 JUNE 2023
Calibration Date : 26-27 JUNE 2023
Date of Issue : 28 JUNE 2023

Calibrated by : Nathakorn Pisutpaisan

Approved by :


(Thanakul Petchurai)

This certificate is issued in accordance with the requirements of ISO/IEC 17025 standard, may not be reproduced other than in full, except with the prior written approval of the head of Calibration Laboratory.

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

Continuation of Calibration Certificate

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 3 of 8

Summary of Measurement Result :

Parameter	Pass	Fail	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1. Absolute sensitivity	✓	-	0.2	N/A
2. Self-generated noise	✓	-	0.4	N/A
3. Acoustical signal tests of frequency weightings				
125 Hz	✓	-	0.3	0.6
1000 Hz	✓	-	0.3	0.6
8000 Hz	✓	-	0.3	0.7
4. Electrical signal tests of frequency weightings				
For 10 Hz to 4 kHz	✓	-	0.3	0.6
For > 4 kHz to 10 kHz	✓	-	0.3	0.7
For > 10 kHz to 20 kHz	✓	-	0.3	1.0
5. Frequency and time weightings at 1 kHz	✓	-	0.2	0.2
6. Long-term stability	✓	-	0.1	0.1
7. Level linearity on the reference level range	✓	-	0.2	0.3
8. Level linearity including the level range control	✓	-	0.2	0.3
9. Tone burst response	✓	-	0.2	0.3
10. Peak C sound level	✓	-	0.2	0.35
11. Overload indication	✓	-	0.2	0.25
12. High level stability	✓	-	0.1	0.1

Note : Pass/Fail evaluation for each parameter, will be considered together from the acceptance limit and the Maximum-permitted uncertainty of measurement.

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

Continuation of Calibration Certificate

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 2 of 8

Calibration Procedure : CP-AC-01

Calibration Method :

This equipment was calibrated by based on IEC-61672-3 (2013) Standard for sound level meter (SLM). The SLM had tests to Acoustical and Electrical signal tests of frequency weighting with Anechoic chamber and Reference Standard Instruments.

For tests results of each items were made by observation of each Instruments display and also with SLM's display.

Condition of this result of calibration :

1. Reference Standard Instruments :

Instrument	Model	Serial No.	Cert. No.	Due Date
Waveform Generator	33210A	MY48017076	EF-0009-23	07-FEB-24
Waveform Generator	33511B	MY52302742	EF-0010-23	07-FEB-24
Digital Multimeter	33461A	MY53220104	EEL_BP 30/0266	13-FEB-24
Digital Multimeter	33461A	MY53220076	EEL_BP 29/0266	13-FEB-24
Digital Multimeter	34461A	MY60024273	EEL_BP 31/0266	14-FEB-24
Programmable Attenuator	MAT-1070	62100114	EF-0011-23	08-FEB-24
Condenser Microphone	4180	2977900	AA-1001-23	14-FEB-24
Measuring Amplifier	NA-42KAI	34560495	AA-3002-23	14-FEB-24

2. This result of calibration was found accurate as shown on date and place of calibration for this calibrated item only.

3. This certificate is traceable to the international system of unit maintained at :

- 3.1 National Institute of Metrology (Thailand).
3.2 Thailand Institute of Scientific and Technological Research (TISTR).

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

Continuation of Calibration Certificate

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 4 of 8

Result of calibration :

1. Absolute sensitivity

Reference Acoustic Signal (dB)	Measured Value (dB)	Deviation (dB)	Acceptance Limit (dB)
93.9 (93.98)	94.0	0.0	±0.3

2. Self-generated noise

2.1 Normal test

Measured Value (dB)
15.4

2.2 The microphone of the sound level meter was replaced by electrical signal input device.

Frequency	Measured value (dB)
A-weighting	11.0
C-weighting	15.7
Flat	24.8

3. Acoustical signal tests of frequency weightings

Meter free-field acoustic response at a level of 84 dB

Frequency (Hz)	Flat	C-weight	A-weight	Acceptance Limits
125	0.1	0.1	0.1	± 1.0
1000	-0.1	-0.1	-0.1	± 0.7
8000	-0.7	-0.6	-0.6	+ 1.5, - 2.5

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 5 of 8

4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
63	0.1	0.0	0.0	±1.0
125	0.0	0.1	0.1	±1.0
250	0.0	0.0	0.0	±1.0
500	0.0	0.1	0.0	±1.0
1000	0.0	0.0	0.0	±1.0
2000	0.0	0.0	0.0	±1.0
4000	0.0	0.0	0.0	±1.0
8000	0.0	0.1	0.1	+ 1.5, - 2.5
16000	0.0	-1.2	-1.2	+ 2.5, -16.0

5. Frequency and time weightings at 1 kHz

5.1 Frequency weightings at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.2
C - weight	94.0	94.0	0.0	± 0.2
Flat	94.0	94.0	0.0	± 0.2

5.2 Time weighting at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	94.0	94.0	0.0	± 0.1
Slow	94.0	94.0	0.0	± 0.1
Leq	94.0	94.0	0.0	± 0.1

6. Long - term stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.1	0.1	± 0.1

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch.

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 7 of 8

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±0.8

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.0 ; -3.0
	2	8	117.0	117.0	0.0	1.0 ; -1.5
	200	800	134.0	134.0	0.0	±0.5
Slow	2	8	108.0	108.0	0.0	1.0 ; -3.0
	200	800	127.6	127.6	0.0	±0.5
SEL	0.25	1	99.0	98.8	-0.2	1.0 ; -3.0
	2	8	108.0	108.0	0.0	1.0 ; -1.5
	200	800	128.0	128.0	0.0	±0.5

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, Lcpeak (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±2.0
One	136.4	135.7	-0.7	±2.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±1.0
Positive half cycle	135.4	135.2	-0.2	±1.0
Negative half cycle	135.4	135.1	-0.3	±1.0

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch.

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 6 of 8

7. Level linearity on the reference level range

Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
137.0	137.1	0.1	±0.8
136.0	136.1	0.1	±0.8
135.0	135.1	0.1	±0.8
134.0	134.1	0.1	±0.8
133.0	133.1	0.1	±0.8
132.0	132.1	0.1	±0.8
131.0	131.1	0.1	±0.8
129.0	129.1	0.1	±0.8
124.0	124.0	0.0	±0.8
119.0	119.0	0.0	±0.8
114.0	114.0	0.0	±0.8
109.0	109.0	0.0	±0.8
104.0	104.0	0.0	±0.8
99.0	99.0	0.0	±0.8
94.0	94.0	0.0	±0.8
89.0	89.0	0.0	±0.8
84.0	84.0	0.0	±0.8
79.0	79.0	0.0	±0.8
74.0	74.0	0.0	±0.8
69.0	69.0	0.0	±0.8
64.0	64.0	0.0	±0.8
59.0	59.0	0.0	±0.8
54.0	53.9	-0.1	±0.8
49.0	49.0	0.0	±0.8
44.0	44.0	0.0	±0.8
39.0	38.9	-0.1	±0.8
34.0	33.9	-0.1	±0.8
30.0	29.9	-0.1	±0.8
29.0	28.9	-0.1	±0.8
28.0	28.0	0.0	±0.8
27.0	26.9	-0.1	±0.8
26.0	25.9	-0.1	±0.8
25.0	25.0	0.0	±0.8

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch.

Cert. No. : ACL23199
Job No. : VC66AC0067
Pages : 8 of 8

11. Overload indication

Measured value (dB)		Deviated Value (dB)	Acceptance Limits (dB)
Positive one-half cycle	Negative one-half cycle		
89.5	89.6	0.1	±1.5

12. High level stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	137.0	137.0	0.0	±0.1

The reported uncertainty is based on a standard uncertainty multiplied by coverage factor $k = 2$
or any value following calculation, providing a level of confidence of approximately 95 %

End of Calibration Certificate

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch.



Certificate No.: CP20230290EA
Operation No.: CP2023070044

Certificate of Calibration

Equipment: Sound Level Meter
Manufacturer: RION
Model/Type: NL-62 (Meter), UC-59L (Microphone), NH-26 (Preamplifier)
Serial No.: 00130356 (Meter), 01891 (Microphone), 00951 (Preamplifier)
ID No.: UAE.EMA2.103/2556
Customer: United Analyst and Engineering Consultant Co.,Ltd.
Address: 81 Soi Udomsuk 41, Sukhumvit Road, Bangchak
Phrakhanong, Bangkok 10260
Received Date: 24 July 2023
Calibrated Date: 3 - 4 August 2023
Issued Date: 7 August 2023
Calibrated by: Ms. Juntaporn Kunhakom

Approved by:
(Mr. Sittichai Swaksuriyawong)
Group Manager

This report was prepared electronically using applicable electronic signature. Printing or copy of file are considered as a copy of the document.
The reported uncertainty of measurement was based on standard uncertainty multiplied by a coverage factor (k) providing a level of confidence of approximately 95%. This certificate may not be reproduced other than in full except with the prior written approval of the Electrical and Electronics Institute, Foundation for Industrial Development.

Page 1 of 6

เอกสารไม่ควบคุม



Certificate No.: CP20230290EA

Calibration Report

Equipment: Sound Level Meter
Manufacturer: RION
Model/Type: NL-62 (Meter), UC-59L (Microphone), NH-26 (Preamplifier)
Serial No.: 00130356 (Meter), 01891 (Microphone), 00951 (Preamplifier)
ID No.: UAE.EMA2.103/2556
Ambient Temperature: (23 ± 2) °C
Relative Humidity: (50 ± 15) %
Pressure: (101.3 ± 1.5) kPa
Method of Calibration :-
IEC 61672-3:2013.
Condition of this result of calibration

1. Reference standards instrument :-

Instrument	Model	Serial No.	Cert. No.	Due Date
1) Standard microphone	4180	2787490	AA-1024-22	6 November 2023
2) Arbitrary Function Generator	AFG2021	C010063	CK20230040EA	26 June 2024
3) Programmable Attenuator	PA5	2755	EF-0034-22	30 October 2023
4) 6.5 Digit precision multimeter	8846A	9610014	CB20220223EA	14 November 2023
5) Pressure humidity and Temperature Transmitter	PTU301	F0640002	CL1-P230024 CD20230196EA	20 March 2024 23 July 2024
6) Pressure humidity and Temperature Transmitter	PTU301	F0640003	CL1-P230032 CD20230197EA	4 April 2024 23 July 2024
7) Performance Audio Analyzer	U8903B	MY56510003	CB20230038EA CK20220080EA	14 February 2024 8 September 2023

2. This result of calibration was found accurate as shown on date and place of calibration only.

3. This certification is traceable to the international system of unit maintained at :-

Reference standards instrument for Acoustic function

- National Institute of Metrology (Thailand)

Reference standards instrument for Electrical function

- National Institute of Metrology (Thailand)

- Electrical and Electronics Institute; NSC Accredited Calibration No.0119

Result of Calibration:

Function : 1. Indication at the calibration check frequency

Reference Acoustic Signal (dB)	Measured value (dB)	Deviation (dB)	Acceptance limits (dB)
94.0	94.0	0.0	±0.7

Note : Absolute sensitivity was established by the use of the Sound Calibrator RION Type NC-74 S/N : 34615278.

Page 2 of 6

เอกสารไม่ควบคุม



Certificate No.: CP20230290EA

Calibration Report

Function : 2. Self-generated Noise

2.1 Microphone Installed

Measured value (dB)
16.3

2.2 Microphone replaced by the electrical input signal device

Frequency Weighting	Measured value (dB)
A-weighting	11.3
C-weighting	16.5
Z-weighting	25.1

Function : 3. Acoustical signal tests of frequency weightings (Without Windscreens)

Meter free-field acoustic response at a level of 84 dB.

Frequency (Hz)	Deviation from various Frequency Weighting Response Curve			
	C-Weighting (dB)	A-Weighting (dB)	Z-Weighting (dB)	Acceptance limits (dB)
125	0.0	-0.1	0.0	±1.0
1000	0.1	0.1	0.1	±0.7
8000	-0.2	-0.2	-0.3	+1.5; -2.5

Function : 4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various Frequency Weighting Response Curve			
	C-Weighting (dB)	A-Weighting (dB)	Z-Weighting (dB)	Acceptance limits (dB)
63	-0.2	-0.1	0.0	±1.0
125	0.0	-0.1	0.0	±1.0
250	0.0	-0.1	-0.1	±1.0
500	0.0	0.0	0.0	±1.0
1000	0.0	0.0	0.0	±0.7
2000	0.1	0.0	0.0	±1.0
4000	0.0	0.0	0.0	±1.0
8000	0.1	0.0	-0.1	+1.5; -2.5
16000	-1.4	-1.4	0.0	+2.5; -16.0

Page 3 of 6

เอกสารไม่ควบคุม



Certificate No.: CP20230290EA

Calibration Report

Function : 5. Frequency and time weighting at 1 kHz

5.1 Frequency weighting at 1 kHz

Frequency Weighting	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
C-weighting	94.0	0.0	±0.2
A-weighting	94.0	0.0	±0.2
Z-weighting	94.0	0.0	±0.2

5.2 Time weighting at 1 kHz

Time Weighting	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
Fast	94.0	0.0	±0.1
Slow	94.0	0.0	±0.1
L.Aeq	94.0	0.0	±0.1

Function : 6. Long-Term Stability

Long-term stability over 30 minutes, with steady 1 kHz signal at reference level.

Time Period to Apply Signal (min)	Reference SPL (dB)	Record SPL at Conclusion of Time Period (dB)	Deviated value (dB)	Acceptance limits (dB)
30	94.0	94.0	0.0	±0.1

Function : 7. Level Linearity on the reference level range

7.1 Level Linearity on the reference level range, Upper

Anticipated Value (dB)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
94.0	94.0	0.0	±0.8
99.0	99.0	0.0	±0.8
104.0	104.0	0.0	±0.8
109.0	109.0	0.0	±0.8
114.0	114.0	0.0	±0.8
119.0	119.0	0.0	±0.8
124.0	124.0	0.0	±0.8
129.0	129.0	0.0	±0.8
130.0	130.0	0.0	±0.8
131.0	131.0	0.0	±0.8
132.0	132.0	0.0	±0.8
133.0	133.0	0.0	±0.8
134.0	134.0	0.0	±0.8
135.0	135.0	0.0	±0.8
136.0	136.0	0.0	±0.8
137.0	137.0	0.0	±0.8

Page 4 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230290EA

Calibration Report

7.2 Level Linearity on the reference level range, Lower:

Anticipated Value (dB)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
94.0	94.0	0.0	±0.8
89.0	89.0	0.0	±0.8
84.0	84.0	0.0	±0.8
79.0	79.0	0.0	±0.8
74.0	74.0	0.0	±0.8
69.0	69.0	0.0	±0.8
64.0	64.0	0.0	±0.8
59.0	59.0	0.0	±0.8
54.0	54.0	0.0	±0.8
49.0	49.0	0.0	±0.8
44.0	44.0	0.0	±0.8
39.0	39.0	0.0	±0.8
34.0	33.9	-0.1	±0.8
29.0	28.9	-0.1	±0.8

Function : 8. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
Fast	200	126.0	0.0	±0.5
	2	109.0	0.0	+1.0 ; -1.5
	0.25	99.9	-0.1	+1.0 ; -3.0
Slow	200	119.6	0.0	±0.5
	2	100.0	0.0	+1.0 ; -3.0
	0.25	90.9	-0.1	+1.0 ; -3.0
LAE	200	120.0	0.0	±0.5
	2	100.0	0.0	+1.0 ; -1.5
	0.25	90.9	-0.1	+1.0 ; -3.0

Function : 9. Peak C sound level

Number of cycles in test signal	Anticipated Value (dB)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
Complete cycle	125.4	125.2	-0.2	±2.0
Positive half cycle	124.4	124.0	-0.4	±1.0
Negative half cycle	124.4	124.0	-0.4	±1.0

Page 5 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230290EA

Calibration Report

Function : 10. Overload indication

Measured value (dB)		Deviated value (dB)	Acceptance limits (dB)
Positive one-half cycle	Negative one-half cycle		
139.4	139.5	0.1	±1.5

Function : 11. High-Level Stability

High-level stability over 5 minutes, with steady 1 kHz signal, 1 dB below upper boundary.

Time Period to Apply Signal (min)	Reference SPL (dB)	Record SPL at Conclusion of Time Period (dB)	Deviated value (dB)	Acceptance limits (dB)
5	129.0	129.0	0.0	±0.1

Uncertainty of measurement

Function	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1) Indication at the calibration check frequency	0.30	Not applicable
2) Self-generated Noise	0.10	Not applicable
3) Acoustical signal tests of frequency weightings - Free-field sound pressure response level	0.30	0.60 (10Hz to 40Hz) 0.70 (>40Hz to 10kHz)
4) Electrical signal tests of frequency weightings	0.20	0.20
5) Frequency and time weighting at 1 kHz	0.20	0.20
6) Long-Term Stability	0.10	0.10
7) Level Linearity on the reference level range	0.30	0.30
8) Tone burst response	0.20	0.30
9) Peak C sound level	0.20	0.35
10) Overload indication	0.20	0.25
11) High-Level Stability	0.10	0.10

Remarks: 1. The acceptance limit is for the deviated value.
2. Acceptance limits was IEC61672-3:2013 Class 1.
3. The coverage factor $k = 2.00$

-- End of Report --

Page 6 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230291EA
Operation No.: CP2023070045

Certificate of Calibration

Equipment: Sound Level Meter

Manufacturer: RION

Model/Type: NL-62 (Meter), UC-59L (Microphone), NH-26 (Preamplifier)

Serial No.: 00130357 (Meter), 02373 (Microphone), 00391 (Preamplifier)

ID No.: UAE.EMA2.104/2556

Customer: United Analyst and Engineering Consultant Co.,Ltd.

Address: 81 Soi Udomsuk 41, Sukhumvit Road, Bangchak Phrakhanong, Bangkok 10260

Received Date: 24 July 2023

Calibrated Date: 3 - 4 August 2023

Issued Date: 7 August 2023

Calibrated by: Ms. Juntaporn Kunhakom

Approved by: 
(Mr. Sittichai Swaksuriyawong)
Group Manager

This report was prepared electronically using applicable electronic signature. Printing or copy of file are considered as a copy of the document.
The reported uncertainty of measurement was based on standard uncertainty multiplied by a coverage factor (k) providing a level of confidence of approximately 95%. This certificate may not be reproduced other than in full except with the prior written approval of the Electrical and Electronics Institute, Foundation for Industrial Development.

Page 1 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230291EA

Calibration Report

Equipment: Sound Level Meter

Manufacturer: RION

Model/Type: NL-62 (Meter), UC-59L (Microphone), NH-26 (Preamplifier)

Serial No.: 00130357 (Meter), 02373 (Microphone), 00391 (Preamplifier)

ID No.: UAE.EMA2.104/2556

Ambient Temperature: (23 ± 2) °C

Relative Humidity: (50 ± 15) %

Pressure: (101.3 ± 1.5) kPa

Method of Calibration :- IEC 61672-3:2013.

Condition of this result of calibration

1. Reference standards instrument >

Instrument	Model	Serial No.	Cert. No.	Due Date
1) Standard microphone	4180	2787490	AA-1024-22	6 November 2023
2) Arbitrary Function Generator	AFG2021	C010063	CK20230040EA	26 June 2024
3) Programmable Attenuator	PA5	2755	EF-0034-22	30 October 2023
4) 6.5 Digit precision multimeter	8846A	9610014	CB20220223EA	14 November 2023
5) Pressure humidity and Temperature Transmitter	PTU301	F0640002	CL1-P230024 CD20230196EA	20 March 2024 23 July 2024
6) Pressure humidity and Temperature Transmitter	PTU301	F0640003	CL1-P230032 CD20230197EA	4 April 2024 23 July 2024
7) Performance Audio Analyzer	U8903B	MY56510003	CB20230038EA CK20220080EA	14 February 2024 8 September 2023

2. This result of calibration was found accurate as shown on date and place of calibration only.
3. This certification is traceable to the international system of unit maintained at :-

Reference standards instrument for Acoustic function
- National Institute of Metrology (Thailand)
Reference standards instrument for Electrical function
- National Institute of Metrology (Thailand)
- Electrical and Electronics Institute; NSC Accredited Calibration No.0119

Result of Calibration:

Function : 1. Indication at the calibration check frequency

Reference Acoustic Signal (dB)	Measured value (dB)	Deviation (dB)	Acceptance limits (dB)
94.0	94.0	0.0	±0.7

Note : Absolute sensitivity was established by the use of the Sound Calibrator RION Type NC-74 S/N : 34615278.

Page 2 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230291EA

Calibration Report

Function : 2. Self-generated Noise

2.1 Microphone Installed

Measured value (dB)
16.3

2.2 Microphone replaced by the electrical input signal device

Frequency Weighting	Measured value (dB)
A-weighting	12.1
C-weighting	18.5
Z-weighting	27.5

Function : 3. Acoustical signal tests of frequency weightings (Without Windscreen)

Meter free-field acoustic response at a level of 84 dB.

Frequency (Hz)	Deviation from various Frequency Weighting Response Curve			
	C-Weighting (dB)	A-Weighting (dB)	Z-Weighting (dB)	Acceptance limits (dB)
125	0.1	0.0	0.2	±1.0
1000	0.0	0.0	0.0	±0.7
8000	0.0	0.0	0.0	+1.5; -2.5

Function : 4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various Frequency Weighting Response Curve			
	C-Weighting (dB)	A-Weighting (dB)	Z-Weighting (dB)	Acceptance limits (dB)
63	0.0	0.0	0.1	±1.0
125	0.1	-0.1	0.0	±1.0
250	0.0	0.0	0.1	±1.0
500	0.0	0.0	0.1	±1.0
1000	0.0	0.0	0.0	±0.7
2000	0.1	0.0	0.0	±1.0
4000	0.0	0.0	0.0	±1.0
8000	0.1	0.1	0.0	+1.5; -2.5
16000	-1.3	-1.3	0.1	+2.5; -16.0

Page 3 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230291EA

Calibration Report

Function : 5. Frequency and time weighting at 1 kHz

5.1 Frequency weighting at 1 kHz

Frequency Weighting	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
C-weighting	94.0	0.0	±0.2
A-weighting	94.0	0.0	±0.2
Z-weighting	94.0	0.0	±0.2

5.2 Time weighting at 1 kHz

Time Weighting	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
Fast	94.0	0.0	±0.1
Slow	94.0	0.0	±0.1
LAeq	94.0	0.0	±0.1

Function : 6. Long-Term Stability

Long-term stability over 30 minutes, with steady 1 kHz signal at reference level.

Time Period to Apply Signal (min)	Reference SPL (dB)	Record SPL at Conclusion of Time Period (dB)	Deviated value (dB)	Acceptance limits (dB)
30	94.0	94.0	0.0	±0.1

Function : 7. Level Linearity on the reference level range

7.1 Level Linearity on the reference level range, Upper

Anticipated Value (dB)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
94.0	94.0	0.0	±0.8
99.0	99.0	0.0	±0.8
104.0	104.0	0.0	±0.8
109.0	109.0	0.0	±0.8
114.0	114.0	0.0	±0.8
119.0	119.0	0.0	±0.8
124.0	124.0	0.0	±0.8
129.0	129.0	0.0	±0.8
130.0	130.0	0.0	±0.8
131.0	131.0	0.0	±0.8
132.0	132.0	0.0	±0.8
133.0	133.0	0.0	±0.8
134.0	134.0	0.0	±0.8
135.0	135.0	0.0	±0.8
136.0	136.0	0.0	±0.8
137.0	137.0	0.0	±0.8

Page 4 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230291EA

Calibration Report

7.2 Level Linearity on the reference level range, Lower

Anticipated Value (dB)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
94.0	94.0	0.0	±0.8
89.0	89.0	0.0	±0.8
84.0	84.0	0.0	±0.8
79.0	79.0	0.0	±0.8
74.0	74.0	0.0	±0.8
69.0	69.0	0.0	±0.8
64.0	64.0	0.0	±0.8
59.0	59.0	0.0	±0.8
54.0	54.0	0.0	±0.8
49.0	49.0	0.0	±0.8
44.0	44.0	0.0	±0.8
39.0	39.0	0.0	±0.8
34.0	34.0	0.0	±0.8
29.0	28.9	-0.1	±0.8

Function : 8. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
Fast	200	126.0	0.0	±0.5
	2	108.9	-0.1	+1.0; -1.5
	0.25	99.9	-0.1	+1.0; -3.0
Slow	200	119.6	0.0	±0.5
	2	100.0	0.0	+1.0; -3.0
	200	120.0	0.0	±0.5
LAE	2	100.0	0.0	+1.0; -1.5
	0.25	90.8	-0.2	+1.0; -3.0

Function : 9. Peak C sound level

Number of cycles in test signal	Anticipated Value (dB)	Measured value (dB)	Deviated value (dB)	Acceptance limits (dB)
Complete cycle	125.4	125.2	-0.2	±2.0
Positive half cycle	124.4	124.1	-0.3	±1.0
Negative half cycle	124.4	124.1	-0.3	±1.0

Page 5 of 6

เอกสารไม่ควบคุม

Certificate No.: CP20230291EA

Calibration Report

Function : 10. Overload indication

Measured value (dB)		Deviated value (dB)	Acceptance limits (dB)
Positive one-half cycle	Negative one-half cycle		
139.5	139.5	0.0	±1.5

Function : 11. High-Level Stability

High-level stability over 5 minutes, with steady 1 kHz signal, 1 dB below upper boundary.

Time Period to Apply Signal (min)	Reference SPL (dB)	Record SPL at Conclusion of Time Period (dB)	Deviated value (dB)	Acceptance limits (dB)
5	129.0	129.0	0.0	±0.1

Uncertainty of measurement

Function	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1) Indication at the calibration check frequency	0.30	Not applicable
2) Self-generated Noise	0.10	Not applicable
3) Acoustical signal tests of frequency weightings - Free-field sound pressure response level	0.30	0.60 (10Hz to 4kHz) 0.70 (>4kHz to 10kHz)
4) Electrical signal tests of frequency weightings	0.20	0.20
5) Frequency and time weighting at 1 kHz	0.20	0.20
6) Long-Term Stability	0.10	0.10
7) Level Linearity on the reference level range	0.30	0.30
8) Tone burst response	0.20	0.30
9) Peak C sound level	0.20	0.35
10) Overload indication	0.20	0.25
11) High-Level Stability	0.10	0.10

Remarks: 1. The acceptance limit is for the deviated value.
2. Acceptance limits was IEC61672-3:2013 Class 1.
3. The coverage factor $k = 2.00$

-- End of Report --

Page 6 of 6

เอกสารไม่ควบคุม

Calibration Certificate

Equipment : SOUND LEVEL METER
Manufacturer : RION
Model : NL-62/ Microphone UC-59L / Preamplifier NH-26
Serial No.: 00391458 / 01748 / 01553
ID No.: -

Condition As Found : GOOD

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT (UAE)
81 SOI UDOMSUK 41, SUKHUMVIT ROAD,
BANGCHAK SUB-DISTRICT,
PHRAKHANONG DISTRICT, BANGKOK 10260
THAILAND.

Location : -
Ambient Temperature : (23.0 ± 3) °C
Pressure : (101.3 ± 3) kPa
Relative Humidity : (50.0 ± 20) %

Received Date : 06 JANUARY 2023
Calibration Date : 09 JANUARY 2023
Date of Issue : 16 JANUARY 2023

Calibrated by : Nathakorn Pisutpaisan

Approved by :

T. Petchur
(Thanakul Petchurai)

This certificate is issued in accordance with the requirements of ISO/IEC 17025 standard, may not be reproduced
other than in full, except with the prior written approval of the head of Calibration Laboratory.

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 3 of 8

Summary of Measurement Result :

Parameter	Pass	Fail	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1. Absolute sensitivity	✓	-	0.2	N/A
2. Self-generated noise	✓	-	0.3	N/A
3. Acoustical signal tests of frequency weightings				
125 Hz	✓	-	0.3	0.6
1000 Hz	✓	-	0.3	0.6
8000 Hz	✓	-	0.3	0.7
4. Electrical signal tests of frequency weightings				
For 10 Hz to 4 kHz	✓	-	0.3	0.6
For > 4 kHz to 10 kHz	✓	-	0.3	0.7
For > 10 kHz to 20 kHz	✓	-	0.3	1.0
5. Frequency and time weightings at 1 kHz	✓	-	0.2	0.2
6. Long - term stability	✓	-	0.1	0.1
7. Level linearity on the reference level range	✓	-	0.2	0.3
8. Level linearity including the level range control	✓	-	0.2	0.3
9. Tone burst response	✓	-	0.2	0.3
10. Peak C sound level	✓	-	0.2	0.35
11. Overload indication	✓	-	0.2	0.25
12. High level stability	✓	-	0.1	0.1

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petchur

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 2 of 8

Calibration Procedure : CP-AC-01

Calibration Method :

This equipment was calibrated by based on IEC-61672-3 (2013) Standard for sound level meter (SLM).
The SLM had tests to Acoustical and Electrical signal tests of frequency weighting with Anechoic chamber and Reference
Standard Instruments.
For tests results of each items were made by observation of each Instruments display and also with SLM's display.

Condition of this result of calibration :

1. Reference Standard Instruments :

Instrument	Model	Serial No.	Cert. No.	Due Date
Waveform Generator	33210A	MY48017076	EF-0007-22	04-Feb-23
Waveform Generator	33511B	MY52302742	EF-0008-22	04-Feb-23
Digital Multimeter	33461A	MY53220104	EEL-BP, 04/0265	09-Feb-23
Digital Multimeter	33461A	MY53220076	EEL-BP, 03/0265	09-Feb-23
Digital Multimeter	34461A	MY60024273	EEL-BP, 05/0265	09-Feb-23
Programmable Attenuator	MAT-1070	62100114	EF-0009-22	07-Feb-23
Condenser Microphone	4180	2977900	AA-1013-22	24-Feb-23
Measuring Amplifier	NA-42KA1	34560495	AA-3005-22	22-Feb-23

2. This result of calibration was found accurate as shown on date and place of calibration for this calibrated item only.

3. This certificate is traceable to the international system of unit maintained at :

- 3.1 National Institute of Metrology (Thailand).
3.2 Thailand Institute of Scientific and Technological Research (TISTR).

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petchur

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 4 of 8

Result of calibration :

1. Absolute sensitivity

Reference Acoustic Signal (dB)	Measured Value (dB)	Deviation (dB)	Acceptance Limit (dB)
93.9 (93.95)	94.0	0.0	±0.3

2. Self-generated noise

2.1 Normal test

Measured Value (dB)
15.9

2.2 The microphone of the sound level meter was replaced by electrical signal input device.

Frequency Weighting	Measured value (dB)
A - weight	11.4
C - weight	16.5
Flat	23.7

3. Acoustical signal tests of frequency weightings

Meter free-field acoustic response at a level of 84 dB

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
125	0.4	0.4	0.4	± 1.0
1000	0.2	0.2	0.2	± 0.7
8000	-0.6	-0.6	-0.6	+ 1.5, - 2.5

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petchur

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 5 of 8

4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
63	0.0	0.0	-0.1	±1.0
125	0.0	0.0	0.0	±1.0
250	0.0	0.0	0.0	±1.0
500	0.0	0.0	0.0	±1.0
1000	0.0	0.0	0.0	±1.0
2000	0.0	0.0	0.0	±1.0
4000	0.0	0.0	0.0	±1.0
8000	0.0	0.1	0.1	+1.5, -2.5
16000	0.0	-1.2	-1.2	+2.5, -16.0

5. Frequency and time weightings at 1 kHz

5.1 Frequency weightings at 1 kHz

Frequency Weighting	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	0.0	-
C - weight	94.0	0.0	± 0.2
Flat	94.0	0.0	± 0.2

5.2 Time weighting at 1 kHz

Frequency Weighting	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	94.0	0.0	-
Slow	94.0	0.0	± 0.1
Leq	94.0	0.0	± 0.1

6. Long - term stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.1

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 7 of 8

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±0.8

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.5 ; -5.0
	2	8	117.0	117.0	0.0	1.0 ; -2.5
	200	800	134.0	134.0	0.0	±1.0
Slow	2	8	108.0	108.0	0.0	1.5 ; -5.0
	200	800	127.6	127.6	0.0	±1.0
SEL	0.25	1	99.0	98.9	-0.1	1.5 ; -5.0
	2	8	108.0	108.0	0.0	1.0 ; -2.5
	200	800	128.0	128.0	0.0	±1.0

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, L _{peak} (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	-
One	136.4	135.7	-0.7	±2.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	-
Positive half cycle	135.4	135.2	-0.2	±1.0
Negative half cycle	135.4	135.2	-0.2	±1.0

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 6 of 8

7. Level linearity on the reference level range

Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
137.0	137.0	0.0	±0.8
136.0	136.0	0.0	±0.8
135.0	135.0	0.0	±0.8
134.0	134.0	0.0	±0.8
133.0	133.0	0.0	±0.8
132.0	132.0	0.0	±0.8
131.0	131.0	0.0	±0.8
129.0	129.0	0.0	±0.8
124.0	124.0	0.0	±0.8
119.0	119.0	0.0	±0.8
114.0	114.0	0.0	±0.8
109.0	109.0	0.0	±0.8
104.0	104.0	0.0	±0.8
99.0	99.0	0.0	±0.8
94.0	94.0	0.0	±0.8
89.0	89.0	0.0	±0.8
84.0	84.0	0.0	±0.8
79.0	79.0	0.0	±0.8
74.0	74.0	0.0	±0.8
69.0	69.0	0.0	±0.8
64.0	64.0	0.0	±0.8
59.0	59.0	0.0	±0.8
54.0	54.0	0.0	±0.8
49.0	49.0	0.0	±0.8
44.0	44.0	0.0	±0.8
39.0	39.0	0.0	±0.8
34.0	34.0	0.0	±0.8
30.0	30.0	0.0	±0.8
29.0	29.0	0.0	±0.8
28.0	28.0	0.0	±0.8
27.0	27.0	0.0	±0.8
26.0	26.0	0.0	±0.8
25.0	25.0	0.0	±0.8

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch

Continuation of Calibration Certificate

Cert. No. : ACL23033
Job No. : VC66AC0023
Pages : 8 of 8

11. Overload indication

Measured value (dB)		Deviated Value (dB)	Acceptance Limits (dB)
Positive one-half cycle	Negative one-half cycle		
89.6	89.6	0.0	±1.5

12. High level stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	137.0	137.0	0.0	±0.1

The reported uncertainty is based on a standard uncertainty multiplied by coverage factor $k = 2$
or any value following calculation, providing a level of confidence of approximately 95 %

End of Calibration Certificate

QF-TS12-04-04-020664

เอกสารไม่ควบคุม

T. Petch

Cert. No. : ACL24064
Pages : 1 of 8

Calibration Certificate

Equipment : SOUND LEVEL METER
Manufacturer : RION
Model : NL-62 / Microphone UC-59L / Preamplifier NH-26
Serial No.: 00391494 / 01184 / 01589
ID No.: UAEFM.026/2564

Condition As Found : GOOD

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT (UAE)
81 SOI UDOMSUK 41, SUKHUMVIT ROAD,
BANGCHAK SUB-DISTRICT,
PHRAKHANONG DISTRICT, BANGKOK 10260
THAILAND.

Location : -
Ambient Temperature : (23.0 ± 3) °C
Pressure : (101.3 ± 3) kPa
Relative Humidity : (50.0 ± 20) %

Received Date : 21 DECEMBER 2023
Calibration Date : 18-19 JANUARY 2024
Date of Issue : 22 JANUARY 2024

Calibrated by : Nathakorn Pisutpaisan

Approved by : 
(Thanakul Petchurai)

This certificate is issued in accordance with the requirements of ISO/IEC 17025 standard, may not be reproduced other than in full, except with the prior written approval of the head of Calibration Laboratory.

เอกสารควบคุม

Cert. No. : ACL24064
Job No. : VC67AC0034
Pages : 2 of 8

Calibration Procedure : CP-AC-01

Calibration Method :

This equipment was calibrated by follow on IEC-61672-3 (2013) Standard for sound level meter (SLM).
The SLM had tests to Acoustical and Electrical signal tests of frequency weighting with Anechoic chamber and Reference Standard Instruments.
For tests results of each items were made by observation of each Instruments display and also with SLM's display.

Condition of this result of calibration :

1. Reference Standard Instruments :

Instrument	Model	Serial No.	Cert. No.	Due Date
Waveform Generator	33210A	MY48017076	EF-0009-23	07-FEB-24
Waveform Generator	33511B	MY52302742	EF-0010-23	07-FEB-24
Digital Multimeter	33461A	MY53220104	EEL-BP 30/0266	13-FEB-24
Digital Multimeter	33461A	MY53220076	EEL-BP 29/0266	13-FEB-24
Digital Multimeter	34461A	MY60024273	EEL-BP 31/0266	14-FEB-24
Programmable Attenuator	MAT-1070	62100114	EF-0011-23	08-FEB-24
Condenser Microphone	4180	2977900	AA-1001-23	14-FEB-24
Measuring Amplifier	NA-42KAI	34560495	AA-3002-23	14-FEB-24

2. This result of calibration was found accurate as shown on date and place of calibration for this calibrated item only.

3. This certificate is traceable to the international system of unit maintained at :

- 3.1 National Institute of Metrology (Thailand).
- 3.2 Thailand Institute of Scientific and Technological Research (TISTR).

เอกสารควบคุม

Cert. No. : ACL24064
Job No. : VC67AC0034
Pages : 3 of 8

Summary of Measurement Result :

Parameter	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1. Absolute sensitivity	0.2	N/A
2. Self-generated noise	0.3	N/A
3. Acoustical signal tests of frequency weightings		
125 Hz	0.3	0.6
1000 Hz	0.3	0.6
8000 Hz	0.3	0.7
4. Electrical signal tests of frequency weightings		
For 10 Hz to 4 kHz	0.3	0.6
For > 4 kHz to 10 kHz	0.3	0.7
For > 10 kHz to 20 kHz	0.3	1.0
5. Frequency and time weightings at 1 kHz	0.2	0.2
6. Long - term stability	0.1	0.1
7. Level linearity on the reference level range	0.2	0.3
8. Level linearity including the level range control	0.2	0.3
9. Tone burst response	0.2	0.3
10. Peak C sound level	0.2	0.35
11. Overload indication	0.2	0.25
12. High level stability	0.1	0.1

เอกสารควบคุม

Cert. No. : ACL24064
Job No. : VC67AC0034
Pages : 4 of 8

Result of calibration :

1. Absolute sensitivity

Reference Acoustic Signal (dB)	Measured Value (dB)	Deviation (dB)	Acceptance Limit (dB)
93.9 (93.98)	94.0	0.0	±0.3

2. Self-generated noise

2.1 Normal test

Measured Value (dB)
14.0

2.2 The microphone of the sound level meter was replaced by electrical signal input device.

Frequency Weighting	Measured value (dB)
A - weight	10.4
C - weight	15.5
Flat	23.6

3. Acoustical signal tests of frequency weightings

Meter free-field acoustic response at a level of 84 dB

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
125	0.7	0.7	0.7	± 1.0
1000	0.6	0.6	0.6	± 0.7
8000	0.7	0.8	0.8	+ 1.5, - 2.5

เอกสารควบคุม

4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
63	0.1	0.0	0.0	±1.0
125	0.0	0.0	0.1	±1.0
250	0.0	0.0	0.0	±1.0
500	0.0	0.1	0.0	±1.0
1000	0.0	0.0	0.0	±1.0
2000	0.0	0.0	0.0	±1.0
4000	0.0	0.0	0.0	±1.0
8000	0.0	0.1	0.1	+ 1.5, - 2.5
16000	0.0	-1.2	-1.2	+ 2.5, -16.0

5. Frequency and time weightings at 1 kHz

5.1 Frequency weightings at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.2
C - weight	94.0	94.0	0.0	± 0.2
Flat	94.0	94.0	0.0	± 0.2

5.2 Time weighting at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	94.0	94.0	0.0	± 0.1
Slow	94.0	94.0	0.0	± 0.1
Leq	94.0	94.0	0.0	± 0.1

6. Long - term stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.1

เอกสารควบคุม

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±0.8

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.0 ; -3.0
	2	8	117.0	117.0	0.0	1.0 ; -1.5
	200	800	134.0	134.1	0.1	±0.5
Slow	2	8	108.0	108.0	0.0	1.0 ; -3.0
	200	800	127.6	127.6	0.0	±0.5
SEL	0.25	1	99.0	98.9	-0.1	1.0 ; -3.0
	2	8	108.0	108.0	0.0	1.0 ; -1.5
	200	800	128.0	128.0	0.0	±0.5

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, L _{peak} (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±2.0
One	136.4	136.1	-0.3	±2.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±1.0
Positive half cycle	135.4	135.2	-0.2	±1.0
Negative half cycle	135.4	135.2	-0.2	±1.0

เอกสารควบคุม

7. Level linearity on the reference level range

Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
137.0	137.0	0.0	±0.8
136.0	136.0	0.0	±0.8
135.0	135.0	0.0	±0.8
134.0	134.0	0.0	±0.8
133.0	133.0	0.0	±0.8
132.0	132.0	0.0	±0.8
131.0	131.0	0.0	±0.8
129.0	129.0	0.0	±0.8
124.0	124.0	0.0	±0.8
119.0	119.0	0.0	±0.8
114.0	114.0	0.0	±0.8
109.0	109.0	0.0	±0.8
104.0	104.0	0.0	±0.8
99.0	99.0	0.0	±0.8
94.0	94.0	0.0	±0.8
89.0	89.1	0.1	±0.8
84.0	84.0	0.0	±0.8
79.0	79.0	0.0	±0.8
74.0	74.1	0.1	±0.8
69.0	69.1	0.1	±0.8
64.0	64.0	0.0	±0.8
59.0	59.1	0.1	±0.8
54.0	54.0	0.0	±0.8
49.0	49.1	0.1	±0.8
44.0	44.0	0.0	±0.8
39.0	39.0	0.0	±0.8
34.0	34.1	0.1	±0.8
30.0	30.0	0.0	±0.8
29.0	29.1	0.1	±0.8
28.0	28.1	0.1	±0.8
27.0	27.0	0.0	±0.8
26.0	26.0	0.0	±0.8
25.0	25.1	0.1	±0.8

เอกสารควบคุม

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±0.8

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.0 ; -3.0
	2	8	117.0	117.0	0.0	1.0 ; -1.5
	200	800	134.0	134.1	0.1	±0.5
Slow	2	8	108.0	108.0	0.0	1.0 ; -3.0
	200	800	127.6	127.6	0.0	±0.5
SEL	0.25	1	99.0	98.9	-0.1	1.0 ; -3.0
	2	8	108.0	108.0	0.0	1.0 ; -1.5
	200	800	128.0	128.0	0.0	±0.5

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, L _{peak} (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±2.0
One	136.4	136.1	-0.3	±2.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±1.0
Positive half cycle	135.4	135.2	-0.2	±1.0
Negative half cycle	135.4	135.2	-0.2	±1.0

เอกสารควบคุม

11. Overload indication

Measured value (dB)		Deviated Value (dB)	Acceptance Limits (dB)
Positive one-half cycle	Negative one-half cycle		
89.7	89.5	-0.2	±1.5

12. High level stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	136.9	136.9	0.0	±0.1

The reported uncertainty is based on a standard uncertainty multiplied by coverage factor $k = 2$
or any value following calculation, providing a level of confidence of approximately 95 %

End of Calibration Certificate

เอกสารควบคุม

Cert. No. : ACL24065
Pages : 1 of 8

Calibration Certificate

Equipment : SOUND LEVEL METER
Manufacturer : RION
Model : NL-62 / Microphone UC-59L / Preamplifier NH-26
Serial No.: 00881367 / 01639 / 01457
ID No.: UAE.EFM.027/2564


Condition As Found : GOOD

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT (UAE)
81 SOI UDOMSUK 41, SUKHUMVIT ROAD,
BANGCHAK SUB-DISTRICT,
PHRAKHANONG DISTRICT, BANGKOK 10260
THAILAND.

Location : -
Ambient Temperature : (23.0 ± 3) °C
Pressure : (101.3 ± 3) kPa
Relative Humidity : (50.0 ± 20) %

Received Date : 21 DECEMBER 2023
Calibration Date : 18-19 JANUARY 2024
Date of Issue : 22 JANUARY 2024

Calibrated by : Nathakorn Pisutpaisan

Approved by : 
(Thanakul Petchurai)

This certificate is issued in accordance with the requirements of ISO/IEC 17025 standard, may not be reproduced other than in full, except with the prior written approval of the head of Calibration Laboratory.

เอกสารควบคุม

Cert. No. : ACL24065
Job No. : VC67AC0034
Pages : 2 of 8

Calibration Procedure : CP-AC-01

Calibration Method :
This equipment was calibrated by follow on IEC-61672-3 (2013) Standard for sound level meter (SLM).
The SLM had tests to Acoustical and Electrical signal tests of frequency weighting with Anechoic chamber and Reference Standard Instruments.
For tests results of each items were made by observation of each Instruments display and also with SLM's display.

Condition of this result of calibration :

1. Reference Standard Instruments :

Instrument	Model	Serial No.	Cert. No.	Due Date
Waveform Generator	33210A	MY48017076	EF-0009-23	07-FEB-24
Waveform Generator	33511B	MY52302742	EF-0010-23	07-FEB-24
Digital Multimeter	33461A	MY53220104	EEL_BP 30/0266	13-FEB-24
Digital Multimeter	33461A	MY53220076	EEL_BP 29/0266	13-FEB-24
Digital Multimeter	34461A	MY60024273	EEL_BP 31/0266	14-FEB-24
Programmable Attenuator	MAT-1070	62100114	EF-0011-23	08-FEB-24
Condenser Microphone	4180	2977900	AA-1001-23	14-FEB-24
Measuring Amplifier	NA-42KAI	34560495	AA-3002-23	14-FEB-24

2. This result of calibration was found accurate as shown on date and place of calibration for this calibrated item only.
3. This certificate is traceable to the international system of unit maintained at :
3.1 National Institute of Metrology (Thailand).
3.2 Thailand Institute of Scientific and Technological Research (TISTR).

เอกสารควบคุม

Cert. No. : ACL24065
Job No. : VC67AC0034
Pages : 3 of 8

Summary of Measurement Result :

Parameter	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1. Absolute sensitivity	0.2	N/A
2. Self-generated noise	0.3	N/A
3. Acoustical signal tests of frequency weightings		
125 Hz	0.3	0.6
1000 Hz	0.3	0.6
8000 Hz	0.3	0.7
4. Electrical signal tests of frequency weightings		
For 10 Hz to 4 kHz	0.3	0.6
For > 4 kHz to 10 kHz	0.3	0.7
For > 10 kHz to 20 kHz	0.3	1.0
5. Frequency and time weightings at 1 kHz	0.2	0.2
6. Long - term stability	0.1	0.1
7. Level linearity on the reference level range	0.2	0.3
8. Level linearity including the level range control	0.2	0.3
9. Tone burst response	0.2	0.3
10. Peak C sound level	0.2	0.35
11. Overload indication	0.2	0.25
12. High level stability	0.1	0.1

เอกสารควบคุม

Cert. No. : ACL24065
Job No. : VC67AC0034
Pages : 4 of 8

Result of calibration :

1. Absolute sensitivity

Reference Acoustic Signal (dB)	Measured Value (dB)	Deviation (dB)	Acceptance Limit (dB)
93.9 (93.98)	94.0	0.0	±0.3

2. Self-generated noise

2.1 Normal test

Measured Value (dB)
19.0

2.2 The microphone of the sound level meter was replaced by electrical signal input device.

Frequency Weighting	Measured value (dB)
A - weight	13.0
C - weight	18.0
Flat	25.3

3. Acoustical signal tests of frequency weightings

Meter free-field acoustic response at a level of 84 dB

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
125	0.0	0.1	0.1	± 1.0
1000	0.1	0.1	0.1	± 0.7
8000	1.2	1.3	1.3	+ 1.5, - 2.5

เอกสารควบคุม

4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
63	0.0	-0.1	-0.1	±1.0
125	0.0	0.0	0.0	±1.0
250	0.0	0.0	0.0	±1.0
500	0.0	0.0	0.0	±1.0
1000	0.0	0.0	0.0	±1.0
2000	0.0	0.0	0.0	±1.0
4000	0.0	0.0	0.0	±1.0
8000	0.0	0.0	0.0	+ 1.5, - 2.5
16000	0.0	-1.2	-1.2	+ 2.5, -16.0

5. Frequency and time weightings at 1 kHz

5.1 Frequency weightings at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.2
C - weight	94.0	94.0	0.0	± 0.2
Flat	94.0	94.0	0.0	± 0.2

5.2 Time weighting at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	94.0	94.0	0.0	± 0.1
Slow	94.0	94.0	0.0	± 0.1
Leq	94.0	94.0	0.0	± 0.1

6. Long - term stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.1

เอกสารควบคุม

7. Level linearity on the reference level range

Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
137.0	137.1	0.1	±0.8
136.0	136.1	0.1	±0.8
135.0	135.1	0.1	±0.8
134.0	134.1	0.1	±0.8
133.0	133.1	0.1	±0.8
132.0	132.1	0.1	±0.8
131.0	131.0	0.0	±0.8
129.0	129.1	0.1	±0.8
124.0	124.0	0.0	±0.8
119.0	119.1	0.1	±0.8
114.0	114.1	0.1	±0.8
109.0	109.1	0.1	±0.8
104.0	104.1	0.1	±0.8
99.0	99.1	0.1	±0.8
94.0	94.0	0.0	±0.8
89.0	89.0	0.0	±0.8
84.0	84.0	0.0	±0.8
79.0	79.0	0.0	±0.8
74.0	74.0	0.0	±0.8
69.0	69.0	0.0	±0.8
64.0	64.0	0.0	±0.8
59.0	59.0	0.0	±0.8
54.0	54.0	0.0	±0.8
49.0	49.0	0.0	±0.8
44.0	44.0	0.0	±0.8
39.0	39.0	0.0	±0.8
34.0	34.0	0.0	±0.8
30.0	29.9	-0.1	±0.8
29.0	28.9	-0.1	±0.8
28.0	28.0	0.0	±0.8
27.0	26.9	-0.1	±0.8
26.0	25.9	-0.1	±0.8
25.0	24.9	-0.1	±0.8

เอกสารควบคุม

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±0.8

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.0 ; -3.0
	2	8	117.0	117.0	0.0	1.0 ; -1.5
	200	800	134.0	134.0	0.0	±0.5
Slow	2	8	108.0	108.0	0.0	1.0 ; -3.0
	200	800	127.6	127.6	0.0	±0.5
	0.25	1	99.0	98.9	-0.1	1.0 ; -3.0
SEL	2	8	108.0	108.0	0.0	1.0 ; -1.5
	200	800	128.0	128.0	0.0	±0.5

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, Lepeak (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±2.0
One	136.4	135.3	-1.1	±2.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±1.0
Positive half cycle	135.4	135.1	-0.3	±1.0
Negative half cycle	135.4	135.1	-0.3	±1.0

เอกสารควบคุม

11. Overload indication

Measured value (dB)		Deviated Value (dB)	Acceptance Limits (dB)
Positive one-half cycle	Negative one-half cycle		
89.4	89.5	0.1	±1.5

12. High level stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	137.0	137.0	0.0	±0.1

The reported uncertainty is based on a standard uncertainty multiplied by coverage factor $k = 2$
or any value following calculation, providing a level of confidence of approximately 95 %

End of Calibration Certificate

เอกสารควบคุม

List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Workplace									
1	Air Flow Meter	Calibrate personal pump	TSI,Inc	4146 41461813030	Innovative Instrument Co., Ltd.	23-AFM-219 Rev.1	25 Oct 23	24 Oct 24	-
2	Dial Thermo-Hygrometer	Sodium Hydroxide Sodium Bisulfite as Sodium Potassium Chromate as Potassium Isopropyl Alcohol Phenol Sulfuric Acid Hydrochloric Acid Nitric Acid Fungi Bacteria	Barigo, Germany	-	Technology Promotion Association (Thailand-Japan)	23H1200	6 Jun 23	5 Jun 24	-
3	Digital Thermo - Hygrometer	Sodium Hydroxide Sodium Bisulfite as Sodium Potassium Chromate as Potassium Isopropyl Alcohol Phenol Sulfuric Acid Hydrochloric Acid Nitric Acid Fungi Bacteria	Digicon	TH-02 395034175	Technology Promotion Association (Thailand-Japan)	23H1101	24 May 23	23 May 24	-
4	Sound Level Calibrator (Acoustic Calibrator)	Calibrate Sound Level Meter	Svantek	SV35A 73249	Innovative Instrument Co.,Ltd.	23-ACT-111	27 Jun 23	26 Jun 24	-
5	Noise Dosimeter	Noise Dosimeter	Svantek	SV 104 117689	Innovative Instrument Co.,Ltd.	24-NDM-105	25 Apr 24	24 Apr 25	-
6	Noise Dosimeter	Noise Dosimeter	Svantek	SV 104 117693	Innovative Instrument Co.,Ltd.	24-NDM-107	26 Apr 24	25 Apr 25	-

List of Instruments Certification for Air & Noise Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration	Remark
Workplace									
7	Sound Level Meter	$L_{Aeq\ 8\ hrs}$, L_{Amax}	Rion, Japan	NL-42 00409050	Sithiporn Associates Co., Ltd.	ACL24053	18 Jan 24	17 Jan 25	-
8	Sound Level Meter	$L_{Aeq\ 8\ hrs}$, L_{Amax}	Rion, Japan	NL-42 00408982	Sithiporn Associates Co., Ltd.	ACL24051	18 Jan 24	17 Jan 25	-
9	Light Meter	Lux	Extech Instrument, Taiwan	407026 A 052209	Innovative Instrument Co., Ltd.	24-LXM-152	30 May 24	29 May 25	-
10	Thermal Environment Monitor	Heat Meter	3M	QuesTemp 32 TPS030006	Innovative Instrument Co.,Ltd.	23-TPM-483	17 Oct 23	16 Oct 24	-
11	Thermal Environment Monitor	Heat Meter	Quest Technologies, Inc	QuesTemp 34 TEK120020	Innovative Instrument Co.,Ltd.	23-TPM-373	7 Aug 23	6 Aug 24	-

Certificate of Calibration

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.
Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.
Address : 81 Soi Udomsak 41, Sukhumvit Road, Bangchak, Prakanong,
Bangkok 10260

Certificate No : 23-AFM-219 Rev.1
Request No : Req-2023-2171

Unit Under Calibration Details

Measurement Item : Air Flow Meter
Manufacturer : TSI
Model : 4146
Serial Number : 41461813030
ID : UAE.EFM.102/2561

Sensor Model : -
Sensor Serial Number : -

Location of Calibration : LAB 4 AIR VELOCITY METER

Calibration Environment and Details

Temperature : 23 °C ± 3 °C
Humidity : 55 %RH ± 20 %RH
Barometric Pressure : 1013 hPa ± 10 hPa
Received Date : 11 October 2023
Calibration Date : 25 October 2023

Calibration Procedure : In-house method CP-AFM-01 by Comparison technique with Standard Primary Flow Calibrator


Reference Standard	Model	Serial Number	Traceable	Due Calibration
Air Flow Meter	Gilibrator 3 Standard flow	19031011003	Seasidyne	12 July 2024
Air Flow Meter	Gilibrator 3 High flow	18501012012	Seasidyne	12 July 2024
Temperature meter	GT 11	08000057	Qreborn	27 February 2024
Pressure meter	CPG2400	41000KDU/651832	TPA	7 November 2023


Traceability :

This Certificate is traceable to SI Unit through Seasidyne A2LA Accreditation No. 3943.01

Note :

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor $k = 2$, providing a level of confidence approximately 95 %.
This Certificate was issued to replace to Calibration Certificate No.23-AFM-219

Calibration By : 
Mr. Noppadol Luangant
Service Calibration Engineer

Approved By : 
Mr. Pakit Mathavom
Calibration Engineer Supervisor
Issue Date : 7 November 2023

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the head of the laboratory.
FM-708-AFM-01 Rev.00 Issue date 01/07/19

เอกสารไม่ควบคุม

Certificate No : 23-AFM-219

Request No : Req-2023-2171

Result of Calibration :

Temperature (°C)	Pressure (kPa)	STD (l/min)	UUC (l/min)	Error (l/min)	Uncertainty (l/min)
25.00	101.20	0.018	0.020	0.002	0.0013
25.10	101.30	0.047	0.050	0.003	0.0033
25.20	101.27	0.096	0.100	0.004	0.0028
25.30	101.27	0.195	0.200	0.005	0.0056
25.30	101.27	0.493	0.500	0.007	0.0071
25.30	101.21	0.997	1.000	0.003	0.0083
25.20	101.20	1.688	1.698	0.010	0.0085
25.40	101.18	2.002	2.007	0.005	0.0086
25.30	101.10	2.991	3.014	0.023	0.042
25.30	101.10	3.994	4.002	0.008	0.056
25.30	101.10	5.032	5.009	-0.023	0.070

Note : STD = Standard UUC = Unit Under Calibration
- UUC Reference Condition : At 21.1 °C, 101.3 kPa, Air
- Flow Rate was corrected for non-standard operating condition by using equation :

$$Q_{\text{meas}} = Q_{\text{ref}} \times \frac{P_{\text{ref}}}{P_{\text{meas}}} \times \frac{T_{\text{meas}}}{T_{\text{ref}}}$$

where Q = Flow Rate P = Absolute Pressure T = Absolute Temperature
Meas = Measurement Condition ref = Standard Condition

* Indicates non accredited

End of Certificate

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the head of the laboratory.
FM-708-AFM-01 Rev.00 Issue date 01/07/19

เอกสารไม่ควบคุม



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
53/4/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG, BANGKOK 10259
TEL. 0-2717-3000-24 FAX. 0-2719-9484



Certificate of Calibration

Certificate No. : 23H1102
Page : 1 of 2

Equipment : Digital Thermo-Hygrometer
Manufacturer : Digicon
Model : TH-02
Serial No. : 395034174
ID No. : UAE.EFM.185/2565
Condition As-Received : Used Item
Received Date : 18 May 2023
Calibration Date : 22 May 2023
to 24 May 2023
Reference : 2305-0041WSC
Ambient Temperature : (25 ± 3) °C
Relative Humidity : (50 ± 20) %

Submitted by : United Analyst and Engineering Consultant Co., Ltd.
81 Soi Udomsak 41, Sukhumvit Road, Bangchak,
Phrakhanong, Bangkok 10260

Procedure used : Calibration were conducted using in-house calibration procedure CP-H03 according to comparison with standard chilled mirror sensor for humidity measurement function and comparison with standard temperature probe for temperature measurement function into humidity / temperature chamber.

Condition of this result of calibration

1. Reference standards instruments :


Instrument	Model	Serial No.	Certificate No.	Due Date
1) Chilled Mirror Hygrometer	Dew Master	44730	20563A	14 Jun 2023
2) Handheld Thermometer With Sensor	1521	ASA339	2211251	12 Oct 2023

2. The certificate is valid only to the item calibrated on date and place of calibration.

3. This Certificate is traceable to the International System of Unit maintained through:-

- National Institute of Standards and Technology (NIST) , The United States of America
- National Institute of Metrology Thailand (NIMT)

Calibrated by : Kraipap Onrat
Issue Date : 25 May 2023

Approved Signatory : 
[✓] Chakrit Waewwanjua
[] Ponthippa Tameyakul
[] Viporn Tantiyawutti

เอกสารไม่ควบคุม

B 0314980



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
53/4/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG, BANGKOK 10259
TEL. 0-2717-3000-24 FAX. 0-2719-9484



Certificate of Calibration

Certificate No. : 23H1102
Page : 2 of 2

Result of Calibration:-				
Function:				
Humidity Measurement				
Reference Temperature (°C)	Standard Humidity (%R.H.)	UUC* Reading (%R.H.)	Error (%R.H.)	Uncertainty of Measurement (±%R.H.)
25.0	40.1	40	-0.1	1.3
25.0	50.1	50	-0.1	1.6
25.0	60.0	59	-1.0	1.6
25.0	70.2	68	-2.2	1.6

Result of Calibration:-		Without Adjustment	
Function:		Temperature Measurement	
Standard Temperature (°C)	UUC* Reading (°C)	Error (°C)	Uncertainty of Measurement (±°C)
20.014	20.4	0.386	0.42
25.022	25.6	0.578	0.42
30.033	30.2	0.167	0.42
40.000	39.9	-0.100	0.42

UUC* : Unit Under Calibration
The reported uncertainty of measurement was base on standard uncertainty multiplied by coverage factor $k = 2.00$, providing confidence level approximately 95%.

-000-



เอกสารไม่ควบคุม

a 1162979



Certificate of Calibration

Certificate No. : 23H1101
Page : 1 of 2

Equipment : Digital Thermo-Hygrometer

Manufacturer : Digicon

Model : TH-02

Serial No. : 395034175

ID No. : UAE.EFM.184/2565

Condition As-Received: Used Item

Received Date: 18 May 2023

Calibration Date: 22 May 2023

Reference: 2305-0641WSC

Ambient Temperature: (25 ± 3) °C

Relative Humidity: (50 ± 20) %

This certificate may not be reproduced other than in full,
except with the prior written approval of the head of
Corporate Services 3: Equipment Calibration and Testing Services.

Submitted by: United Analyst and Engineering Consultant Co., Ltd.

81 Soi Udomsuk 41, Sukhumvit Road, Bangchak,
Phrakhanong, Bangkok 10260.

Procedure used: Calibration were conducted using in-house calibration procedure CP-H03 according to comparison with standard chilled mirror sensor for humidity measurement function and comparison with standard temperature probe for temperature measurement function into humidity / temperature chamber.

Condition of this result of calibration

1. Reference standards instruments :

Instrument	Model	Serial No.	Certificate No.	Due Date
1) Chilled Mirror Hygrometer	Dew Master	44730	20583A	14 Jun 2023
2) Handheld Thermometer With Sensor	1521	ASA339	221251	12 Oct 2023

2. The certificate is valid only to the item calibrated on date and place of calibration.

3. This Certification is traceable to the International System of Unit maintained through:-

- National Institute of Standards and Technology (NIST) , The United States of America
- National Institute of Metrology Thailand (NIMT)

Calibrated by : Knapop Onrat
Issue Date : 25 May 2023

Approved Signatory :

[✓] Chakrit Waowwanjua
[] Pornthippa Tameyakul
[] Viporn Tantiyawutti

เอกสารไม่ควบคุม
B 0314979

Cert. No.: 23H1101
Page.: 2 of 2

Result of Calibration:-

Function:

Without Adjustment

Humidity Measurement

Reference Temperature (°C)	Standard Humidity (%R.H.)	UUC* Reading (%R.H.)	Error (%R.H.)	Uncertainty of Measurement (±%R.H.)
25.0	40.1	41	0.9	1.3
25.0	50.1	51	0.9	1.6
25.0	60.0	60	0.0	1.6
25.0	70.2	67	-3.2	1.6

Result of Calibration:-

Function:

Without Adjustment

Temperature Measurement

Standard Temperature (°C)	UUC* Reading (°C)	Error (°C)	Uncertainty of Measurement (±°C)
20.014	20.4	0.386	0.42
25.022	25.6	0.578	0.42
30.033	30.3	0.267	0.42
40.000	40.1	0.100	0.42

UUC* : Unit Under Calibration

The reported uncertainty of measurement was base on standard uncertainty multiplied by coverage factor k = 2.00, providing confidence level approximately 95%.

-000-

เอกสารไม่ควบคุม
a 1162980



INNOVATIVE
Calibration Laboratory



Page 1 of 2

Certificate of Calibration

Customer

Name : UNITED ANALYST AND ENGINEERING
CONSULTANT CO., LTD.

Address : 81 Soi Udomsuk 41, Sukhumvit Road, Bangchak,
Prakanong, Bangkok 10260

Certificate No : 23-ACT-111

Request No : Req-2023-1408

Unit Under Calibration Details

Measurement item : Acoustic Calibrator

Manufacturer : SVANTEK

Model : SV 35A

Serial Number : 73249

ID : UAE.EFM.105/2561

Class : 1

Range : 94 , 114 dB / 1000 Hz

Instrument Status : Used

Calibration Environment and Details

Temperature : (23 ± 2 °C)

Humidity : (50 ± 20 %RH)

Barometric Pressure : (1013 ± 10.0 hPa)

Received Date : 26 June 2023

Calibration Date : 27 June 2023

Location of Calibration : LAB 1 Acoustic

Calibration Procedure : In-house method CP-ACT-02 based on IEC 60942:2017 Electroacoustics - Sound calibrators

Reference Standard	Model	Serial Number	Traceable	Due Calibration
Sound Calibrator	SV 35A	58079	EET	31 May 2024
THD Multimeter	2015	1047765	NIMT	31 January 2024

Traceability : This certificate provides traceability of measurement to recognized national standard, and to the realization of the international System of Units (SI).

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor k=2, providing a level of confidence approximately 95 %.

Calibrated By :
Mr. Noppadon Luangart
Service Calibration Engineer

Approved By :
Mr. Pacit Mathavorn
Calibration Engineer Supervisor
Issue Date : 27 June 2023

เอกสารไม่ควบคุม



INNOVATIVE
Calibration Laboratory



Page 2 of 2

Certificate No : 23-ACT-111

Request No : Req-2023-1408

Sound pressure level

Calibration Results : Without Adjustment

Calibration Range (dB)	Without Adjustment (dB)		Adjustment (dB)		Uncertainty (± dB)	Acceptance limit Class 1 (± dB)
	Measured	Error	Measured	Error		
94 dB / 1000 Hz	93.84	-0.16	-	-	0.14	0.25
114 dB / 1000 Hz	113.79	-0.21	-	-	0.13	0.25

Frequency of Sound pressure level

Calibration Range (Hz)	Without Adjustment		Adjustment		Uncertainty (± %)	Acceptance limit Class 1 (± %)
	Measured (Hz)	Error (%)	Measured (Hz)	Error (%)		
94 dB / 1000 Hz	1000.00	0.00	-	-	0.01	0.70
114 dB / 1000 Hz	1000.00	0.00	-	-	0.01	0.70

Total Harmonic Distortion plus Noise of Sound pressure level (THD+N %)

Calibration Range (Hz)	Without Adjustment		Adjustment		Uncertainty (± %)	Acceptance limit Class 1 (± %)
	Measured (%)	Error (%)	Measured (%)	Error (%)		
94 dB / 1000 Hz	0.17	-	-	-	0.40	2.5
114 dB / 1000 Hz	0.04	-	-	-	0.40	2.5

Note :

- Acceptance limit was IEC60942:2017 Class 1

- The calibration results exclude the calibrator pressure correction

- The calibration results exclude the microphone volume correction

End of Calibration

เอกสารไม่ควบคุม

Certificate of Calibration

Customer

Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO.LTD.
Address : 81 Soi Udomrak 41, Sakhumvit Road, Bangkok, Prakanong, Bangkok 10260

Certificate No : 24-NDM-105
Request No : Req-2024-0726

Unit Under Calibration Details

Measurement item : Noise Dosimeter
Manufacturer : SVANTEK
Model : SV 104
Serial Number : 117689
ID : UAE.EFM.113/2565
Resolution : 0.1 dB
Microphone Class : 2
Microphone Model : SV27
Microphone SN : 112934
Preamplifier Model : -
Preamplifier SN : -
Instrument Status : Used

Calibration Environment and Details


Temperature : 23 °C ± 2 °C
Humidity : 50 %RH ± 20 %RH
Barometric Pressure : 1013 hPa ± 10 hPa
Received Date : 15 March 2024
Calibrated Date : 25 April 2024
Calibration Procedure : In-house method CP-NDM-01 based on IEC 61252 : 2017
Location of Calibration : Lab Acoustic


Reference Standard

Instrument	Brand	Model	SN	Due calibration	Traceability
Multi-frequency Calibrator	Quest	Quest-cal	EFA000214	25 July 2024	TSI
Standard Microphone	GRAS	40AN	189273	21 August 2024	GRAS
Sine Generator	SvanteK	SvanteK01	131	9 October 2024	WK Electric
Timer	EXTECH	-	05-ACT	14 March 2025	TPA

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor k = 2, providing a level of confidence approximately 95 %.

Calibrated By : 
Mr. Noppadon Luangrat
Service Calibration Engineer

Approved By : 
Mr. Puchit Mathavorn
Calibration Engineer Supervisor
Issue Date : 25 April 2024

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

FM-708-NDM-01 Rev.02 Issue date: 11/23

Certificate No : 24-NDM-105
Request No : Req-2024-0726

3. Linearity of response to steady signals

a. Sound exposure meter, linearity of response for changes of input sinusoidal signal level

UUC Setting		FAST / A / High									
1000 Hz	Ref	(dB)	55.0	80.0	90.0	100.0	110.0	114.0	120.0	130.0	140.0
	Level A	(dB)	54.6	80.2	90.2	100.0	110.0	114.0	120.0	130.0	140.0
	Error	(dB)	-0.4	0.2	0.2	0.0	0.0	0.0	0.0	0.0	0.0
8000 Hz	Ref	(dB)			88.9	98.9	108.9	112.9	118.9	128.9	138.9
	Level A	(dB)			89.0	99.0	109.0	112.9	118.9	128.9	138.9
	Error	(dB)			0.1	0.0	0.0	0.0	0.0	0.0	-0.1
63 Hz	Ref	(dB)					87.8	93.8	103.8	113.8	
	Level A	(dB)						87.8	93.7	103.7	113.7
	Error	(dB)							0.0	-0.1	-0.1
Tolerances Limit		(±dB)	1.0								
UNCERTAINTY		(±dB)	0.3								

b. Sound exposure meter linearity of error

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances Limit
	Ref	UUC	Ref	UUC	Error		
FAST / A / 55-140	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
1000 Hz 110 dB	27	27	0.30	0.30	0.00	5.6	-21 ~ +26
1000 Hz 110 dB	45	45	0.50	0.50	0.00	5.6	-21 ~ +26
1000 Hz 110 dB	90	90	1.00	0.99	-1.00	5.6	-21 ~ +26
1000 Hz 110 dB	180	180	2.00	1.98	-1.00	5.6	-21 ~ +26
1000 Hz 120 dB	36	36	4.00	4.05	+0.75	5.6	-21 ~ +26
1000 Hz 120 dB	72	72	8.00	8.05	+0.63	5.6	-21 ~ +26
1000 Hz 120 dB	90	90	10.00	10.13	+1.30	5.6	-21 ~ +26
1000 Hz 120 dB	180	180	20.00	20.22	+1.10	5.6	-21 ~ +26
1000 Hz 120 dB	360	360	40.00	40.34	+0.85	5.6	-21 ~ +26
1000 Hz 120 dB	720	720	80.00	80.49	+0.61	5.6	-21 ~ +26

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

FM-708-NDM-01 Rev.02 Issue date: 11/23

Certificate No : 24-NDM-105
Request No : Req-2024-0726

1. Absolute acoustical sensitivity

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances Limit
	Ref	UUC	Ref	UUC	Error		
FAST / A / 55-140	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
1000 Hz 114 dB	120	120	3.18	3.13	-1.6	3.1	-21 ~ +26

Note : Absolute sensitivity was established by the use of Sound Calibrator Brand SVANTEK, Model SV 35A, SN. 58079.

2. Frequency weightings

UUC Setting	Deviation from various Frequency Weighting		UNCERTAINTY	Tolerances Limit
	A	C		
FAST / 55-140	(dB)	(dB)	(± dB)	(± dB)
STD Setting	(dB)	(dB)	(± dB)	(± dB)
63 Hz	0.1	0.1	0.40	2.0
125 Hz	-0.2	-0.1	0.40	1.5
250 Hz	0.0	0.1	0.40	1.5
500 Hz	0.0	0.1	0.40	1.5
1000 Hz	0.0	0.0	0.40	-
2000 Hz	0.0	0.0	0.40	2.0
4000 Hz	2.1	2.1	0.40	3.0
8000 Hz	0.6	0.6	0.40	5.0

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

FM-708-NDM-01 Rev.02 Issue date: 11/23

Certificate No : 24-NDM-105
Request No : Req-2024-0726

4. Response to short duration

a. Response for sinusoidal signals - reference level

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances Limit
	Ref	UUC	Ref	UUC	Error		
FAST / A / 55-140	(s)	(s)	(Pa ² h)	(Pa ² h)	(Pa ² h)	(Pa ² h)	(Pa ² h)
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(Pa ² h)	(Pa ² h)	(Pa ² h)
4000 Hz 95 dB	2846	2846	1.00	0.98	-0.02	0.052	-0.29 ~ +0.41

b. Sound exposure meter response for series of toneburst impulses

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances Limit
	Ref	UUC	Ref	UUC	Error		
FAST / A / 55-140	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Burst 1 ms, 95 dB	2846	2846	1.00	0.98	-2.00	5.6	-21 ~ +26
Burst 1 ms, 100 dB	900	900	1.00	0.98	-2.00	5.6	-21 ~ +26
Burst 1 ms, 108 dB	143	143	1.00	0.99	-1.00	5.6	-21 ~ +26

5. Response to unipolar pulse

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances Limit
	Ref	UUC	Ref	UUC	Error		
FAST / A / 55-140	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Continuous Rectangle +	29	29	10.37	10.37	0.00	3.7	-21 ~ +26
Continuous Rectangle -	29	29	10.37	10.37	0.00	3.7	-21 ~ +26

* Indicates non accredited

End of Certificate

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

FM-708-NDM-01 Rev.02 Issue date: 11/23

Certificate of Calibration

Customer

Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO.,LTD.
Address : 81 Soi Udomsuk 41, Sakhuemvit Road, Bangchuk, Prakanong, Bangkok 10260

Certificate No : 24-NDM-107
Request No : Req-2024-0832

Unit Under Calibration Details

Measurement item : Noise Downstream Microphone Class : 2
Manufacturer : SVANTER Microphone Model : SV27
Model : SV 104 Microphone S/N : 112806
Serial Number : 117693 Preamplifier Model : -
ID : UAE.EFM.115.2565 Preamplifier S/N : -
Resolution : 0.1 dB Instrument Status : Used

Calibration Environment and Details

Temperature : 23 °C ± 2 °C
Humidity : 50 %RH ± 20 %RH
Barometric Pressure : 1013 hPa ± 10 hPa
Received Date : 10 April 2024
Calibrated Date : 26 April 2024
Calibration Procedure : In-house method CP-NDM-01 based on IEC 61252 : 2017
Location of Calibration : Lab Acoustic


Reference Standard

Instrument	Brand	Model	SN	Due calibration	Traceability
Multi-frequency Calibrator	Quest	Questcal	EFA000234	25 July 2024	TSI
Standard Microphone	GRAS	40AN	188273	21 August 2024	GRAS
Sine Generator	Svantek	Sva491	131	9 October 2024	WK Electric
Timer	EXTech	-	05-ACT	14 March 2025	TPA

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor $k = 2$, providing a level of confidence approximately 95 %.

Calibrated By : 
Mr. Noppadon Luangrat
Service Calibration Engineer

Approved By : 
Mr. Pacht Mathavorn
Calibration Engineer Supervisor
Issue Date : 26 April 2024

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

PM-708-NDM-01 Rev.02 Issue date: 11/1/23

Certificate No : 24-NDM-107
Request No : Req-2024-0832

1. Absolute acoustical sensitivity

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances
FAST / A / 55-140	Ref	UUC	Ref	UUC	Error	(%)	Limit
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
1000 Hz 114 dB	120	120	3.18	3.13	-1.6	3.1	-21, +26

Note : Absolute sensitivity was established by the use of Sound Calibrator Brand SVANTER, Model SV 35A, SN. 58079

2. Frequency weightings

UUC Setting	Deviation from various Frequency Weighting		UNCERTAINTY	Tolerances
FAST / 55-140	A	C	(± dB)	(± dB)
STD Setting	(dB)	(dB)		
*63 Hz	0.2	0.2	0.40	2.0
125 Hz	-0.2	0.0	0.40	1.5
250 Hz	0.0	0.2	0.40	1.5
500 Hz	0.1	0.2	0.40	1.5
1000 Hz	0.0	0.0	0.40	-
2000 Hz	0.1	0.2	0.40	2.0
4000 Hz	2.3	2.4	0.40	3.0
8000 Hz	0.7	0.7	0.40	5.0

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

PM-708-NDM-01 Rev.02 Issue date: 11/1/23

Certificate No : 24-NDM-107
Request No : Req-2024-0832

3. Linearity of response to steady signals

a. Sound exposure meter, linearity of response for changes of input sinusoidal signal level

UUC Setting	FAST / A / High									
1000 Hz	Ref	(dB)	55.0	80.0	90.0	100.0	110.0	114.0	120.0	130.0
Level A	(dB)	54.6	80.1	90.1	100.0	110.0	114.0	120.0	130.0	140.0
Error	(dB)	-0.4	0.1	0.1	0.0	0.0	0.0	0.0	0.0	0.0
8000 Hz	Ref	(dB)			88.9	98.9	108.9	112.9	118.9	128.9
Level A	(dB)				88.9	98.9	108.9	112.9	118.9	128.9
Error	(dB)				0.0	0.0	0.0	0.0	0.0	-0.1
63 Hz	Ref	(dB)					87.8	93.8	103.8	113.8
Level A	(dB)						87.8	93.8	103.8	113.8
Error	(dB)						0.0	0.0	0.0	0.0
Tolerances Limit	(±dB)						1.0			
UNCERTAINTY	(±dB)						0.3			

b. Sound exposure meter linearity of error

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances
FAST / A / 55-140	Ref	UUC	Ref	UUC	Error	(%)	Limit
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
1000 Hz 110 dB	27	27	0.30	0.30	0.00	5.6	-21, +26
1000 Hz 110 dB	45	45	0.50	0.50	0.00		
1000 Hz 110 dB	90	90	1.00	0.99	-1.00		
1000 Hz 110 dB	180	180	2.00	1.98	-1.00		
1000 Hz 120 dB	36	36	4.00	3.94	-1.50		
1000 Hz 120 dB	72	72	8.00	7.87	-1.63		
1000 Hz 120 dB	90	90	10.00	9.90	-1.00		
1000 Hz 120 dB	180	180	20.00	19.76	-1.20	5.6	-21, +26
1000 Hz 120 dB	360	360	40.00	39.42	-1.45		
1000 Hz 120 dB	720	720	80.00	78.66	-1.68		

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

PM-708-NDM-01 Rev.02 Issue date: 11/1/23

Certificate No : 24-NDM-107
Request No : Req-2024-0832

4. Response to short duration

a. Response for sinusoidal signals – reference level

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances
FAST / A / 55-140	Ref	UUC	Ref	UUC	Error	(%)	Limit
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(Pa ² h)	(Pa ² h)	(Pa ² h)
4000 Hz 95 dB	2846	2846	1.00	1.00	0.00	0.052	-0.29, +0.41

b. Sound exposure meter response for series of toneburst impulses

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances
FAST / A / 55-140	Ref	UUC	Ref	UUC	Error	(%)	Limit
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Burst 1 ms, 95 dB	2846	2846	1.00	1.00	0.00		-21, +26
Burst 1 ms, 100 dB	900	900	1.00	1.00	0.00	5.6	-29, +41
Burst 1 ms, 108 dB	143	143	1.00	1.01	+1.00		-29, +41

5. Response to unipolar pulse

UUC Setting	Time		Exposure Measurement			UNCERTAINTY	Tolerances
FAST / A / 55-140	Ref	UUC	Ref	UUC	Different	(%)	Limit
Calibrator Setting	(s)	(s)	(Pa ² h)	(Pa ² h)	(%)	(%)	(%)
Continuous Rectangle +			10.13				-21, +26
Continuous Rectangle -	29		10.13		0.00	3.7	

* Indicates non accredited

End of Certificate

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the

เอกสารไม่ควบคุม

PM-708-NDM-01 Rev.02 Issue date: 11/1/23

Calibration Certificate

Equipment : SOUND LEVEL METER
Manufacturer : RION
Model : NL-42 / Microphone UC-52 / Preamplifier NH-24
Serial No.: 00409050 / 189687 / 90495
ID No.: UAE.EFM.012/2564

Condition As Found : GOOD

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT (UAE)
81 SOI UDOMSUK 41, SUKHUMVIT ROAD,
BANGCHAK SUB-DISTRICT,
PHRAKHANONG DISTRICT, BANGKOK 10260
THAILAND.

Location : -
Ambient Temperature : (23.0 ± 3) °C
Pressure : (101.3 ± 3) kPa
Relative Humidity : (50.0 ± 20) %

Received Date : 21 DECEMBER 2023
Calibration Date : 18-19 JANUARY 2024
Date of Issue : 22 JANUARY 2024

Calibrated by : Nathakorn Pisutpaisan

Approved by : 
(Thanakul Petchurai)

This certificate is issued in accordance with the requirements of ISO/IEC 17025 standard, may not be reproduced
other than in full, except with the prior written approval of the head of Calibration Laboratory.

เอกสารไม่ควบคุม

Summary of Measurement Result :

Parameter	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1. Absolute sensitivity	0.2	N/A
2. Self-generated noise	0.2	N/A
3. Acoustical signal tests of frequency weightings		
125 Hz	0.3	0.6
1000 Hz	0.3	0.6
8000 Hz	0.3	0.7
4. Electrical signal tests of frequency weightings		
For 10 Hz to 4 kHz	0.3	0.6
For > 4 kHz to 10 kHz	0.3	0.7
For > 10 kHz to 20 kHz	-	1.0
5. Frequency and time weightings at 1 kHz	0.2	0.2
6. Long - term stability	0.1	0.1
7. Level linearity on the reference level range	0.2	0.3
8. Level linearity including the level range control	0.2	0.3
9. Tone burst response	0.2	0.3
10. Peak C sound level	0.2	0.35
11. Overload indication	0.2	0.25
12. High level stability	0.1	0.1

เอกสารไม่ควบคุม

Calibration Procedure : CP-AC-01

Calibration Method :

This equipment was calibrated by follow on IEC-61672-3 (2013) Standard for sound level meter (SLM).
The SLM had tests to Acoustical and Electrical signal tests of frequency weighting with Anechoic chamber and Reference
Standard Instruments.
For tests results of each items were made by observation of each Instruments display and also with SLM's display.

Condition of this result of calibration :

1. Reference Standard Instruments :

Instrument	Model	Serial No.	Cert. No.	Due Date
Waveform Generator	33210A	MY48017076	EF-0009-23	07-FEB-24
Waveform Generator	33511B	MY52302742	EF-0010-23	07-FEB-24
Digital Multimeter	33461A	MY53220104	EEL.BP 30/0266	13-FEB-24
Digital Multimeter	33461A	MY53220076	EEL.BP 29/0266	13-FEB-24
Digital Multimeter	34461A	MY60024273	EEL.BP 31/0266	14-FEB-24
Programmable Attenuator	MAT-1070	62100114	EF-0011-23	08-FEB-24
Condenser Microphone	4180	2977900	AA-1001-23	14-FEB-24
Measuring Amplifier	NA-42KAI	34560495	AA-3002-23	14-FEB-24

2. This result of calibration was found accurate as shown on date and place of calibration for this calibrated item only.
3. This certificate is traceable to the international system of unit maintained at :

- 3.1 National Institute of Metrology (Thailand),
3.2 Thailand Institute of Scientific and Technological Research (TISTR).

เอกสารไม่ควบคุม

Result of calibration :

1. Absolute sensitivity

Reference Acoustic Signal (dB)	Measured Value (dB)	Deviation (dB)	Acceptance Limit (dB)
93.9 (93.98)	93.9	0.0	±0.3

2. Self-generated noise

2.1 Normal test

Measured Value (dB)
14.2

2.2 The microphone of the sound level meter was replaced by electrical signal input device.

Frequency Weighting	Measured value (dB)
A - weight	9.9
C - weight	16.6
Flat	22.6

3. Acoustical signal tests of frequency weightings

Meter free-field acoustic response at a level of 84 dB

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
125	0.5	0.5	0.5	± 1.5
1000	0.3	0.3	0.3	± 1.0
8000	0.1	0.2	0.2	±5.0

เอกสารไม่ควบคุม

Cert. No. : ACL24053
Job No. : VC67AC0034
Pages : 5 of 8

4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
63	-0.1	-0.1	-0.1	±2.0
125	0.0	0.0	-0.1	±1.5
250	0.0	0.0	-0.1	±1.5
500	0.0	0.0	-0.1	±1.5
1000	0.0	0.0	0.0	±1.0
2000	0.0	0.0	0.0	±2.0
4000	0.0	0.0	0.0	±3.0
8000	0.0	0.0	0.0	±5.0

5. Frequency and time weightings at 1 kHz

5.1 Frequency weightings at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.2
C - weight	94.0	94.0	0.0	± 0.2
Flat	94.0	94.0	0.0	± 0.2

5.2 Time weighting at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	94.0	94.0	0.0	± 0.1
Slow	94.0	94.0	0.0	± 0.1
Loq	94.0	94.0	0.0	± 0.1

6. Long - term stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.3

เอกสารไม่ควบคุม
T. KelnCert. No. : ACL24053
Job No. : VC67AC0034
Pages : 6 of 8

7. Level linearity on the reference level range

Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
137.0	137.0	0.0	± 1.1
136.0	136.0	0.0	± 1.1
135.0	135.1	0.1	± 1.1
134.0	134.1	0.1	± 1.1
133.0	133.0	0.0	± 1.1
132.0	132.0	0.0	± 1.1
131.0	131.0	0.0	± 1.1
129.0	129.0	0.0	± 1.1
124.0	124.0	0.0	± 1.1
119.0	119.1	0.1	± 1.1
114.0	114.0	0.0	± 1.1
109.0	109.0	0.0	± 1.1
104.0	104.1	0.1	± 1.1
99.0	99.0	0.0	± 1.1
94.0	94.0	0.0	± 1.1
89.0	89.0	0.0	± 1.1
84.0	84.0	0.0	± 1.1
79.0	79.0	0.0	± 1.1
74.0	74.0	0.0	± 1.1
69.0	69.0	0.0	± 1.1
64.0	64.0	0.0	± 1.1
59.0	59.0	0.0	± 1.1
54.0	54.0	0.0	± 1.1
49.0	49.0	0.0	± 1.1
44.0	44.0	0.0	± 1.1
39.0	39.0	0.0	± 1.1
34.0	34.0	0.0	± 1.1
30.0	30.0	0.0	± 1.1
29.0	29.0	0.0	± 1.1
28.0	28.0	0.0	± 1.1
27.0	27.0	0.0	± 1.1
26.0	26.1	0.1	± 1.1
25.0	25.1	0.1	± 1.1

เอกสารไม่ควบคุม
T. KelnCert. No. : ACL24053
Job No. : VC67AC0034
Pages : 7 of 8

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±1.1

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.5 ; -5.0
	2	8	117.0	116.9	-0.1	1.0 ; -2.5
	200	800	134.0	134.0	0.0	±1.0
Slow	2	8	108.0	108.0	0.0	1.5 ; -5.0
	200	800	127.6	127.6	0.0	±1.0
SEL	0.25	1	99.0	98.8	-0.2	1.5 ; -5.0
	2	8	108.0	107.9	-0.1	1.0 ; -2.5
	200	800	128.0	128.0	0.0	±1.0

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, L _{peak} (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±3.0
One	136.4	136.3	-0.1	±3.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±2.0
Positive half cycle	135.4	135.1	-0.3	±2.0
Negative half cycle	135.4	135.1	-0.3	±2.0

เอกสารไม่ควบคุม
T. KelnCert. No. : ACL24053
Job No. : VC67AC0034
Pages : 8 of 8

11. Overload indication

Measured value (dB)		Deviated Value (dB)	Acceptance Limits (dB)
Positive one-half cycle	Negative one-half cycle		
89.6	89.6	0.0	±1.5

12. High level stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	137.0	137.0	0.0	±0.3

The reported uncertainty is based on a standard uncertainty multiplied by coverage factor $k = 2$
or any value following calculation, providing a level of confidence of approximately 95 %

End of Calibration Certificate

เอกสารไม่ควบคุม
T. Keln

Cert. No. : ACL24051
Pages : 1 of 8

Calibration Certificate

Equipment : SOUND LEVEL METER
Manufacturer : RION
Model : NL-42 / Microphone UC-52 / Preamplifier NH-24
Serial No.: 00408982 / 186172 / 00727
ID No.: UAE.EFM.009/2564

Condition As Found : GOOD

Customer : UNITED ANALYST AND ENGINEERING CONSULTANT (UAE)
81 SOI UDOMSUK 41, SUKHUMVIT ROAD,
BANGCHAK SUB-DISTRICT,
PHRAKHANONG DISTRICT, BANGKOK 10260
THAILAND.

Location : -
Ambient Temperature : (23.0 ± 3) °C
Pressure : (101.3 ± 3) kPa
Relative Humidity : (50.0 ± 20) %

Received Date : 21 DECEMBER 2023
Calibration Date : 18-19 JANUARY 2024
Date of Issue : 22 JANUARY 2024

Calibrated by : Nathakorn Pisutpaisan

Approved by :


(Thanakul Petchurai)

This certificate is issued in accordance with the requirements of ISO/IEC 17025 standard, may not be reproduced
other than in full, except with the prior written approval of the head of Calibration Laboratory.

เอกสารไม่ควบคุม

Cert. No. : ACL24051
Job No. : VC67AC0034
Pages : 3 of 8

Summary of Measurement Result :

Parameter	Uncertainty (dB)	Maximum-permitted uncertainty of measurement (dB)
1. Absolute sensitivity	0.2	N/A
2. Self-generated noise	0.2	N/A
3. Acoustical signal tests of frequency weightings		
125 Hz	0.3	0.6
1000 Hz	0.3	0.6
8000 Hz	0.3	0.7
4. Electrical signal tests of frequency weightings		
For 10 Hz to 4 kHz	0.3	0.6
For > 4 kHz to 10 kHz	0.3	0.7
For > 10 kHz to 20 kHz	-	1.0
5. Frequency and time weightings at 1 kHz	0.2	0.2
6. Long - term stability	0.1	0.1
7. Level linearity on the reference level range	0.2	0.3
8. Level linearity including the level range control	0.2	0.3
9. Tone burst response	0.2	0.3
10. Peak C sound level	0.2	0.35
11. Overload indication	0.2	0.25
12. High level stability	0.1	0.1

เอกสารไม่ควบคุม

Cert. No. : ACL24051
Job No. : VC67AC0034
Pages : 2 of 8

Calibration Procedure : CP-AC-01

Calibration Method :

This equipment was calibrated by follow on IEC-61672-3 (2013) Standard for sound level meter (SLM).
The SLM had tests to Acoustical and Electrical signal tests of frequency weighting with Anechoic chamber and Reference
Standard Instruments.
For tests results of each items were made by observation of each Instruments display and also with SLM's display.

Condition of this result of calibration :

1. Reference Standard Instruments :

Instrument	Model	Serial No.	Cert. No.	Due Date
Waveform Generator	33210A	MY48017076	EF-0009-23	07-FEB-24
Waveform Generator	33511B	MY52302742	EF-0010-23	07-FEB-24
Digital Multimeter	33461A	MY53220104	EEL.BP 30/0266	13-FEB-24
Digital Multimeter	33461A	MY53220076	EEL.BP 29/0266	13-FEB-24
Digital Multimeter	34461A	MY60024273	EEL.BP 31/0266	14-FEB-24
Programmable Attenuator	MAT-1070	62100114	EF-0011-23	08-FEB-24
Condenser Microphone	4180	2977900	AA-1001-23	14-FEB-24
Measuring Amplifier	NA-42KA1	34560495	AA-3002-23	14-FEB-24

2. This result of calibration was found accurate as shown on date and place of calibration for this calibrated item only.

3. This certificate is traceable to the international system of unit maintained at :

- 3.1 National Institute of Metrology (Thailand).
3.2 Thailand Institute of Scientific and Technological Research (TISTR).

เอกสารไม่ควบคุม

Cert. No. : ACL24051
Job No. : VC67AC0034
Pages : 4 of 8

Result of calibration :

1. Absolute sensitivity

Reference Acoustic Signal (dB)	Measured Value (dB)	Deviation (dB)	Acceptance Limit (dB)
93.9 (93.98)	93.9	0.0	±0.3

2. Self-generated noise

2.1 Normal test

Measured Value (dB)
14.8

2.2 The microphone of the sound level meter was replaced by electrical signal input device.

Frequency Weighting	Measured value (dB)
A - weight	12.6
C - weight	19.2
Flat	24.7

3. Acoustical signal tests of frequency weightings

Meter free-field acoustic response at a level of 84 dB

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
125	0.0	0.1	0.1	± 1.5
1000	0.0	0.0	0.0	± 1.0
8000	2.3	2.4	2.4	±5.0

เอกสารไม่ควบคุม

Cert. No. : ACL24051
Job No. : VC67AC0034
Pages : 5 of 8

4. Electrical signal tests of frequency weightings

Weighting network response with relative to 1 kHz.

Frequency (Hz)	Deviation from various frequency weighting response curve (dB)			
	Flat	C-weight	A-weight	Acceptance Limits
63	-0.1	0.0	0.0	±2.0
125	0.0	0.0	0.0	±1.5
250	0.0	0.0	0.0	±1.5
500	0.0	0.1	0.0	±1.5
1000	0.0	0.0	0.0	±1.0
2000	0.0	0.1	0.0	±2.0
4000	0.0	0.0	0.0	±3.0
8000	0.0	0.1	0.1	±5.0

5. Frequency and time weightings at 1 kHz

5.1 Frequency weightings at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.2
C - weight	94.0	94.0	0.0	± 0.2
Flat	94.0	94.0	0.0	± 0.2

5.2 Time weighting at 1 kHz

Frequency Weighting	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	94.0	94.0	0.0	± 0.1
Slow	94.0	94.0	0.0	± 0.1
Leq	94.0	94.0	0.0	± 0.1

6. Long - term stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	94.0	94.0	0.0	± 0.2

เอกสารไม่ควบคุม
T. KeluCert. No. : ACL24051
Job No. : VC67AC0034
Pages : 6 of 8

7. Level linearity on the reference level range

Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
137.0	137.0	0.0	± 1.1
136.0	136.0	0.0	± 1.1
135.0	135.0	0.0	± 1.1
134.0	134.0	0.0	± 1.1
133.0	133.0	0.0	± 1.1
132.0	132.0	0.0	± 1.1
131.0	131.0	0.0	± 1.1
129.0	129.0	0.0	± 1.1
124.0	124.0	0.0	± 1.1
119.0	119.0	0.0	± 1.1
114.0	114.0	0.0	± 1.1
109.0	109.0	0.0	± 1.1
104.0	104.0	0.0	± 1.1
99.0	99.0	0.0	± 1.1
94.0	94.0	0.0	± 1.1
89.0	89.0	0.0	± 1.1
84.0	84.0	0.0	± 1.1
79.0	79.0	0.0	± 1.1
74.0	74.0	0.0	± 1.1
69.0	69.0	0.0	± 1.1
64.0	64.0	0.0	± 1.1
59.0	59.0	0.0	± 1.1
54.0	54.0	0.0	± 1.1
49.0	49.0	0.0	± 1.1
44.0	44.0	0.0	± 1.1
39.0	39.0	0.0	± 1.1
34.0	34.0	0.0	± 1.1
30.0	29.9	-0.1	± 1.1
29.0	28.9	-0.1	± 1.1
28.0	27.9	-0.1	± 1.1
27.0	26.9	-0.1	± 1.1
26.0	25.9	-0.1	± 1.1
25.0	24.9	-0.1	± 1.1

เอกสารไม่ควบคุม
T. KeluCert. No. : ACL24051
Job No. : VC67AC0034
Pages : 7 of 8

8. Level linearity including the level range control

Range	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Auto	94.0	94.0	0.0	±1.1

9. Tone burst response

Time Weighting	Tone burst duration, Tb (ms)	Cycle	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Fast	0.25	1	108.0	107.9	-0.1	1.5 ; -5.0
	2	8	117.0	117.0	0.0	1.0 ; -2.5
	200	800	134.0	134.1	0.1	±1.0
Slow	2	8	108.0	108.0	0.0	1.5 ; -5.0
	200	800	127.6	127.6	0.0	±1.0
SEL	0.25	1	99.0	98.9	-0.1	1.5 ; -5.0
	2	8	108.0	108.0	0.0	1.0 ; -2.5
	200	800	128.0	128.1	0.1	±1.0

10. Peak C sound level

Number of cycle in test signal	Anticipated Value (dB)	Measured Value, Lepeak (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±3.0
One	136.4	136.3	-0.1	±3.0

Number of cycle in test signal	Anticipated Value (dB)	Measured Value (dB)	Deviated Value (dB)	Acceptance Limits (dB)
Continuous	133.0	133.0	0.0	±2.0
Positive half cycle	135.4	135.2	-0.2	±2.0
Negative half cycle	135.4	135.2	-0.2	±2.0

เอกสารไม่ควบคุม
T. KeluCert. No. : ACL24051
Job No. : VC67AC0034
Pages : 8 of 8

11. Overload indication

Measured value (dB)		Deviated Value (dB)	Acceptance Limits (dB)
Positive one-half cycle	Negative one-half cycle		
89.6	89.5	-0.1	±1.5

12. High level stability

Frequency Weighting	SLM Display at initial (dB)	SLM Display at final (dB)	Deviated Value (dB)	Acceptance Limits (dB)
A - weight	137.0	137.0	0.0	±0.3

The reported uncertainty is based on a standard uncertainty multiplied by coverage factor $k = 2$
or any value following calculation, providing a level of confidence of approximately 95 %

End of Calibration Certificate

เอกสารไม่ควบคุม
T. Kelu

Certificate of Calibration

Customer
Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO.,LTD.
Address : 81 Soi Udomsak 41, Sukhumvit Road, Bangchak, Prakanong, Bangkok 10260

Certificate No : 23-LXM-168
Request No : Req-2023-0913
Page : 1/2

Unit Under Calibration Details

Instrument Name : Digital Lux Meter
Manufacturer : EXTECH
Model : 407026
Serial Number : A052209
Resolution : 1 lx
ID Number : UAE.EFM.173/2564

Range Calibration : 2000 , 20000 lx
Instrument Status : Used

Calibration Environment and Details


Temperature : 25 °C ± 2 °C
Humidity : 60 %RH ± 20 %RH
Received Date : 27 April 2023
Calibrated Date : 19 May 2023
Calibration Procedure : The measurement was done in accordance with CP-LXM-01

Reference Standard : Photometer and Illuminance Sensor, Serial No.: 30662/2, 30592/2, which was calibrated on 11 November 2022, Certificate No.: TP-1027-22

Traceability : This Certificate is traceable to International System of Unit (SI) Unit through National Institute of Metrology (Thailand)

Note

The reported uncertainty is based on a standard uncertainty multiplied by the Coverage Factor $k = 2$, providing a level of confidence approximately 95 %.

Approved By : 
Mr. Pait Mahavorn
Calibration Engineer Supervisor
Issue Date : 19 May 2023

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the Innovative Instrument Co., Ltd.

FM-เอกสารไม่ควบคุม

Calibration Note
UUC Adjustment : Zero adjustment before use


Certificate No : 23-LXM-168
Request No : Req-2023-0913
Page : 2/2

Result of Calibration :

UUC Range (lx)	Standard (lx)	UUC Reading (lx)	Correction (lx)	Uncertainty (± lx)
2000	0	0	0	0.0058
	50	50	0	2.2 % of Reading
	100	101	-1	2.2 % of Reading
	200	201	-1	2.2 % of Reading
	300	303	-3	2.2 % of Reading
	400	403	-3	2.2 % of Reading
	600	605	-5	2.2 % of Reading
	800	808	-8	2.2 % of Reading
	1000	1010	-10	2.2 % of Reading
	1200	1210	-10	2.2 % of Reading
	1400	1411	-11	2.2 % of Reading
	1600	1613	-13	2.2 % of Reading
	1800	1808	-8	2.2 % of Reading
	2000	1988	12	2.2 % of Reading
20000	3000	2980	20	2.2 % of Reading
	4000	3970	30	2.2 % of Reading
	5000	4950	50	2.2 % of Reading

* Indicates non accredited

End of Certificate

Calibrated By : 
Mr. Noppadol Luangtan

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the Innovative Instrument Co., Ltd.

FM-เอกสารไม่ควบคุม

Certificate of Calibration

Customer
Name : UNITED ANALYST AND ENGINEERING CONSULTANT CO.,LTD.
Address : 81 Soi Udomsak 41, Sukhumvit Road, Bangchak, Prakanong, Bangkok 10260

Certificate No : 23-TPM-483
Request No : Req-2023-2174
Page : 1/2

Unit Under Calibration Details

Calibration Parameter : Temperature
Instrument Name : Thermal Environment Monitor
Manufacturer : 3M
Model : QT-32
Serial Number : TPS030806
Resolution : 0.1 °C
ID Number : UAE.EFM.081/2561

Range Calibration : 20 °C to 60 °C
Type of Sensor : RTD
Sensor Diameter (mm) : 4.5
Calibration Position (mm) : 67.5
Instrument Status : Used

Calibration Environment and Details


Temperature : 23 °C ± 3 °C
Humidity : 55 %RH ± 15 %RH
Received Date : 11 October 2023
Calibrated Date : 17 October 2023
Calibration Procedure : In-house method CP-TPM-01 by Comparison with Standard Thermometer.

Reference Standard : Digital Thermometer with Sensor, Manufacturer: GINGO-GINGO, Model: GT11/RTD100, SN: 08000057, ID: 02-TPM Which was calibrated on 27 February 2023. Calibration Certificate No.: QR23-0494

Traceability : This Certificate is traceable to SI Unit through Quality Reborn Co., Ltd., NSC-ONSC Accreditation No.: Calibration 0292

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor $k=2$, providing a level of confidence approximately 95 %.

Approved By : 
Mr. Noppadol Luangtan
Technical Manager
Issue Date : 17 October 2023

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the Innovative Instrument Co., Ltd.

เอกสารไม่ควบคุม


Calibration Note
UUC Adjustment : Not Adjust

Certificate No : 23-TPM-483
Request No : Req-2023-2174
Page : 2/2

Result of Calibration :

UUC Sensor	Standard Temperature (°C)	UUC Reading (°C)	Correction (°C)	Uncertainty (± °C)
WET	20.031	19.9	+0.1	0.13
	25.035	24.9	+0.1	0.13
	30.035	29.8	+0.2	0.13
	35.037	34.8	+0.2	0.13
	40.039	39.9	+0.1	0.13
	45.040	44.9	+0.1	0.13
	50.044	49.9	+0.1	0.13
	60.048	59.8	+0.2	0.13
DRY	20.033	19.9	+0.1	0.13
	25.035	24.9	+0.1	0.13
	30.034	29.9	+0.1	0.13
	35.036	34.9	+0.1	0.13
	40.038	40.0	0.0	0.13
	45.041	45.0	0.0	0.13
	50.044	50.0	0.0	0.13
	60.046	59.9	+0.1	0.13
GLOBE	20.031	19.9	+0.1	0.13
	25.035	24.9	+0.1	0.13
	30.034	29.8	+0.2	0.13
	35.036	34.8	+0.2	0.13
	40.040	39.9	+0.1	0.13
	45.041	44.9	+0.1	0.13
	50.042	49.9	+0.1	0.13
	60.047	59.8	+0.2	0.13

End of Certificate

Calibrated By : 
Mr. Sirichok Jirapokdeesul

The results related only to the item calibrated. The certificate shall not be reproduced except in full, without written approval of the Innovative Instrument Co., Ltd.

เอกสารไม่ควบคุม

Certificate of Calibration

Customer
Name : UNITED ANALYST AND ENGINEERING
CONSULTANT CO.,LTD.
Address : 81 Soi Udomsuk 41, Sukhumvit Road, Bangchak,
Prakanong, Bangkok 10260

Certificate No : 23-TPM-370
Request No : Req-2023-1525
Page : 1/2

Unit Under Calibration Details

Calibration Parameter : Temperature
Instrument Name : Thermal Environment Monitor
Manufacturer : 3M
Model : QT-32
Serial Number : TPQ020022
Resolution : 0.1 °C
ID Number : UAE,EFM,005/2559

Range Calibration : 20 °C to 60 °C
Type of Sensor : RTD
Sensor Diameter (mm) : 4.5
Calibration Position (mm) : 67.5
Instrument Status : Used


Calibration Environment and Details

Temperature : 23 °C ± 3 °C
Humidity : 55 %RH ± 15 %RH
Received Date : 21 July 2023
Calibrated Date : 7 August 2023
Calibration Procedure : In-house method CP-TPM-01 by Comparison with Standard Thermometer.

Reference Standard : Digital Thermometer with Sensor, Manufacturer: GINGO/GINGO, Model: GT11/RTD100, SN:
08000057, ID: 02-TPM Which was calibrated on 27 Febuary 2023, Calibration Certificate No. : QR23-
0494
Traceability : This Certificate is traceable to SI Unit through Quality Reborn Co., Ltd., NSC-ONSC Accreditation No.:
Calibration 0292

Note

The reported uncertainty is based on standard uncertainty multiplied by the Coverage Factor $k=2$, providing a level of confidence approximately 95 %.

Approved By : 
Mr. Noppadon Luangart
Technical Manager
Issue Date : 7 August 2023

เอกสารไม่ควบคุม

Calibration Note

UUC Adjustment : Not Adjust

Certificate No : 23-TPM-370


Request No : Req-2023-1525

Page : 2/2

Result of Calibration :

UUC Sensor	Standard Temperature (°C)	UUC Reading (°C)	Correction (°C)	Uncertainty (± °C)
WET	20.030	19.9	+ 0.1	0.13
	25.034	24.9	+ 0.1	0.13
	30.035	29.9	+ 0.1	0.13
	35.038	34.9	+ 0.1	0.13
	40.040	40.0	0.0	0.13
	45.042	45.0	0.0	0.13
	50.043	50.0	0.0	0.13
	60.048	60.0	0.0	0.13
DRY	20.033	20.0	0.0	0.13
	25.033	25.0	0.0	0.13
	30.036	30.0	0.0	0.13
	35.036	35.0	0.0	0.13
	40.040	40.0	0.0	0.13
	45.041	45.0	0.0	0.13
	50.045	50.0	0.0	0.13
	60.047	60.0	0.0	0.13
GLOBE	20.031	19.9	+ 0.1	0.13
	25.035	24.9	+ 0.1	0.13
	30.034	29.9	+ 0.1	0.13
	35.036	34.9	+ 0.1	0.13
	40.038	40.0	0.0	0.13
	45.042	45.0	0.0	0.13
	50.042	50.1	- 0.1	0.13
	60.048	60.1	- 0.1	0.13

End of Certificate

Calibrated By : 
Mr. Sirinichok Jirapaldestsakul

เอกสารไม่ควบคุม

List of Instrument Certificates for Environmental Quality Analysis

No.	Instrument/Equipment	Parameter	Manufacturer	Model/Serial No.	Calibrator	Certification No.	Date of Calibration	Due date of Calibration*
1	Atomic Absorption Spectrometer	CADMIUM LEAD	Agilent Technologies	AA240FS / MY13160001	Agilent Technologies (Thailand) Co.,Ltd.	Preventive Maintenance Checklist	24 Jan 24	23 Jan 25
2	Analytical Balance	FAT OIL AND GREASE	Mettler Toledo	AB204-S/FACT / 1129361010	Technology Promotion Association (Thailand-Japan)	24MM292	11 May 24	10 May 25
3	Analytical Balance	TOTAL DISSOLVED SOLIDS	Mettler Toledo	XSR205DU / C210685394	National Food Institute,Ministry of Industry, Thailand	2402283-002-01	2 Apr 24	1 Apr 25
4	Analytical Balance	TOTAL SUSPENDED SOLIDS	Mettler Toledo	XSR205DU / C009071872	National Food Institute,Ministry of Industry, Thailand	2402283-001-01	2 Apr 24	1 Apr 25
5	DO Meter	BIOCHEMICAL OXYGEN DEMAND	YSI	5100 / 11B 101863	Technology Promotion Association (Thailand-Japan)	24TW39	21 Feb 24	20 Feb 25
6	Hot Air Oven	TOTAL SUSPENDED SOLIDS	Memmert	UF55 / B212.0411	Technology Promotion Association (Thailand-Japan)	24TM589	1 Apr 24	31 Mar 25
7	Kjeltec System Distilling Unit	TOTAL KJELDAHL NITROGEN	Foss Tecator (Labtec)	KT200 / 91790524	FOSS South East Asia	9810	8 Feb 24	7 Feb 25
8	Kjeltec Distillation Unit	TOTAL KJELDAHL NITROGEN	FOSS	Kjeltec 8100 / 91889052	FOSS South East Asia	9807	8 Feb 24	7 Feb 25
9	pH Meter	pH	Horiba	LAQUA-PH210 / HA0A0007	technology promotion association (thailand-japan)	24CH399	2 Apr 24	1 Apr 25
10	SCT Meter	CONDUCTIVITY (umhos/cm)	YSI Environmental	Pro 30 / 23A104807	Technology Promotion Association (Thailand-Japan)	24CH405	3 Apr 24	2 Apr 25
11	UV-VIS Spectrophotometer	CHEMICAL OXYGEN DEMAND	Hitachi	U-1900 / 2021-064	DQE Services Co.,Ltd.	SP24-008	16 Jan 24	15 Jan 25

Due Date of Calibration* : Based on the annual calibration plan. At least 1 time per year.

Agilent 55 240 280 Series Atomic Absorption Spectroscopy Systems

Preventive Maintenance Checklist

Agilent Preventive Maintenance provides factory recommended service for your analytical systems to assure reliable operation and the accuracy of your results.

Delivered by highly trained and certified service engineers using genuine Agilent parts and supplies, Agilent Preventive Maintenance provides everything you need to reduce unplanned downtime and keep your systems operating at their peak. This checklist will be completed at the end of the service and provided to you as a record of the installation.

Note: While non-current production AA instrument and/or accessory models are not covered specifically in this document it can be used as a basic reference.

For more information about Agilent Technologies services please visit our web site using the following URL: <http://www.agilent.com/en-us/services>


Introduction

Customer Information

- Customers should provide all necessary operating supplies upon request of the engineer.
- A customer representative should be available to the engineer while performing the preventive maintenance procedures.
- Any parts, not included in the Parts Lists section of this document, are not part of the recommended Preventive Maintenance service, nor are they included in the price of this service.
- If a system requires the use of extra or special procedures and/or parts for the maintenance service, then these must be ordered separately and charged as a repair, which may incur additional costs.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Important Customer Web Links

- For more information about Agilent Technologies services, please visit our website using the following URL: <http://www.agilent.com/en-us/products/crosslab-instrument-services/service-repair>
- To access *Agilent University*, visit <http://www.agilent.com/crosslab/university/> to learn about training options, which include online, classroom and onsite delivery. A training specialist can work directly with you to help determine your best options.
- A useful *Agilent Resource Center* web page is available, which includes short videos on maintenance, quick lists of consumables for new instruments, and other valuable information. Check out the Resource Page here: <https://www.agilent.com/en-us/agilentresources>
- Need technical support, FAQs, supplies? – visit our *Support Home* page at <http://www.agilent.com/search/support>
- Get answers. Share insights. Build connections. Join the *Agilent Community* at <https://community.agilent.com/welcome>


Service Engineer's Responsibilities

- Contact the customer and ensure that all necessary supplies are available before the preventive maintenance visit.
- Confirm the ability of the instrument to deliver continued safe operation as established via the Agilent AA safe operation flow chart. (Refer directly to the AA 55/240/280 Preventive Maintenance Scope of Work to make this decision.)
- Only select those pages that relate to the system or module being serviced.
- Complete empty fields with the relevant information.
- Complete the relevant checkboxes in the checklist using either a "X" or tick mark "✓".
- Check "Section not applicable" check boxes to indicate services/tasks not delivered, as appropriate.
- Complete the Preventive Maintenance service in the order of the tasks listed.
- Complete the Service Review section together with the customer.
- Complete the fields for page numbers at the foot of each selected page.
- Complete the total number of pages field in the Service Completion section.
- Ask the customer to sign the Service Completion section including the customer's and your signature.

This information is subject to change without notice.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Instrument Maintenance

System Information

☐ Check this box if an instrument configuration report is attached instead of completing the table.

Instrument System Name and ID	
Instrument System Site and Location	UNITED ANALYST AND ENGINEERING CONSULTANT / 2nd Lab FI

List System Component Product Numbers	List the Serial Numbers of each Component
1. G 8432 A	117 0316 0001
2.	
3.	
4.	
5.	
6.	
7.	
8.	
9.	

Preparation, Safe operation and Initial performance checks

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Preventive Maintenance Procedures

FLAME SYSTEM section

☐ Section not applicable

Electronic components

- ☒ Review and confirm instrument configuration data in SVD
- ☒ Confirm power supply voltages using the *SVD Power Supply diagnostic*
- ☒ For Dual Beam instruments – Confirm RBC frequency using the *SVD RBC frequency diagnostic*.

Mechanical components

- ☒ Check the burner adjuster controls for complete and free movement. If the burner adjuster needs lubrication, use Molykote 321 or mineral-based molybdenum disulphide grease.
- ☒ Run SVD tests to exercise all motor drives over the full range of their travel:
 - ☒ Monochromator drive
 - ☒ Slit drive
 - ☒ Lamp selector
 - ☐ ABA *N/A*

Optics components

- ☒ Check that external optical surfaces are clean – Clean or replace as required.
- ☒ Use SVD and perform *Mono Wavelength Correction*.
- ☒ Use SVD and perform *Slit Calibration*.
- ☒ Use SVD and perform *Grating Squareness Diagnostic*.
- ☒ Use SVD and perform *Zero Order Offset/Mono Correction*.
- ☒ Use SVD and perform *Wavelength Repeatability*.
- ☒ Physically inspect selected HC lamps (customer to supply per their choice) and measure the % Gain for each lamp. Advise customer if lamps are showing emission degradation due to age.
- ☒ Check that the signal energy of the D2 and HC lamps track properly. Advise customer if their D2 lamp is showing emission degradation due to age.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Sample Introduction and Atomization

- ☒ Inspect the burner interlock plate to ensure that the interlock pin is secure and correct for the burner type.
- ☒ Clean the burner slot with a clean white card.
- ☒ Check the uniformity of the slot width.
- ☒ Clean the burner if required.
- ☒ Change the burner o-ring.
- ☒ Clean the nebulizer, spray chamber and liquid trap.
- ☒ Change all o-rings and seals in the nebulizer, nebulizer block and spray chamber.
- ☒ Check that the pressure relief bung releases readily.
- ☒ Change o-rings on the fuel and oxidant delivery bars.
- ☒ Leave the liquid trap EMPTY and verify the flame will not ignite in this state.
- ☒ Refill liquid trap and check that overflow drains freely into the drain/waste tube.
- ☒ Check the drain/waste tube for good drainage. It should not have tight bends, kinks or loops and the lower end must be above the liquid level in the waste vessel.
- ☒ Check and clean the igniter electrode.

Gas handling components and safety interlocks

- ☒ Pressure test for leaks.
- ☒ Leak test gasbox internal components and connections.
- ☒ Check safety interlock status and operation using the *SVD interlock monitoring diagnostic*.

Analytical performance for Flame systems

- ☒ Ignite a flame.
- ☒ Check that you can adjust the nebulizer uptake rate from 4 to 6.5 mL per minute.
- ☒ Optimize the instrument ready to perform Cu sensitivity test.
- ☒ Create a manual method to perform a Basic Cu ABS test - "Final Performance Testing"
- ☒ Run a PM completed sensitivity test for a 5 ppm copper sample and record the results in the AA PM Performance test results and measurements table.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

FURNACE SYSTEM section

- ☒ Section not applicable

Electronic components

- ☐ Review and confirm instrument configuration data in SVD
- ☐ Confirm power supply voltages using the *SVD Power Supply diagnostic*.

Mechanical components

- ☐ Run SVD tests to exercise all motor drives over the full range of their travel.
 - ☐ Monochromator drive
 - ☐ Slit drive
 - ☐ Lamp selector

Optics components


- ☐ Check that external optical surfaces are clean – Clean or replace as required.
- ☐ Use SVD and perform *Mono Wavelength Correction*.
- ☐ Use SVD and perform *Slit Calibration*.
- ☐ Use SVD and perform *Grating Squareness Diagnostic*.
- ☐ Use SVD and perform *Zero Order Offset/Mono Correction*.
- ☐ Use SVD and perform *Wavelength Repeatability*.
- ☐ Physically inspect selected HC lamps (customer to supply per their choice) and measure the % Gain for each lamp. Advise customer if lamps are showing emission degradation due to age.

Gas handling, water system and workhead component checks

- ☐ Inspect the GTA workhead gas hoses and connections for leaks.
- ☐ Pressure test for gas leaks.
- ☐ If the cooler system is accessible (stand-alone) check for correct operation and coolant/water level – this includes any temperature and pressure settings plus filter cleaning (air flow and water).
- ☐ Inspect the GTA workhead water hoses and connections for leaks.
- ☐ Check all graphite components and replace if necessary.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

- ☐ Tube
- ☐ Electrodes
- ☐ Shroud

- ☐ Check and clean the end windows on the workhead.
- ☐ Check safety interlock operation.

Analytical performance for Furnace systems

- ☐ Optimize the instrument ready to perform Cu sensitivity test.
- ☐ Run the sensitivity test for a 25 ppb copper sample and record the results in the results table.

PSD autosampler accessory for Furnace systems


- ☒ Section NOT Applicable
- ☐ Check condition of the PSD capillary – replace if necessary.
- ☐ Check condition and operation of PSD syringe – ensure it does not have air locks and bubbles.
- ☐ Change PSD rinse bottle o-ring.
- ☐ Check and clean the rinse vessel.
- ☐ Check the drain tube for good drainage. It should not have tight bends, kinks or loops and the lower end must be above the liquid level in the waste vessel.
- ☐ Ensure that the waste vessel is suitable for use with the furnace system.

Sample introduction pump system (SIPS) accessory

- ☒ Section NOT Applicable
- ☐ Re-torque screws securing the hubs, presser arms and pump rotors.
- ☐ Adjust each roller so that it rotates freely.
- ☐ Wipe clean the pump rotor rollers and pump bands with a dry clean cloth.
- ☐ Ensure that the presser arms and the surfaces near the pump are free from dirt and spills.
- ☐ Remove the pump module rear cover and check for the incursion of liquids and any signs of corrosion.
- ☐ Re-torque the nuts that fasten the motor mounting plates to the chassis.
- ☐ Check clips securing the diluents holder and replace if necessary.
- ☐ Disconnect, clean T-piece, and reassemble the tubing using the following steps.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

- ☐ Remove the T-piece by disconnecting the pump tubes, the pump bands and all other tubing.
- ☐ Place the T-piece in an ultrasonic bath containing strong detergent 1-5% Decon 30 or similar, for approximately 5-10 minutes.
- ☐ Wash the T-piece under a tap with a strong flow of water.
- ☐ Rinse with distilled water through all of the inlets in the reverse direction to normal sample flow.
- ☐ Reassemble.

Sample preparation system (SPS 4) accessory

- ☒ Section NOT Applicable

The Agilent SPS 4 autosampler is designed to need minimal maintenance.

The following maintenance requirements are suggested to maintain the performance of the autosampler.

- ☐ Cleaning the spill tray, rack location mat, end frames and chassis accessories with a damp soft cloth and diluted mild detergent.
- ☐ Cleaning the autosampler cover panels with domestic window cleaner.
- ☐ Checking the X- axis and Z- axis drive belts for cracks, splits, damaged teeth, excessive fraying, color changes or degradation from fumes.
- ☐ Check the X- axis, Theta- axis and Z- axis FFC cables for cracks, incorrect positioning, damaged edge or damaged connectors.

NOTE: The autosampler requires no extra lubrication throughout its lifetime.

For further details refer to the SPS 4 service manual G8410-90050.


Sample preparation system (SPS 3) accessory

- ☒ Section NOT Applicable

- ☐ Check the x-axis and z-axis timing belts – Replace if there is any cracks, splits or color deterioration and belt tension.
- ☐ Check belt tensions - adjust if required.
- ☐ Check the lubrication pad for single x-axis shaft. If pad is dry or customer has observed any vibration or erratic movements of the x-axis carriage, add 1 mL of Dow Corning 200 ⑥ Fluid, 200 CS into the well.
- ☐ Check the auto-sampler ability to find tube positions - Calibrate if required.
- ☐ Clean the exterior surfaces of the accessory with soft lint free cloth. This cloth can be dampened with warm water or a mild detergent. Do not use organic solvents or abrasive cleaning agents.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Vapor generation accessory VGA (hydride generator)

☒ Section NOT Applicable

- ☐ Inspect VGA gas supply hose.
- ☐ Inspect/replace VGA pump tubing.
- ☐ Check low gas pressure interlock setting – adjust if required.
- ☐ Check precision orifice gas flow setting – adjust if required.
- ☐ Check gas regulator pressure to 46 psi (325 kPa) – adjust if required.
- ☐ Clean the exterior surfaces of the accessory with soft lint free cloth. This cloth can be dampened with warm water or a mild detergent. Do not use organic solvents or abrasive cleaning agents.

UltraAA lamp accessory (external)

☒ Section NOT Applicable

- ☐ Check the condition of the power cable.
- ☐ Clean the exterior surfaces of the accessory with soft lint free cloth. This cloth can be dampened with warm water or a mild detergent. Do not use organic solvents or abrasive cleaning agents.

Restore System


- ☒ If you have altered the customer's instrumentation during the course of PM, restore to the original status to allow the customer to conduct their normal activities (e.g., reload the customer's method.)

Guidance

If the PM service is performed prior to a qualification service, then use the qualification procedure as a guide for final instrument set up and checkout.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Signature Page

Service Review

- ☒ Attach available reports/printouts of all tests to this documentation.
- ☒ Record the Preventive Maintenance service activity in the customer's records/logbook.
- ☒ Update/reset instrument maintenance counters as appropriate.
- ☒ Affix the PM sticker to the system or instrument logbook based on the customer's request.
- ☒ Complete the Service Engineer Comments section if there are additional comments.
- ☒ Review this service, parts replaced, and test results obtained with the customer.
- ☒ If the instrument firmware was updated, record the details of the change in the Service Engineer's Comments box or if necessary, in the customer's IQ records.

Test Results

Test Description		
Flame optics PMT Gain test		
For copper at 324.8 nm, 4 mA, 0.5 nm slit width	< 55 %	44 %
Flame performance test with 5 ppm copper sample		
Air /acetylene, mixing paddle removed	Abs value > 0.5	0.7401 Abs
Air /acetylene, mixing paddle installed, 10 replicates	%RSD < 1.0	0.5 % RSD
Deuterium furnace optics PMT Gain test		
For copper at 324.8 nm, 4 mA, 0.5 nm slit width	< 55 %	N/A
Deuterium furnace performance test with 25 ppb copper sample (324.8 nm)		
Precision %RSD	≤ 4.0%	N/A
Abs value	≥ 0.15	N/A
Zeeman furnace analytical performance: 25 ppb copper sample (327.4 nm)		
Precision %RSD	≤ 4.0%	N/A
Abs value	≥ 0.10	N/A
MSR%	≥ 70 %	N/A

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

AA consumable and parts list table

Part Description		Product/Model # where used	PM supplied or Consumable	Instrument-Type
Test Solution – Cu 5ppm solution	6610030100	50 55 140 240 280	PM supplied	Common
Test Solution - Blank solution	5190-7001	50 55 140 240 280	PM supplied	Common
Copper, 1000 ug/ml, 100ml	5190-8279	50 55 140 240 280	*	Common
Kit, Mix 7 O-rings, aqueous, complete set	9910093400	50 55 140 240 280	PM supplied	Flame
Organic Kit	9910093500	50 55 140 240 280	PM supplied	Flame
Wire Nebulizer Cleaning	9910024700	50 55 140 240 280	consumable	Flame
Tubing-Capillary Std Nebs	9910024800	50 55 140 240 280	consumable	Flame
Capillary Tube Hvac Neb (3) (organics only)	9910044000	50 55 140 240 280	consumable	Flame
Glass impact beads (5/pk)	9910025700	50 55 140 240 280	consumable	Flame
Teflon impact beads (5/pk): (organics only)	9910053300	50 55 140 240 280	consumable	Flame
Burner cleaning strip (100/pk)	9910053900	50 55 140 240 280	consumable	Flame
Window UV silica – round (right side)	2010082600	50 55 140 240 280	PM supplied	Common
Window UV silica – rectangular (left side)	2010082500	50 55 140 240 280	PM supplied	Common
Pad adhesive window (round)	4910012700	50 55 140 240 280	PM supplied	Common
Pad adhesive window (rectangular)	4910012800	50 55 140 240 280	PM supplied	Common
Electrode kit (1 pr) (D2)	6310003400	GTA120	PM supplied	Furnace
Shroud (D2)	6310003100	GTA120	PM supplied	Furnace
Zeeman electrode kit (1 pr)	6310003500	GTA120	PM supplied	Furnace
Zeeman shroud	6310003600	GTA120	PM supplied	Furnace
O-ring PSD rinse bottle	6910025900	PSD120	PM supplied	Furnace

* For engineers who only service AA instruments 5190-8279 can be used as a cheaper alternative for 6610030100.

Items classified as PM supplied in the above table are included in the standard PM

Those classified as consumable should be provided by the customer or charged to the customer if supplied by the Agilent service engineer.

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

Service Engineer Comments (optional)

If there are any specific points you wish to raise as part of performing the installation or other items of interest for the customer, please write in this box.

Service Completion

Service request number 6006371115 Date service completed 24 January 2024

Agilent signature Woravit T. Customer signature Janda

Total number of pages in this document 13

Revision: 10.00, Issued: November 2021

© Agilent Technologies, Inc. 2021



เอกสารไม่ควบคุม

SVD Results Report



Report ID: Diagnostic Start Time: 1/24/2024 9:41:24 AM Diagnostic End Time: 1/24/2024 10:10:55 AM

Customer: Service Engineer: Worawit T.
Address: Contact Details:

Instrument Configuration

Configuration:

Serial Number: MY13160001 Turret Type: Automatic
Instrument Model: Varian AA140/240/280 Number Of Lamps: 4
Flame Instrument: True Mono Type: Automatic
Furnace Instrument: True Gasbox Type: "Y" Gas Box
Zeeman Present: False Auto Burner Adjuster: False
Internal Zeeman: False Mains Frequency: 50
Internal UltraAA: False Firmware Version: 2.11
Optics Type: Double Beam Photomultiplier Type: Normal(900nm)
D2 BG Correction Fitted: True PWB Version: 45
Boot Block Version: 1.09

EEPROM Data:

Instrument Run Hours: 62609.832 D2 Run Hours: 49136.000
Zero Wavelength Offset: 30.148 D2 Serial Number: not set !
Mono Correction: 0.765 D2 Install Date: 1/1/1970
Flame Hours: 29802.416 D2 Original Intensity: 1.000
D2 Last Intensity: 475.000

Frequency:

Averaging Period: 30.0
Datapoint Count: 20

Upper Limit: 51.00 Highest Measured Frequency: 50.00
Average Frequency: 50.00
Lower Limit: 49.00 Lowest Measured Frequency: 50.00

Result: **Passed**

Report Generated At: 1/24/2024 10:11:18 AM

1

SVD Results Report

เอกสารไม่ควบคุม

Power Supply:

Averaging Period: 30.0

Datapoint Count: 20

	Lower Limit (V)	Actual (V)	Upper Limit (V)	Result:
12.00 V Rail	10.80	12.19	13.20	Passed
-12.00 V Rail	-13.20	-11.90	-10.80	Passed
5.00 V Rail	4.50	5.05	5.50	Passed
310.00 V Rail	279.00	320.00	341.00	Passed

Report Generated At: 1/24/2024 10:11:18 AM


2

SVD Results Report

เอกสารไม่ควบคุม

Optics

Beam Balance:

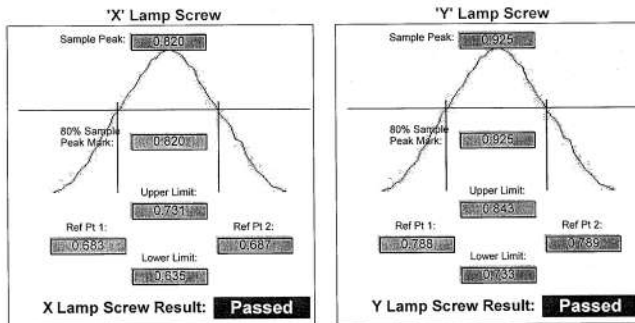Lamp Type: Copper
Lamp Socket Used: 3Peak Selected: 324.80
Lamp Alignment: **Performed**

Grating Squareness:

Lamp Element(s): Copper
Lamp Turret Position: 3
Lamp Current(mA): 4.00
Slit Width(nm): 0.5
1st Order Wavelength(nm): 324.80
Lamp Alignment: **Performed**

	Lower Limit (nm)	Actual (nm)	Upper Limit (nm)	Result:
Zero Order	-0.10	0.00	0.10	Passed
First Order	324.45	324.75	325.15	Passed
Second Order	649.23	649.52	649.97	Passed

Report Generated At: 1/24/2024 10:11:18 AM

3

SVD Results Report

เอกสารไม่ควบคุม

Wavelength Repeatability:

Lamp Used: Copper Lamp Current(mA): 4
Peak Used(nm): 324.750 Slit Width(nm): 0.2
Connected to Socket: 3 Slit Height: Normal

Lamp Alignment: **Performed**

Lower Limit(nm)	324.768	324.888	Upper Limit(nm)
(Approach from Zero Order)			(Approach from end)
Sample 1:	324.828	Sample 2:	324.828
Sample 3:	324.828	Sample 4:	324.823
Sample 5:	324.823	Sample 6:	324.823
Sample 7:	324.823	Sample 8:	324.823
Sample 9:	324.823	Sample 10:	324.823

Mean: 324.825

Standard Deviation: 0.002

Result: **Passed**

Report Generated At: 1/24/2024 10:11:18 AM

4

SVD Results Report

เอกสารไม่ควบคุม

Mechanical

Wavelength Drive:

Passed

Slit Drive:

Passed

Turret Drive:

Passed

Auto Burner Adjuster Drive:

Untested

Miscellaneous

Signal Processing Linearity:

Calculate Mode: New Calc Mode

	Lower Limit	Actual	Upper Limit	Result:
S0	114	261	297	Passed
S1	156	165	191	Passed
S2	271	296	332	Passed
S3	474	507	579	Passed
S4	825	918	1008	Passed
S5	1435	1528	1754	Passed
S6	2498	2769	3053	Passed
S7	4347	4752	5313	Passed

Interlocks:

Burner Fitted: Working

Flame Detect: Working

N2O Burner Fitted: Untested

GCU Active: Working

Flame Shield Closed: Working

Oxidant Pressure: Working

Gas Control Fitted: Untested

Oxidant Changeover: Untested

Pressure Release Bung Fitted: Working

Ignition: Working

Liquid Trap Fitted: Working

Sequential by time report

1/24/2024 11:46 AM

Page 1 of 1

SpectrAA

Analyst

Date Started 1/24/2024 11:39 AM GMT: 1/24/2024 4:39 AM

Worksheet Cu 5 PPM Sense check

Comment

Methods Cu

Computer name DESKTOP-R9JUF8S

Serial Number: MY13160001

Method: Cu (Flame)

Sample ID	Conc mg/L	%RSD	Mean Abs
CAL ZERO	0.000	55.0	0.0003
	Readings		
	0.0002	0.0002	0.0004
			1/24/2024
STANDARD 1	5.000	1.7	0.7419
	Readings		
	0.7274	0.7515	0.7468
			1/24/2024

Abs

Linear - Cal. Set 1

0.000 2.000 4.000 5.500

0.00 0.20 0.40 0.60 0.74

Curve Fit = Linear

Characteristic Conc = 0.028 mg/L

r = 1.0000

Calculated Conc = 0.000 5.000

Residuals = 0.000 0.000

Abs = 0.14833 x C + 0.00025

Sample 001	4.988	0.7	0.7401
	Readings		
	0.7454	0.7399	0.7349
			1/24/2024

Auto Lamp Recognition:

Lamp 1: Uncoded Lamp/Not Connected

Lamp 5: Not Supported

Lamp 2: 87 - Silver/Cadmium/Lead/Zinc(UltrAA) (Ag/C

Lamp 6: Not Supported

Lamp 3: 14 - Copper (Cu)

Lamp 7: Not Supported

Lamp 4: Uncoded Lamp/Not Connected

Lamp 8: Not Supported

Result: Passed

GTA Temperature Monitoring:

Not Performed

Notes:

PM 24 Jan 2024

Signatures:

Handwritten signature

Date

Handwritten signature

Worawit T.

Date

Sequential by time report

1/24/2024 11:50 AM

Page 1 of 1

SpectrAA

Analyst

Date Started 1/24/2024 11:47 AM GMT: 1/24/2024 4:47 AM

Worksheet Cu 5 PPM Precision

Comment

Methods Cu

Computer name DESKTOP-R9JUF8S

Serial Number: MY13160001

Method: Cu (Flame)

Sample ID	Exp Abs	%RSD	Mean Abs
Cu Precision	0.723	0.5	0.7232
	Readings		
	0.7221	0.7195	0.7226
	0.7201	0.7213	0.7266
			0.7283
			0.7276
			0.7260
			1/24/2024

Abs

Cu Precision

0.0 5.0 10.0 15.0 20.0

0.00 0.40 0.60 0.70

Calibration Report

Certificate No.: 2402283-002-01
Equipment: Electronic Balance
Model: XSR205DU
Serial No.: C210685394
Capacity: 220 g
Manufacturer: METTLER TOLEDO
Resolution: 0.00001 g / 0.0001 g
ID No.: UAE.WAO.010/2565

Date of Calibration: 2 April 2024 Page 2 of 4

Environment Condition: Ambient Temperature: 24.5 ± 0.5 °C Relative Humidity: 47.5 ± 2.5 %

Place of Calibration: Laboratory, UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.

Condition of Equipment: Good Condition

Condition of This Results of Calibration:

1. Calibration Method: NFI Method W-MA-001 In-House Method based on UKAS Lab 14 : 2019

2. Reference Standards:

Reference Standard	Model	Serial No.	Calibrated By	Certificate No.	Due Date
Standard Weight Class E2	1mg to 200g	850567572	TCS	M23040535	8 April 2024
Instrument	Model	Serial No.	Calibrated By	Certificate No.	Due Date
Thermo-Hygro Meter	608-H1	NFLBTH 015/23	Quality Reborn	QB24-0343	9 February 2025

3. This certification is traceable to SI UNIT

4. This certificate was certified only for the instrument we calibrated.

5. This result of calibration was found accurate as shown on date and place of calibration only.

Calibration Results:


1. Repeatability of Reading:

Nominal Value (g)	Standard Deviation of Reading (g)
40	0.000042
80	0.000052
100	0.000048
200	0.000048

2. Off-Center Error:

A mass of 100 g was placed and moved to various position on pan.

The balance reading obtained is given in the table.



1	2	3	4	5	6	(Maximum Difference)
(g)	(g)	(g)	(g)	(g)	(g)	(g)
100.0000	100.0001	99.9999	99.9999	100.0001	100.0000	0.0001

F-CS-012 Revision: 01 Date: 20-04-65

2008 เอสอีอีเอ็ม 36 ถนนสุขุมวิท แขวงจตุจักร เขตจตุจักร กรุงเทพมหานคร 10110
2008 Soi 36, Asoke Asoke Road, Bang Yi Khan Subdistrict, Bang Phai District, Bangkok 10700, Thailand
Tel : +66(0) 2422 8668 Fax : +66(0) 2422 8545



Calibration Report

Certificate No.: 2402283-002-01
Equipment: Electronic Balance
Model: XSR205DU
Serial No.: C210685394
Capacity: 220 g
Manufacturer: METTLER TOLEDO
Resolution: 0.00001 g / 0.0001 g
ID No.: UAE.WAO.010/2565

Date of Calibration: 2 April 2024 Page 3 of 4

Calibration Results: (Continued)

Calibration Range: 0 - 80 g

Calibration Adjustment: Internal Calibration

3. Departure from Nominal Value: (Range: 0 - 80 g ; Resolution: 0.00001 g)

Nominal Value (g)	Standard Value (g)	Average Reading (g)	Correction (g)	Uncertainty (± g)	Coverage Factor
Unload	0.000000	0.00000	0.00000	0.0000086	2.00
0.001	0.001003	0.00101	-0.00001	0.0000089	2.00
0.005	0.005003	0.00500	0.00000	0.0000092	2.00
0.01	0.010003	0.01000	0.00000	0.0000089	2.00
0.05	0.049996	0.05000	0.00000	0.0000096	2.00
0.1	0.100011	0.10000	0.00001	0.000011	2.00
0.5	0.500016	0.50001	0.00001	0.000014	2.00
1	1.000003	1.00002	-0.00002	0.000016	2.00
2	2.000023	2.00001	0.00001	0.000017	2.00
5	5.000017	5.00002	0.00000	0.000020	2.00
10	10.000009	10.00000	0.00001	0.000026	2.00
20	20.000031	20.00000	0.00003	0.000037	2.00
30	30.000040	30.00001	0.00003	0.000050	2.00
50	50.000028	50.00002	0.00001	0.000068	2.00
80	80.000068	80.00002	0.00005	0.00011	2.00

F-CS-012 Revision: 01 Date: 20-04-65

2008 เอสอีอีเอ็ม 36 ถนนสุขุมวิท แขวงจตุจักร เขตจตุจักร กรุงเทพมหานคร 10110
2008 Soi 36, Asoke Asoke Road, Bang Yi Khan Subdistrict, Bang Phai District, Bangkok 10700, Thailand
Tel : +66(0) 2422 8668 Fax : +66(0) 2422 8545



Calibration Report

Certificate No.: 2402283-002-01
Equipment: Electronic Balance
Model: XSR205DU
Serial No.: C210685394
Capacity: 220 g
Manufacturer: METTLER TOLEDO
Resolution: 0.00001 g / 0.0001 g
ID No.: UAE.WAO.010/2565

Date of Calibration: 2 April 2024 Page 4 of 4

Calibration Results: (Continued)

Calibration Range: 81 - 200 g

Calibration Adjustment: Internal Calibration

3. Departure from Nominal Value: (Range: 81 - 200 g ; Resolution: 0.0001 g)

Nominal Value (g)	Standard Value (g)	Average Reading (g)	Correction (g)	Uncertainty (± g)	Coverage Factor
90	90.00010	90.0001	0.0000	0.00015	2.00
100	100.00006	100.0001	0.0000	0.00015	2.00
110	110.00007	110.0001	0.0000	0.00016	2.00
120	120.00009	120.0000	0.0001	0.00017	2.00
130	130.00010	130.0000	0.0001	0.00019	2.00
140	140.00014	140.0000	0.0001	0.00020	2.00
150	150.00009	150.0001	0.0000	0.00020	2.00
160	160.00010	160.0001	0.0000	0.00022	2.00
170	170.00012	170.0001	0.0000	0.00023	2.00
200	200.00016	200.0002	0.0000	0.00028	2.00

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k, providing a level of confidence of approximately 95 %.

F-CS-012 Revision: 01 Date: 20-04-65

2008 เอสอีอีเอ็ม 36 ถนนสุขุมวิท แขวงจตุจักร เขตจตุจักร กรุงเทพมหานคร 10110
2008 Soi 36, Asoke Asoke Road, Bang Yi Khan Subdistrict, Bang Phai District, Bangkok 10700, Thailand
Tel : +66(0) 2422 8668 Fax : +66(0) 2422 8545



Calibration Certificate

Certificate No.: 2402283-001-01
Client name: UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.
Address: 3 Soi Udomsuk 41, Sukhumvit Road, Bangchack, Prakhonong, Bangkok 10260

Equipment: Electronic Balance

Manufacturer: METTLER TOLEDO

Model: XSR205DU

Serial No.: C009071872

ID No.: UAE.WAO.012/2563

Order No.: 2402283

Operation No.: 2402283-001

Date of Receipt: 2 April 2024

Date of Calibration: 2 April 2024

Calibrated by Mr.Jerawut Papawuttipong
Scientist

Approved by (Mr.Pheraphat Tuanjit)
Manager, Division of Calibration Laboratory
Responsible for the Technical Management Team

Date of Issue: 9 April 2024

The uncertainties are for a confidence probability of approximately 95%

This Certificate is issued in accordance with the conditions of accreditation granted by the Thai Laboratory Accreditation Scheme which has assessed the measurement capability of the laboratory and its traceability to recognized national standards and to the units of measurement realized at the corresponding national standards laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the National Food Institute.

F-CS-009 Revision: 01 Date: 20-04-65

2008 เอสอีอีเอ็ม 36 ถนนสุขุมวิท แขวงจตุจักร เขตจตุจักร กรุงเทพมหานคร 10110
2008 Soi 36, Asoke Asoke Road, Bang Yi Khan Subdistrict, Bang Phai District, Bangkok 10700, Thailand
Tel : +66(0) 2422 8668 Fax : +66(0) 2422 8545



Calibration Report

Certificate No.: 2402283-001-01

Equipment: Electronic Balance
Model: XSR205DU
Serial No.: C099071872
Capacity: 220 g
Manufacturer: METTLER TOLEDO
Resolution: 0.0001 g / 0.0001 g
ID No.: UAE.WAO.012/2563

Date of Calibration: 2 April 2024 Page 2 of 4

Environment Condition: Ambient Temperature: 24.5 ± 0.5 °C Relative Humidity: 47.5 ± 2.5 %
Place of Calibration: Laboratory, UNITED ANALYST AND ENGINEERING CONSULTANT CO., LTD.

Condition of Equipment: Good Condition

Condition of This Results of Calibration:

1. Calibration Method: NFI Method W-MA-001 In-House Method based on UKAS Lab 14 : 2019

2. Reference Standards:

Reference Standard	Model	Serial No.	Calibrated By	Certificate No.	Due Date
Standard Weight Class E2	1mg to 200g	8505567572	TCS	M23040535	8 April 2024
Instrument	Model	Serial No.	Calibrated By	Certificate No.	Due Date
Thermo-Hygro Meter	608-H1	NFI.BTH.016/23	Quality Reborn	QR24-0343	9 February 2025

3. This certificate is traceable to SI UNIT

4. This certificate was certified only for the instrument we calibrated.

5. This result of calibration was found accurate as shown on date and place of calibration only.

Calibration Results:


1. Repeatability of Reading:

Nominal Value (g)	Standard Deviation of Reading (g)
40	0.000052
80	0.000063
100	0.000048
200	0.000053

2. Off-Center Error:

A mass of 100 g was placed and moved to various position on pan.

The balance reading obtained is given in the table.



1	2	3	4	5	6	(Maximum Difference)
(g)	(g)	(g)	(g)	(g)	(g)	(g)
100.0002	100.0001	100.0002	99.9999	100.0001	100.0001	0.0003

F-CS-012 Revision: 01 Date: 20-04-65

เอกสารไม่ควบคุม

Calibration Report

Certificate No.: 2402283-001-01

Equipment: Electronic Balance
Model: XSR205DU
Serial No.: C099071872
Capacity: 220 g
Manufacturer: METTLER TOLEDO
Resolution: 0.0001 g / 0.0001 g
ID No.: UAE.WAO.012/2563

Date of Calibration: 2 April 2024 Page 4 of 4

Calibration Results: (Continued)

Calibration Range: 81 - 200 g

Calibration Adjustment: Internal Calibration

3. Departure from Nominal Value: (Range: 81 - 200 g; Resolution: 0.0001 g)

Nominal Value (g)	Standard Value (g)	Average Reading (g)	Correction (g)	Uncertainty (± g)	Coverage Factor k
90	90.00010	90.0000	0.0001	0.00015	2.00
100	100.00006	100.0000	0.0001	0.00015	2.00
110	110.00007	110.0001	0.0000	0.00017	2.00
120	120.00009	120.0000	0.0001	0.00018	2.00
130	130.00010	130.0000	0.0001	0.00019	2.00
140	140.00014	140.0000	0.0001	0.00020	2.00
150	150.00009	150.0001	0.0000	0.00020	2.00
160	160.00010	160.0001	0.0000	0.00022	2.00
170	170.00012	170.0001	0.0000	0.00023	2.00
200	200.00016	200.0000	0.0002	0.00028	2.00

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k, providing a level of confidence of approximately 95 %.

End

F-CS-012 Revision: 01 Date: 20-04-65

เอกสารไม่ควบคุม

Calibration Report

Certificate No.: 2402283-001-01

Equipment: Electronic Balance
Model: XSR205DU
Serial No.: C099071872
Capacity: 220 g
Manufacturer: METTLER TOLEDO
Resolution: 0.0001 g / 0.0001 g
ID No.: UAE.WAO.012/2563

Date of Calibration: 2 April 2024 Page 3 of 4

Calibration Results: (Continued)

Calibration Range: 0 - 80 g

Calibration Adjustment: Internal Calibration

3. Departure from Nominal Value: (Range: 0 - 80 g; Resolution: 0.00001 g)

Nominal Value (g)	Standard Value (g)	Average Reading (g)	Correction (g)	Uncertainty (± g)	Coverage Factor k
Unload	0.000000	0.00000	0.00000	0.0000088	2.00
0.001	0.001003	0.00101	-0.00001	0.0000091	2.00
0.005	0.005003	0.00499	0.00001	0.0000094	2.00
0.01	0.010003	0.01000	0.00000	0.0000091	2.00
0.05	0.049996	0.05000	0.00000	0.0000098	2.00
0.1	0.100011	0.10000	0.00001	0.000011	2.00
0.5	0.500016	0.50001	0.00001	0.000014	2.00
1	1.000023	1.00002	-0.00002	0.000016	2.00
2	2.000023	2.00001	0.00001	0.000017	2.00
5	5.000017	5.00002	0.00000	0.000020	2.00
10	10.000009	10.00000	0.00001	0.000026	2.00
20	20.000031	20.00002	0.00001	0.000037	2.00
30	30.000040	30.00003	0.00001	0.000052	2.00
50	50.000028	50.00004	-0.00001	0.000068	2.00
80	80.000068	80.00005	0.00002	0.00011	2.00

F-CS-012 Revision: 01 Date: 20-04-65

เอกสารไม่ควบคุม



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3 : EQUIPMENT CALIBRATION AND TESTING SERVICES

534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250

TEL: 0-2717-3000 FAX: 0-2719-9484

Cert.No.: 24TW39

Page.: 1 of 2

Certificate of Testing

Equipment : DO Meter
Manufacturer : YSI
Model : 5100
Serial No. : 11B 101863
ID No. : UAE.WAO.004/2554
Received Date : 20 February 2024
Test Date : 21 February 2024
Reference : 2402-0629DSC-1
Submitted by : United Analyst and Engineering Consultant Co., Ltd.
3 Soi Udornsuk 41, Sukhumvit Road, Bangchak, Phrakhanong, Bangkok 10260
Laboratory Condition : Temperature (25 ± 5) °C
Humidity (50 ± 20) %
Test Procedure : In - house method : CP-CH9
by Comparison Technique with Azide Modification Method
Tested by : Walalak Sirthean
Approved by :
() Pornthippa Tameyakul
() Unnopphol Harachai
(✓) Saithip Meangmal
Issue Date : 22 February 2024

เอกสารไม่ควบคุม



Cert.No.: 24TW39

Page.: 2 of 2

Condition of this result of calibration**1. Reference Standard Instruments :**

This certification is traceable to the International System of Unit through the reference standards laboratory of Industrial Calibration Center, Technology Promotion Association (Thailand-Japan).

Instruments	Serial No.	ID No.	Certificate No.	Due Date
1. Burette	-	130BU10	23CG1172	22 Mar 2025
2. Balance	14233821	110RC001	23MM405	16 July 2024

2. Standard Material :-

Material	Manufacturer	Lot.No.	Assay
Sodium Thiosulfate pentahydrate	Merck	AM1763316	100.2%

Result : Dissolved Oxygen Meter Adjustment With Air 100 %

Dissolved Oxygen Probe No.: 22B100125

Titration Method (Azide Modification Method)	DO Meter Reading	Standard Deviation
(mg/L)	(mg/L)	(mg/L)
8.20	8.19	0.0055

This report was certified only for the instrument we tested. It is allowable to use for study intend to use for advertising and referral purpose is prohibited. This report may not be reproduced other in full, without written approval of the laboratory

-o0o-

เอกสารไม่ควบคุม



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES & EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL. 0-2717-3000-29 FAX. 0-2719-9484



Cert. No.: 24TM589

Page : 1 of 3

Certificate of Calibration

Equipment : Hot Air Oven
Manufacturer : Memmert
Model : UF 55
Serial No. : B212.0411
ID No. : UAE.WAO.005/2556
Submitted by : United Analyst and Engineering Consultant Co., Ltd.
3 Soi Udomsuk 41, Sukhumvit Road,
Bangchak, Phrakhanong,
Bangkok 10260
Location : Lab Floor 2
Received Order : 01 April 2024
Calibration Date : 01 - 02 April 2024
Ambient Temperature : (26 ± 10) °C
Relative Humidity : (50 ± 30) %
Calibrated by : Krinda Malee
Approved by :
() Ponpan Paipim
(✓) Suwit Imjai
() Kunchit Promprat
Issue Date : 5 April 2024

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services & Equipment Calibration and Testing Services.

เอกสารไม่ควบคุม
A 0065065

Equipment : Hot Air Oven
Condition As-Received : Used Item
Reference : 2404-0004OC-3

Cert. No.: 24TM589

Page : 2 of 3

Probe Used :-

Calibration were conducted using calibration procedure CP-OT02 based on TLAS G-20 according to direct measurement method with Data Acquisition which connected with Resistance Temperature Detector (RTD) and Thermocouple Type T.

The temperature scale used was based on ITS-90.

Condition of this result of calibration**1. Reference standard instrument:-**

Instrument	Serial No.	Cert. No.	Traceable	Due Date
1) Data Acquisition	MY57013711	23LM115	TPA	11 Jul 2024


2. This certificate is valid only to the item calibrated on date and place of calibration.

3. This certification is traceable to the International System of Unit.

Remark : TPA : Technology Promotion Association (Thailand - Japan)

Result of Calibration :- (*) Without Adjustment**Function of UUC* :** Temperature Source**Fresh air setting :** Close

Environment during calibration		
	Beginning	Finished
Temp. (°C)	27	26
REL.Humid. (%)	47	48
AC Supply (Volt)	221	220

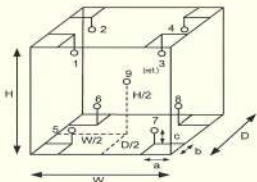**Probe Installation Details :** Dimension of Chamber :

a = 5.0 cm	D = 0.50 m
b = 5.0 cm	W = 0.80 m
c = 5.0 cm	H = 0.75 m
	Capacity = 0.30 m³

Ref. Std. ID No.: @ Calibration Point		
Position :	(120 to 180) °C	(104) °C
1	21-18TC-01	22-18RTD-2/1
2	21-18TC-02	18RTD-2/2
3	21-18TC-03	18RTD-2/3
4	21-18TC-04	18RTD-2/4
5	21-18TC-05	18RTD-2/5
6	21-18TC-06	18RTD-2/6
7	21-18TC-07	18RTD-2/7
8	21-18TC-08	18RTD-2/8
9 (ref.)	21-18TC-09	18RTD-2/9

เอกสารไม่ควบคุม
a 1209739

Equipment : Hot Air Oven
Condition As-Received : Used Item
Reference : 2404-0004OC-3
Result of Calibration :- (*) Without Adjustment
Function of UUC* : Temperature Source
Fresh air setting : Close

Cert. No.: 24TM589

Page : 3 of 3

Calibration Point (°C)	UUC* Setting (°C)	UUC* Reading (°C)	Temperature stability (± °C)	Temperature uniformity (°C)	Overall Variation (°C)	Coverage Factor k
104.0	104.0	104.0	0.032	0.47	0.84	2
120.0	120.0	120.0	0.12	0.72	1.3	2
180.0	180.0	180.0	0.13	1.2	1.5	2

Calibration Point (°C)	Measured Temperature (°C)									Uncertainty (± °C)
	1	2	3	4	5	6	7	8	9 (ref.)	
104.0	104.464	103.847	104.226	104.232	104.106	103.691	104.275	104.127	104.013	0.42
120.0	120.486	120.089	120.635	120.596	119.531	119.644	120.364	120.144	120.158	1.1
180.0	180.574	179.769	180.285	180.870	179.594	179.790	180.287	179.961	179.802	1.1

Average* : The average of 30 values in each position.**Temperature stability :** One-half of the greatest maximum difference of measured temperature at any one sensor.**Temperature uniformity :** The maximum difference of measured temperatures at any sensors and the measured temperature at the reference location which are observed at the same time or at as close an observation time as possible to determine the temperature pattern or homogeneity within the chamber under steady-state conditions.**Overall Variation :** The Difference of the maximum and minimum measured temperatures throughout observation.**UUC* :** Unit Under Calibration**Note :** The reported uncertainty of measurement was included stability and excluded uniformity .

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k, providing a level of confidence of approximately 95 %.

-o0o-

เอกสารไม่ควบคุม
a 1209739

Customer Service Report

Date:	9 Feb 2024	Report No:	9810
Customer:	UAE	Address:	BANGKOK
Instrument:	KT100	Serial:	91790524
Hours Start	08:00	Travel To Customer	1hr
Finish	09:30	Labour	09:30 12:00 2hrs
		Travel From Customer	16:30 2hrs

Job Type					
Application	Special	Standard			
Normal	Courtesy Visit	Installation		Training	
Distributor	PMA Onboarding	Quote		In House	
Internal	Warranty	Repair		PM	X
Digital Service	Sales Support	Remote		Other	

PO/Quote Number: If applicable

PMA Type: FOSSCARE If applicable Contract No. If applicable

Details of Work / Test	Condition / Status
# PM KT100	
- ตรวจเช็คแบตเตอรี่ PM	
- ตรวจเช็คสาย 3 pin 100 m	
- Alkaline 50 ml - 20 ml	
- ใส่แบตเตอรี่ PM kit	
- ทดสอบใช้งาน	
# ตรวจเช็ค SOPH Head - ตรวจสอบเครื่อง ใช้งาน	
10000725 Serial New Complete 1 PC	
Instrument Ready for Use	<input checked="" type="checkbox"/> OK <input type="checkbox"/> Not OK If not OK - Comment

Part No.	Batch	Description	Qty
10099965	14.12.2020	FOSS PM kit lot100 lot101 Analysis 100	1

I confirm this report is accurate and complete			
Signed FOSS		Signed Customer	
Name		Name	
Would you be willing to participate in a brief survey in order to tell us how we performed?			
Email			

เอกสารไม่ควบคุม

Customer Service Report

Date:	8-9 Feb 2024	Report No:	9807
Customer:	UAE	Address:	BANGKOK
Instrument:	KT100	Serial:	91889052
Hours Start	08:00	Travel To Customer	1.5hrs
Finish	09:30	Labour	09:30 12:00 2.5hrs
		Travel From Customer	16:00 18:00 2hrs

Job Type					
Application	Special	Standard			
Normal	Courtesy Visit	Installation		Training	
Distributor	PMA Onboarding	Quote		In House	
Internal	Warranty	Repair		PM	X
Digital Service	Sales Support	Remote		Other	

PO/Quote Number: If applicable

PMA Type: FOSSCARE If applicable Contract No. If applicable

Details of Work / Test	Condition / Status
# PM KT100	
- ตรวจเช็คแบตเตอรี่ PM	
- ตรวจเช็คสาย 3 pin 100 m	
- Alkaline 50 ml - 180 ml	
- ใส่แบตเตอรี่ PM kit	
- ทดสอบ ใช้งาน PM kit	
- ทดสอบ ใช้งาน PM kit	
- ทดสอบ ใช้งาน PM kit	
Blank - 0.14	
Recovery - 106 %	
Instrument Ready for Use	<input checked="" type="checkbox"/> OK <input type="checkbox"/> Not OK If not OK - Comment

Part No.	Batch	Description	Qty
60031807	13-10-2023	FOSS PM kit 8100/8100 12.00	1

I confirm this report is accurate and complete			
Signed FOSS		Signed Customer	
Name		Name	
Would you be willing to participate in a brief survey in order to tell us how we performed?			
Email			

เอกสารไม่ควบคุม



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
53/44 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL: 0-2717-3000-29 FAX: 0-2719-9484



Cert.No.: 24CH399
Page.: 1 of 3

Certificate of Calibration

Equipment : pH Meter
Manufacturer : Horiba
Model : LAQUA-PH210
Serial No. : HAOA0007
ID No. : UAE.EFM.002/2563(EFM.pH.02/63)
Condition As-Received: Used Item
Received Date : 01 April 2024
Calibration Date : 02 April 2024
Reference : 2404-0037WSC-1
Submitted by : United Analyst and Engineering Consultant Co.,Ltd.
3 Soi Udomsuk 41, Sukhumvit Road,
Bangchak, Phrakhanong, Bangkok 10260
Ambient Temperature : (25 ± 2.5) °C
Relative Humidity : (50 ± 15) %
Calibration Procedure : In - house method :
- CP-CH5 by direct measurement with DC voltage standard and direct measurement with certified reference material (CRM)
- CP-CH8 by comparison with temperature standard

Calibrated by : Warakorn Lerngagrakul

Approved by :
Approved Signatory

() Pornthippa Tameyakul
() Unnopphol Harachai
(✓) Saithip Meangmai

Issue Date : 06 April 2024

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services 3: Equipment Calibration and Testing Services.

เอกสารไม่ควบคุม

A 0062139



Cert.No.: 24CH399
Page.: 2 of 3

Condition of this calibration result

1. Reference Standard Instrument

Instrument	Serial No.	ID No.	Cert. No.	Due Date
1) Document Process Calibrator	54030049	130RC116	23E2802	27 Aug 2024
2) Ref. Standard Thermometer	4982054	110RC044	23I908	26 July 2024

This certification is traceable to the International System of Unit maintained through:-
- Technology Promotion Association (Thailand-Japan)

2. Certified Reference Materials : The measurement results are traceable to SI through CPA chem Ltd.,
ANSI-ASQ National Accreditation Board, Accredited No. AR-1835

Buffer Solution	Manufacturer	Lot No.	Exp. date
pH 4.008	CPA chem	940102	27 Nov 2025
pH 6.986	CPA chem	940104	02 Nov 2024
pH 9.997	CPA chem	940106	02 Nov 2024

3. This certificate is valid only to the item calibrated on date and place of calibration.

Calibration Results

Function : mV Measurement

Performing standard curve by Document Process Calibrator at pH (4,7)(7,10)

Unit Under Calibration	Nominal Value	Standard Voltage Input	Actual Reading		Uncertainty of Measurement (± mV)	Coverage factor k
			mV	pH		
pH Meter S/N : HAOA0007	4.00	177.48	177.5	4.01	0.058	2.00
	7.00	0.00	0.2	6.98	0.058	2.00
	10.00	-177.48	-177.3	10.01	0.058	2.00

เอกสารไม่ควบคุม

a 1209881



Cert.No.: 24CH399
Page.: 3 of 3

Calibration Results

Function : pH Measurement

Performing three buffers standard curve by using buffer nominal pH (4,7)(7,10)

Unit Under Calibration	Standard pH Buffer Solution	Actual pH Reading	Actual mV Reading (mV)	Uncertainty of pH Measurement (\pm)	Coverage factor k
pH Electrode S/N : Q92M0181	4.008	4.01	180.2	0.0079	2.00
	6.986	6.98	1.3	0.0099	2.00
	6.986	7.00	-0.9	0.0099	2.00
	9.997	10.00	-169.4	0.011	2.05

Function : Temperature Measurement

(*) Without adjustment

This equipment was connected with Temperature Probe;

- Model : 9652-10D
- Serial No. : Q92M0181

Dimension of probe

- Length : 103 mm.
- Diameter : 16 mm.
- Immersion Depth : 90 mm.

Calibration Point ($^{\circ}\text{C}$)	Standard Temperature ($^{\circ}\text{C}$)	UUC* Reading ($^{\circ}\text{C}$)	Error ($^{\circ}\text{C}$)	Uncertainty of measurement (\pm $^{\circ}\text{C}$)	Coverage factor k
25.0	25.002	25.0	-0.002	0.13	2.00
30.0	30.003	30.0	-0.003	0.13	2.00
35.0	35.003	35.0	-0.003	0.13	2.00

Remark : - UUC* = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-o0o-

เอกสารไม่ควบคุม

a 1209882



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
53/41 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL. 0 2717-3000-29 FAX. 0-2719-9484



Cert.No.: 24CH405
Page.: 1 of 3

Certificate of Calibration

Equipment : Conductivity Meter
Manufacturer : YSI
Model : Pro 30
Serial No. : 23A104807
ID No. : UAE.EFM.065/2566 (EFM.SCT.01/66)
Condition As-Received: Used Item
Received Date : 01 April 2024
Calibration Date : 03 April 2024
Reference : 2404-0036WSC-1
Submitted by : United Analyst and Engineering Consultant Co.,Ltd.
3 Soi Udomsuk 41, Sukhumvit Road, Bangchak,
Phrakhanong, Bangkok 10260
Ambient Temperature : (25 \pm 2.5) $^{\circ}\text{C}$
Relative Humidity : (50 \pm 15) %
Calibration Procedure: In-house method :
- CP-CH6 by direct measurement
with certified reference material (CRM)
- CP-CH8 by comparison with temperature standard

Calibrated by : Walailak Sirithean

Approved by :
Approved Signatory

() Unnopphol Harachai
() Ponpan Paipim
(☒) Sathip Meangmai

Issue Date : 6 April 2024

The Uncertainties are for a confidence probability of approximately 95 %

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.

A 0062142



Cert.No.: 24CH405
Page.: 2 of 3

Condition of this result of calibration

1. Reference Standard Instrument :-

Instrument	Serial No.	ID No.	Certificate No.	Due date
1) Thermometer	1963878	130RC095	23I1051	05 Sep 2024
2) Ref. Std. Thermometer	4982054	110RC044	23I908	26 July 2024

- This Certification is traceable to SI Through Technology Promotion Association (Thailand - Japan)

2. Certified Reference Materials :-

- Conductivity calibration solution, CPA chem Ltd., The measurement results are traceable to SI through CPA chem Ltd., ANSI-ASQ National Accreditation Board, Accredited No. AR-1835

Conductivity Solution	Manufacturer	Lot No.	Exp. date
1413.0 $\mu\text{S/cm}$	CPA Chem	940111	02 Nov 2024
12.880 mS/cm	CPA Chem	936625	19 Oct 2024

- Control Conductivity calibration solution temperature by Water bath (25 \pm 0.1) $^{\circ}\text{C}$

3. This certificate is valid only to the item calibrated on date and place of calibration.

Calibration results

Function : Conductivity Measurement

(*) After Adjustment at 1413.0 $\mu\text{S/cm}$

Conductivity Electrode Serial No.: 23A100616

Standard Conductivity Solution	Before Adjustment UUC* Reading	After Adjustment UUC* Reading	Uncertainty of Measurement (\pm)	Coverage factor k
1413.0 $\mu\text{S/cm}$	1398 $\mu\text{S/cm}$	1413 $\mu\text{S/cm}$	9.2 $\mu\text{S/cm}$	2.00
12.880 mS/cm	12.60 mS/cm	12.77 mS/cm	0.086 mS/cm	2.00

Sathip

a 1209887



Cert.No.: 24CH405
Page.: 3 of 3

Calibration Results

Function : Temperature Measurement

This equipment was connected with Temperature Probe;

- Model : PRO 30 COND-T
- Serial No. : 23A100616

Dimension of probe;

- Length : 94 mm
- Diameter : 2.5 mm
- Immersion Depth : 90 mm

Calibration Result : Without adjustment

Calibration Point ($^{\circ}\text{C}$)	Standard Temperature ($^{\circ}\text{C}$)	UUC* Reading ($^{\circ}\text{C}$)	Error ($^{\circ}\text{C}$)	Uncertainty of Measurement (\pm $^{\circ}\text{C}$)	Coverage factor k
25.0	25.002	24.9	-0.102	0.13	2.00
30.0	30.002	29.9	-0.102	0.13	2.00
35.0	35.001	34.9	-0.101	0.13	2.00

Remark : - UUC* = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-o0o-

Sathip

a 1209888

DQE Services Co.,Ltd.

32 Soi Ladprao-Wanghin 55, Ladprao-Wanghin Rd., Ladprao, Bangkok 10230

Phone : +66 (0)2 538 2054, Email : dqeservicesinfo@gmail.com

DQE Services

ISO 17025 TIS 17025

CALIBRATION 8484

CERTIFICATE OF CALIBRATION

Certificate No. : SP24-008Page 1 of 5

Customer : United Analyst and Engineering Consultant Co.,Ltd. (Head Office)

Address : 3 Soi Udomsuk 41, Sukhumvit Road, Bangchak, Phrakhanong, Bangkok 10260

Location of calibration : Laboratory 315

Equipment : UV-Vis Spectrophotometer

Manufacturer : Hitachi

Model : U-1900

Serial No. : 2021-064

ID No. : UAE.WAS.006/2552

Received Date : 16 January 2024

Calibration Date : 16 January 2024

Issue Date : 19 January 2024

Condition Instrument : Good

Calibrated by :

(Mr.Tanawat Rittidach)

Technical Manager

Approved by :

(Ms.Chonthicha Sangngern)

Quality Manager

The calibration result is applied only to the above calibrated item and was found accurate as shown on date and place of calibration only.

The measurement capability of the laboratory and its traceability to recognised national standards and to the units of measurement realized at the corresponding national standards laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the DQE Services Co., Ltd.

เอกสารไม่ควบคุม

FM-708-02 R01 1/11/2021

DQE Services Co.,Ltd.

32 Soi Ladprao-Wanghin 55, Ladprao-Wanghin Rd., Ladprao, Bangkok 10230

Phone : +66 (0)2 538 2054, Email : dqeservicesinfo@gmail.com

DQE Services

ISO 17025 TIS 17025

CALIBRATION 8484

REPORT OF CALIBRATION

Certificate No. : SP24-008Page 2 of 5

Environment Condition : Ambient Temperature 25 ± 5 °C

Relative humidity 55 ± 20 %RH

Calibration method : In-house method CP-01 Based on ASTM E275-08

Certified Reference Materials :

Material	Serial No.	Certificate No.	Due date
Absorbance Standard set	25760	115663	25 October 2025
Absorbance Standard set	25757	115638	25 October 2025
Wavelength Standard set	25806	115657	25 October 2025
Wavelength Standard set	25758	115665	25 October 2025

Traceability : This certification is traceable to the International System of Unit maintained at National -

Institute of Standards and Technology (NIST) through Starna Scientific Limited

Spectral Band Width of UUC : 4.0 nm.

Scan Speed of UUC : 200 nm/min

Scan Interval of UUC : 0.1 nm.

Resolution of UUC : Photometric 0.001 Abs.

Wavelength 0.1 nm.

เอกสารไม่ควบคุม

FM-708-02 R01 1/11/2021

DQE Services Co.,Ltd.

32 Soi Ladprao-Wanghin 55, Ladprao-Wanghin Rd., Ladprao, Bangkok 10230

Phone : +66 (0)2 538 2054, Email : dqeservicesinfo@gmail.com

DQE Services

ISO 17025 TIS 17025

CALIBRATION 8484

REPORT OF CALIBRATION

Certificate No. : SP24-008Page 3 of 5

Calibration Results : Without adjustment

Photometric Accuracy :

Wavelength (nm.)	CRMs Values (Abs)	UUC Reading (Abs)	Correction (Abs)	Uncertainty (Abs)	Coverage factor k
420	0.0000	0.000	0.0000	0.0028	2.00
	0.5780	0.575	0.0030	0.0031	2.00
	1.0484	1.046	0.0024	0.0029	2.00
	2.1876	2.186	0.0016	0.0080	2.00
440	0.0000	0.000	0.0000	0.0028	2.00
	0.5595	0.558	0.0015	0.0034	2.00
	1.0239	1.024	-0.0001	0.0035	2.00
	2.1230	2.121	0.0020	0.0079	2.00
465	0.0000	0.000	0.0000	0.0028	2.00
	0.5230	0.520	0.0030	0.0030	2.00
	0.9633	0.961	0.0023	0.0029	2.00
	1.9753	1.975	0.0003	0.0070	2.00
546.1	0.0000	0.000	0.0000	0.0028	2.00
	0.5181	0.516	0.0021	0.0031	2.00
	1.0002	0.999	0.0012	0.0033	2.00
	1.9973	1.994	0.0033	0.0084	2.00
590	0.0000	0.000	0.0000	0.0028	2.00
	0.5517	0.550	0.0017	0.0030	2.00
	1.0803	1.080	0.0003	0.0030	2.00
	2.0373	2.032	0.0053	0.0080	2.00
635	0.0000	0.000	0.0000	0.0028	2.00
	0.5591	0.558	0.0011	0.0031	2.00
	1.0518	1.051	0.0008	0.0030	2.00
	1.9274	1.923	0.0044	0.0079	2.00

เอกสารไม่ควบคุม

FM-708-02 R01 1/11/2021

DQE Services Co.,Ltd.

32 Soi Ladprao-Wanghin 55, Ladprao-Wanghin Rd., Ladprao, Bangkok 10230

Phone : +66 (0)2 538 2054, Email : dqeservicesinfo@gmail.com

DQE Services

ISO 17025 TIS 17025

CALIBRATION 8484

REPORT OF CALIBRATION

Certificate No. : SP24-008Page 4 of 5

Photometric Accuracy :

Wavelength (nm.)	CRMs Values (Abs)	UUC Reading (Abs)	Correction (Abs)	Uncertainty (Abs)	Coverage factor k
235	0.0000	0.000	0.0000	0.0050	2.00
	0.7469	0.748	-0.0011	0.0057	2.00
257	0.0000	0.000	0.0000	0.0050	2.00
	0.8674	0.865	0.0024	0.0059	2.00
313	0.0000	0.000	0.0000	0.0050	2.00
	0.2919	0.293	-0.0011	0.0051	2.00
350	0.0000	0.000	0.0000	0.0050	2.00
	0.6430	0.641	0.0020	0.0055	2.00

เอกสารไม่ควบคุม

FM-708-02 R01 1/11/2021

REPORT OF CALIBRATION

Certificate No. : SP24-008

Page 5 of 5

Wavelength Accuracy :

CRMs Values (nm.)	UUC Reading (nm.)	Correction (nm.)	Uncertainty (nm.)	Coverage factor k
241.54	241.1	0.44	0.18	2.00
279.40	278.9	0.50	0.18	2.00
288.70	288.0	0.70	0.18	2.00
334.22	333.8	0.42	0.18	2.00
361.26	360.8	0.46	0.18	2.00
418.48	418.2	0.28	0.18	2.00
446.70	446.0	0.70	0.18	2.00
453.20	453.1	0.10	0.18	2.00
460.06	459.6	0.46	0.18	2.00
536.90	536.4	0.50	0.18	2.00
637.94	637.6	0.34	0.18	2.00
440.74	440.1	0.64	0.18	2.00
472.22	472.0	0.22	0.18	2.00
513.70	513.5	0.20	0.18	2.00
528.72	528.2	0.52	0.18	2.00
574.60	574.3	0.30	0.18	2.00
585.48	585.0	0.48	0.20	2.00
684.63	684.2	0.43	0.18	2.00
740.27	740.0	0.27	0.20	2.00
748.28	747.8	0.48	0.18	2.00
807.16	806.8	0.36	0.18	2.00
879.70	879.2	0.50	0.18	2.00

Remark : - UUC = Unit Under Calibration

- N/A = Not Available

- The result expanded uncertainty of measurement U is stated as the standard uncertainty of measurement multiplied by the coverage factor k.

which for a normal distribution corresponds to a coverage probability of approximately 95%

- * Indicates non TISI accredited

- End of Certificate -

เอกสารไม่ควบคุม

FM-708-02 R01 1/11/2021



cristalla

บริษัท ทีพีเอสไอที ไฮบริดเอนเนอจี จำกัด

ภาคผนวก ฉ

หนังสือรับรองการขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
38	Phenols	1) Distillation, Chloroform Extraction Method ^[3] 2) Distillation, Direct Photometric Method ^[3]
39	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[3] 2) Digestion, Inductively Coupled Plasma Method ^[3]
40	Sulfide	1) Iodometric Method ^[3] 2) Methylene Blue Method ^[3]
41	Temperature	Laboratory and Field Methods ^[3]
42	Total Dissolved Solids	Dried at 180 °C ^[3]
43	Total Kjeldahl Nitrogen	Semi-Micro-Kjeldahl Method ^[3]
44	Total Suspended Solids	Dried from 103 to 105 °C ^[3]
45	Trivalent Chromium	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ^[3] 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ^[3]
46	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]

น้ำใต้ดิน จำนวน 126 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
2	Acetone	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
3	Aldrin	1) Liquid Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
4	Anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]

5 Antimony...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
5	Antimony	Digestion, Inductively Coupled Plasma Method ^[3]
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[3] 2) Digestion, Inductively Coupled Plasma Method ^[3]
7	Atrazine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
8	Barium	1) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 2) Digestion, Inductively Coupled Plasma Method ^[3]
9	Benz(a)anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
10	Benzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
11	Benzo(b)fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
12	Benzo(k)fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
13	Benzoic acid	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
14	Benzo(a)pyrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
15	Benzo(g,h,i)perylene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
16	Beryllium	Digestion, Inductively Coupled Plasma Method ^[3]
17	Bis(2-chloroethyl)ether	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
18	Bis(2-ethylhexyl)phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]

19 Bromodichloromethane...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
19	Bromodichloromethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
20	Bromoform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
21	Butanol	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
22	Butyl benzyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
23	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]
24	Carbazole	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
25	Carbon disulfide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
26	Carbon tetrachloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
27	Chlordane	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
28	p-Chloroaniline	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
29	Chlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
30	Chlorodibromomethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
31	Chloroform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
32	2-Chlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
33	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]

34 Chromium (III)...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
34	Chromium (III)	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ^[3] 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ^[3]
35	Chromium (VI)	1) Colorimetric Method ^[3] 2) Extraction, Air-Acetylene Flame Method ^[3]
36	Chrysene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
37	Cyanide	Distillation, Colorimetric Method ^[3]
38	2,4-D	Liquid-Liquid Extraction, Gas Chromatographic Method ^[3]
39	DDD	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
40	DDE	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
41	DDT	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
42	Dibenz(a,h)anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
43	Di-n-butyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]
44	1,2-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
45	1,3-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
46	1,4-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[3]
47	3,3'-Dichlorobenzidine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[3]

48 1,1-Dichloroethane...

ลำดับ	สารเคมี	วิธีวิเคราะห์
48	1,1-Dichloroethane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
49	1,2-Dichloroethane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
50	1,1-Dichloroethylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
51	cis-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
52	trans-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
53	2,4-Dichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
54	1,2-Dichloropropane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
55	1,3-Dichloropropane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
56	1,3-Dichloropropene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
57	Dieldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
58	Diethyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
59	2,4-Dimethylphenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
60	2,4-Dinitrophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
61	2,4-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
62	2,6-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
63	Di n Octyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
64	Endosulfan	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]

65 Endrin...

ลำดับ	สารเคมี	วิธีวิเคราะห์
65	Endrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
66	Ethylbenzene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
67	Fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
68	Fluorene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
69	Heptachlor	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
70	Heptachlor epoxide	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
71	Hexachlorobenzene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
72	Hexachloro-1,3-butadiene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
73	n-Hexane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
74	α-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
75	β-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]

76 γ-HCH...

ลำดับ	สารเคมี	วิธีวิเคราะห์
76	γ-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
77	Hexachlorocyclopentadiene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
78	Hexachloroethane	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
79	Indeno(1,2,3-cd)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
80	Isophorone	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
81	Lead	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]
82	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]
83	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[3]
84	Methanol	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
85	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic Method ^[3]
86	Methyl bromide	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
87	Methylene chloride	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
88	2-Methylphenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
89	2-Methylnaphthalene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
90	Methyl tert-butyl ether	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]

91 Naphthalene...

ลำดับ	สารเคมี	วิธีวิเคราะห์
91	Naphthalene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
92	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]
93	Nitrobenzene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
94	N-Nitrosodiphenylamine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
95	N-Nitrosodi-n-propylamine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
96	Polychlorinated Biphenyls - PCB 1016 - PCB 1221 - PCB 1232 - PCB-1242 - PCB-1248 - PCB-1254 - PCB-1260	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
97	Pentachlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
98	pH	Electrometric Method ^[3]
99	Phenanthrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
100	Phenol	1) Distillation, Chloroform Extraction Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
101	Pyrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]

102 Selenium...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
102	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[5] 2) Digestion, Inductively Coupled Plasma Method ^[3]
103	Silver	Digestion, Inductively Coupled Plasma Method ^[3]
104	Styrene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
105	1,1,2,2-Tetrachloroethane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
106	Tetrachloroethylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
107	Toluene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
108	Ioxaphene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[3] 2) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
109	TPH (C ₅ - C ₈)	1) Purge and Trap, Gas Chromatographic Method ^[1,2,20] 2) Purge and Trap, Gas Chromatographic/ Mass spectrometric Method ^[1,2,23]
110	TPH (C ₉ - C ₁₆)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[7,20]
111	TPH (C ₁₆ - C ₃₅)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[7,20]
112	1,2,4-Trichlorobenzene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
113	1,1,1-Trichloroethane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
114	1,1,2-Trichloroethane	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
115	Trichloroethylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
116	2,4,5-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
117	2,4,6-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[3]
118	1,3,5-Trimethylbenzene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]

119 Vanadium...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
119	Vanadium	Digestion, Inductively Coupled Plasma Method ^[3]
120	Vinyl acetate	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
121	Vinyl chloride	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
122	m-Xylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
123	o-Xylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
124	p-Xylene	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
125	Xylene (Total)	Purge and Trap Gas Chromatographic/ Mass Spectrometric Method ^[3]
126	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ^[3] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[3] 3) Digestion, Inductively Coupled Plasma Method ^[3]

สิ่งปลูกสร้างหรือวัตถุที่ไม่ใช่แล้ว จำนวน 35 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
2	Antimony	Digestion, Inductively Coupled Plasma Method ^[5,12]
3	Arsenic	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[1,4,14] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,4,12] 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[5,14] 4) Digestion, Inductively Coupled Plasma Method ^[5,12]
4	Barium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[5,12] 2) Digestion, Inductively Coupled Plasma Method ^[5,12]

5 Beryllium...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
5	Beryllium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,4,12] 2) Digestion, Inductively Coupled Plasma Method ^[5,12]
6	Cadmium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,4,13] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,4,12] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[5,13] 4) Digestion, Inductively Coupled Plasma Method ^[5,12]
7	Chlordane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
8	Chromium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,4,13] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,4,12] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[5,13] 4) Digestion, Inductively Coupled Plasma Method ^[5,12]
9	Chromium (III)	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method; Waste Extraction, Colorimetric Method; Calculation ^[1,4,13,15] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method; Waste Extraction, Colorimetric Method; Calculation ^[1,4,12,15] 3) Digestion, Flame Atomic Absorption Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation ^[5,6,13,15] 4) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation ^[5,4,12,15]
10	Chromium (VI)	1) Waste Extraction, Colorimetric Method ^[1,4,13] 2) Alkaline Digestion, Colorimetric Method ^[5,13]
11	Cobalt	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,4,12] 2) Digestion, Inductively Coupled Plasma Method ^[5,12]

12 Copper...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
12	Copper	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^[1,4,13] 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,4,12] 3) Digestion, Flame Atomic Absorption Spectrometric Method ^[5,13] 4) Digestion, Inductively Coupled Plasma Method ^[5,12]
13	2,4-D	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
14	DDD	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
15	DDE	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
16	DDT	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
17	Dieldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
18	Endrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]
19	Heptachlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[1,7,21] 2) Ultrasonic Extraction, Gas Chromatographic Method ^[8,21]

20 Lead...

ลำดับ	สารเคมี	วิธีวิเคราะห์
20	Lead	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(1,4,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(5,13) 4) Digestion, Inductively Coupled Plasma Method ^(5,12)
21	Lindane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(1,7,21) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(8,21)
22	Mercury	1) Waste Extraction, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^(1,14) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 3) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ⁽¹⁷⁾ 4) Digestion, Inductively Coupled Plasma Method ^(5,12) 5) Thermal Decomposition Amalgamation and Atomic Absorption Spectrometric Method ⁽¹⁸⁾
23	Methoxychlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(1,7,21) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(8,21)
24	Molybdenum	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 2) Digestion, Inductively Coupled Plasma Method ^(5,12)
25	Nickel	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(1,4,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(5,13) 4) Digestion, Inductively Coupled Plasma Method ^(5,12)

26 Polychlorinated Biphenyls...

ลำดับ	สารเคมี	วิธีวิเคราะห์
26	Polychlorinated Biphenyls - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260 - 2-Chlorobiphenyl - 2,3-Dichlorobiphenyl - 2,2',5-Trichlorobiphenyl - 2,4',5-Trichlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'-Pentachlorobiphenyl - 2,2',4,5,5'-Pentachlorobiphenyl - 2,3,3',4',6-Pentachlorobiphenyl - 2,2',3,4,4',5'-Hexachlorobiphenyl - 2,2',3,4,5,5'-Hexachlorobiphenyl - 2,2',3,5,5',6'-Hexachlorobiphenyl - 2,2',4,4',5,5'-Hexachlorobiphenyl - 2,2',3,3',4,4',5'-Heptachlorobiphenyl - 2,2',3,4,4',5,5'-Heptachlorobiphenyl - 2,2',3,4,4',5,6'-Heptachlorobiphenyl - 2,2',3,4',5,5,6'-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6'-Nonachlorobiphenyl	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(1,7,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(8,22)

27 Pentachlorophenol...

ลำดับ	สารเคมี	วิธีวิเคราะห์
27	Pentachlorophenol	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,7,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(8,24)
28	pH	Electrometric Method ^(25,26)
29	Selenium	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(1,4,19) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(5,19) 4) Digestion, Inductively Coupled Plasma Method ^(5,12)
30	Silver	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 2) Digestion, Inductively Coupled Plasma Method ^(5,12)
31	Thallium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 2) Digestion, Inductively Coupled Plasma Method ^(5,12)
32	Toxaphene	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(1,7,21) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(8,21)
33	Trichloroethylene	1) Waste Extraction, Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(1,19,23) 2) Waste Extraction, Equilibrium Headspace, Gas Chromatographic/Mass Spectrometric Method ^(1,9,23) 3) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(1,23) 4) Equilibrium Headspace, Gas Chromatographic/Mass Spectrometric Method ^(9,23)
34	Vanadium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 2) Digestion, Inductively Coupled Plasma Method ^(5,12)

35 Zinc...

ลำดับ	สารเคมี	วิธีวิเคราะห์
35	Zinc	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(1,4,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,4,12) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(5,13) 4) Digestion, Inductively Coupled Plasma Method ^(5,12)

เอกสารอ้างอิง

- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2566. เรื่อง การจัดการสิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว. ราชกิจจานุเบกษา. 31 พฤษภาคม 2566. เล่มที่ 140 ตอนพิเศษ 126 ง.
- สมาคมวิศวกรรมสิ่งแวดล้อมแห่งประเทศไทย. คู่มือวิเคราะห์น้ำเสีย. พิมพ์ครั้งที่ 4. กรุงเทพฯ: เรือนแก้วการพิมพ์, 2547.
- APHA, AWWA, WEF. Standard Methods for the Examination of Water and Wastewater. 24th ed. Washington, DC: APHA, 2023.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. SW-846, 2014.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Acid Digestion of Sediments, Sludges, and Soils. SW-846 Method 3050B, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Alkaline Digestion for Hexavalent Chromium. SW-846 Method 3060A, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste 3. Physical/Chemical Methods. Separatory Funnel Liquid-Liquid Extraction. SW-846 Method 3510C, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Ultrasonic Extraction. SW-846 Method 3550C, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Volatile Organic Compounds in Various Sample Matrices Using Equilibrium Headspace Analysis. SW-846 Method 5021A, 2014.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Purge and Trap for Aqueous Samples. SW-846 Method 5030C, 2003.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Closed System Purge and Trap and Extraction for Volatile Organics in Soil and Waste Sample. SW-846 Method 5035A, 2000.
- United States...

12. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Inductively Coupled Plasma-Optical Emission Spectrometry. SW-846 Method 6010D, 2014.
13. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Flame Atomic Absorption Spectrophotometry. SW-846 Method 7000B, 2007.
14. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Arsenic (Atomic Absorption, Gaseous Hydride). SW-846 Method 7061A, 1992.
15. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Chromium, Hexavalent (Colorimetric). SW-846 Method 7196A, 1992.
16. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Liquid Waste (Manual Cold Vapor Technique). SW-846 Method 7470A, 1994.
17. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Solid or Semisolid Waste (Manual Cold-Vapor Technique). SW-846 Method 7471B, 1998.
18. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Solids and Solutions by Thermal Decomposition, Amalgamation, and Atomic Absorption Spectrophotometry. SW-846 Method 7473, 2007.
19. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Selenium (Atomic Absorption, Borohydride Reduction). SW-846 Method 7742, 1994.
20. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Nonhalogenated Organics Using GC/FID. SW-846 Method 8015D, 2003.
21. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Organochlorine Pesticides by Gas Chromatography. SW-846 Method 8081B, 2007.
22. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Polychlorinated Biphenyls (PCBs) by Gas Chromatography. SW-846 Method 8082A, 2007.
23. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Volatile Organic Compounds by Gas Chromatography/Mass Spectrometry. SW-846 Method 8260D, 2018.
24. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Semivolatile Organic Compounds by Gas Chromatography/Mass Spectrometry. SW-846 Method 8270E, 2018.

25. United States...

25. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. pH Electrometric Measurement. SW-846 Method 9040C, 2004.
26. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Soil and Waste pH. SW-846 Method 9045D, 2004.

37/๒



UAE
UNITED ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED



UAE
UNITED ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

กลุ่มมาตรฐานวิธีการวิเคราะห์และเขียนรายงานเบื้องต้นปฏิบัติการ กอวิชัยและเดือนยิมเลพิงโรงงาน กรมโรงงานอุตสาหกรรม โทร. ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๑๑๔-๕



ที่ อก ๐๓๐๓(๑)/ ๑ ๖ ๙ ๑ ๘

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐๐

๑๓ ธันวาคม ๒๕๖๖

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ยูนิเทค แอนาไลติกส์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารเคมีของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๗ พฤศจิกายน ๒๕๖๖

ตามที่หนังสือถึงอ้างถึง บริษัท ยูนิเทค แอนาไลติกส์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด
ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๕๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ๔๑ ถนนสุขุมวิท
แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์
ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้เพิ่มเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์
จำนวน ๖ ราย ได้แก่

- | | |
|-------------------------------|----------------------------|
| ๑) นางสาวพรพิมล ประชาพันธุ์ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๕๑ |
| ๒) นายวีรภัทร บุญญาธิ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๕๒ |
| ๓) นางสาวณัฐชา แก้วภาพ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๕๔ |
| ๔) นายณัฏฐพล สุทธิ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๕๕ |
| ๕) นายสิทธิพล พร้อมทองชื่นบุญ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๕๖ |
| ๖) นางสาวนันทพร การงานดี | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๕๗ |

อนึ่ง หนังสือฉบับนี้จะหมดอายุพร้อมหนังสือต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์
เอกชน คือในวันที่ ๒ กุมภาพันธ์ ๒๕๖๘ ทั้งนี้ สามารถยื่นคำขอผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์
กรมโรงงานอุตสาหกรรม

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นายประณต คำรงทอง)
ผู้อำนวยการกองวิจัยและเขียนรายงาน
ปฏิบัติการทางเคมีและเขียนรายงานกรมโรงงานอุตสาหกรรม



UAE
UNITED ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

กองวิจัยและเขียนรายงาน
กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบและเขียนรายงานเบื้องต้น
โทร. ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๑๑๔-๕
โทรสาร ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๑๑๔-๕
ไปรษณีย์อิเล็กทรอนิกส์ saraban@dhw.mail.go.th



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



ที่ อก ๐๓๐๓(๑)/ ๘ ๗ ๒ ๕

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐๐

๒๕ พฤษภาคม ๒๕๖๖

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ยูนิเทค แอนาไลติกส์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารเคมีของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๑๖ พฤษภาคม ๒๕๖๖

ตามที่หนังสือถึงอ้างถึง บริษัท ยูนิเทค แอนาไลติกส์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด
ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๕๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ๔๑ ถนนสุขุมวิท แขวงบางจาก
เขตพระโขนง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์ ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

๑. ให้อยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๕ ราย

- | | |
|-------------------------------|----------------------------|
| ๑) นางสาวพริดา เจริญชัยสมบัติ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๐ |
| ๒) นายสงกรานต์ มาลัยทอง | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๑ |
| ๓) นางสาวอรอนงค์ คุณาพันธ์ชัย | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๒ |
| ๔) นางสาวอรอนงค์ สาพน | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๓ |
| ๕) นางสาวสุภาวรี จันทร์ประทีป | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๔ |

๒. ให้เพิ่มเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๔ ราย

- | | |
|---------------------------|----------------------------|
| ๑) นางสาววิภาดา ฝ่ายสิงห์ | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๕ |
| ๒) นางสาวเออริน สุจริต | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๖ |
| ๓) นางสาวเพ็ญพิชชา รอดทอง | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๗ |
| ๔) นางสาวณัฏฐา แสงสว่าง | ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๘ |

อนึ่ง หนังสือฉบับนี้จะหมดอายุพร้อมหนังสือต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์
เอกชน คือในวันที่ ๒ กุมภาพันธ์ ๒๕๖๘ ทั้งนี้ สามารถยื่นคำขอผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์
กรมโรงงานอุตสาหกรรม

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นายประณต คำรงทอง)
ผู้อำนวยการกองวิจัยและเขียนรายงาน
ปฏิบัติการทางเคมีและเขียนรายงานกรมโรงงานอุตสาหกรรม



UAE
UNITED ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

กองวิจัยและเขียนรายงาน
กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบและเขียนรายงานเบื้องต้น
โทร. ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๑๑๔-๕
โทรสาร ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๑๑๔-๕
ไปรษณีย์อิเล็กทรอนิกส์ saraban@dhw.mail.go.th



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"





ที่ อก ๐๓๑๐(๑)/ ๖ ๐ ๒ ๘

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๒๒ มีนาคม ๒๕๖๖

เรื่อง เปลี่ยนแปลงบุคลากรและสารมลพิษที่วิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุใบเปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๓๐ มกราคม ๒๕๖๖

สิ่งที่ส่งมาด้วย เอกสารแนบท้ายหนังสือเปลี่ยนแปลงบุคลากรและสารมลพิษที่วิเคราะห์

บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด จำนวน ๒ แผ่น

ตามหนังสือที่อ้างถึง บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด
ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๕๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ๔๔ ถนนสุขุมวิท
แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากรและสารมลพิษที่วิเคราะห์
ความละเอียดเรียบร้อยแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

๑. ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๒ ราย

๑) นายวิญญู สุวรรณราช ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๐๑๖

๒) นายพิพัฒน์ ดินธกุล ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๐๕๗

๒. ให้เพิ่มเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๑ ราย

๑) นางสาวอรุณา ปะสานศรี ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๒

๒) นายพอล เนียมเนียม ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๓

๓) นายศุภกร สานศรี ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๔

๔) นายคนพล ศิลาพันธ์ ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๕

๕) นายโชคชัย พุ่มไสยา ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๖

๖) นายบวชัย กลับบ้านเกาะ ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๗

๗) นายธีรวัฒน์ ธรรมสุวรรณ ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๘

๘) นายณัฏฐพงศ์ ชะขุนทด ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๓๙

๙) นางสาวณัฐกานดา พลนิกกิจ ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๔๐

๑๐) นางสาววราพร ทองบุรัมย์ ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๔๑

๑๑) นางสาวพรชิตา ขจรเนติพิพิธ ทะเบียนเลขที่ ๖-๑๕๕-๖-๐๑๔๒

๓. ให้เพิ่มขอบข่ายสารมลพิษที่วิเคราะห์เป็น ตามสิ่งที่ส่งมาด้วย



ดำเนินการถูกต้อง

อนึ่ง...

หนึ่ง หนังสือแนบนี้จะมีผลต่ออายุหรือหนังสือที่ขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ที่ อก ๐๓๑๐(๑)/๑๕๕๗ ลงวันที่ ๓ กุมภาพันธ์ ๒๕๖๕ คือในวันที่ ๒ กุมภาพันธ์ ๒๕๖๘ ทั้งนี้ สามารถยื่นคำขอ
ผ่านระบบอิเล็กทรอนิกส์ได้ทั้งหน้าเว็บไซต์กรมโรงงานอุตสาหกรรม ตาม QR Code ที่แนบหนังสือฉบับนี้

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

สุรศักดิ์

(นายประสม ตำรวจเช็ก)
ผู้อำนวยการกองวิจัยและประเมินผลพิษภัยโรงงาน
ปฏิบัติการตามแบบฉบับกรมโรงงานอุตสาหกรรม



ยื่นคำขอผ่านระบบอิเล็กทรอนิกส์

กองวิจัยและประเมินผลพิษภัยโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ
โทร. ๐ ๒๕๖๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕ โทรสาร ๐ ๒๕๖๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕
ไปรษณีย์อิเล็กทรอนิกส์ sarabang@dlw.mail.go.th



ดำเนินการถูกต้อง



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



เอกสารแนบท้ายหนังสือเปลี่ยนแปลงบุคลากรและสารมลพิษที่วิเคราะห์

บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด เลขทะเบียน ๖-๑๕๕

ที่ อก ๐๓๑๐(๑)/ ๖ ๐ ๒ ๘

ลงวันที่ ๒๒ มีนาคม ๒๕๖๖

ขอขยายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๑๖ รายการ

เดิม จำนวน ๑๖ รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1.	Benzene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
2.	Carbon tetrachloride	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
3.	1,2-Dichloroethane	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
4.	1,1-Dichloroethylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
5.	cis-1,2-Dichloroethylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
6.	trans-1,2-Dichloroethylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
7.	Ethylbenzene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
8.	Methylene chloride	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
9.	Styrene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
10.	Tetrachloroethylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
11.	Toluene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
12.	Trichloroethylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
13.	m-Xylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
14.	o-Xylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
15.	p-Xylene	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)
16.	Xylene (Total)	Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method (1,2)



ดำเนินการถูกต้อง

เอกสารอ้างอิง...

เอกสารอ้างอิง

1. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Volatile Organic Compounds in Various Sample Matrices Using Equilibrium Headspace Analysis. SW-846 Method 5021A, 2014.
2. United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Volatile Organic Compounds by Gas Chromatography/Mass Spectrometry. SW-846 Method 8260D, 2018.



ดำเนินการถูกต้อง

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ กองวิจัยและประเมินผลพิษภัยโรงงาน กรมโรงงานอุตสาหกรรม โทร. ๐ ๒๕๖๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕



ที่ อก ๐๓๑๐(๑)/ ๑๕๕๕๕ ๓

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๒๕ ตุลาคม ๒๕๖๕

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารเคมีของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๑๘ ตุลาคม ๒๕๖๕

ตามหนังสือที่อ้างถึง บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด
ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๕๕๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ๕๑ ถนนสุขุมวิท แขวงบางจาก
เขตพระโขนง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์ ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

๑. ให้ออกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๔ ราย

- | | |
|--------------------------------------|-----------------------------|
| ๑) นางสาวรามา แก้วชื่อนอก | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๐๒ |
| ๒) นายกานต์พงศ์ บุญพวง | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๕ |
| ๓) นายกฤษณะ พงศ์สการพร | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๕๕ |
| ๔) นางสาวอัญญะลักษณ์ ธนโชติกาญจนนารถ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๖๗ |

๒. ให้เพิ่มผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๒ ราย

- | | |
|---------------------------|-----------------------------|
| ๑) นายกานต์พงศ์ บุญพวง | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๕๑ |
| ๒) นางสาวรามา แก้วชื่อนอก | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๕๒ |

๓. ให้เพิ่มเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๒ ราย

- | | |
|-----------------------------|-----------------------------|
| ๑) นายชินวัฒน์ หอยสิงห์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๐ |
| ๒) นายประพันธ์ แก้วภาค | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๑ |
| ๓) นายกิตติศักดิ์ มุสิกบุตร | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๒ |
| ๔) นายสุภาภรณ์ ฤทธาภรณ์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๓ |
| ๕) นายชาญณรงค์ อัครออย | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๔ |
| ๖) นางสาวจิตรมาศ ศรีวรรณ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๕ |
| ๗) นายสุจิตต์ ไปรษณีย์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๖ |
| ๘) นายเจษฎา ชวกรวิทย์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๗ |
| ๙) นายธรรด เหมะสุลิน | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๘ |
| ๑๐) นายสุรศักดิ์ ขุนเอียด | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๒๙ |
| ๑๑) นายสุรโชค หล้าโท | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๓๐ |
| ๑๒) นายชัย บัวสด | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๓๑ |

UAE
UNITE ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED
ดำเนินธุรกิจ

อนึ่ง หนังสือฉบับนี้...

อนึ่ง หนังสือฉบับนี้จะมีผลใช้บังคับเมื่อพ้นกำหนดอายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ที่ อก ๐๓๑๐(๑)/๑๕๕๕๕ ลงวันที่ ๔ กุมภาพันธ์ ๒๕๖๕ คือในวันที่ ๒ กุมภาพันธ์ ๒๕๖๘ ทั้งนี้ สามารถยื่นคำขอ
ผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม ตาม QR Code ท้ายหนังสือฉบับนี้

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นายประสม คาร์พวง)

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการตามแผนอำนวยการโรงงานอุตสาหกรรม



ยื่นคำขอผ่านระบบอิเล็กทรอนิกส์

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๐๑๕-๕

โทรสาร ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๐๑๕-๕

ไปรษณีย์อิเล็กทรอนิกส์ saraban@dlw.mail.go.th

UAE
UNITE ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED
ดำเนินธุรกิจ



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



ที่ อก ๐๓๑๐(๑)/ ๑๖ ๑๕๕ ๓

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๐๑ กันยายน ๒๕๖๕

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารเคมีของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๐ สิงหาคม ๒๕๖๕

ตามหนังสือที่อ้างถึง บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด
ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๕๕๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ๕๑ ถนนสุขุมวิท แขวงบางจาก
เขตพระโขนง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์ ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

๑. ให้ออกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๘ ราย

- | | |
|----------------------------------|-----------------------------|
| ๑) นายปริดา ไชยภูมิสุกุล | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๓๓ |
| ๒) นายปิยะณัฐ ศรีโงจน์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๓๕ |
| ๓) นายธีรเดช สุขศรี | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๔๑ |
| ๔) นางสาวศิริวรรณ ขอนพา | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๕๐ |
| ๕) นายศักดิ์สิทธิ์ เกิดขิง | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๖๓ |
| ๖) นางสาวลัดดาวัลย์ โพธิ์พันธ์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๘๐ |
| ๗) นางสาวกมลวรรณ เจริญจันทร์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๘๑ |
| ๘) นางสาวจันทร์จิรา ประกอบทรัพย์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๘๘ |

๒. ให้เพิ่มเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๑ ราย

- | | |
|------------------------------|-----------------------------|
| ๑) นางสาวนันทาชา แพรนโนเมือง | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๔ |
| ๒) นางสาวพิมพ์วรรณ สิมมา | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๐ |
| ๓) นายเนวินทร์ วงศ์คำ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๑ |
| ๔) นายประพันธ์ฤทธิ์ เมื่อนาง | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๒ |
| ๕) นางสาวณิชา ล่ำซิม | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๓ |
| ๖) นางสาวนภาพร ชื่นนาคู | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๔ |
| ๗) นางสาวเบญญา มอญคุณ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๕ |
| ๘) นายอมรพล อมรลักษณ์ | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๖ |
| ๙) นางสาววิไลพร ทองขาว | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๗ |
| ๑๐) นางสาวนิภากร สุภชาติภัก | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๘ |
| ๑๑) นางสาววิมลวรรณ คำตัน | ทะเบียนเลขที่ ๖-๑๕๕๕-๖-๐๐๑๙ |

UAE
UNITE ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED
ดำเนินธุรกิจ

อนึ่ง หนังสือฉบับนี้...

อนึ่ง หนังสือฉบับนี้จะมีผลใช้บังคับเมื่อพ้นกำหนดอายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ที่ อก ๐๓๑๐(๑)/๑๕๕๕๕ ลงวันที่ ๔ กุมภาพันธ์ ๒๕๖๕ คือในวันที่ ๒ กุมภาพันธ์ ๒๕๖๘ ทั้งนี้ สามารถยื่นคำขอ
ผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม ตาม QR Code ท้ายหนังสือฉบับนี้

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นางจินดา เกษะกรีนพงษ์)

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการตามแผนอำนวยการโรงงานอุตสาหกรรม



ยื่นคำขอผ่านระบบอิเล็กทรอนิกส์

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๐๑๕-๕

โทรสาร ๐ ๒๕๓๐ ๖๓๑๒ ต่อ ๒๐๑๕-๕

ไปรษณีย์อิเล็กทรอนิกส์ saraban@dlw.mail.go.th

UAE
UNITE ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED
ดำเนินธุรกิจ



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



ที่ อก ๐๓๑๐(๑)/ ๔๗๘ ๗



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๒๑ เมษายน ๒๕๖๕

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารเคมีของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๓๐ มีนาคม ๒๕๖๕

ตามหนังสือที่อ้างถึง บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด
ห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๔๕ สถานที่ตั้งเลขที่ ๓ ซอยอุดมสุข ถนนสุขุมวิท แขวงบางจาก
เขตพระโขนง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์ ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

1. ให้ยกเลิกควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๒ ราย
 - ๑) นางมานิดา แฉียงโฮ
 - ๒) นางสาวนภสรธรรม คงคำ
2. ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๒ ราย
 - ๑) นางสาวศิริพร อภิการรัตน์
 - ๒) นางสาวพรวิภา ภูสิน
3. ให้เพิ่มเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๒ ราย
 - ๑) นางสาวณิฏฐ์กานันท์ ธนโชติกาญจนการ
 - ๒) นางสาวจันทร์จิรา ประกอบพรหมย์

อนึ่ง หนังสือฉบับนี้จะมีผลตั้งแต่วันที่ ๒๕๖๕ ขึ้นไปนับจากวันที่ ๒ กุมภาพันธ์ ๒๕๖๕ ทั้งนี้ สามารถยื่นคำขอ
ผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม ตาม QR Code ห้ายหนังสือฉบับนี้

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นางจินดา เดชะศรีจันทร์)
ผู้อำนวยการกองบริหารความปลอดภัยและอาชีวอนามัย
กรมโรงงานอุตสาหกรรม



ยื่นคำขอผ่านระบบอิเล็กทรอนิกส์

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบผลิตภัณฑ์และทะเบียนโรงงานอุตสาหกรรม

โทร. ๐ ๒๕๖๐ ๖๓๑๒ ต่อ ๒๑๐๑-๕ โทรสาร ๐๒๕๖๐-๖๓๑๒ ต่อ ๒๑๐๑-๕

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

UAE
UAE CONSULTANT COMPANY LIMITED

ดำเนินาถูกต้อง



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



ที่ อก ๐๓๑๐(๑)/ ๔๗๘ ๗

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๐ ๙ กุมภาพันธ์ ๒๕๖๕

เรื่อง ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

เรียน กรรมการผู้จัดการ บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารเคมีของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๗ ธันวาคม ๒๕๖๔

- สิ่งที่ส่งมาด้วย
๑. รายชื่อผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๔๐ ราย
 ๒. รายชื่อเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๓๐๖ ราย
 ๓. ขอบข่ายสารเคมีที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม

ตามหนังสือที่อ้างถึง บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด
ขอต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๑๔๕ สถานที่ตั้งเลขที่ ๓
ซอยอุดมสุข ๔๓ ถนนสุขุมวิท แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร ขอกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้บริษัท ยูโนเด็ค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง
คอนซัลแตนท์ จำกัด ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน โดยมีองค์ประกอบดังนี้

- ก. ผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๔๐ ราย ตามสิ่งที่ส่งมาด้วย ๑
- ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๓๐๖ ราย ตามสิ่งที่ส่งมาด้วย ๒
- ค. ขอบข่ายสารเคมีที่ได้รับขึ้นทะเบียนไว้วิเคราะห์ในน้ำเสีย น้ำใต้ดิน อากาศเสีย สิ่งปฏิกูล
หรือวัสดุที่ไม่ใช่แล้ว และดิน ตามสิ่งที่ส่งมาด้วย ๓

หนังสือฉบับนี้จะมีผลตั้งแต่วันที่ ๒ กุมภาพันธ์ ๒๕๖๕ หากประสงค์จะต่ออายุหนังสือ
รับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ให้ยื่นคำขอต่ออายุพร้อมเอกสารประกอบคำขอต่อ
กรมโรงงานอุตสาหกรรมภายใน ๓๐ วัน ก่อนวันสิ้นสุดของหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ทั้งนี้ สามารถยื่นคำขอผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม ตาม QR Code ห้าย
หนังสือฉบับนี้

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(นางจินดา เดชะศรีจันทร์)
ผู้อำนวยการกองบริหารความปลอดภัยและอาชีวอนามัย
กรมโรงงานอุตสาหกรรม



ยื่นคำขอผ่านระบบอิเล็กทรอนิกส์

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบผลิตภัณฑ์และทะเบียนโรงงานอุตสาหกรรม

โทร. ๐ ๒๕๖๐ ๖๓๑๒ ต่อ ๒๑๐๑-๕ โทรสาร ๐ ๒๕๖๐-๖๓๑๒ ต่อ ๒๑๐๑-๕

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

UAE
UAE CONSULTANT COMPANY LIMITED

ดำเนินาถูกต้อง

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

UAE
UAE CONSULTANT COMPANY LIMITED

ดำเนินาถูกต้อง

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

ไปรษณีย์อิเล็กทรอนิกส์: saraban@div.go.th

๓๖) นายสุกฤษณ์ คุ้มธนภาณุพงษ์
๓๗) นางสาวศิริภาพร เหมือนแร่
๓๘) นางสาวนิสสา ขำนิล
๓๙) นางสาวพรนิภา ชีระจินดาชล
๔๐) นายนาเคนทร์ พันธุ์ชาติกุล

ทะเบียนเลขที่ 2-๑๔๕-ก-๐๐๓๖
ทะเบียนเลขที่ 2-๑๔๕-ก-๐๐๓๗
ทะเบียนเลขที่ 2-๑๔๕-ก-๐๐๓๘
ทะเบียนเลขที่ 2-๑๔๕-ก-๐๐๓๙
ทะเบียนเลขที่ 2-๑๔๕-ก-๐๐๔๐

(นางจินดา เกษะศรีนทร์)
ผู้อำนวยการกองวิจัยและพัฒนาพืชสวน
ปศุสัตว์เขตภาคเหนือตอนบน



LIAE
UNITED ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

คำแนะนำถูกต้อง

เอกสารแนบท้ายหนังสือรับต่ออาชญากรรมขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท ยูนิเทค แอนนาลิสต์ แอนด์ เอ็นจิเนียริ่ง คอนซัลแตนท์ จำกัด เลขทะเบียน 7-๑๕๕
ที่ อก ๐๓๐๓(๑)/ ๓๘๗/ ๙ ลงวันที่ ๐๙ กุมภาพันธ์ ๒๕๖๕

ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๐๖ ราย

- ๑) นายสุทัศน์ หัสนิษฐ์
- ๒) นางสาวธรรม นามะอ้อน
- ๓) นายพิรุณ ใจแก้ว
- ๔) นางสาววิไลลักษณ์ เกื้อสง
- ๕) นายธนชาติ อุณหะนาค
- ๖) นางสาวปาริชาติ นามพะ
- ๗) นางสาวกัญญา นามพะ
- ๘) นายอรุณพร เทพทอง
- ๙) นางสาวอรุณรัตน์ พุทธิชัย
- ๑๐) นางสาววรรณิณี สานบุญเรือน
- ๑๑) นายกฤษณะนาค นามพิชัย
- ๑๒) นางสาวอรุณกานต์ อ่อนวงศ์
- ๑๓) นายกิตติศักดิ์ หงษ์จริง
- ๑๔) นางสาวอัยกษิณห์ บุญคง
- ๑๕) นางสาวพรพิมล แวนทอง
- ๑๖) นายวิชญ์ สุวรรณธรรม
- ๑๗) นายอภิวิทย์ พ่วงทิ
- ๑๘) นายมานิษฐ์ ปานโชติ
- ๑๙) นายทพพร ธนะพิรุณ
- ๒๐) นางสาวกัลยาณี โสตา
- ๒๑) นางสาวกานทิ สุทธิ
- ๒๒) นางสาวชนวนันท์ อุทธิพิทักษ์
- ๒๓) นายศิวพันธ์ จงคุณเกียรติ
- ๒๔) นางสาวสุภาวดี ธิยาขันธ์
- ๒๕) นายพงศ์เทพ เพียรจระ
- ๒๖) นายชวัญชัย หันทุก
- ๒๗) นางสาวพัชรีจิรา ศักดิ์พิศาล
- ๒๘) นางสาวกัญญา เสือคำจันทร์
- ๒๙) นายกานต์ศักดิ์ บุญพวง
- ๓๐) นางสาวสุทธิดา เจริญชัยสมาน
- ๓๑) นายพนกรินทร์ จงโต
- ๓๒) นายพิระพัฒน์ บุญยุติศิลป์
- ๓๓) นายสุชาติ ไชยนิลกุล
- ๓๔) นายธีรวัฒน์ เลื่อนทอง
- ๓๕) นายพิษณุพงษ์ ศรีเจริญ

[illegible]

(นางจินดา เถชะศรีรินทร์)
ผู้อำนวยการกองสวัสดิการสังคม เทศบาลเมืองแกลง
ปฎิบัติราชการแทนนายกเทศมนตรีเมืองแกลง

๓๖) นายสมภพสิทธิ์...

ปฏิรูปโครงสร้างการกำกับและติดตามโครงการบูรณาการ

-12-

- ๓๖) นายอนุบาลสินธุ์ ชูธรรมรัตน์
- ๓๗) นายอภิรักษ์ วรโสม
- ๓๘) นายจักรพันธ์ ภูมิระวี
- ๓๙) นายปิยะภูมิกุล เกตุแก้ว
- ๔๐) นายธีรวัฒน์ มาศโคกโพธิ์
- ๔๑) นายธีรวัฒน์ สุทธิศรี
- ๔๒) นายบุญญฤทธิ์ เกื้อสิน
- ๔๓) นายพรพวงสุณี ไกรสกุล
- ๔๔) นายอาทิตย์ แสงจันทร์
- ๔๕) นายภูมิจันทร์ เมื้อชัย
- ๔๖) นายธนัท เลิศประเสริฐ
- ๔๗) นางสาวนิภาพร จันทเขตต์
- ๔๘) นายพุทธพรชัย ลือระยง
- ๔๙) นายรณภพ กุศลฤทธิวัฒน์
- ๕๐) นางสาวศิริวรรณ ชอนทา
- ๕๑) นายสมพงษ์ ศักดิ์ไชย
- ๕๒) นายสุวัจน์ นิธิอิศรางกูร
- ๕๓) นายชัยวุฒิ บุญศิริ
- ๕๔) นายเอกภูมิ เสงี่ยม
- ๕๕) นายสุชนันท์ บุญเดิม
- ๕๖) นายอนนต์ หวานเสนาะ
- ๕๗) นายพิพัฒน์ ตี้นะบุญ
- ๕๘) นายอิทธิสิทธิ์ ศิริคนแก้ว
- ๕๙) นายภูวณัฐ มงคลสุข
- ๖๐) นายสุวิทย์ นววิภากร
- ๖๑) นางสาววิรัตน์ สานนท์
- ๖๒) นายศุภกร บัววงศ์
- ๖๓) นายศักดิ์สิทธิ์ เกษัง
- ๖๔) นางสาววิภาณี ยี่ฮักรัตน์
- ๖๕) นางสาวจันทนุดา เปลี่ยนศรี
- ๖๖) นางสาวนันทนาภา กุลสุรินทร์
- ๖๗) นางสาวอารียา พูลรวม
- ๖๘) นายจิรวัฒน์ หาดทอง
- ๖๙) นายดิถีพงษ์ สอนพงษ์ภูมิ
- ๗๐) นายภูมพล สานเพชร
- ๗๑) นายพัชราพัชรนาถ แสงจันทร์
- ๗๒) นายธีรวัฒน์ เหล่ากาน

[illegible]

UNITED ANALYST AND ENGINEER
CONSULTANT COMPANY LIMITED

เลขที่ ๒๓๔๕-๖-๗๘๙

นางจินดา เสงขลสินทร์
ผู้อำนวยการกองวิจัยและพัฒนา
ปฏิกิริยา และการนอนหลับ

๗๓) นายถวิลทิพย์พงษ์

-၁၇-

- ๓๖) นายอิทธิพงษ์ ศรีวิเศษ
- ๓๗) นางสาวกรรณิการ์ สีสันทะ
- ๓๘) นายสุภาภรณ์ อัมพิตระ
- ๓๙) นายพรชัย คู่ม่วง
- ๔๐) นางสาวศศิธร ชัยเชาว์
- ๔๑) นายธีรพงษ์ ศิริคำแหงน
- ๔๒) นางสาวปณัฏา พรหมณี
- ๔๓) นางสาวสริตติวีย์ โพธิ์พัก
- ๔๔) นางสาวกมลวรรณ เข็มเงิน
- ๔๕) นายธนกร จันทร์ทอง
- ๔๖) นายภิรมณ์ โฆษขุ
- ๔๗) นางสาวพนัสชา กลิ่นสน
- ๔๘) นายสนธิ์ ศรีพิทักษ์
- ๔๙) นางสาวสิริกัญญา จันทบุบผ
- ๕๐) นางสาวกรณาถิ์ นวลทิพย์
- ๕๑) นางสาวสราลี แซ่เตียว
- ๕๒) ศาสตราจารย์ ณัฐมิ่ง
- ๕๓) นายวรพงษ์ บากอจันทร์
- ๕๔) นางสาวชนาภา มาลากาตะ
- ๕๕) นางสาวเกสรรัตน์ ตูนาพันธ์
- ๕๖) นายวีระยุทธ สารกิจดี
- ๕๗) นางสาววิไลจิตร รื่นจันทน์
- ๕๘) นายกฤษณะ ศรีกลาง
- ๕๙) นายภูวิชญ์ พรหมอารักษ์
- ๖๐) นายสมรินทร์ พานทวี
- ๖๑) นายวิชาชล สอน
- ๖๒) นายธีรพงศ์ แสนงาม
- ๖๓) นางสาวกรรณณันท์ สาธรรม
- ๖๔) นายอภิสิทธิ์ อุบลผล
- ๖๕) นายพัชรินทร์ ขุนศรี
- ๖๖) นายชัชชิตินันท์ โห้บุญ
- ๖๗) นายคณิน พงษ์ศิริธาร
- ๖๘) นางสาวสุดารัตน์ จันทร์
- ๖๙) นายสุเมธ วัฒนกุล

[illegible]

ENGINEER ANALYST AND ENGINEERING
CONSULTANCY COMPANY LIMITED

นางจินดา เกษะศรีนทร์
กรรมการกองสวัสดิการและสังคมสงเคราะห์
สภาเทศบาลนครเชียงใหม่

เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท ยูไนเต็ด แอนาไลติก แอนด์ เอ็นจิเนียริง คอนซัลแตนท์ จำกัด เลขทะเบียน ๖-๑๔๕
ที่ อภ ๐๓๑๐(๑)/ ๑๘๗๗ ลงวันที่ ๑๗ กุมภาพันธ์ ๒๕๖๕

ขอขยายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๓๘๗ รายการ

นำสืบ จำนวน ๑6 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
2	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
3	Barium	Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
4	α-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
5	β-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
6	δ-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
7	γ-BHC	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
8	Biochemical Oxygen Demand	1) 5-Day BOD Test, Azide Modification Method ⁽⁴⁾ 2) 5-Day BOD Test, Membrane Electrode Method ⁽⁴⁾
9	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
10	Chemical Oxygen Demand	1) Closed Reflux, Titrimetric Method ⁽⁴⁾ 2) Closed Reflux, Colorimetric Method ⁽⁴⁾ 3) Open Reflux, Titrimetric Method ⁽⁴⁾
11	Chlordane	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
12	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
13	Color	ADMI Weighted-Ordinate Spectrophotometric Method ⁽⁴⁾
14	Copper	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
15	Cyanide	1) Distillation, Potentiometric Method ⁽⁴⁾ 2) Flow Injection Analysis Method ⁽⁴⁾

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
16	o,p'-DDT	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
17	4,4'-DDD	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
18	4,4'-DDE	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
19	4,4'-DDT	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
20	Dieldrin	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
21	Endosulfan I	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
22	Endosulfan II	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
23	Endosulfan sulfate	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
24	Endrin	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
25	Endrin aldehyde	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
26	Formaldehyde	Distillation, Colorimetric Method ⁽⁴⁾
27	Free Chlorine	1) Iodometric Method ⁽⁴⁾ 2) DPD Ferrous Titrimetric Method ⁽⁴⁾
28	Heptachlor	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
29	Heptachlor Epoxide	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
30	Hexavalent Chromium	1) Colorimetric Method ⁽⁴⁾ 2) Extraction, Direct Air-Acetylene Flame Method ⁽⁴⁾
31	Lead	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
32	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
33	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ⁽⁴⁾
34	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
35	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾

16 o,p'-DDT...

36 Oil & Grease...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
36	Oil & Grease	1) Liquid-Liquid, Partition-Gravimetric Method ⁽⁴⁾ 2) Soxhlet Extraction Method ⁽⁴⁾
37	pH	Electrometric Method ⁽⁴⁾
38	Phenols	1) Distillation, Chloroform Extraction Method ⁽⁴⁾ 2) Distillation, Direct Photometric Method ⁽⁴⁾
39	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
40	Sulfide	1) Iodometric Method ⁽⁴⁾ 2) Methylene Blue Method ⁽⁴⁾
41	Temperature	Laboratory and Field Methods ⁽⁴⁾
42	Total Dissolved Solids	Dried at 180 °C ⁽⁴⁾
43	Total Kjeldahl Nitrogen	Semi-Micro-Kjeldahl Method ⁽⁴⁾
44	Total Suspended Solids	Dried at 103-105 °C ⁽⁴⁾
45	Trivalent Chromium	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ⁽⁴⁾
46	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾

นำสืบ จำนวน 126 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
2	Acetone	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
3	Aldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
4	Anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
5	Antimony	Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
7	Atrazine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
8	Barium	1) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
9	Benz(a)anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
10	Benzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
11	Benzo(b)fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
12	Benzo(k)fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
13	Benzoic acid	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
14	Benzo(a)pyrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾

4 Anthracene...

15 Benzo(g,h,i)perylene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
15	Benzo(g,h,i)perylene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
16	Beryllium	Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
17	Bis(2-chloroethyl)ether	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
18	Bis(2-ethylhexyl)phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
19	Bromodichloromethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
20	Bromoform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
21	Butanol	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
22	Butyl benzyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
23	Cadmium	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
24	Carbazole	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
25	Carbon disulfide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
26	Carbon tetrachloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
27	Chlordane	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
28	p-Chloroaniline	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
29	Chlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾

30 Chlorodibromomethane...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
30	Chlorodibromomethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
31	Chloroform	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
32	2-Chlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
33	Chromium	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁴⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁴⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾
34	Chromium (II)	1) Digestion, Direct Air-Acetylene Flame Method; Colorimetric Method; Calculation ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ⁽⁴⁾
35	Chromium (VI)	1) Colorimetric Method ⁽⁴⁾ 2) Extraction, Air-Acetylene Flame Method ⁽⁴⁾
36	Chrysene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
37	Cyanide	Distillation, Colorimetric Method ⁽⁴⁾
38	2,4-D	Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾
39	DDD	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
40	DDE	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
41	DDT	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾

42 Dibenz(a,h)anthracene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
42	Dibenz(a,h)anthracene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
43	Di-n-butyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
44	1,2-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
45	1,3-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
46	1,4-Dichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
47	3,3'-Dichlorobenzidine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
48	1,1-Dichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
49	1,2-Dichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
50	1,1-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
51	cis-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
52	trans-1,2-Dichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
53	2,4-Dichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
54	1,2-Dichloropropane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
55	1,3-Dichloropropane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
56	1,3-Dichloropropene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
57	Dieldrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾

58 Diethyl phthalate...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
58	Diethyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
59	2,4-Dimethylphenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
60	2,4-Dinitrophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
61	2,4-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
62	2,6-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
63	Di-n-Octyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
64	Endosulfan	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
65	Endrin	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
66	Ethylbenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
67	Fluoranthene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
68	Fluorene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
69	Heptachlor	1) Liquid-Liquid Extraction, Gas Chromatographic Method ⁽⁴⁾ 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾

70 Heptachlor epoxide...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
70	Heptachlor epoxide	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
71	Hexachlorobenzene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
72	Hexachloro-1,3-butadiene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
73	n-Hexane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
74	α-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
75	β-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
76	γ-HCH	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
77	Hexachlorocyclopentadiene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
78	Hexachloroethane	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
79	Indeno(1,2,3-cd)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
80	Isophorone	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
81	Lead	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]

82 Manganese...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
82	Manganese	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
83	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[4]
84	Methanol	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
85	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic Method ^[4]
86	Methyl bromide	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
87	Methylene chloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
88	2-Methylphenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
89	2-Methylnaphthalene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
90	Methyl tert-butyl ether	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
91	Naphthalene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
92	Nickel	1) Digestion, Direct Air-Acetylene Flame Method ^[4] 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ^[4] 3) Digestion, Inductively Coupled Plasma Method ^[4]
93	Nitrobenzene	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
94	N-Nitrosodiphenylamine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
95	N-Nitrosodi-n-propylamine	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]

96 Polychlorinated Biphenyls...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
96	Polychlorinated Biphenyls - PCB 1016 - PCB 1221 - PCB 1232 - PCB 1242 - PCB 1248 - PCB 1254 - PCB 1260	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
97	Pentachlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
98	pH	Electrometric Method ^[4]
99	Phenanthrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
100	Phenol	1) Distillation, Chloroform Extraction Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
101	Pyrene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
102	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma Method ^[4]
103	Silver	Digestion, Inductively Coupled Plasma Method ^[4]
104	Styrene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
105	1,1,2,2-Tetrachloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
106	Tetrachloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
107	Toluene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]

108 Toxaphene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
108	Toxaphene	1) Liquid-Liquid Extraction, Gas Chromatographic Method ^[4] 2) Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
109	TPH (C ₅ - C ₉)	1) Purge and Trap, Gas Chromatographic Method ^[11,21] 2) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^[11,25]
110	TPH (C ₉ 8 - C ₁₂)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[9,21]
111	TPH (C ₁₀ 16 - C ₃₀)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^[9,21]
112	1,2,4-Trichlorobenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
113	1,1,1-Trichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
114	1,1,2-Trichloroethane	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
115	Trichloroethylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
116	2,4,5-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
117	2,4,6-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[4]
118	1,3,5-Trimethylbenzene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
119	Vanadium	Digestion, Inductively Coupled Plasma Method ^[4]
120	Vinyl acetate	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
121	Vinyl chloride	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
122	m-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]
123	o-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ^[4]

124 p-Xylene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
124	p-Xylene	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁸⁾
125	Xylene (Total)	Purge and Trap Gas Chromatographic/Mass Spectrometric Method ⁽⁸⁾
126	Zinc	1) Digestion, Direct Air-Acetylene Flame Method ⁽⁸⁾ 2) Digestion, Electrothermal Atomic Absorption Spectrometric Method ⁽⁸⁾ 3) Digestion, Inductively Coupled Plasma Method ⁽⁸⁾

อากาศเสีย (ปล่องระบาย) จำนวน 25 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Antimony	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
2	Arsenic	1) Isokinetic Sampling, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
3	Cadmium	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
4	Carbon Monoxide	Instrumental Analyzer Method ⁽³⁾
5	Chlorine	Isokinetic Sampling, Ion Chromatographic Method ⁽³⁾
6	Chromium	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
7	Cobalt	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
8	Copper	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
9	Cresol	Absorption Sampling, Gas Chromatographic Method ⁽³⁾

10 Dioxins/Furans...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
10	Dioxins/Furans	Isokinetic Sampling ⁽³⁾
11	Hydrogen Chloride	Isokinetic Sampling, Ion Chromatographic Method ⁽³⁾
12	Hydrogen Fluoride	Isokinetic Sampling, Ion Chromatographic Method ⁽³⁾
13	Hydrogen Sulfide	Absorption Sampling, Iodometric Method ⁽³⁾
14	Lead	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
15	Manganese	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
16	Mercury	Isokinetic Sampling, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ⁽³⁾
17	Nickel	1) Isokinetic Sampling, Digestion, Direct Air-Acetylene Flame Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
18	Opacity	Ringelmann's Method ⁽¹⁾
19	Oxides of Nitrogen	1) Absorption Sampling, Phenoldisulfonic acid Method ⁽³⁾ 2) Instrumental Analyzer Method ⁽³⁾
20	Selenium	1) Isokinetic Sampling, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ⁽³⁾ 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
21	Sulfur Dioxide	1) Absorption Sampling, Barium-Thorin Titrimetric Method ⁽³⁾ 2) Instrumental Analyzer Method ⁽³⁾
22	Sulfuric Acid	Isokinetic Sampling, Barium-Thorin Titrimetric Method ⁽³⁾
23	Total Suspended Particulate	Isokinetic Sampling, Gravimetric Method ⁽³⁾
24	Vanadium	Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽³⁾
25	Xylene	1) Isokinetic Sampling, Gas Chromatographic Method ⁽³⁾ 2) Absorption Sampling, Gas Chromatographic Method ⁽³⁾

สิ่งปฏิกูล...

สิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว จำนวน 35 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
2	Antimony	Digestion, Inductively Coupled Plasma Method ^(7,13)
3	Arsenic	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13) 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,13) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)
4	Barium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
5	Beryllium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
6	Cadmium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(7,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,13) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)
7	Chlordane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
8	Chromium	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(7,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13)

3) Digestion,...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
9	Chromium (III)	3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,13) 4) Digestion, Inductively Coupled Plasma Method ^(7,13) 1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method; Waste Extraction, Colorimetric Method; Calculation ^(7,8,13,14) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method; Waste Extraction, Colorimetric Method; Calculation ^(7,8,13,14)
10	Chromium (VI)	3) Digestion, Flame Atomic Absorption Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation ^(7,8,13,14) 4) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation ^(7,8,13,14)
11	Cobalt	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
12	Copper	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(7,13) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(7,13) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,13) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)
13	2,4-D	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
14	DDD	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)

15 DDE...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
15	DDE	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
16	DDT	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
17	Dieldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
18	Endrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
19	Heptachlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
20	Lead	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(2,6,14) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)
21	Lindane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
22	Mercury	1) Waste Extraction, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^(7,17) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13)

UAE
UPTOWN ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

3) Digestion,...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
		3) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^(7,18) 4) Digestion, Inductively Coupled Plasma Method ^(7,13) 5) Thermal Decomposition Amalgamation and Atomic Absorption Spectrometric Method ⁽¹⁴⁾
23	Methoxychlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
24	Molybdenum	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
25	Nickel	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(2,6,14) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)
26	Polychlorinated Biphenyls - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260 - 2-Chlorobiphenyl - 2,3-Dichlorobiphenyl - 2,2',5'-Trichlorobiphenyl - 2,4',5'-Trichlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'-Pentachlorobiphenyl	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 3) Digestion, Inductively Coupled Plasma Method ^(2,6,13) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)

UAE
UPTOWN ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

- 2,2',4,5,5'...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
	- 2,2',4,5,5'-Pentachlorobiphenyl - 2,3,3',4',6-Pentachlorobiphenyl - 2,2',3,4,4',5'-Hexachlorobiphenyl - 2,2',3,4,5,5'-Hexachlorobiphenyl - 2,2',3,5,5',6'-Hexachlorobiphenyl - 2,2',4,4',5,5'-Hexachlorobiphenyl - 2,2',3,3',4,4',5'-Heptachlorobiphenyl - 2,2',3,4,4',5,5'-Heptachlorobiphenyl - 2,2',3,4,4',5',6'-Heptachlorobiphenyl - 2,2',3,4',5,5',6'-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6'-Nonachlorobiphenyl Pentachlorophenol	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(2,3,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Digestion, Inductively Coupled Plasma Method ^(2,6,13) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)
27		
28	pH	Electrometric Method ^(21,32)
29	Selenium	1) Waste Extraction, Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(2,6,20) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 3) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,20) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)

UAE
UPTOWN ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

30 Silver...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
30	Silver	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
31	Thallium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
32	Toxaphene	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(2,9,22) 2) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
33	Trichloroethylene	1) Waste Extraction, Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(2,12,25) 2) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
34	Vanadium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
35	Zinc	1) Waste Extraction, Digestion, Flame Atomic Absorption Spectrometric Method ^(2,6,14) 2) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(2,6,13) 3) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 4) Digestion, Inductively Coupled Plasma Method ^(7,13)

ดิน จำนวน 125 รายการ

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
2	Acetone	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)

UAE
UPTOWN ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

3 Aldrin...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
3	Aldrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
4	Anthracene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
5	Antimony	Digestion, Inductively Coupled Plasma Method ^(7,13)
6	Arsenic	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,13) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
7	Atrazine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
8	Barium	Digestion, Inductively Coupled Plasma Method ^(7,13)
9	Benz(a)anthracene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
10	Benzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
11	Benzo(b)fluoranthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
12	Benzo(k)fluoranthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
13	Benzoic acid	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
14	Benzo(a)pyrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

15 Benzo(g,h,i)perylene...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
15	Benzo(g,h,i)perylene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
16	Beryllium	Digestion, Inductively Coupled Plasma Method ^(7,13)
17	Bis(2-chloroethyl)ether	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
18	Bis(2-ethylhexyl)phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
19	Bromodichloromethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
20	Bromoform	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
21	Butanol	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
22	Butyl benzyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
23	Cadmium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
24	Carbazole	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
25	Carbon disulfide	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
26	Carbon tetrachloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
27	Chlordane	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
28	p-Chloroaniline	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
29	Chlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
30	Chlorodibromomethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)

31 Chloroform...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
31	Chloroform	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
32	2-Chlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
33	Chromium	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
34	Chromium (III)	1) Digestion, Flame Atomic Absorption Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation ^(7,8,14,16) 2) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation ^(7,8,14,16)
35	Chromium (VI)	Alkaline Digestion, Colorimetric Method ^(8,16)
36	Chrysene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
37	Cyanide	Extraction, Distillation, Colorimetric Method ^(28,29,30)
38	2,4-D	Ultrasonic Extraction, Gas Chromatographic Method ⁽²⁷⁾
39	DDD	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
40	DDE	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
41	DDT	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
42	Dibenz(a,h)anthracene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

43 Di-n-butyl phthalate...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
43	Di-n-butyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
44	1,2-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
45	1,3-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
46	1,4-Dichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
47	3,3'-Dichlorobenzidine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
48	1,1-Dichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
49	1,2-Dichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
50	1,1-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
51	cis-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
52	trans-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
53	2,4-Dichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
54	1,2-Dichloropopane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
55	1,3-Dichloropropane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
56	1,3-Dichloropropene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
57	Dieldrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
58	Diethyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
59	2,4-Dimethylphenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

60 2,4-Dinitrophenol...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
60	2,4-Dinitrophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,24)
61	2,4-Dinitrotoluene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
62	2,6-Dinitrotoluene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
63	Di-n-Octyl phthalate	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
64	Endosulfari	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
65	Endrin	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
66	Ethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,23)
67	Fluoranthene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
68	Fluorene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
69	Heptachlor	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
70	Heptachlor epoxide	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

UNITED ANALYST AND ENGINEERING
CONSULTANT COMPANY LIMITED

71 Hexachlorobenzene.

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
71	Hexachlorobenzene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
72	Hexachloro-1,3-butadiene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
73	n-Hexane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
74	α -HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
75	β -HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
76	γ -HCH	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
77	Hexachlorocyclopentadiene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
78	Hexachloroethane	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
79	Indeno(1,2,3-cd)pyrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
80	Isophorone	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
81	Lead	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,15)
82	Manganese	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,15)

ANALYTICAL
Digestion, Inductively Coupled
Digestion, Flame Atomic
method

83 Mercury...

ลำดับ	สารเคมี	วิธีวิเคราะห์
83	Mercury	1) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^(1,8) 2) Digestion, Inductively Coupled Plasma Method ^(1,13) 3) Thermal Decomposition Amalgamation and Atomic Absorption Spectrometric Method ⁽⁹⁾
84	Methanol	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(1,2,25)
85	Methoxychlor	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,22) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,24)
86	Methyl bromide	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
87	Methylene chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
88	2-Methylphenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
89	2-Methylnaphthalene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
90	Methyl tert-butyl ether	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
91	Naphthalene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,24) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
92	Nickel	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
93	Nitrobenzene	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
94	N-Nitrosodiphenylamine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
95	N-Nitrosodi-n-propylamine	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)

UNITED ANALYST AND ENGINEERING
COMMUNITY COMPANY LIMITED

96 Polychlorinated Biphenyls...

ลำดับ	สารพิษ	วิธีวิเคราะห์
96	<p>Polychlorinated Biphenyls</p> <ul style="list-style-type: none"> - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260 <p>Polychlorinated Biphenyls</p> <ul style="list-style-type: none"> - 2-Chlorobiphenyl - 2,3-Dichlorobiphenyl - 2,2',5-Trichlorobiphenyl - 2,4',5-Trichlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'- Pentachlorobiphenyl - 2,2',4,5,5'- Pentachlorobiphenyl - 2,3,3',4',6'- Pentachlorobiphenyl - 2,2',3,4,4',5'- Hexachlorobiphenyl - 2,2',3,4,5,5'- Hexachlorobiphenyl - 2,2',3,5,5',6'- Hexachlorobiphenyl - 2,2',4,4',5,5'- Hexachlorobiphenyl - 2,2',3,3',4,4',5'- Heptachlorobiphenyl - 2,2',3,4,4',5,5'- Heptachlorobiphenyl - 2,2',3,4,4',5,6'- Heptachlorobiphenyl 	<p>1) Ultrasonic Extraction, Gas Chromatographic Method^(10,23)</p> <p>2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method^(10,26)</p> <p>Ultrasonic Extraction, Gas Chromatographic Method^(10,23)</p>



LAE
LEAD ANALYST AND ENGINEERING
COMMUNICATIONS COMPANY, INC.

- 2,2',3,4',5,5',6...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
97	- 2,2',3,4',5,5',6-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6-Nonachlorobiphenyl Pentachlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
98	Phenanthrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
99	Phenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
100	Pyrene	1) Ultrasonic Extraction, Gas Chromatographic Method ^(10,26) 2) Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
101	Selenium	1) Digestion, Hydride Generation/Atomic Absorption Spectrometric Method ^(7,22) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)
102	Silver	Digestion, Inductively Coupled Plasma Method ^(7,13)
103	Styrene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
104	1,1,2,2-Tetrachloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
105	Tetrachloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
106	Toluene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
107	Toxaphene	Ultrasonic Extraction, Gas Chromatographic Method ^(10,22)
108	TPH (C ₈ -C ₁₆)	1) Purge and Trap, Gas Chromatographic Method ^(12,21) 2) Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
109	TPH (C ₈ -C ₁₆)	Ultrasonic Extraction, Gas Chromatographic Method ^(10,21)
110	TPH (C ₁₆ -C ₃₃)	Ultrasonic Extraction, Gas Chromatographic Method ^(10,21)
111	1,2,4-Trichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)

112 1,1,1-Trichloroethane...

ลำดับ	สารมลพิษ	วิธีวิเคราะห์
112	1,1,1-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
113	1,1,2-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
114	Trichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
115	2,4,5-Trichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
116	2,4,6-Trichlorophenol	Ultrasonic Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26)
117	1,3,5-Trimethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
118	Vanadium	Digestion, Inductively Coupled Plasma Method ^(7,13)
119	Vinyl acetate	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
120	Vinyl chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
121	m-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
122	o-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
123	p-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
124	Xylene (Total)	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ^(12,25)
125	Zinc	1) Digestion, Flame Atomic Absorption Spectrometric Method ^(7,14) 2) Digestion, Inductively Coupled Plasma Method ^(7,13)

เอกสารอ้างอิง

- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2549. เรื่อง กำหนดค่าปริมาณค่าที่ควรตั้งเฝ้าระวังในอากาศที่ระเหยออกจากถังของเหลวที่บรรจุไว้เป็นอันตราย. ราชกิจจานุเบกษา. 4 ธันวาคม 2549. เล่มที่ 123 ตอนที่ 125 ก.
- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2548. เรื่อง กำหนดค่าปริมาณค่าที่ควรตั้งเฝ้าระวังในอากาศที่ระเหยออกจากถังของเหลวที่บรรจุไว้เป็นอันตราย. ราชกิจจานุเบกษา. 25 มกราคม 2548. เล่มที่ 122 ตอนที่ 114 ก.

3. สมาคมวิศวกรรม...

- สมาคมวิศวกรรมสิ่งแวดล้อมแห่งประเทศไทย. คู่มือวิเคราะห์น้ำเสีย. พิมพ์ครั้งที่ 4. กรุงเทพฯ: เรือนแก้วการพิมพ์, 2547.
- APHA, AWWA, WEF. Standard Methods for the Examination of Water and Wastewater. 23rd ed. Washington, DC: APHA, 2017.
- United States Environmental Protection Agency. Standards of Performance for New Stationary Sources. 40 CFR 60. Appendix A, 2019.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. SW-846, 1997.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Acid Digestion of Sediments, Sludges, and Soils. SW-846 Method 3050B, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Alkaline Digestion for Hexavalent Chromium. SW-846 Method 3060A, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Separatory Funnel Liquid-Liquid Extraction. SW-846 Method 3510C, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Ultrasonic Extraction. SW-846 Method 3550C, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Purge and Trap for Aqueous Samples. SW-846 Method 5030C, 2003.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Closed System Purge and Trap and Extraction for Volatile Organics in Soil and Waste Sample. SW-846 Method 5035A, 2000.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Inductively Coupled Plasma-Optical Emission Spectrometry. SW-846 Method 6010D, 2014.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Flame Atomic Absorption Spectrophotometry. SW-846 Method 7000B, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Arsenic (Atomic Absorption, Gaseous Hydride). SW-846 Method 7061A, 1992.

16. United States...

- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Chromium, Hexavalent (Colorimetric). SW-846 Method 7196A, 1992.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Liquid Waste (Manual Cold Vapor Technique). SW-846 Method 7470A, 1994.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Solid or Semisolid Waste (Manual Cold-Vapor Technique). SW-846 Method 7471B, 1998.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Mercury in Solids and Solutions by Thermal Decomposition, Amalgamation, and Atomic Absorption Spectrophotometry. SW-846 Method 7473, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Selenium (Atomic Absorption, Borohydride Reduction). SW-846 Method 7742, 1994.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Nonhalogenated Organics Using GC/FID. SW-846 Method 8015D, 2003.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Organochlorine Pesticides by Gas Chromatography. SW-846 Method 8081B, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Polychlorinated Biphenyls (PCBs) by Gas Chromatography. SW-846 Method 8082A, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Polynuclear Aromatic Hydrocarbons. SW-846 Method 8100, 1980.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Volatile Organic Compounds by Gas Chromatography/Mass Spectrometry. SW-846 Method 8260D, 2018.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Semivolatile Organic Compounds by Gas Chromatography/Mass Spectrometry. SW-846 Method 8270E, 2018.
- United States Environmental Protection Agency. Test Methods for Evaluation Solid Waste Physical/Chemical Methods. Chlorinated Herbicides by GC/MS. SW-846 Method 8151A, 1998.

28. United States...

