

ภาคผนวกที่ 6

เอกสารสอบเทียบความถูกต้องของเครื่องมือ

- | | | |
|-----------|-----|---|
| เอกสารแนบ | 6-1 | เอกสารสอบเทียบเครื่องมือการตรวจวัดคุณภาพอากาศในบรรยากาศ |
| เอกสารแนบ | 6-2 | เอกสารสอบเทียบเครื่องมือการตรวจวิเคราะห์คุณภาพน้ำ |

ตารางสรุปรายการเอกสารการสอบเทียบความถูกต้องของเครื่องมือเก็บตัวอย่างและตรวจวิเคราะห์คุณภาพสิ่งแวดล้อม

รายการตรวจวัด	เครื่องมือเก็บตัวอย่าง	เครื่องมือตรวจวิเคราะห์
	ชื่อเครื่องมือ	ชื่อเครื่องมือ
คุณภาพอากาศในบรรยากาศ TSP	High Volume Air Sampler No. B08, B11, B18, B21, B37, B40, B43	Digital Balance
CO	CO Analyzer No. B04, B07, B08, B10, B12, B13, B15	CO Analyzer No. B04, B07, B08, B10, B12, B13, B15
THC	Personal Pump SKC No. B07, B11, B19, B23, B30, B32, B66 Rotameter No. B01	THC Analyzer No. B01
SO ₂	SO ₂ Analyzer No. B02, B03, B05, B06, B09, B10, B12	SO ₂ Analyzer No. B02, B03, B05, B06, B09, B10, B12
NO ₂	NO Analyzer No. B02, B06, B08, B10, B12, B14, B22	NO Analyzer No. B02, B06, B08, B10, B12, B14, B22
Lead	High Volume Air Sampler No. B08, B11, B18, B21, B37, B38, B39, B40, B41, B43	ICP
คุณภาพน้ำผิวดิน Lead	-	AAS

เอกสารแนบ 6-1

เอกสารสอบเทียบเครื่องมือการตรวจวัดคุณภาพอากาศในบรรยากาศ



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sale@spscon.com

การปรับความถูกต้องเครื่อง High Volume Air Sampler


ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์ :	B08	วันที่ทำการ Calibrate :	01/04/2026
Blower Motor เบอร์ :	B08	อุณหภูมิ :	30 °C
Flow Recorder ยี่ห้อ/รุ่น :	TISCH, Model TE-5009X (Accuracy ± 2% Full Scale)	ความดันบรรยากาศ :	1011 mmbar
หมายเลขประจำเครื่อง :	1240	ความชื้นสัมพัทธ์ :	50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
 P = ความดันบรรยากาศขณะ Calibrate (mmbar)
 T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard			Model : TE 5025A	S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	62	11.4	66.3	65.0
13	53	9.6	58.5	57.4
10	48	7.8	50.8	49.8
7	35	4.4	36.2	35.5
5	28	2.8	29.3	28.7

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B08

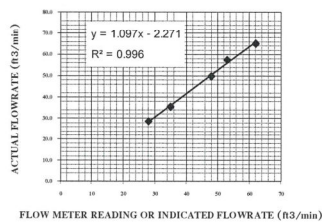

ผู้สอบเทียบ

ทรงยศ โสมาเขต
(นายทรงยศ โสมาเขต)

ผู้ตรวจสอบ

อดุลย์ แดงกล่อม
(นายอดุลย์ แดงกล่อม)

ผู้รับรองผล

พิลา เสงี่ยม
(นายพิระ เสงี่ยม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 47.65 ± 1.0 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 48 ft³/min



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sale@spscon.com

การปรับความถูกต้องเครื่อง High Volume Air Sampler


ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์ :	B11	วันที่ทำการ Calibrate :	01/04/2026
Blower Motor เบอร์ :	B11	อุณหภูมิ :	30 °C
Flow Recorder ยี่ห้อ/รุ่น :	TISCH, Model TE-5009X (Accuracy ± 2% Full Scale)	ความดันบรรยากาศ :	1011 mmbar
หมายเลขประจำเครื่อง :	1236	ความชื้นสัมพัทธ์ :	50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
 P = ความดันบรรยากาศขณะ Calibrate (mmbar)
 T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard			Model : TE 5025A	S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.5	66.7	65.4
13	54	9.7	58.9	57.8
10	45	7.6	49.9	49.0
7	36	5.0	38.7	38.0
5	27	2.8	29.3	28.7

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B11

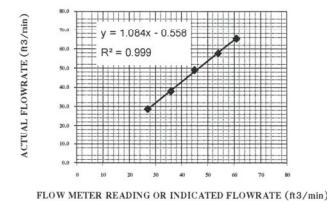

ผู้สอบเทียบ

ทรงยศ โสมาเขต
(นายทรงยศ โสมาเขต)

ผู้ตรวจสอบ

อดุลย์ แดงกล่อม
(นายอดุลย์ แดงกล่อม)

ผู้รับรองผล

พิลา เสงี่ยม
(นายพิระ เสงี่ยม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.64 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 47 ft³/min

การปรับความถูกต้องเครื่อง High Volume Air Sampler

ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B18	วันที่ทำการ Calibrate	: 01/04/2026
Blower Motor เบอร์	: B18		
Flow Recorder ยี่ห้อ/รุ่น	: TISCH, Model TE-5009X	อุณหภูมิ	: 30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 0224	ความชื้นสัมพัทธ์	: 50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

$$\text{จากสูตร } V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)} \quad \text{โดยที่ } V_m(\text{std.}) = \text{ปริมาตรอากาศที่สภาวะมาตรฐาน}$$


$$V_m = \text{ปริมาตรอากาศที่ P และ T ขณะ Calibrate}$$

$$P = \text{ความดันบรรยากาศขณะ Calibrate (mmbar)}$$

$$T = \text{อุณหภูมิขณะ Calibrate (°C)}$$

Calibration Method : Multipoint Orifice Flow Transfer Standard		Model : TE 5025A		S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.5	66.7	65.4
13	53	9.4	57.7	56.6
10	45	7.6	49.9	49.0
7	34	4.5	36.6	35.9
5	28	2.8	29.3	28.7

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B18

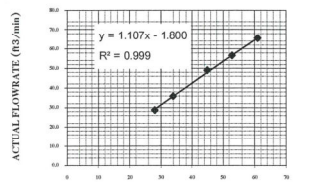FLOW METER READING OR INDICATED FLOWRATE (ft³/min)

ผู้สอบเทียบ

จรรยาพร ไสมาบุตร
(นายทรงยศ ไสมาบุตร)

ผู้ตรวจสอบ

อดุลย์ หงษ์ทอง
(นายอดุลย์ แดงล้อม)

ผู้รับรองผล

ปิยะ เดชอุดม
(นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.79 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 47 ft³/min

การปรับความถูกต้องเครื่อง High Volume Air Sampler

ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B21	วันที่ทำการ Calibrate	: 01/04/2026
Blower Motor เบอร์	: B21		
Flow Recorder ยี่ห้อ/รุ่น	: TISCH, Model TE-5009	อุณหภูมิ	: 30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 5827	ความชื้นสัมพัทธ์	: 50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

$$\text{จากสูตร } V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)} \quad \text{โดยที่ } V_m(\text{std.}) = \text{ปริมาตรอากาศที่สภาวะมาตรฐาน}$$


$$V_m = \text{ปริมาตรอากาศที่ P และ T ขณะ Calibrate}$$

$$P = \text{ความดันบรรยากาศขณะ Calibrate (mmbar)}$$

$$T = \text{อุณหภูมิขณะ Calibrate (°C)}$$

Calibration Method : Multipoint Orifice Flow Transfer Standard		Model : TE 5025A		S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.6	67.1	65.9
13	52	9.4	57.7	56.6
10	44	7.6	49.9	49.0
7	33	4.5	36.6	35.9
5	27	2.7	28.9	28.3

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B21

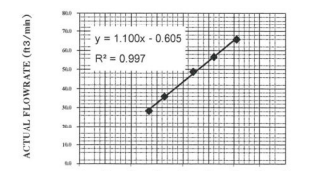FLOW METER READING OR INDICATED FLOWRATE (ft³/min)

ผู้สอบเทียบ

จรรยาพร ไสมาบุตร
(นายทรงยศ ไสมาบุตร)

ผู้ตรวจสอบ

อดุลย์ หงษ์ทอง
(นายอดุลย์ แดงล้อม)

ผู้รับรองผล

ปิยะ เดชอุดม
(นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.00 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 46 ft³/min

การปรับความถูกต้องเครื่อง High Volume Air Sampler


ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์ :	B37	วันที่ทำการ Calibrate :	01/04/2026
Blower Motor เบอร์ :	B37		
Flow Recorder ยี่ห้อ/รุ่น :	TISCH, Model TE-5005X	อุณหภูมิ :	30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ :	1011 mmbar
หมายเลขประจำเครื่อง :	5821	ความชื้นสัมพัทธ์ :	50 %

โดยคำนวณปริมาณอากาศเทียบที่สภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาณอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาณอากาศที่ P และ T ขณะ Calibrate
 P = ความดันบรรยากาศขณะ Calibrate (mmbar)
 T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard	Model : TE 5025A	S/N : 3611
--	------------------	------------

Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	62	11.7	67.5	66.3
13	54	9.5	58.1	57.0
10	47	7.4	49.1	48.1
7	36	4.7	37.5	36.8
5	27	2.6	28.4	27.9

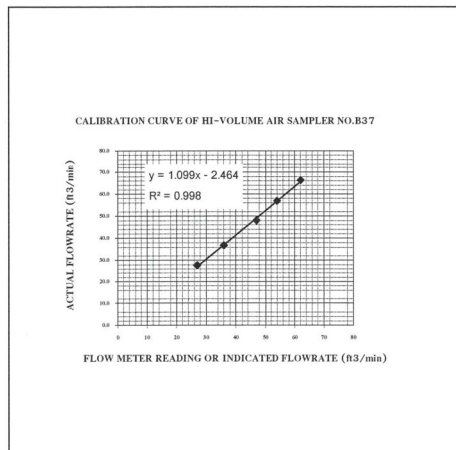


ผู้สอบเทียบ

 (นายทรงยศ โสมาเกตุ)

ผู้ตรวจสอบ

 (นายอดุลย์ แดงกล่อม)

ผู้รับรองผล

 (นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 47.74 ± 1.0 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 48 ft³/min

การปรับความถูกต้องเครื่อง High Volume Air Sampler


ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์ :	B40	วันที่ทำการ Calibrate :	01/04/2026
Blower Motor เบอร์ :	B40		
Flow Recorder ยี่ห้อ/รุ่น :	TISCH, Model TE-5005X	อุณหภูมิ :	30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ :	1011 mmbar
หมายเลขประจำเครื่อง :	5817	ความชื้นสัมพัทธ์ :	50 %

โดยคำนวณปริมาณอากาศเทียบที่สภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาณอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาณอากาศที่ P และ T ขณะ Calibrate
 P = ความดันบรรยากาศขณะ Calibrate (mmbar)
 T = อุณหภูมิขณะ Calibrate (°C)


Calibration Method : Multipoint Orifice Flow Transfer Standard	Model : TE 5025A	S/N : 3611
--	------------------	------------


Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.8	68.0	66.7
13	54	9.7	58.9	57.8
10	47	7.9	51.2	50.3
7	34	4.8	37.9	37.2
5	27	2.7	28.9	28.3

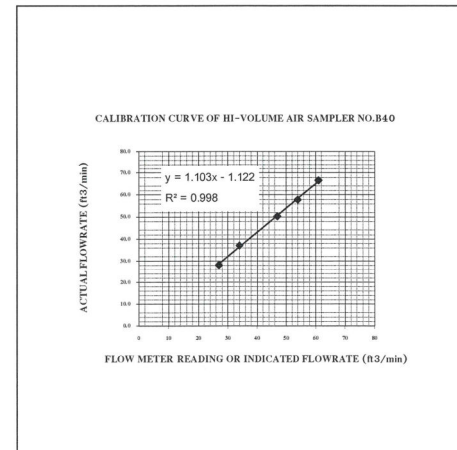

ผู้สอบเทียบ

 (นายทรงยศ โสมาเกตุ)

ผู้ตรวจสอบ

 (นายอดุลย์ แดงกล่อม)

ผู้รับรองผล

 (นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.35 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 47 ft³/min



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอย พหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sales@spscn.com

การปรับความถูกต้องเครื่อง High Volume Air Sampler

ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B43	วันที่ทำการ Calibrate	: 01/04/2026
Blower Motor เบอร์	: B43		
Flow Recorder ซีร็อก/รุ่น	: TISCH, Model TE-5005X	อุณหภูมิ	: 30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 5828	ความชื้นสัมพัทธ์	: 50 %


โดยคำนวณปริมาตรอากาศเทียบที่สภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
P = ความดันบรรยากาศขณะ Calibrate (mmbar)
T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard	Model : TE 5025A	S/N : 3611
--	------------------	------------

Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.6	67.1	65.9
13	54	9.6	58.5	57.4
10	46	7.8	50.8	49.8
7	35	4.5	36.6	35.9
5	27	2.8	29.3	28.7

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B43

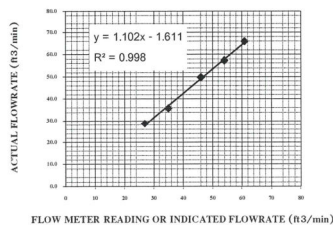

ผู้สอบเทียบ

ทวงพล โสภณกุล
(นายทรงยศ โสภณกุล)

ผู้ตรวจสอบ

อรรถพล โสภณกุล
(นายอรรถพล โสภณกุล)

ผู้รับรองผล

พี 19/2026
(นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.83 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 47 ft³/min



CERTIFICATE No : 26M2266

REFERENCE No : 80204-1

PAGE : 1 OF 2

Certificate of Calibration

EQUIPMENT : DIGITAL BALANCE

MANUFACTURER : METTLER TOLEDO

MODEL : XS105DU

SERIAL No : 1126422905

ID No : BA 05/50

CONDITION AS RECEIVED : USED ITEM

SUBMITTED BY : S.P.S. CONSULTING SERVICE CO., LTD.
7 SOI PHAHOLYOTHIN 24, PHAHOLYOTHIN RD.,
JOMPOL, CHATUCHAK, BANGKOK 10900

CALIBRATED BY : SUCHAT S.

CALIBRATION DATE : 05-Mar-26

APPROVED BY : PONGSAK J.

ISSUED DATE : 06-Mar-26

RECEIVED DATE : 05-Mar-26



CERTIFICATE No : 26M2266

PAGE : 2 OF 2

Calibration Report

EQUIPMENT : DIGITAL BALANCE MODEL : XS105DU

MANUFACTURER : METTLER TOLEDO S/N : 1126422905

ID No : BA 05/50 RECEIVED DATE : 05-Mar-26

AIR PRESSURE : 1004mbar $\pm$ 1mbar CALIBRATION DATE : 05-Mar-26

AMBIENT TEMPERATURE : 25° C $\pm$ 1° C RELATIVE HUMIDITY : 50 %RH $\pm$ 10 % RH

CONDITION OF THIS RESULTS OF CALIBRATION

1. THIS INSTRUMENT WAS CALIBRATED BY ACCORDING TO UKAS LAB 14 EDITION 6:2019 BY USING KNOWN WEIGHT STANDARD WEIGHT. THE BALANCE WAS NOT ADJUSTED BEFORE CALIBRATION. THE BALANCE HAS NO ZERO TRACKING FUNCTION. REPEATABILITY WAS MEASURED BY USING 10 REPEATED MEASUREMENTS. LINEARITY WAS MEASURED COVERING 10 POINTS, EVENLY SPREAD OVER THE RANGE. THE INSTRUMENT WAS SET ZERO BEFORE PERFORMING THE LINEARITY TEST. OFF-CENTER LOADING WAS MEASURED BY USING STANDARD WEIGHTS PLACED ON THE PAN AND MOVED TO VARIOUS POSITIONS ON THE PAN.

2. REFERENCE STANDARD INSTRUMENTS :-

INSTRUMENT	MODEL	SERIAL No	CERTIFICATE No	DUE DATE
1) STANDARD WEIGHT SET	E2	QK-I-151	C02250116	28-Jan-27
2) STANDARD WEIGHT	E2	15843	C02250117	29-Jan-27

3. THE CERTIFICATE IS VALID FOR THE ITEM CALIBRATED AS SHOWN ON THE DATE AND PLACE OF CALIBRATION ONLY.

4. THIS RESULT EXCLUDE LONG TERM STABILITY OF THE UNIT UNDER CALIBRATION.

5. THIS CERTIFICATE IS TRACEABLE TO THE INTERNATIONAL SYSTEM OF UNIT MAINTAINED AT:-

- NATIONAL INSTITUTE OF METROLOGY (THAILAND)

RESULT OF CALIBRATION :- WITHOUT ADJUSTMENT

1. ZERO SETTING FUNCTION : NORMAL


2. TARE FUNCTION : NORMAL

3. REPEATABILITY OF READING AT 120 g WAS 0.000055 g

4. DEPARTURE FROM NOMINAL VALUE/ LINEARITY

NOMINAL VALUE (g)	BALANCE READING (g)	CORRECTION (g)	UNCERTAINTY ($\pm$ g)
0.00	0.00000	0.00000	0.000065
0.02	0.02000	0.00000	0.000065
0.10	0.10000	0.00000	0.000066
0.20	0.20000	0.00000	0.000066
0.50	0.50001	-0.00001	0.000065
1.00	1.00001	-0.00001	0.000066
2.00	2.00000	0.00000	0.000067
5.00	5.00001	-0.00001	0.000068
10.00	10.00004	-0.00004	0.000070
20.00	20.00006	-0.00006	0.000078
50.00	50.00000	0.00000	0.00012
100.00	100.00002	-0.00002	0.00019
120.00	120.00002	-0.00002	0.00022

5. OFF CENTER LOADING ERROR

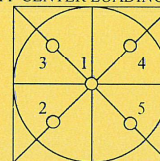

POINT	READING (g)
1	50.0000
2	50.0000
3	50.0000
4	50.0000
5	50.0000
OFF-CENTER LOADING	0.0000

NOTE: THIS CALIBRATION WAS CARRIED OUT AT THE CUSTOMER'S PLACE AT LABORATORY AREA
THE REPORTED UNCERTAINTY OF MEASUREMENT WAS BASED ON A STANDARD UNCERTAINTY MULTIPLIED BY A
COVERAGE FACTOR $k=2$, PROVIDING A LEVEL OF CONFIDENCE APPROXIMATELY 95%.

END OF CALIBRATION REPORT



Calibration Report				
Non-Dispersive Infrared CO Analyzer				
Date :	01 April 2026	Brand :	API	Model :
No.	CO-B04	Serial No.	3089	
Calibrator (Dilution System)				
Brand :	API	Model :	700	
Last Cal. Date :	01 September 2025	Serial No. :	911	
Reference Standard Gas				
Standard Gas :	Carbon Monoxide (CO)	Cylinder No. :	D711839	
Certified Date :	14 March 2024	Expired Date :	14 March 2032	Cylinder Conc. :
			4,580 ppm	
Calibrating Condition				
Pressure	1011 mmbar	Temp.	24.5 °C	% RH
			48	
Calibration Setting				
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response
Zero	0	0.10	-	0
CO Span	40.00	39.97	-0.075	40.00
API Model 300E CO Analyzer Check List				
Parameter	Observed Value	Units	Nominal Range	
Range	50	PPM	0-1000 ppm	
Stability	0.10	PPM	< 1 ppm With Zero Air	
CO Measure	4015.3	mV	2500-4800 mV	
CO Reference	3947.9	mV	2500-4800 mV	
Measure/Reference Ratio	1.180	-	1.1-1.3 W/Zero Air	
Sample Pressure	28.5	In-Hg-A	~2" < Ambient Absolute Pressure	
Sample Flow	809	CC/Min	800 ± 10%	
Sample Temperature	48.4	°C	48 ± 4	
Bench Temperature	48.2	°C	48 ± 2	
Wheel Temperature	68.5	°C	68 ± 2	
Box Temperature	30.9	°C	Ambient Temp + 7 ± 10	
Photo-Drive	3032.7	mV	250 mV to 4750 mV	
Slope	1.017	-	1.0 ± 0.3	
Offset	0.2	-	0 ± 0.3	

Calibrated by : Adul Dangklom
 (Mr. Adul Dangklom)

Approved by : Mr. Peera Detudom
 (Mr. Peera Detudom)

Calibration Report				
Non-Dispersive Infrared CO Analyzer				
Date :	01 April 2026	Brand :	Thermo	Model :
No.	CO-B07	Serial No.	0335203746	
Calibrator (Dilution System)				
Brand :	API	Model :	700	
Last Cal. Date :	01 September 2025	Serial No. :	911	
Reference Standard Gas				
Standard Gas :	Carbon Monoxide (CO)	Cylinder No. :	D711839	
Certified Date :	14 March 2024	Expired Date :	14 March 2032	Cylinder Conc. :
			4,580 ppm	
Calibrating Condition				
Pressure	1011 mmbar	Temp.	24.5 °C	% RH
			48	
Calibration Setting				
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response
Zero	0	-0.10	-	0
CO Span	40.00	39.94	-0.150	40.00
Instrument Status				
Chamber Temp	47.5 °C	Flow	1.5 LPM	
Pressure	730.7 mm Hg	Motor Speed	100.00%	

Calibrated by : Adul Dangklom
 (Mr. Adul Dangklom)

Approved by : Mr. Peera Detudom
 (Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72 Fax : (662) 513-4221 E-mail : sale@spscon.com, www.spscon.com

Calibration Report					
Non-Dispersive Infrared CO Analyzer					
Date :	01 April 2026	Brand :	Thermo	Model :	48C
No.	CO-B08	Serial No.	0508011067		
Calibrator (Dilution System)					
Brand :	API		Model :	700	
Last Cal. Date :	01 September 2025		Serial No. :	911	
Reference Standard Gas					
Standard Gas :	Carbon Monoxide (CO)		Cylinder No. :	D711839	
Certified Date :	14 March 2024	Expired Date :	14 March 2032	Cylinder Conc. :	4,580 ppm
Calibrating Condition					
Pressure	1011	mmbar	Temp.	24.5	°C
			% RH	48	
Calibration Setting					
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	
Zero	0	0.10	-	0	
CO Span	40.00	40.04	0.100	40.00	
Instrument Status					
Chamber Temp	47.4 °C		Flow	1.5 LPM	
Pressure	730.5 mm Hg		Motor Speed	100.00%	

Calibrated by : Adul Dangklom
(Mr. Adul Dangklom)

Approved by : Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72 Fax : (662) 513-4221 E-mail : sale@spscon.com, www.spscon.com

Calibration Report					
Non-Dispersive Infrared CO Analyzer					
Date :	01 April 2026	Brand :	API	Model :	300E
No.	CO-B10	Serial No.	199-S		
Calibrator (Dilution System)					
Brand :	API		Model :	700	
Last Cal. Date :	01 September 2025		Serial No. :	911	
Reference Standard Gas					
Standard Gas :	Carbon Monoxide (CO)		Cylinder No. :	D711839	
Certified Date :	14 March 2024	Expired Date :	14 March 2032	Cylinder Conc. :	4,580 ppm
Calibrating Condition					
Pressure	1011	mmbar	Temp.	24.5	°C
			% RH	48	
Calibration Setting					
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	
Zero	0	0.10	-	0	
CO Span	40.00	40.06	0.150	40.00	
API Model 300E CO Analyzer Check List					
Parameter	Observed Value	Units	Nominal Range		
Range	50	PPM	0-1000 ppm		
Stability	0.10	PPM	< 1 ppm With Zero Air		
CO Measure	4016.7	mV	2500-4800 mV		
CO Reference	3949.1	mV	2500-4800 mV		
Measure/Reference Ratio	1.180	-	1.1-1.3 W/Zero Air		
Sample Pressure	28.6	In-Hg-A	~2" < Ambient Absolute Pressure		
Sample Flow	812	CC/Min	800 ± 10%		
Sample Temperature	48.4	°C	48 ± 4		
Bench Temperature	48.1	°C	48 ± 2		
Wheel Temperature	68.2	°C	68 ± 2		
Box Temperature	30.6	°C	Ambient Temp + 7 ± 10		
Photo-Drive	3026.4	mV	250 mV to 4750 mV		
Slope	1.017	-	1.0 ± 0.3		
Offset	0.2	-	0 ± 0.3		

Calibrated by : Adul Dangklom
(Mr. Adul Dangklom)

Approved by : Peera Detudom
(Mr. Peera Detudom)

Calibration Report Non-Dispersive Infrared CO Analyzer					
Date :	01 April 2026	Brand :	Thermo	Model :	48C
No.	CO-B12	Serial No.	TL-65343-348		
Calibrator (Dilution System)					
Brand : API		Model : 700			
Last Cal. Date : 01 September 2025		Serial No. : 911			
Reference Standard Gas					
Standard Gas : Carbon Monoxide (CO)		Cylinder No. : D711839			
Certified Date : 14 March 2024	Expired Date : 14 March 2032	Cylinder Conc. : 4,580 ppm			
Calibrating Condition					
Pressure	1011 mmbar	Temp.	24.5 °C	% RH	48
Calibration Setting					
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM	
Set Point	Expected Concentration	Analyzer Response	% Dif	Analyzer Response	
Zero	0	0.10	-	0	
CO Span	40.00	39.96	-0.100	40.00	
Instrument Status					
Chamber Temp	47.3 °C	Flow	1.5 LPM		
Pressure	730.8 mm Hg	Motor Speed	100.00%		

Calibrated by : Adul Dangklom
(Mr. Adul Dangklom)

Approved by : Peera Detudom
(Mr. Peera Detudom)

Calibration Report Non-Dispersive Infrared CO Analyzer					
Date :	01 April 2026	Brand :	API	Model :	300E
No.	CO-B13	Serial No.	176		
Calibrator (Dilution System)					
Brand : API		Model : 700			
Last Cal. Date : 01 September 2025		Serial No. : 911			
Reference Standard Gas					
Standard Gas : Carbon Monoxide (CO)		Cylinder No. : D711839			
Certified Date : 14 March 2024	Expired Date : 14 March 2032	Cylinder Conc. : 4,580 ppm			
Calibrating Condition					
Pressure	1011 mmbar	Temp.	24.5 °C	% RH	48
Calibration Setting					
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM	
Set Point	Expected Concentration	Analyzer Response	% Dif	Analyzer Response	
Zero	0	0.11	-	0	
CO Span	40.00	40.05	0.125	40.00	
API Model 300E CO Analyzer Check List					
Parameter	Observed Value	Units	Nominal Range		
Range	50	PPM	0-1000 ppm		
Stability	0.10	PPM	< 1 ppm With Zero Air		
CO Measure	4017.1	mV	2500-4800 mV		
CO Reference	3948.7	mV	2500-4800 mV		
Measure/Reference Ratio	1.180	-	1.1-1.3 W/Zero Air		
Sample Pressure	28.7	In-Hg-A	~2" < Ambient Absolute Pressure		
Sample Flow	813	CC/Min	800 ± 10%		
Sample Temperature	48.2	°C	48 ± 4		
Bench Temperature	48.0	°C	48 ± 2		
Wheel Temperature	68.3	°C	68 ± 2		
Box Temperature	30.6	°C	Ambient Temp + 7 ± 10		
Photo-Drive	3035.7	mV	250 mV to 4750 mV		
Slope	1.017	-	1.0 ± 0.3		
Offset	0.2	-	0 ± 0.3		

Calibrated by : Adul Dangklom
(Mr. Adul Dangklom)

Approved by : Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

Calibration Report					
Non-Dispersive Infrared CO Analyzer					
Date :	01 April 2026	Brand :	API	Model :	300E
No.	CO-B15	Serial No.	226		
Calibrator (Dilution System)					
Brand : API			Model : 700		
Last Cal. Date : 01 September 2025			Serial No. : 911		
Reference Standard Gas					
Standard Gas : Carbon Monoxide (CO)			Cylinder No. : D711839		
Certified Date : 14 March 2024			Cylinder Conc. : 4,580 ppm		
Calibrating Condition					
Pressure : 1011 mmbar		Temp. : 24.5 °C		% RH : 48	
Calibration Setting					
Span	Initial Reading (Before Adj.), PPM			Final Reading (After Adj.), PPM	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	
Zero	0	-0.10	-	0	
CO Span	40.00	39.95	-0.125	40.00	
API Model 300E CO Analyzer Check List					
Parameter	Observed Value	Units	Nominal Range		
Range	50	PPM	0-1000 ppm		
Stability	0.10	PPM	< 1 ppm With Zero Air		
CO Measure	4014.8	mV	2500-4800 mV		
CO Reference	3947.5	mV	2500-4800 mV		
Measure/Reference Ratio	1.180	-	1.1-1.3 W/Zero Air		
Sample Pressure	28.4	In-Hg-A	~2" < Ambient Absolute Pressure		
Sample Flow	805	CC/Min	800 ± 10%		
Sample Temperature	48.4	°C	48 ± 4		
Bench Temperature	48.2	°C	48 ± 2		
Wheel Temperature	68.4	°C	68 ± 2		
Box Temperature	30.7	°C	Ambient Temp + 7 ± 10		
Photo-Drive	3042.3	mV	250 mV to 4750 mV		
Slope	1.017	-	1.0 ± 0.3		
Offset	0.2	-	0 ± 0.3		

Calibrated by : Adul Dangklom
(Mr. Adul Dangklom)

Approved by : Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72. Fax : (662) 513-4221. E-mail : sale@spscon.com... www.spscon.com

Personal Pump Calibration Report

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136164

Environmental Conditions

Temperature : 25 ± 3 °C
Pressure : 1010 ± 15 mmbar

Personal Pump Data				Calibration Data								
No.	Brand	Model	Serial No.	Date	Flow Rate (ml/min)						Value From Calibration Curve	
					Setting			Actual (Q std.)				
					1	2	3	1	2	3	y	R ²
B01	SKC	224-PCXR4	262101	01/04/2026	1,000	1,500	2,000	1,002	1,503	2,004	1.002x - 1.364	1.000
B02	SKC	224-PCXR4	626166	01/04/2026	1,000	1,500	2,000	1,004	1,501	2,003	1.001x - 0.594	1.000
B03	SKC	224-PCXR4	612968	01/04/2026	1,000	1,500	2,000	1,003	1,502	1,994	1.003x - 9.098	0.999
B04	SKC	224-PCXR4	602804	01/04/2026	1,000	1,500	2,000	1,000	1,502	1,998	0.998x + 0.642	1.000
B05	SKC	224-PCXR4	612693	01/04/2026	1,000	1,500	2,000	1,001	1,504	1,999	1.000x - 1.767	1.000
B06	SKC	224-PCXR4	262188	01/04/2026	1,000	1,500	2,000	999	1,500	2,002	1.001x - 3.590	1.000
B07	SKC	224-PCXR4	626262	01/04/2026	1,000	1,500	2,000	997	1,506	2,003	1.004x - 9.859	0.999
B08	SKC	224-PCXR4	626100	01/04/2026	1,000	1,500	2,000	1,003	1,503	2,005	1.003x - 4.160	1.000
B09	SKC	224-PCXR4	626479	01/04/2026	1,000	1,500	2,000	998	1,497	1,997	1.000x - 3.382	1.000
B10	SKC	224-PCXR4	091950	01/04/2026	1,000	1,500	2,000	1,004	1,506	1,996	1.003x - 7.323	0.999
B11	SKC	224-PCXR8	564315	01/04/2026	1,000	1,500	2,000	1,000	1,493	2,003	1.005x - 10.601	1.000
B12	SKC	224-PCXR4	034656	01/04/2026	1,000	1,500	2,000	997	1,495	1,997	0.998x - 1.755	1.000
B13	SKC	224-PCXR4	602073	01/04/2026	1,000	1,500	2,000	1,001	1,501	1,986	0.996x + 2.884	0.999
B14	SKC	224-PCXR4	626313	01/04/2026	1,000	1,500	2,000	999	1,494	1,997	0.999x - 1.898	0.999
B15	SKC	224-PCXR4	626474	01/04/2026	1,000	1,500	2,000	996	1,498	1,993	1.007x - 17.126	0.999
B16	SKC	224-PCXR4	626477	01/04/2026	1,000	1,500	2,000	1,002	1,499	1,997	0.997x + 1.352	1.000
B17	SKC	224-PCXR4	626860	01/04/2026	1,000	1,500	2,000	996	1,510	1,999	1.005x - 12.252	0.999
B18	SKC	224-PCXR4	691484	01/04/2026	1,000	1,500	2,000	995	1,499	1,997	1.006x - 12.384	1.000
B19	SKC	224-PCXR4	691599	01/04/2026	1,000	1,500	2,000	998	1,501	1,991	1.004x - 10.506	0.999
B20	SKC	224-PCXR4	691587	01/04/2026	1,000	1,500	2,000	997	1,495	1,998	1.003x - 7.247	1.000
B21	SKC	224-PCXR4	691531	03/04/2026	1,000	1,500	2,000	998	1,496	1,996	1.000x - 3.454	1.000
B22	SKC	224-PCXR4	691654	03/04/2026	1,000	1,500	2,000	996	1,494	1,997	0.998x - 2.784	1.000
B23	SKC	224-PCXR4	798393	02/04/2026	1,000	1,500	2,000	1,000	1,503	1,999	0.999x - 1.308	1.000
B24	SKC	224-PCXR4	626363	03/04/2026	1,000	1,500	2,000	1,001	1,509	1,995	1.002x - 6.940	0.999
B25	SKC	224-PCXR4	798489	03/04/2026	1,000	1,500	2,000	1,002	1,502	2,004	1.004x - 7.267	1.000
B26	SKC	224-PCXR4	798479	03/04/2026	1,000	1,500	2,000	996	1,503	2,003	1.006x - 12.675	1.000
B27	SKC	224-PCXR4	691673	02/04/2026	1,000	1,500	2,000	1,000	1,504	2,000	0.999x + 0.483	1.000
B28	SKC	224-PCXR4	691570	03/04/2026	1,000	1,500	2,000	997	1,510	2,001	0.998x - 0.455	0.999
B29	SKC	224-PCXR4	626472	03/04/2026	1,000	1,500	2,000	998	1,494	1,992	1.000x - 5.221	1.000
B30	SKC	224-PCXR4	691489	03/04/2026	1,000	1,500	2,000	1,008	1,504	2,006	1.003x - 2.114	1.000
B31	SKC	224-PCXR4	691509	03/04/2026	1,000	1,500	2,000	1,003	1,503	2,002	0.997x + 0.610	0.999
B32	SKC	224-PCXR4	091567	03/04/2026	1,000	1,500	2,000	1,002	1,502	1,996	0.996x + 7.008	1.000
B33	SKC	224-PCXR4	091756	03/04/2026	1,000	1,500	2,000	998	1,501	1,992	1.006x - 12.101	0.999
B34	SKC	224-PCXR4	612962	03/04/2026	1,000	1,500	2,000	1,001	1,494	2,004	1.004x - 8.196	1.000
B35	SKC	224-PCXR4	602882	03/04/2026	1,000	1,500	2,000	997	1,504	1,998	1.000x - 2.804	1.000
B36	SKC	224-PCXR4	626164	03/04/2026	1,000	1,500	2,000	996	1,512	1,996	1.001x - 5.867	0.999
B37	SKC	224-PCXR4	626256	03/04/2026	1,000	1,500	2,000	999	1,496	2,005	1.007x - 11.487	1.000
B38	SKC	224-PCXR4	626167	03/04/2026	1,000	1,500	2,000	1,002	1,500	2,003	1.008x - 16.377	0.999
B39	SKC	224-PCXR4	034637	03/04/2026	1,000	1,500	2,000	998	1,490	1,994	0.996x - 0.044	1.000
B40	SKC	224-PCXR4	798349	03/04/2026	1,000	1,500	2,000	1,001	1,501	2,000	0.995x + 0.921	0.999

Calibrated by :

Adul Dangklom
(Mr. Adul Dangklom)

Approved by :

Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72. Fax : (662) 513-4221. E-mail : sale@spscon.com... www.spscon.com

Personal Pump Calibration Report

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136164

Environmental Conditions

Temperature : 25 ± 3 °C
Pressure : 1010 ± 15 mmbar

Personal Pump Data				Calibration Data								
No.	Brand	Model	Serial No.	Date	Flow Rate (mL/min)						Value From Calibration Curve	
					Setting			Actual (Q std.)				
					1	2	3	1	2	3	y	R ²
B41	SKC	224-PCXR4	612669	03/04/2026	1,000	1,500	2,000	996	1,498	1,991	1.006x - 15.132	0.999
B42	SKC	224-PCXR4	626041	03/04/2026	1,000	1,500	2,000	998	1,495	1,998	1.001x - 5.029	1.000
B43	SKC	224-PCXR4	034636	03/04/2026	1,000	1,500	2,000	996	1,512	1,995	1.000x - 4.272	0.999
B44	SKC	224-PCXR8	529341	03/04/2026	1,000	1,500	2,000	1,000	1,501	2,000	0.999x + 0.802	1.000
B45	SKC	224-PCXR8	529594	03/04/2026	1,000	1,500	2,000	996	1,495	1,999	1.003x - 8.918	1.000
B46	SKC	224-PCXR8	566743	03/04/2026	1,000	1,500	2,000	998	1,501	1,992	1.006x - 12.300	0.999
B47	SKC	224-PCXR8	566747	03/04/2026	1,000	1,500	2,000	996	1,505	2,000	1.004x - 8.392	1.000
B48	SKC	224-PCXR8	566753	03/04/2026	1,000	1,500	2,000	1,011	1,508	2,008	0.998x + 4.726	0.999
B49	SKC	224-PCXR8	566780	03/04/2026	1,000	1,500	2,000	997	1,495	1,999	1.003x - 8.045	1.000
B50	SKC	224-PCXR8	500400	03/04/2026	1,000	1,500	2,000	1,000	1,499	1,994	0.996x + 3.406	1.000
B51	SKC	224-PCXR8	500363	03/04/2026	1,000	1,500	2,000	997	1,505	1,997	1.005x - 14.055	0.999
B52	SKC	224-PCXR8	093186	03/04/2026	1,000	1,500	2,000	996	1,506	2,000	1.002x - 5.484	1.000
B53	SKC	224-PCXR8	707670	03/04/2026	1,000	1,500	2,000	993	1,505	2,001	1.009x - 20.477	0.999
B54	SKC	224-PCXR3	509821	06/04/2026	1,000	1,500	2,000	1,005	1,500	2,008	1.007x - 10.015	1.000
B55	SKC	224-PCXR3	510710	06/04/2026	1,000	1,500	2,000	1,013	1,502	2,007	1.002x - 2.573	0.999
B56	SKC	224-PCXR3	511450	06/04/2026	1,000	1,500	2,000	992	1,492	1,999	1.004x - 10.669	1.000
B57	SKC	224-PCXR3	510798	06/04/2026	1,000	1,500	2,000	999	1,496	1,996	0.998x - 0.463	1.000
B58	SKC	224-PCXR3	509852	06/04/2026	1,000	1,500	2,000	1,003	1,499	1,999	0.996x + 4.204	1.000
B59	SKC	224-PCXR3	509862	06/04/2026	1,000	1,500	2,000	1,000	1,500	1,998	0.998x + 0.850	1.000
B60	SKC	224-PCXR3	512655	06/04/2026	1,000	1,500	2,000	997	1,506	2,002	1.003x - 8.264	0.999
B61	SKC	224-PCXR3	503915	06/04/2026	1,000	1,500	2,000	999	1,505	2,006	1.004x - 6.792	1.000
B62	SKC	224-PCXR3	503973	06/04/2026	1,000	1,500	2,000	998	1,504	2,004	1.005x - 10.095	1.000
B63	SKC	224-PCXR3	511432	09/04/2026	1,000	1,500	2,000	999	1,500	1,997	0.999x - 2.345	1.000
B64	SKC	224-PCXR3	508302	09/04/2026	1,000	1,500	2,000	1,001	1,491	1,996	0.997x + 0.511	1.000
B65	SKC	224-PCXR3	508310	09/04/2026	1,000	1,500	2,000	1,002	1,509	1,994	1.000x - 4.906	0.999
B66	SKC	224-PCXR3	509861	09/04/2026	1,000	1,500	2,000	995	1,501	2,004	1.008x - 15.001	1.000
B67	SKC	224-PCXR3	506295	09/04/2026	1,000	1,500	2,000	1,002	1,500	1,999	0.998x + 1.468	1.000
B68	SKC	224-PCXR3	505872	09/04/2026	1,000	1,500	2,000	1,005	1,494	1,994	0.996x - 1.783	0.999
B69	SKC	224-PCXR3	508375	09/04/2026	1,000	1,500	2,000	997	1,505	2,005	1.009x - 17.840	0.999
B70	SKC	224-PCXR3	510623	09/04/2026	1,000	1,500	2,000	998	1,499	1,999	1.000x - 2.573	1.000
B71	SKC	224-PCXR3	508367	09/04/2026	1,000	1,500	2,000	1,002	1,503	1,989	0.997x - 0.594	0.999
B72	SKC	224-PCXR3	505977	09/04/2026	1,000	1,500	2,000	999	1,504	2,001	1.002x - 4.551	1.000
B73	SKC	224-PCXR3	512606	09/04/2026	1,000	1,500	2,000	1,001	1,502	2,002	1.000x - 1.555	1.000
B74	SKC	224-PCXR3	505993	09/04/2026	1,000	1,500	2,000	1,003	1,504	2,008	1.006x - 6.832	1.000
B75	SKC	224-PCXR3	509820	09/04/2026	1,000	1,500	2,000	1,002	1,503	1,990	1.002x - 9.465	0.999
B76	SKC	224-PCXR3	509811	09/04/2026	1,000	1,500	2,000	1,001	1,500	2,002	1.001x - 2.688	1.000
B77	SKC	224-PCXR3	508301	09/04/2026	1,000	1,500	2,000	999	1,501	1,996	0.998x + 0.550	1.000
B78	SKC	224-PCXR3	510677	09/04/2026	1,000	1,500	2,000	1,000	1,496	1,997	1.002x - 3.151	1.000
B79	SKC	224-PCXR3	510920	09/04/2026	1,000	1,500	2,000	1,002	1,502	1,986	0.997x - 2.026	0.999



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4121, E-mail : sale@spscon.com, www.spscon.com

Personal Pump Calibration Report

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136164

Environmental Conditions

Temperature . 25 ± 3 °C
Pressure . 1010 ± 15 mmbar

Personal Pump Data				Calibration Data								
No.	Brand	Model	Serial No.	Date	Flow Rate (mL/min)						Value From Calibration Curve	
					Setting			Actual (Q std.)				
					1	2	3	1	2	3	y	R ²
B80	SKC	224-PCXR3	504569	01/04/2026	1,000	1,500	2,000	1,002	1,500	2,002	0.999x - 1.161	1.000
B81	SKC	224-PCXR3	503480	01/04/2026	1,000	1,500	2,000	993	1,497	1,991	0.997x - 0.040	1.000
B82	SKC	224-PCXR3	505673	01/04/2026	1,000	1,500	2,000	1,001	1,501	1,986	0.996x + 2.864	0.999
B83	SKC	224-PCXR3	510785	01/04/2026	1,000	1,500	2,000	1,009	1,500	1,993	0.994x + 6.437	0.999
B84	SKC	224-PCXR3	508333	03/04/2026	1,000	1,500	2,000	1,003	1,502	1,990	0.999x - 3.542	0.999
B85	SKC	224-PCXR3	505757	01/04/2026	1,000	1,500	2,000	1,004	1,499	2,001	0.996x + 5.197	1.000
B86	SKC	224-PCXR3	512625	01/04/2026	1,000	1,500	2,000	1,001	1,502	1,997	0.997x + 1.603	1.000
B87	SKC	224-PCXR3	504324	01/04/2026	1,000	1,500	2,000	1,002	1,492	2,001	0.999x - 1.855	1.000
B88	SKC	224-PCXR3	508307	03/04/2026	1,000	1,500	2,000	1,011	1,501	2,003	0.997x + 4.084	0.999
B89	SKC	224-PCXR3	509860	03/04/2026	1,000	1,500	2,000	999	1,502	1,991	1.005x - 10.506	0.999
B90	SKC	224-PCXR3	508366	01/04/2026	1,000	1,500	2,000	998	1,500	2,002	1.003x - 5.376	1.000
B91	SKC	224-PCXR3	510919	01/04/2026	1,000	1,500	2,000	1,003	1,499	2,004	1.002x - 4.399	1.000
B92	SKC	224-PCXR3	510987	01/04/2026	1,000	1,500	2,000	997	1,495	2,000	1.004x - 9.760	1.000
B93	SKC	224-PCXR3	509845	03/04/2026	1,000	1,500	2,000	1,003	1,503	1,998	0.997x + 3.219	1.000

Calibrated by :

Adul Dangklom
(Mr. Adul Dangklom)

Approved by :

Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4121, E-mail : sale@spscon.com, www.spscon.com

Personal Pump Calibration Report

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136833

Environmental Conditions

Temperature . 25 ± 3 °C
Pressure . 1010 ± 15 mmbar

Personal Pump Data				Calibration Data								
No.	Brand	Model	Serial No.	Date	Flow Rate (mL/min)						Value From Calibration Curve	
					Setting			Actual (Q std.)				
					1	2	3	1	2	3	y	R ²
R01	SKC	224-PCXR4	602467	01/04/2026	1,000	1,500	2,000	1,001	1,500	2,007	1.005x - 6.003	1.000
R02	SKC	224-PCXR4	626450	05/04/2026	1,000	2,000	3,000	1,000	1,503	2,001	1.001x - 0.383	1.000
R03	SKC	224-PCXR4	691592	03/04/2026	1,000	1,500	2,000	1,005	1,501	2,000	1.007x - 15.384	0.999
R04	SKC	224-PCXR4	691672	03/04/2026	1,000	1,500	2,000	1,007	1,513	1,999	0.996x + 5.855	0.999
R05	SKC	224-PCXR4	798470	05/04/2026	1,000	1,500	2,000	1,000	1,499	1,997	0.997x + 3.107	1.000
R06	SKC	224-PCXR4	798456	03/04/2026	1,000	1,500	2,000	998	1,497	1,996	0.998x + 0.120	1.000
R07	SKC	224-PCXR4	798480	05/04/2026	1,000	1,500	2,000	1,002	1,506	2,001	0.999x + 3.219	1.000
R08	SKC	224-PCXR4	883215	03/04/2026	1,000	1,500	2,000	1,004	1,501	1,992	1.003x - 9.877	0.999
R09	SKC	224-PCXR4	034650	03/04/2026	1,000	1,500	2,000	998	1,506	2,003	1.004x + 5.723	1.000
R10	SKC	224-PCXR4	091765	03/04/2026	1,000	1,500	2,000	999	1,507	1,996	1.005x - 13.080	0.999
R11	SKC	224-PCXR4	091763	05/04/2026	1,000	1,500	2,000	1,001	1,504	2,001	1.000x + 0.104	1.000
R12	SKC	224-PCXR4	091568	03/04/2026	1,000	1,500	2,000	998	1,505	1,996	0.998x + 1.482	1.000
R13	SKC	224-PCXR4	091630	03/04/2026	1,000	1,500	2,000	1,001	1,504	2,000	0.999x + 2.097	1.000
R14	SKC	224-PCXR4	091764	05/04/2026	1,000	1,500	2,000	1,007	1,506	2,001	1.004x - 8.866	0.999
R15	SKC	224-PCXR8	529457	05/04/2026	1,000	1,500	2,000	998	1,492	1,999	1.001x - 6.322	1.000
R16	SKC	224-PCXR8	529643	03/04/2026	1,000	1,500	2,000	1,004	1,506	2,004	1.007x - 11.726	0.999
R17	SKC	224-PCXR8	529645	05/04/2026	1,000	1,500	2,000	998	1,503	1,998	1.000x - 0.703	1.000
R18	SKC	224-PCXR8	566756	03/04/2026	1,000	1,500	2,000	999	1,508	1,995	1.002x - 8.012	0.999
R19	SKC	224-PCXR8	566802	05/04/2026	1,000	1,500	2,000	998	1,502	1,998	1.000x - 0.823	1.000
R20	SKC	224-PCXR8	529089	03/04/2026	1,000	1,500	2,000	999	1,503	1,996	0.997x + 2.001	1.000
R21	SKC	224-PCXR8	665728	03/04/2026	1,000	1,500	2,000	998	1,505	1,999	1.000x - 0.483	1.000
R22	SKC	224-PCXR8	707444	05/04/2026	1,000	1,500	2,000	1,007	1,496	2,000	1.001x - 6.418	0.999
R23	SKC	224-PCXR8	761067	05/04/2026	1,000	1,500	2,000	1,001	1,502	2,004	1.002x - 1.446	1.000
R24	SKC	224-PCXR8	707893	03/04/2026	1,000	1,500	2,000	1,002	1,503	2,001	0.999x + 2.560	1.000
R25	SKC	224-PCXR8	761052	03/04/2026	1,000	1,500	2,000	1,009	1,504	2,005	0.997x + 4.106	0.999
R26	SKC	224-PCXR8	707956	05/04/2026	1,000	1,500	2,000	1,002	1,503	2,000	0.998x + 4.497	1.000
R27	SKC	224-PCXR8	707398	03/04/2026	1,000	1,500	2,000	1,001	1,505	2,004	1.003x - 1.921	1.000
R28	SKC	224-PCXR8	707481	05/04/2026	1,000	1,500	2,000	1,010	1,513	2,006	0.997x + 5.531	0.999
R29	SKC	224-PCXR8	707402	03/04/2026	1,000	1,500	2,000	1,003	1,502	1,992	1.003x - 10.216	0.999
R30	SKC	224-PCXR8	093811	05/04/2026	1,000	1,500	2,000	999	1,512	2,005	1.007x - 9.705	1.000
R31	SKC	224-PCXR8	093183	05/04/2026	1,000	1,500	2,000	1,011	1,510	2,011	1.001x + 2.983	0.999
R32	SKC	224-PCXR8	671950	03/04/2026	1,000	1,500	2,000	1,001	1,500	2,001	0.999x + 2.272	1.000
R33	SKC	224-PCXR4	626254	05/04/2026	1,000	1,500	2,000	998	1,507	2,002	1.005x - 10.975	1.000
R34	SKC	224-PCXR4	626131	05/04/2026	1,000	1,500	2,000	997	1,496	2,000	1.007x - 14.230	1.000
R35	SKC	224-PCXR8	707460	05/04/2026	1,000	1,500	2,000	998	1,509	1,996	1.000x - 2.915	1.000
R36	SKC	224-PCXR8	707446	05/04/2026	1,000	1,500	2,000	1,003	1,492	2,003	1.007x - 16.135	0.999
R37	SKC	224-PCXR8	707432	03/04/2026	1,000	1,500	2,000	999	1,507	2,005	1.003x - 6.095	1.000
R38	SKC	224-PCXR8	707349	03/04/2026	1,000	1,500	2,000	1,003	1,499	1,999	0.997x + 2.141	1.000
R39	SKC	224-PCXR8	761095	05/04/2026	1,000	1,500	2,000	1,005	1,508	2,004	1.000x - 0.152	0.999

Calibrated by :

Adul Dangklom
(Mr. Adul Dangklom)

Approved by :

Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

Personal Pump Calibration Report

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136833

Environmental Conditions

Temperature : 25 ± 3 °C
Pressure : 1010 ± 15 mmbar

Personal Pump Data				Calibration Data								
No.	Brand	Model	Serial No.	Date	Flow Rate (mL/min)						Value From Calibration Curve	
					Setting			Actual (Q std.)				
					1	2	3	1	2	3	y	R ²
R40	SKC	224-PCXR4	612753	05/04/2026	1,000	1,500	2,000	1,004	1,497	2,000	0.998x + 1.430	1.000
R41	SKC	224-PCXR4	626140	03/04/2026	1,000	1,500	2,000	998	1,498	1,997	0.999x + 0.943	1.000
R42	SKC	224-PCXR4	626463	05/04/2026	1,000	1,500	2,000	1,005	1,513	1,998	0.997x + 4.138	0.999
R43	SKC	224-PCXR4	626129	03/04/2026	1,000	1,500	2,000	1,003	1,498	2,000	0.998x + 2.029	1.000
R44	SKC	224-PCXR4	602753	03/04/2026	1,000	1,500	2,000	996	1,509	1,997	1.003x - 8.036	1.000
R45	SKC	224-PCXR4	626137	05/04/2026	1,000	1,500	2,000	1,011	1,514	2,005	0.995x + 8.367	0.999

Calibrated by :

Adul Dangklom

(Mr. Adul Dangklom)

Approved by :

Peera Detudom

(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72 Fax : (662) 513-4221 E-mail : sale@spscon.com www.spscon.com

Rotameter Calibration Report (For Personal Pump Low Flow Adjust)

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136164

Calibration Data

Rotameter Data			Calibration Data								
No.	Brand	Model	Date	Flow Rate (mL/min)						Value From Calibration Curve	
				Flow Rate (Reading)			Actual (Q std.)				
				1	2	3	1	2	3	y	R ²
L-B01	Dwyer	VFA-21	01/04/2026	50	100	200	49.8	100.6	200.9	1.001x + 0.276	1.000
L-B02	Dwyer	VFA-21	01/04/2026	50	100	200	50.7	101.9	201.6	1.000x + 1.270	1.000
L-B03	Dwyer	VFA-21	01/04/2026	50	100	200	50.3	99.8	199.2	1.001x - 0.849	0.999
L-B04	Dwyer	VFA-21	02/04/2026	50	100	200	49.9	98.6	202.5	1.002x - 0.797	0.999
L-B05	Dwyer	VFA-21	02/04/2026	50	100	200	50.8	99.7	201.4	0.999x + 0.452	1.000
L-B06	Dwyer	VFA-21	02/04/2026	50	100	200	50.7	101.9	199.3	1.000x + 0.872	1.000
L-B07	Dwyer	VFA-21	01/04/2026	50	100	200	50.8	99.1	202.9	0.999x + 0.048	0.999
L-B08	Dwyer	VFA-21	01/04/2026	50	100	200	50.6	100.1	198.7	0.997x + 0.447	1.000
L-B09	Dwyer	VFA-21	06/04/2026	50	100	200	50.2	100.8	200.7	1.000x + 0.515	1.000
L-B10	Dwyer	VFA-21	06/04/2026	50	100	200	50.1	99.5	201.1	1.001x - 0.608	0.999

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72 Fax : (662) 513-4221 E-mail : sale@spscon.com www.spscon.com

Rotameter Calibration Report (For Personal Pump Low Flow Adjust)

Calibration Method : Dry Cal Primary Flowmeter

Model : Defender 510-H

S/N : 136833

Calibration Data

Rotameter Data			Calibration Data								
No.	Brand	Model	Date	Flow Rate (mL/min)						Value From Calibration Curve	
				Flow Rate (Reading)			Actual (Q std.)				
				1	2	3	1	2	3	y	R ²
L-R01	Dwyer	VFA-21	01/04/2026	50	100	200	50.3	101.1	201.9	0.998x + 0.955	1.000
L-R02	Dwyer	VFA-21	01/04/2026	50	100	200	50.2	101.7	201.0	0.999x + 0.367	0.999
L-R03	Dwyer	VFA-21	03/04/2026	50	100	200	50.3	101.2	201.0	1.001x + 0.605	1.000
L-R04	Dwyer	VFA-21	05/04/2026	50	100	200	50.7	100.8	200.2	1.000x + 0.719	1.000
L-R05	Dwyer	VFA-21	05/04/2026	50	100	200	50.1	101.2	200.5	1.001x - 0.213	0.999
L-R06	Dwyer	VFA-21	03/04/2026	50	100	200	50.3	100.8	200.1	0.999x + 0.639	1.000

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72. Fax : (662) 513-4221. E-mail : sale@spscon.com.. www.spscon.com

Calibration Report			
Total Hydrocarbon Analyzer			
Date :	02 April 2026	Brand :	HORIBA
No.	B01	Model :	APHA-360CE
		Serial No.	4211954001
Calibrator (Dilution System)			
Brand :	Teledyne	Model :	700
Last Cal. Date :	24 October 2025	Serial No.	421
Reference Standard Gas			
Standard Gas :	Methane (CH ₄)	Cylinder No.	D612165
Certified Date :	25 February 2023	Expired Date :	25 February 2031
		Cylinder Conc.	453 ppm
Calibrating Condition			
Pressure	1011 mmbar	Temp.	24.5 °C
		% RH	48
		Start Time :	9:00 AM
Pre-Calibration Checks			
Change Particulate Filter	Yes	Station Temp :	25.0 °C
Leak Test	Yes		
Calibration Setting			
Span Set Point	Initial Reading (Before Adj)		Final Reading (After Adj)
	Expected Concentration (PPM)	Analyzer Response (PPM)	Analyzer Response (PPM)
Zero	0	-0.10	0
Span	10	10.04	10
Calibration Setting (Final)			
Span Instrument Gain:	0.997	Finish Time:	10:00 AM
APHA-360 Total Hydrocarbon Analyzer			
Test Values	Observed Value	Units	Nominal Range
Signal (CH ₄)	912.1	mV	800-1,350
Signal (THC)	917.2	mV	800-1,350
Detector	78.0	kPa	((Pressure Air/1013)x100)-20 ± 4 kPa
Purifier	19.1	kPa	8 - 25
NMC	258.5	°C	260 ± 10
Bypass	0.9	L / min	0.9 ± 0.3
Over Flow	0.8	L / Min	0.8

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr. Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	100A
NO.	SO ₂ -B02	SERIAL NO.	1847		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A00814SK	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
Cylinder Conc.	: 49.8 ppm				
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
% RH	50				
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.10	-	0	-
SO ₂ Span	400.0	400.1	0.025	400.0	1.010
API Model 100A SO ₂ Analyzer Check list					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	0-500		
SAMPLE PRESS	28.4	In-Hg	25-35		
SAMPLE FLOW	658	cc/min	650 ± 10%		
PMT	103.5	mV	-20-150 with Zero Air		
UV LAMP	3041.2	mV	1000-4900		
STR. LGT	61.9	PPB	<100		
DRK PMT	63.4	mV	-50 - 200		
DRK LMP	58.2	mV	-50 - 200		
HVPS	675	V	550-900 constant		
DCPS	2523	mV	2500 ± 200		
RCELL TEMP	50.1	°C	50 ± 1		
BOX TEMP	28.9	°C	5-40		
PMT TEMP	7.2	°C	7 ± 2.0		
SO ₂ Span Conc	400	PPB	20-20,000		
SO ₂ Slope	1.010	-	1.0 ± 0.3		
SO ₂ Offset	22.0	mV	<250		
Stability at Zero	0.1	PPB	<0.2		
Stability at Span	0.2	PPB	0.5% of reading (above 50 ppb)		

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	100A
NO.	SO ₂ -B03	SERIAL NO.	1846		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A00814SK	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
Cylinder Conc.	: 49.8 ppm				
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
% RH	50				
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	-0.10	-	0	-
SO ₂ Span	400.0	399.6	-0.100	400.0	1.007
API Model 100A SO ₂ Analyzer Check list					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	0-500		
SAMPLE PRESS	28.6	In-Hg	25-35		
SAMPLE FLOW	653	cc/min	650 ± 10%		
PMT	103.0	mV	-20-150 with Zero Air		
UV LAMP	3019.4	mV	1000-4900		
STR. LGT	61.5	PPB	<100		
DRK PMT	62.9	mV	-50 - 200		
DRK LMP	57.6	mV	-50 - 200		
HVPS	670	V	550-900 constant		
DCPS	2527	mV	2500 ± 200		
RCELL TEMP	50.2	°C	50 ± 1		
BOX TEMP	29.3	°C	5-40		
PMT TEMP	7.1	°C	7 ± 2.0		
SO ₂ Span Conc	400	PPB	20-20,000		
SO ₂ Slope	1.007	-	1.0 ± 0.3		
SO ₂ Offset	21.9	mV	<250		
Stability at Zero	0.1	PPB	<0.2		
Stability at Span	0.2	PPB	0.5% of reading (above 50 ppb)		

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	100E
NO.	SO ₂ -B05	SERIAL NO.	3270		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A008145K	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
			Cylinder Conc.	: 49.8 ppm	
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.11	-	0	-
SO ₂ Span	400.0	400.2	0.050	400.0	1.012
API Model 100E SO ₂ Analyzer Check list					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	0-500		
SAMPLE PRESS	28.5	in-Hg	25-35		
SAMPLE FLOW	659	cc/min	650 ± 10%		
PMT	103.1	mV	-20-150 with Zero Air		
UV LAMP	3023.8	mV	1000-4900		
STR. LGT	61.7	PPB	<100		
DRK PMT	63.1	mV	-50 - 200		
DRK LMP	57.9	mV	-50 - 200		
HVPS	671	V	550-900 constant		
DCPS	2525	mV	2500 ± 200		
RCELL TEMP	50.3	°C	50 ± 1		
BOX TEMP	29.4	°C	5-40		
PMT TEMP	7.2	°C	7 ± 2.0		
SO ₂ Span Conc	400	PPB	20-20,000		
SO ₂ Slope	1.012	-	1.0 ± 0.3		
SO ₂ Offset	22.1	mV	<250		
Stability at Zero	0.1	PPB	<0.2		
Stability at Span	0.2	PPB	0.5% of reading (above 50 ppb)		

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	100E
NO.	SO ₂ -B06	SERIAL NO.	3430		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A008145K	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
			Cylinder Conc.	: 49.8 ppm	
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.10	-	0	-
SO ₂ Span	400.0	399.7	-0.075	400.0	1.008
API Model 100E SO ₂ Analyzer Check list					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	0-500		
SAMPLE PRESS	28.7	in-Hg	25-35		
SAMPLE FLOW	655	cc/min	650 ± 10%		
PMT	103.2	mV	-20-150 with Zero Air		
UV LAMP	3029.6	mV	1000-4900		
STR. LGT	61.6	PPB	<100		
DRK PMT	63.0	mV	-50 - 200		
DRK LMP	57.7	mV	-50 - 200		
HVPS	673	V	550-900 constant		
DCPS	2521	mV	2500 ± 200		
RCELL TEMP	50.4	°C	50 ± 1		
BOX TEMP	29.1	°C	5-40		
PMT TEMP	7.0	°C	7 ± 2.0		
SO ₂ Span Conc	400	PPB	20-20,000		
SO ₂ Slope	1.008	-	1.0 ± 0.3		
SO ₂ Offset	21.8	mV	<250		
Stability at Zero	0.1	PPB	<0.2		
Stability at Span	0.2	PPB	0.5% of reading (above 50 ppb)		

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	Thermo	MODEL :	43C
NO.	SO2-B09	SERIAL NO.	43C-59325-322		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A00814SK	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
			Cylinder Conc.	: 49.8 ppm	
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	
Zero	0	0.10	-	0	
SO ₂ Span	400.0	399.6	-0.100	400.0	
INSTRUMENT STATUS					
CHAMBER TEMP	44.5	°C	FLOW	1.0 LPM	
PRESSURE	728.9	mm Hg			

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	Thermo	MODEL :	43C
NO.	SO2-B10	SERIAL NO.	43C-69604-364		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A00814SK	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
			Cylinder Conc.	: 49.8 ppm	
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	
Zero	0	-0.10	-	0	
SO ₂ Span	400.0	399.9	-0.025	400.0	
INSTRUMENT STATUS					
CHAMBER TEMP	44.2	°C	FLOW	1.0 LPM	
PRESSURE	728.7	mm Hg			

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spsccon.com, www.spsccon.com

CALIBRATION REPORT					
SO ₂ FLUORESCENT ANALYZER					
DATE :	01 April 2026	BRAND :	TELEDYNE	MODEL :	TML-50
NO.	SO ₂ -B12	SERIAL NO.	1886		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Sulphur Dioxide (SO ₂)		Cylinder No.	: A008145K	
Certified Date	: 21 June 2021		Expired Date	: 21 June 2029	
			Cylinder Conc.	: 49.8 ppm	
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.10	-	0	-
SO ₂ Span	400.0	399.8	-0.050	400.0	1.009
API Model TML-50 SO ₂ Analyzer Check list					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	0-500		
SAMPLE PRESS	28.5	in-Hg	25-35		
SAMPLE FLOW	654	cc/min	650 ± 10%		
PMT	103.4	mV	-20-150 with Zero Air		
UV LAMP	3038.5	mV	1000-4900		
STR. LGT	61.8	PPB	<100		
DRK PMT	63.2	mV	-50 - 200		
DRK LMP	58.1	mV	-50 - 200		
HVPS	674	V	550-900 constant		
DCPS	2520	mV	2500 ± 200		
RCELL TEMP	50.0	°C	50 ± 1		
BOX TEMP	28.8	°C	5-40		
PMT TEMP	7.1	°C	7 ± 2.0		
SO ₂ Span Conc	400	PPB	20-20,000		
SO ₂ Slope	1.009	-	1.0 ± 0.3		
SO ₂ Offset	22.2	mV	<250		
Stability at Zero	0.1	PPB	<0.2		
Stability at Span	0.2	PPB	0.5% of reading (above 50 ppb)		

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	200A
NO.	NOX-B02	SERIAL NO.	2409		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Nitric Oxide (NO)		Cylinder No.	: A00674SV	
Certified Date	: 12 March 2025	Expired Date	: 12 March 2028	Cylinder Conc.	: 48.7 ppm
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	-0.10	-	0	-
NO Span	400	399.7	-0.075	400.0	1.006
NO _x Span	400	400.1	0.025	400.0	1.010
API Model 200A NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	509	cc/min	500 ± 50		
OZONE FLOW	79	cc/min	80 ± 15		
PMT	103.3	mV	-20 - 150		
AZERO	94.1	mV	-20 - 150		
HVPS	675	V	420 - 900 constant		
RCCELL TEMP	50.4	°C	50 ± 1		
BOX TEMP	29.1	°C	8 - 48		
PMT TEMP	7.3	°C	7 ± 2		
MOLY TEMP	315.1	°C	315 ± 5		
RCCELL PRESS	8.3	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.4	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.006	-	1.0 ± 0.3		
NO _x Slope	1.010	-	1.0 ± 0.3		
NO Offset	1.2	mV	-20 to +150		
NO _x Offset	0.8	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Mr.Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	200E
NO.	NOX-B06	SERIAL NO.	2286		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Nitric Oxide (NO)		Cylinder No.	: A00674SV	
Certified Date	: 12 March 2025	Expired Date	: 12 March 2028	Cylinder Conc.	: 48.7 ppm
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.11	-	0	-
NO Span	400	400.1	0.025	400.0	1.010
NO _x Span	400	400.3	0.075	400.0	1.013
API Model 200E NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	507	cc/min	500 ± 50		
OZONE FLOW	78	cc/min	80 ± 15		
PMT	103.5	mV	-20 - 150		
AZERO	94.2	mV	-20 - 150		
HVPS	671	V	420 - 900 constant		
RCCELL TEMP	50.5	°C	50 ± 1		
BOX TEMP	29.3	°C	8 - 48		
PMT TEMP	7.1	°C	7 ± 2		
MOLY TEMP	314.9	°C	315 ± 5		
RCCELL PRESS	8.4	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.7	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.010	-	1.0 ± 0.3		
NO _x Slope	1.013	-	1.0 ± 0.3		
NO Offset	1.7	mV	-20 to +150		
NO _x Offset	1.1	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

Mr.Peera Detudom
(Mr.Peera Detudom)

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	200E
NO.	NOX-B08	SERIAL NO.	4336		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Nitric Oxide (NO)		Cylinder No.	: A00674SV	
Certified Date	: 12 March 2025	Expired Date	: 12 March 2028	Cylinder Conc.	: 48.7 ppm
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
% RH	50				
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	-0.10	-	0	-
NO Span	400	399.8	-0.050	400.0	1.008
NO _x Span	400	400.2	0.050	400.0	1.011
API Model 200E NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	511	cc/min	500 ± 50		
OZONE FLOW	79	cc/min	80 ± 15		
PMT	103.2	mV	-20 - 150		
AZERO	94.0	mV	-20 - 150		
HVPS	670	V	420 - 900 constant		
RCELL TEMP	50.3	°C	50 ± 1		
BOX TEMP	29.4	°C	8 - 48		
PMT TEMP	7.2	°C	7 ± 2		
MOLY TEMP	315.3	°C	315 ± 5		
RCELL PRESS	8.2	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.5	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.008	-	1.0 ± 0.3		
NO _x Slope	1.011	-	1.0 ± 0.3		
NO Offset	1.4	mV	-20 to +150		
NO _x Offset	0.9	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	200E
NO.	NOX-B10	SERIAL NO.	4465		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Nitric Oxide (NO)		Cylinder No.	: A00674SV	
Certified Date	: 12 March 2025	Expired Date	: 12 March 2028	Cylinder Conc.	: 48.7 ppm
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
% RH	50				
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.11	-	0	-
NO Span	400	400.2	0.050	400.0	1.010
NO _x Span	400	400.3	0.075	400.0	1.014
API Model 200E NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	508	cc/min	500 ± 50		
OZONE FLOW	78	cc/min	80 ± 15		
PMT	103.0	mV	-20 - 150		
AZERO	93.7	mV	-20 - 150		
HVPS	669	V	420 - 900 constant		
RCELL TEMP	50.1	°C	50 ± 1		
BOX TEMP	29.2	°C	8 - 48		
PMT TEMP	7.4	°C	7 ± 2		
MOLY TEMP	314.7	°C	315 ± 5		
RCELL PRESS	8.3	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.6	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.010	-	1.0 ± 0.3		
NO _x Slope	1.014	-	1.0 ± 0.3		
NO Offset	1.8	mV	-20 to +150		
NO _x Offset	1.1	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	200A
NO.	NOX-B12	SERIAL NO.	2675		
Calibrator (Dilution System)					
Brand :	API	Model :	700		
Last Cal. Date :	01 September 2025	Serial No. :	911		
Reference Standard Gas					
Standard Gas :	Nitric Oxide (NO)	Cylinder No. :	A00674SV		
Certified Date :	12 March 2025	Expired Date :	12 March 2028	Cylinder Conc. :	48.7 ppm
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
% RH	50				
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.11	-	0	-
NO Span	400	399.9	-0.025	400.0	1.009
NO _x Span	400	400.2	0.050	400.0	1.012
API Model 200A NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	510	cc/min	500 ± 50		
OZONE FLOW	79	cc/min	80 ± 15		
PMT	103.4	mV	-20 - 150		
AZERO	94.2	mV	-20 - 150		
HVPS	674	V	420 - 900 constant		
RCCELL TEMP	50.2	°C	50 ± 1		
BOX TEMP	29.3	°C	8 - 48		
PMT TEMP	7.5	°C	7 ± 2		
MOLY TEMP	315.4	°C	315 ± 5		
RCCELL PRESS	8.5	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.7	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.009	-	1.0 ± 0.3		
NO _x Slope	1.012	-	1.0 ± 0.3		
NO Offset	1.5	mV	-20 to +150		
NO _x Offset	0.9	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	200A
NO.	NOX-B14	SERIAL NO.	212		
Calibrator (Dilution System)					
Brand :	API	Model :	700		
Last Cal. Date :	01 September 2025	Serial No. :	911		
Reference Standard Gas					
Standard Gas :	Nitric Oxide (NO)	Cylinder No. :	A00674SV		
Certified Date :	12 March 2025	Expired Date :	12 March 2028	Cylinder Conc. :	48.7 ppm
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
% RH	50				
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.10	-	0	-
NO Span	400	400.1	0.025	400.0	1.010
NO _x Span	400	400.2	0.050	400.0	1.012
API Model 200A NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	505	cc/min	500 ± 50		
OZONE FLOW	78	cc/min	80 ± 15		
PMT	102.9	mV	-20 - 150		
AZERO	93.6	mV	-20 - 150		
HVPS	672	V	420 - 900 constant		
RCCELL TEMP	50.0	°C	50 ± 1		
BOX TEMP	28.8	°C	8 - 48		
PMT TEMP	7.2	°C	7 ± 2		
MOLY TEMP	314.8	°C	315 ± 5		
RCCELL PRESS	8.3	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.5	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.010	-	1.0 ± 0.3		
NO _x Slope	1.012	-	1.0 ± 0.3		
NO Offset	1.6	mV	-20 to +150		
NO _x Offset	1.0	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by : Adul Dangklom
(Mr.Adul Dangklom)

Approved by : Peera Detudom
(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel : (662) 939-4370-72, Fax : (662) 513-4221, E-mail : sale@spscon.com, www.spscon.com

CALIBRATION REPORT					
CHEMILUMINESCENT NO / NO ₂ / NO _x ANALYZER					
DATE :	01 April 2026	BRAND :	API	MODEL :	TML-41M
NO.	NOX-B22	SERIAL NO.	NO1618		
Calibrator (Dilution System)					
Brand	: API		Model	: 700	
Last Cal. Date	: 01 September 2025		Serial No.	: 911	
Reference Standard Gas					
Standard Gas	: Nitric Oxide (NO)		Cylinder No.	: A00674SV	
Certified Date	: 12 March 2025		Expired Date	: 12 March 2028	
			Cylinder Conc.	: 48.7 ppm	
CALIBRATING CONDITION					
Pressure	1011	mmbar	Temp.	24.6	°C
			% RH	50	
CALIBRATION SETTING					
Span	Initial Reading (Before Adj.),PPB			Final Reading (After Adj.),PPB	
Set Point	Expected Concentration	Analyzer Response	%Dif	Analyzer Response	Slope
Zero	0	0.10	-	0	-
NO Span	400	399.6	-0.100	400.0	1.004
NO _x Span	400	399.9	-0.025	400.0	1.008
API Model TML-41M NO _x Analyzer Check List					
Test Values	Observed Value	Units	Nominal Range		
RANGE	500	PPB	500 standard.		
STABILITY (Zero Gas)	0.1	PPB	< 2 with zero air		
SAMPLE FLOW	512	cc/min	500 ± 50		
OZONE FLOW	79	cc/min	80 ± 15		
PMT	103.1	mV	-20 - 150		
AZERO	93.8	mV	-20 - 150		
HVPS	673	V	420 - 900 constant		
RCCELL TEMP	50.2	°C	50 ± 1		
BOX TEMP	29.0	°C	8 - 48		
PMT TEMP	7.1	°C	7 ± 2		
MOLY TEMP	315.2	°C	315 ± 5		
RCCELL PRESS	8.2	IN-Hg-A	2 - 10 constant		
SAMPLE PRESS	28.4	IN-Hg-A	25 - 30 constant		
NO Span Conc	400	PPB	20 - 20,000		
NO _x Span Conc	400	PPB	20 - 20,000		
NO Slope	1.004	-	1.0 ± 0.3		
NO _x Slope	1.008	-	1.0 ± 0.3		
NO Offset	1.0	mV	-20 to +150		
NO _x Offset	0.6	mV	-20 to 150		
Stability at Zero	0.1	PPB	< 0.2		
Stability at Span	0.2	PPB	< 2 ppb @ 400 ppb span gas		

Calibrated by :

Adul Dangklom
(Mr.Adul Dangklom)

Approved by :

(Mr.Peera Detudom)



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sales@spscon.com

การปรับความถูกต้องเครื่อง High Volume Air Sampler


ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B37	วันที่ทำการ Calibrate	: 04/03/2026
Blower Motor เบอร์	: B37		
Flow Recorder ยี่ห้อ/รุ่น	: TISCH, Model TE-5005X	อุณหภูมิ	: 30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 5821	ความชื้นสัมพัทธ์	: 50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
P = ความดันบรรยากาศขณะ Calibrate (mmbar)
T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard			Model : TE 5025A	S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.7	67.5	66.3
13	54	9.6	58.5	57.4
10	45	7.5	49.5	48.6
7	33	4.6	37.0	36.3
5	26	2.5	28.0	27.5

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B37

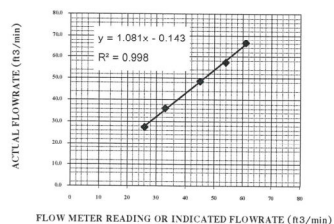

FLOW METER READING OR INDICATED FLOWRATE (ft³/min)

ผู้สอบเทียบ

ทรงยศ โสมาเทศ
(นายทรงยศ โสมาเทศ)

ผู้ตรวจสอบ

อตุลย์ แดงล้อม
(นายอตุลย์ แดงล้อม)

ผู้รับรองผล

ปิยะ เดชอุดม
(นายปิยะ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.39 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 46 ft³/min



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sales@spscon.com

การปรับความถูกต้องเครื่อง High Volume Air Sampler


ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B38	วันที่ทำการ Calibrate	: 04/03/2026
Blower Motor เบอร์	: B38		
Flow Recorder ยี่ห้อ/รุ่น	: TISCH, Model TE-5005X	อุณหภูมิ	: 30 °C
	(Accuracy ± 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 5826	ความชื้นสัมพัทธ์	: 50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
P = ความดันบรรยากาศขณะ Calibrate (mmbar)
T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard			Model : TE 5025A	S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	62	11.6	67.1	65.9
13	54	9.8	59.4	58.3
10	46	7.8	50.8	49.8
7	36	5.0	38.7	38.0
5	28	2.8	29.3	28.7

CALIBRATION CURVE OF HI-VOLUME AIR SAMPLER NO.B38

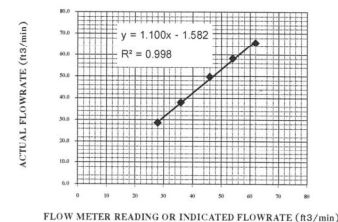

FLOW METER READING OR INDICATED FLOWRATE (ft³/min)

ผู้สอบเทียบ

ทรงยศ โสมาเทศ
(นายทรงยศ โสมาเทศ)

ผู้ตรวจสอบ

อตุลย์ แดงล้อม
(นายอตุลย์ แดงล้อม)

ผู้รับรองผล

ปิยะ เดชอุดม
(นายปิยะ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.89 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 47 ft³/min



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sale@spscon.com


การปรับความถูกต้องเครื่อง High Volume Air Sampler

ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B39	วันที่ทำการ Calibrate	: 04/03/2026
Blower Motor เบอร์	: B39		
Flow Recorder ยี่ห้อ/รุ่น	: TISCH, Model TE-5005X	อุณหภูมิ	: 30 °C
	(Accuracy $\pm$ 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 5823	ความชื้นสัมพัทธ์	: 50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
P = ความดันบรรยากาศขณะ Calibrate (mmbar)
T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard			Model : TE 5025A	S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	64	11.8	68.0	66.7
13	56	9.5	58.1	57.0
10	48	7.8	50.8	49.8
7	34	4.4	36.2	35.5
5	28	2.7	28.9	28.3

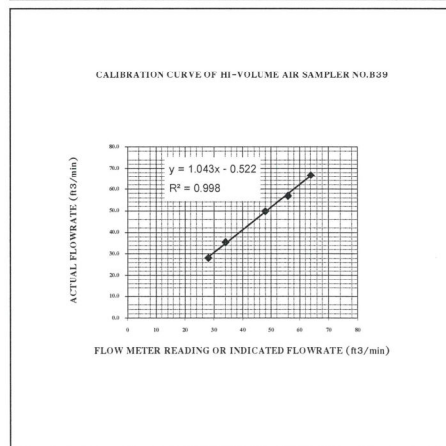

ผู้สอบเทียบ

นายพรชัย โสมากุล
(นายพรชัย โสมากุล) 1

ผู้ตรวจสอบ

คุณสุวิทย์ หงษ์ทอง
(นายสุวิทย์ หงษ์ทอง)

ผู้รับรองผล

นายพีระ เดชอุดม
(นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 48.44 ± 1.0 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 48 ft³/min



บริษัท เอส.พี.เอส. คอนซัลติ้ง เซอร์วิส จำกัด
S.P.S. CONSULTING SERVICE CO., LTD.
7 ซอยพหลโยธิน 24 ถนนพหลโยธิน แขวงจอมพล เขตจตุจักร กรุงเทพฯ 10900
7 Soi Phaholyothin 24, Phaholyothin Rd., Jompol, Chatuchak, Bangkok 10900
Tel: (662) 939-4370 (Automatic 5 Lines) Fax: (662) 513-4221 E-mail: sale@spscon.com


การปรับความถูกต้องเครื่อง High Volume Air Sampler

ข้อมูลการ Calibrate			
High Volume Air Sampler เบอร์	: B41	วันที่ทำการ Calibrate	: 04/03/2026
Blower Motor เบอร์	: B41		
Flow Recorder ยี่ห้อ/รุ่น	: TISCH, Model TE-5005X	อุณหภูมิ	: 30 °C
	(Accuracy $\pm$ 2% Full Scale)	ความดันบรรยากาศ	: 1011 mmbar
หมายเลขประจำเครื่อง	: 5815	ความชื้นสัมพัทธ์	: 50 %

โดยคำนวณปริมาตรอากาศเทียบกับสภาวะมาตรฐาน คือ ที่อุณหภูมิ 25 องศาเซลเซียส และที่ความดันบรรยากาศ 760 มิลลิเมตรปรอท

จากสูตร $V_m(\text{std.}) = V_m \times \frac{P}{1.333224 \times 760} \times \frac{298}{(T+273)}$ โดยที่ $V_m(\text{std.})$ = ปริมาตรอากาศที่สภาวะมาตรฐาน
 V_m = ปริมาตรอากาศที่ P และ T ขณะ Calibrate
P = ความดันบรรยากาศขณะ Calibrate (mmbar)
T = อุณหภูมิขณะ Calibrate (°C)

Calibration Method : Multipoint Orifice Flow Transfer Standard			Model : TE 5025A	S/N : 3611
Plate	Indicated Flowrate (ft ³ /min)	True Static Pressure (in. H ₂ O)	Actual Flowrate ที่ T และ P ขณะ Calibrate (ft ³ /min)	Actual Flowrate ที่ T และ P ที่ มาตรฐาน (ft ³ /min)
18	61	11.6	67.1	65.9
13	53	9.7	58.9	57.8
10	46	7.8	50.8	49.8
7	34	4.5	36.6	35.9
5	27	2.7	28.9	28.3

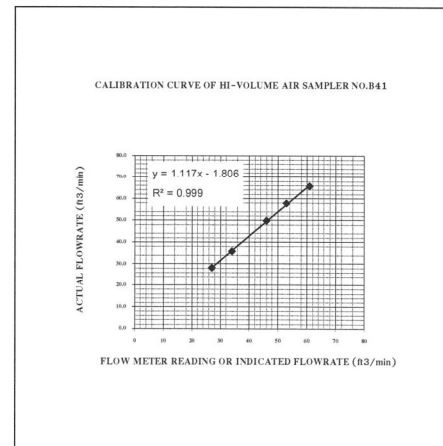

ผู้สอบเทียบ

นายพรชัย โสมากุล
(นายพรชัย โสมากุล) 1

ผู้ตรวจสอบ

คุณสุวิทย์ หงษ์ทอง
(นายสุวิทย์ หงษ์ทอง)

ผู้รับรองผล

นายพีระ เดชอุดม
(นายพีระ เดชอุดม)

เกณฑ์ยอมรับ : ค่า R² จาก Calibration Curve 0.995 / Flow Meter Reading = 46.38 ± 0.9 ft³/min

ค่าใช้งาน : Flow Rate (มาตรฐาน) = 50 ft³/min ดังนั้น ต้องปรับตั้งค่า Flow Meter Reading = 46 ft³/min



WO-11540201/2025

MAINTENANCE AND TEST CERTIFICATE MODEL
OPTIMA 5300DV

Customer :	<u>S.P.S.Consulting Service Co.,Ltd</u>	Date Tested:	<u>December 18, 2025</u>
Address :	<u>7 Soi Phaholyothin 24</u>	Recommendation Recertification	
	<u>Paholyothin Road</u>	Period	<u>6 Months</u>
	<u>Jompol Chatuchak, Bangkok 1090</u>	Recertification Due:	<u>June 28, 2026</u>
User Name:	<u>K.Phenpha Vipasthawatt</u>	Date Last Certified:	<u>July 1, 2025</u>
Phone:	<u>083-9269252</u>	Visit Number:	<u>2 of 2</u>
Fax:	<u>02-513-4221</u>	PerkinElmer Phone:	<u>02-719-6420 ext 206</u>
		PerkinElmer Fax:	<u>02-318-5597</u>

CONFIGURATION TESTED		ACCESSORIES/COMPONENT NOT INCLUDED
MODEL	SERIAL NUMBER	
<u>OPTIMA 5300DV</u>	<u>077C7042401</u>	
TESTED EQUIPMENT	CALIBRATION NUMBER	EXPIRATION
<u>IPV Methods</u>		
TEST STANDARD USED	PART NUMBER	EXPIRATION DATE
<u>Multielement Standard</u>	<u>N069-1579</u>	<u>November 30, 2026</u>
<u>Wavecal Solution</u>	<u>N058-2152</u>	<u>July 30, 2026</u>
<u>VIS Wavecal solution</u>	<u>N930-2946</u>	<u>August 30, 2026</u>
<u>Instrument Cal. STD4</u>	<u>N930-0221</u>	<u>November 30, 2026</u>
CUSTOMER SUPPLIED	COMMENTS	CUSTOMER INITIALS
<u>2 % HNO3</u>		
<u>10 % HNO3</u>		

Page 1 of 4



WO-11540201/2025

MAINTENANCE AND TEST CERTIFICATE MODEL
OPTIMA 5300DV

SERIAL NUMBER	<u>077C7042401</u>	DATE TESTED	<u>December 18, 2025</u>
1. MECHANICAL CHECKS			
A. Inspect and clean all fans and filters.			☐
B. Inspect and replace as necessary, all torch components including the RF coil.			☐
C. Inspect all tubing for sign of clacking or leaking.			☐
D. Adjust water and gas pressure regulator settings.			☐
E. Inspect and leak check pneumatics drawers.			☐
F. Clean the exterior of the instrument.			☐
2. OPTICAL CHECKS			
A. Inspect and clean all optical components.			☐
B. As required, check and replace all purgefilters.			☐
C. Recheck optical alignment.			☐
3. COOLING SYSTEM CHECKS			
A. Perform preventive maintenance on chiller.			☐
B. Flush out the chiller every year.			☐
4. PERFORMANCE CHECKS			
A. Torch View Alignment.			☐
B. Wavelength Calibration.			☐

Page 2 of 4



MAINTENANCE AND TEST CERTIFICATE MODEL
OPTIMA 5300DV

SERIAL NUMBER : 077C7042401		DATE TESTED : December 18, 2025	
PARAMETER	SPECIFICATION	FINAL VALUE	
Spectral Resolution : UV	As 193.696 nm	≤ 0.007	0.00530
	Ni 231.604 nm	≤ 0.008	0.00708
	Ni 341.476 nm	≤ 0.012	0.00776
Spectral Resolution : VIS	La 408.672 nm	≤ 0.020	0.01614
	Ba 455.403 nm	≤ 0.025	0.02377
Precision	As 193.656 nm	% RSD < 1.0	0.67 %
	Zn 213.856 nm	% RSD < 1.0	0.62 %
	Mn 257.610 nm	% RSD < 1.0	0.88 %
	La 379.478 nm	% RSD < 1.0	0.63 %
	Ba 455.403 nm	% RSD < 1.0	0.65 %
	Ba 493.408 nm	% RSD < 1.0	0.45 %
Detection Limits : Axial	Tl 190.080 nm	3(sd)	3.21 ppb
	As 193.696 nm	3(sd)	6.06 ppb
	Pb 220.353 nm	3(sd)	0.92 ppb
Detection Limits : Radial	As 193.696 nm	3(sd)	17.35 ppb
	Zn 213.856 nm	3(sd)	1.79 ppb
	Mn 257.610 nm	3(sd)	0.18 ppb
	La 379.478 nm	3(sd)	0.76 ppb
	Ba 455.403 nm	3(sd)	0.11 ppb
	Ba 493.408 nm	3(sd)	0.56 ppb
BEC : Axial (IB X 500)/(IS-IB)	Cd 226.502 nm	≤ 150 ppb	40.52
BEC : Radial (IB X 1000)/(IS-IB)	Mn 257.610 nm	≤ 45 ppb	42.33



MAINTENANCE AND TEST CERTIFICATE MODEL
OPTIMA 5300DV

SERIAL NUMBER	077C7042401	DATE TESTED	December 18, 2025
Remarks :			
Commissioning follow as commissioning performance sheets.			
This is to certify that the above tests have been performed and the configuration tested			
☒ meets ☐ does not meet			
the PerkinElmer Specifications listed on this certificate.			
This certificate does not modify PerkinElmer's standard terms and condition of sale, including warranty terms.			
Service Department PerkinElmer Ltd. Authorized Representative: _____ (Wiphan Promlumda) Service Engineer			

เอกสารแนบ 6-2

เอกสารสอบเทียบเครื่องมือการตรวจวิเคราะห์คุณภาพน้ำ



PinAAcle 900T Preventive Maintenance Report

Company Name: S.P.S Consulting Service Co.,Ltd

Instrument Location: AAS Room
Phaholyothin Rd, Ladyao, Jatujak, Bangkok 10900

Instrument Serial No.: PTCS1411103

Date: 18 DEC 2025

PinAAcle 900T Preventive Maintenance (PM)

Company Name:	S.P.S Consulting Service Co.,Ltd		
Address (Instrument Location):	Phaholyothin 24, Phaholyothin Rd, Ladyao, Jatujak, Bangkok 10900		
Serial Number:	PTCS1411103	PM Number:	2/2
Customer Name (if applicable):	K.Phenpha	Telephone Number:	WO-11540402
Customer Support Engineer Name:	Prasit	Service Order Number:	083-9269252
Date PM Performed: (DD-MMM-YYYY)	18 DEC 2025	Next PM Due Date: (DD-MMM-YYYY)	18 JUN 2026
Standard Labor Hours to Complete PM :		5 hours	

Part Number	Release	Publication Date	
09370143 Rev.9	A	January 2018	

Scope

The purpose of this PM is to ensure the continued functionality of the PinAAcle 900T by inspecting and replacing any worn or damaged parts. This service should only be performed by a trained representative of PerkinElmer.

The customer should save their method before the PM begins.

General Instructions:

The customer must provide the engineer operational data to demonstrate recent instrument performance prior to starting the PM. Always check with the customer before making any changes that may affect the customer's analysis or calibration, including a current back-up of system software and/or data files. The completed document should be signed by an authorized PerkinElmer and customer representative and left with the customer. Update the PM sticker and instrument logbook as required.

Copyright Information

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this publication may be reproduced in any form whatsoever or translated into any language without the prior, written permission of PerkinElmer, Inc. **Copyright © 2013 PerkinElmer, Inc.**

Trademarks

Registered names, trademarks, etc. used in this document, even when not specifically marked as such, are protected by law. PerkinElmer is a registered trademark of PerkinElmer, Inc. All other trademarks and registered trademarks not owned by PerkinElmer, Inc. or its subsidiaries that are depicted herein are the property of their respective owners.

Except as specifically set forth in its terms and conditions of sale, PerkinElmer makes no Warranty of any kind with regard to this document, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

PerkinElmer shall not be liable for incidental or consequential damages in connection with the furnishing or use of this document.

Component List

Component / Specific Model	Serial #	Configuration Notes
PinAAcle900T	PTCS1411103	WinLab32 Ver 7.4.1.0730

Parts Lists

Parts Included with the PM			
Part Number (if applicable)	Description	Quantity	
B0501696	Fan Filters	N/A	▼
B3002013	THGA Contact Cylinders	N/A	▼
B3141064	Glycerol for THGA Cooling	N/A	
N3160156	O-Ring Kits for Sampling Introduction (Stainless Steels Nebulizer)	N/A	
N3160157	O-Ring Kits for Sampling Introduction (Plastic Nebulizer)	N/A	▼
N9301714	Replacement Acetylene Filter Cartridge	N/A	▼
TH001022	Replacement Air Filter Cartridge	N/A	▼

Additional Reagents and Standards Required for PM				
Part Number (if applicable)	Description	Quality	Batch/Lot #	Expired Date (MM/YY)
N9300183	1000 mg/L Copper Standard	AR	27-156CUY1	SEP-2026
N9300244	GFAAS Mixed Standard	AR		

Additional Reagents and Standards Required for PM (Customer Support Solution)				
Part Number (if applicable)	Description	Quantity	Batch/Lot #	Expiration Date (MM/YY)
N/A	DI Water	250 mL.	AR	AR
N/A	0.5% HNO ₃	250 mL.	AR	AR

Additional Tools Required for PM			
Part Number (if applicable)	Description	Quantity	Serial #
N1013000	0.2A Neutral density filter	1	MG0-704
N1013002	1.0A Neutral density filter	1	MG2-891
B3100652 Or N9307029	Electronic Flow Meter	1	
B0505495	Test Jig	1	
03030997	System 2 EDL Driver	1	030309-97E
N3050605	As System 2 EDL	1	17986
N3050121	Cu Lumina HCL	1	000003793D12
N3050109	Ba Lumina HCL	1	041123-010120
N3050139	K Lumina HCL	1	0000037B8E1D
N3050152	Ni Lumina HCL	1	
N3050119	Cr Lumina HCL	1	010324-0300050

Procedure Checklist

Use (✓) to check off those steps in the checklist that have been completed.

1. General:

- ☒ Review the instrument performance with the customer and document any recent problems.
- ☒ Inspect the customer log book and make any appropriate PM entries.
- ☒ Perform general inspection of system for cleanliness.

2. PC Instrument Software:

- ☒ Instrument Software user files/databases archived, packed, and/or deleted as needed.

3. Mechanical:

- ☒ Inspect and clean all fans and filters. Replace filters if necessary
- ☒ Inspect all gas and water lines for leaks and/or wear. Replace if needed. Thoroughly inspect all quick connects. Replace the Y connector, P/N 09921079, if needed.
- ☒ Clean exterior of the instrument.

3.1 Flame Technique

- ☒ Inspect the burner head, burner chamber, and nebulizer. Clean if needed as stated in the Hardware Guide.
- ☒ Check burner head dimensions with the feeler gauge as stated in the Hardware Guide in the Maintenance chapter section on cleaning the burner head and checking sloth width. Replace if out of specification
- ☒ Check the condition of the end cap, burner head, and nebulizer O-rings. Replace if necessary.
- ☒ Check the drain system for signs of wear. Replace worn or damaged parts.
- ☒ Visually check for proper flame conditions when igniting the Air-C₂H₂ and N₂O-C₂H₂ flames (if applicable).

3.2 THGA Technique

- ☒ Inspect the pole pieces and clean where the pole pieces contact the furnace. Replace the pole piece p-rings as needed, P/N's B0501018 & B0501250. Grease the O-rings as needed with Apiezon L grease, P/N 09905148
- ☒ Inspect the four insulation pads on the front contact housing of the THGA in furnace. If the pads are missing replace the THGA furnace or replace the insulator pads on the furnace.
- ☒ Inspect the graphite tube and clean the contact cylinders. Replace if necessary.
- ☒ Check internal and external gas flows with the Electronic Gas Flow Meter and the Gas Flow Test Probe as described in the Service Manual. Correct if necessary.
- ☒ Check furnace open/close function.
- ☒ Verify the operation of the GFTV Camera for proper operation and viewing alignment in the furnace camera Tube View window. Align if needed.
- ☒ Check the operation of the Halogen Light ASSY for the GFTV Camera. Replace if needed.
- ☒ Check the water level/quality in the recirculation (if applicable). Add distilled water if necessary.
- ☒ Check the cooling system fluid flow rate with the FCS In-Line Flow Meter for proper levels if needed. Refer to SDB# COSY008.STN

- ☒ Perform Cooling System maintenance if needed per SDB# COSY005.STN.
- ☒ Check auto sampler operation.
- ☒ Perform an auto sampler check valve test as described in the Service Manual.
- ☒ Lubricate the spindles of the auto sampler pumps and all moving parts of the tray mechanics as described in the Service Manual.
- ☒ Inspect the auto sampler sampling capillary as described in the Service Manual. Replace if necessary.

4. Electrical:

- ☒ Inspect PC boards. Clean if necessary.
- ☒ Carefully check all internal and external cable connections.
- ☒ Check instrument firmware revisions upgrade to current levels (if necessary)
- ☒ Run Diagnostics Test within the Advanced function of the Spectrometer page. Check the results in the service log folder in the Spectrometer BM Log Viewer.

5. Optics:

- ☒ Inspect and clean the sample compartment windows, if needed.
- ☒ Inspect and clean the furnace windows, if needed.
- ☒ Inspect and clean the GFTV camera lens, if needed.
- ☒ Inspect optics. Clean or replace if necessary,

6. Gasses:

- ☒ Verify that the Gasses supplied to the instrument are within the pressure and purity specifications found in the PinAAcle 900 Series Pre-installation Checklist SDB.
- ☒ Verify that the air filter element is dry. Replace if necessary.

7. Flame Interlock Check:

Description: Check to ensure that all safety interlocks are closed.

Parameter	Specification	Test Results	Pass/Fail
Flame Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active ☐	Passed
Drain Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active ☐	Passed
Nebulizer Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active ☐	Passed
C ₂ H ₂ Pressure Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active ☐	Passed
Air Pressure Sensor	Air/C ₂ H ₂ Flame correctly shuts down	Active ☐	Passed
Burner Head Sensor	Choosing Nitrous Oxide as the oxidant should trigger an interlock shuts down	Active ☐	Passed

8. After PM Performance tests [Flame]:

8.1 Detector Linearity with Barium

Description: Ensures that the detector is linear in the Visible Range.

Parameter	Specification	Certificate Value at 553.6 nm (Abs.)	Test Results	Pass/Fail
1.0 A ND Filter	± 5% from Cert.	0.9874	0.9644	Passed
0.2 A ND Filter	± 5% from Cert.	0.1886	0.1727	Passed

8.2 Baseline Noise at 1.0 Absorbance with Barium

Description: Ensures that a high absorbance will not produce excessive noise.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.010	0.0016	Passed

8.3 AA Baseline Noise with Copper

Description: Check baseline noise.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.001	0.0001	Passed

8.4 D₂ Background Compensation with Copper

Description: Verifies the instruments ability to compensate for Background absorption.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.010	0.0069	Not Applicab

8.5 AA-BG Baseline Noise with Copper

Description: Ensures that background correction does not produce excessive noise.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.005	0.0005	Not Applicab

8.6 AA-BG Baseline Noise with Arsenic

Description: Ensures that background correction does not produce excessive noise at a low wavelength.

Parameter	Specification	Results	Pass/Fail
Standard Deviation	≤ 0.005	0.0013	Not Applicab

8.7 Flame Sensitivity

Description: Instrument Sensitivity checked against Copper standard.

Standard Copper Sensitivity	Specification	Results (Abs.)	Pass/Fail
5 mg/L Sensitivity SS Neb (if applicable)	> 0.250 Abs.	N/A	Not Applicable
2 mg/L Sensitivity HS Neb (if applicable)	> 0.250 Abs.	0.3544	Passed

9. After PM Performance tests [THGA]:

9.1 Furnace Gas Flows

Description: Ensures the flow rates are within specification.

Parameter	Specification	Test Results	Pass/Fail
Internal Flow Rate	250 mL/min ± 25 mL/min	252	Passed
External Flow Rate	100 mL/min ± 10 mL/min	97	Passed

9.2 Chromium Baseline Noise

Description: Signal to noise check.

Parameter	Specification	Results	Pass/Fail
Baseline Noise	≤ 0.005 Abs.	-0.0010	Passed
Standard Deviation	≤ 0.005	0.0009	Passed

9.3 Chromium Characteristic Mass and Precision

Description: Calculate the characteristic mass using the characteristic mass tool and precision from the integrated absorbance values.

Parameter	Specification	Results	Pass/Fail
Cr m ₀ Results	≤ 7.0 pg/0.0044 A-s	6.8	Passed
Precision	≤ 2.0 %	0.38	Passed

9.4 Copper Characteristic Mass and Zeeman Ratio

Description: Calculate the characteristic mass using the characteristic mass tool and check the Zeeman Ratio.

Parameter	Specification	Results	Pass/Fail
Cu m ₀ Result	≤ 16.5 pg/0.0044 A-s	15.4	Not Applicable
Zeeman Ratio	0.52 ± 0.04	0.51	Not Applicable

10. Review:

- ☒ Review with the customer PM work performed.
- ☒ Review with the customer routine maintenance procedures.
- ☒ Discuss recommended customer supplied materials to have on hand.
- ☒ Attach PM sticker.

Additional Comments

Additional Comments Regarding the PM

Zeeman Ratio

Atomic Signal (Peak area)

Atomic Signal (Peak area) + Background Signal (Peak area)

0.1442

0.1442+0.1337

0.518

Review

The preventive maintenance checks and if applicable performance tests for PinAAcle 900T have been completed.

This PinAAcle 900T Passes ☒ Fails ☐ the preventive maintenance.

Review of Preventive Maintenance:

Authorized PerkinElmer Representative:

Rasit

Date: 18 DEC 2025 (DD-MMM-YYYY)

Authorized Customer Representative:

சசிதா

Date: 18 DEC 2025 (DD-MMM-YYYY)