

ภาคผนวก

ภาคผนวก ก	ใบรับรองผลการตรวจวิเคราะห์ผลกระทบล้าง คุณภาพอากาศในบรรยากาศ คุณภาพน้ำทิ้ง
ภาคผนวก ข	ใบรับรองการสอบเทียบเครื่องมือ
ภาคผนวก ค	สำเนาหนังสืออนุญาตขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

ภาคผนวก ก

ใบรับรองผลการตรวจวิเคราะห์ผลกระทบล้าง

คุณภาพอากาศในบรรยากาศ



Analysis / Test Report

TESTING
No.0042

Client : Rojana Industrial Park Public Co., Ltd.

3/7 Moo 2, Rojana Industrial Park (Rayong), Banbung-Bankhai Rd., Nongbua,
Bankhai, Rayong Thailand 21120

P/O : RJN-104/68

Project Name : Rayong Bankhai

Project Location :

Lot ID: 2634618

Date Received : May 23, 2026

Date Reported : May 28, 2026

Report Number: 3557198-2

Page 1 of 1

Sample Description	Air Quality
Location	วัดหินโง่ง (A2) (GPS 47P 0755491, 1424157)
Date Analysis Commenced	May 26, 2026
Condition of Sample	Drawn into one glass filter paper (8x10 inch) placed in plastic bag and one quartz filter paper (8x10 inch) placed in plastic bag

Sample Number	Sampled Date	Sampling Condition		Total Suspended Particulate (ug/m3)	Particulate Matter (PM-10) (ug/m3)
		Pressure (mm Hg)	Temperature (°C)		
2634618-8	May 16 - May 17, 2026	755	31.4	34.5	17.6
2634618-9	May 17 - May 18, 2026	755	30.9	32.3	15.4
2634618-10	May 18 - May 19, 2026	755	30.5	32.9	15.5
2634618-11	May 19 - May 20, 2026	755	29.8	35.7	20.2
2634618-12	May 20 - May 21, 2026	755	30.6	36.8	17.9
2634618-13	May 21 - May 22, 2026	755	29.4	38.2	20.2
2634618-14	May 22 - May 23, 2026	755	29.8	29.4	16.5
Guideline		-	-	200	100

Reference Method

Total Suspended Particulate : United States Environmental Protection Agency 40 CFR, method 50, Appendix B, revised as of July 1, 2008

Particulate Matter (PM-10) : United States Environmental Protection Agency 40 CFR, method 50, Appendix J, revised as of July 1, 2008

Guideline : Notification of the National Environmental Board., 2026 (B.E.2569) dated January 21, 2026.

Sampled By : [REDACTED]

Approved by

Scientist (4)

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand | PHONE +66 0 3304 8555 | FAX +66 0 3304 8556
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER



Analysis / Test Report

Client : Rojana Industrial Park Public Co., Ltd.

3/7 Moo 2, Rojana Industrial Park (Rayong), Banbung-Bankhai Rd., Nongbua, Bankhai,
Rayong Thailand 21120

P/O : RJN-104/68

Project Name : Rayong Bankhai

Project Location :

Lot ID: 2634614

Date Received : May 25, 2026

Date Reported : May 28, 2026

Report Number: 3584445-1

Page 1 of 1

Sample Description Air Quality
Location วัดหินโค้ง (A2) (GPS 47P 0755491, 1424157)
Parameter Nitrogen dioxide (ppb)
Measurement Date May 16, 2026 - May 23, 2026
Measurement by [REDACTED]

Time	2634614-8 May 16, 2026	2634614-9 May 17, 2026	2634614-10 May 18, 2026	2634614-11 May 19, 2026	2634614-12 May 20, 2026	2634614-13 May 21, 2026	2634614-14 May 22, 2026
11:00 AM - 12:00 PM	6.1	2.9	1.8	4.2	2.7	2.9	4.3
12:00 PM - 01:00 PM	2.9	2.3	1.7	3.2	3.3	1.4	4.5
01:00 PM - 02:00 PM	4.0	3.1	4.3	2.3	4.6	2.3	2.9
02:00 PM - 03:00 PM	9.2	0.9	4.8	2.6	6.0	2.5	2.1
03:00 PM - 04:00 PM	6.3	1.6	4.3	3.7	5.3	3.3	2.5
04:00 PM - 05:00 PM	5.6	2.0	4.3	5.2	5.6	3.4	3.8
05:00 PM - 06:00 PM	6.9	2.7	4.7	6.5	4.3	3.6	5.3
06:00 PM - 07:00 PM	4.6	8.9	3.8	8.9	4.7	2.9	7.2
07:00 PM - 08:00 PM	4.0	6.4	5.1	4.8	2.5	2.4	3.9
08:00 PM - 09:00 PM	2.6	7.3	5.3	3.3	2.2	2.2	5.3
09:00 PM - 10:00 PM	3.3	5.6	5.6	2.6	1.8	1.2	3.8
10:00 PM - 11:00 PM	2.9	6.1	5.9	1.0	1.7	0.9	3.1
11:00 PM - 12:00 AM	3.1	4.9	6.0	0.9	1.8	0.7	1.6
12:00 AM - 01:00 AM	3.1	4.2	4.9	0.8	1.1	1.0	1.5
01:00 AM - 02:00 AM	2.9	3.5	4.6	0.9	1.4	1.4	1.3
02:00 AM - 03:00 AM	2.4	3.0	4.9	1.1	1.3	1.4	1.2
03:00 AM - 04:00 AM	2.1	2.9	5.0	1.8	1.2	1.3	1.4
04:00 AM - 05:00 AM	2.2	2.0	4.2	2.7	1.4	1.0	2.1
05:00 AM - 06:00 AM	1.8	2.3	4.8	2.7	1.6	1.4	3.1
06:00 AM - 07:00 AM	2.1	2.6	3.2	2.5	2.3	2.6	2.5
07:00 AM - 08:00 AM	2.7	3.7	4.1	5.0	2.2	5.9	1.5
08:00 AM - 09:00 AM	2.7	3.0	4.6	3.7	1.8	6.3	5.7
09:00 AM - 10:00 AM	2.1	2.3	3.2	3.3	2.4	4.0	4.4
10:00 AM - 11:00 AM	2.3	2.5	3.9	3.8	4.2	3.9	3.5
Average	3.7	3.6	4.4	3.2	2.8	2.5	3.3
1hr - Maximum	9.2	8.9	6.0	8.9	6.0	6.3	7.2
Standard 1hr - Average	120	120	120	120	120	120	120

Standard : Notification of the National Environment Board B.E. 2569.

Reference Method : U.S. Environmental Protection Agency Method Part 50 App. F (Chemiluminescence)

Approved by

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

Scientist (4)

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand | PHONE +66 0 2760 3000 | FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER



Analysis / Test Report

Client : Rojana Industrial Park Public Co., Ltd.

3/7 Moo 2, Rojana Industrial Park (Rayong), Banbung-Bankhai Rd., Nongbua, Bankhai,
Rayong Thailand 21120

P/O : RJN-104/68

Project Name : Rayong Bankhai

Project Location :

Lot ID: 2634616

Date Received : May 25, 2026

Date Reported : Jun 08, 2026

Report Number: 3590606-1

Page 1 of 1

Sample Description Air Quality
Location วัดหินโค้ง (A2) (GPS 47P 0755491, 1424157)
Parameter Ozone (ppb)
Measurement Date May 16, 2026 - May 23, 2026
Measurement by [REDACTED]

Time	2634616-8 May 16, 2026	2634616-9 May 17, 2026	2634616-10 May 18, 2026	2634616-11 May 19, 2026	2634616-12 May 20, 2026	2634616-13 May 21, 2026	2634616-14 May 22, 2026
11:00 AM - 12:00 PM	5.3	3.9	4.6	7.2	4.1	5.5	5.2
12:00 PM - 01:00 PM	5.4	4.0	4.8	6.1	5.2	5.4	5.0
01:00 PM - 02:00 PM	4.7	2.9	3.9	7.8	5.8	5.3	5.9
02:00 PM - 03:00 PM	6.2	6.9	4.4	6.4	6.6	6.5	6.7
03:00 PM - 04:00 PM	5.9	6.8	5.6	6.8	7.0	6.4	6.1
04:00 PM - 05:00 PM	7.6	8.7	5.5	8.0	11.6	8.3	6.2
05:00 PM - 06:00 PM	9.4	8.8	5.5	5.5	10.8	9.0	8.8
06:00 PM - 07:00 PM	9.0	5.7	5.5	5.1	12.5	10.6	11.2
07:00 PM - 08:00 PM	9.7	6.9	5.1	7.4	7.7	14.3	14.8
08:00 PM - 09:00 PM	9.2	5.3	5.2	5.8	4.7	15.4	13.5
09:00 PM - 10:00 PM	8.5	3.7	4.8	4.2	5.2	13.1	10.5
10:00 PM - 11:00 PM	8.8	3.1	4.8	3.6	6.0	10.8	9.0
11:00 PM - 12:00 AM	7.4	3.0	4.9	3.5	6.7	8.7	7.9
12:00 AM - 01:00 AM	5.6	3.1	5.6	3.6	5.3	7.3	6.6
01:00 AM - 02:00 AM	5.5	4.1	9.3	4.6	5.9	6.1	5.3
02:00 AM - 03:00 AM	5.1	5.8	7.9	6.3	6.3	6.1	7.2
03:00 AM - 04:00 AM	5.0	8.9	6.1	9.4	7.7	6.0	6.5
04:00 AM - 05:00 AM	6.1	8.9	7.4	9.4	9.8	8.5	7.4
05:00 AM - 06:00 AM	8.3	7.2	7.3	7.7	9.1	10.1	9.9
06:00 AM - 07:00 AM	9.9	7.1	9.2	7.6	12.6	10.8	8.9
07:00 AM - 08:00 AM	10.7	5.7	9.3	6.2	12.9	10.5	7.7
08:00 AM - 09:00 AM	11.0	3.1	6.2	3.6	10.4	7.1	6.2
09:00 AM - 10:00 AM	2.4	3.8	7.6	4.3	7.1	6.0	5.9
10:00 AM - 11:00 AM	4.2	3.3	8.7	3.8	6.1	5.2	5.0
Average	7.1	5.4	6.2	6.0	7.8	8.5	7.8
1hr - Maximum	11.0	8.9	9.3	9.4	12.9	15.4	14.8
Standard 1hr - Average	100	100	100	100	100	100	100

Standard : Notification of the National Environment Board B.E. 2569.

Reference Method : Ozone Analyzer

Approved by

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

Scientist (3)

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand | PHONE +66 0 2760 3000 | FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company



Analysis / Test Report

Client : Rojana Industrial Park Public Co., Ltd.

3/7 Moo 2, Rojana Industrial Park (Rayong), Banbung-Bankhai Rd., Nongbua, Bankhai,
Rayong Thailand 21120

P/O : RJN-104/68

Project Name : Rayong Bankhai

Project Location :

Lot ID: 2634617

Date Received : May 25, 2026

Date Reported : May 28, 2026

Report Number: 3584439-1

Page 1 of 1

Sample Description Air Quality
Location วัดหินโค้ง (A2) (GPS 47P 0755491, 1424157)
Parameter Sulfur Dioxide (ppb)
Measurement Date May 16, 2026 - May 23, 2026
Measurement by [REDACTED]

Time	2634617-8 May 16, 2026	2634617-9 May 17, 2026	2634617-10 May 18, 2026	2634617-11 May 19, 2026	2634617-12 May 20, 2026	2634617-13 May 21, 2026	2634617-14 May 22, 2026
11:00 AM - 12:00 PM	1.8	1.6	1.4	1.2	1.5	1.4	1.5
12:00 PM - 01:00 PM	1.5	1.8	1.3	1.2	1.4	1.4	1.9
01:00 PM - 02:00 PM	1.9	2.6	1.3	1.2	1.5	1.6	1.9
02:00 PM - 03:00 PM	1.8	0.4	1.3	1.1	1.5	1.5	1.7
03:00 PM - 04:00 PM	1.9	0.8	1.2	1.0	1.2	1.6	1.7
04:00 PM - 05:00 PM	1.8	1.8	1.5	1.0	1.3	1.6	1.3
05:00 PM - 06:00 PM	1.6	1.6	1.2	1.1	1.4	1.6	1.5
06:00 PM - 07:00 PM	1.6	1.2	0.9	1.1	1.4	1.7	1.9
07:00 PM - 08:00 PM	1.3	1.5	1.0	1.1	1.4	1.5	1.7
08:00 PM - 09:00 PM	1.4	1.3	1.0	1.2	1.4	1.5	1.8
09:00 PM - 10:00 PM	1.2	1.3	0.9	1.2	1.4	1.4	1.8
10:00 PM - 11:00 PM	1.3	1.3	0.8	1.3	1.3	1.3	1.6
11:00 PM - 12:00 AM	1.4	1.2	1.0	1.1	1.4	1.6	1.9
12:00 AM - 01:00 AM	1.4	1.2	1.0	1.2	1.6	1.5	1.7
01:00 AM - 02:00 AM	1.4	1.4	1.2	1.3	1.7	1.5	1.8
02:00 AM - 03:00 AM	1.6	1.4	1.1	1.3	1.6	1.6	1.5
03:00 AM - 04:00 AM	1.5	1.4	1.1	1.3	1.7	1.6	1.3
04:00 AM - 05:00 AM	1.6	1.4	1.1	1.4	1.7	1.6	1.3
05:00 AM - 06:00 AM	1.2	1.3	1.1	1.7	1.5	1.6	1.1
06:00 AM - 07:00 AM	1.4	1.3	1.2	1.6	1.7	1.4	1.4
07:00 AM - 08:00 AM	1.3	1.1	1.2	1.7	1.5	1.5	1.4
08:00 AM - 09:00 AM	1.3	1.2	1.1	1.6	1.5	1.4	1.6
09:00 AM - 10:00 AM	1.1	1.1	0.8	1.6	1.5	1.4	1.5
10:00 AM - 11:00 AM	1.1	1.2	1.1	1.6	1.5	1.5	1.3
Average	1.5	1.4	1.1	1.3	1.5	1.5	1.6
1hr - Maximum	1.9	2.6	1.5	1.7	1.7	1.7	1.9
Standard 1hr - Average	100	100	100	100	100	100	100
Standard 24 hrs - Average	50	50	50	50	50	50	50

Standard : Notification of the National Environment Board B.E. 2569.

Reference Method : U.S. Environmental Protection Agency, EPA Method Part 53 and 58

Approved by

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

Scientist (4)

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand | PHONE +66 0 2760 3000 | FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER



Analysis / Test Report

Client : Rojana Industrial Park Public Co., Ltd.

3/7 Moo 2, Rojana Industrial Park (Rayong), Banbung-Bankhai Rd., Nongbua, Bankhai,
Rayong Thailand 21120

P/O : RJN-104/68

Project Name : Rayong Bankhai

Project Location :

Lot ID: 2634619

Date Received : May 23, 2026

Date Reported : May 29, 2026

Report Number : 3557199-1

Page 1 of 2

Sample Number : 2634619-1 to 7
Parameter : Wind Speed / Wind Direction
Location : วัดหินโค้ง (A2) (GPS 47P 0755491, 1424157)
Sampling Date : May 16 - May 23, 2026
Sampling by : [REDACTED]

Time	May 16 - May 17, 2026			May 17 - May 18, 2026			May 18 - May 19, 2026			May 19 - May 20, 2026			May 20 - May 21, 2026			May 21 - May 22, 2026			May 22 - May 23, 2026		
	WS (m/s)	WD (deg)		WS (m/s)	WD (deg)		WS (m/s)	WD (deg)		WS (m/s)	WD (deg)		WS (m/s)	WD (deg)		WS (m/s)	WD (deg)		WS (m/s)	WD (deg)	
11:00 AM - 12:00 PM	0.3	85.0	E	1.7	94.0	E	1.2	96.0	E	0.3	127.0	SE	0.5	152.0	SSE	0.6	64.0	ENE	0.8	87.0	E
12:00 PM - 01:00 PM	0.8	86.0	E	1.9	115.0	ESE	0.6	109.0	ESE	1.9	112.0	ESE	0.7	97.0	E	1.4	60.0	ENE	1.2	64.0	ENE
01:00 PM - 02:00 PM	1.3	91.0	E	1.4	70.0	ENE	0.3	216.0	SW	0.6	90.0	E	0.2	-	-	1.4	94.0	E	1.5	76.0	ENE
02:00 PM - 03:00 PM	0.8	79.0	E	1.8	120.0	ESE	0.4	171.0	S	1.0	103.0	ESE	1.2	104.0	ESE	1.1	65.0	ENE	1.0	95.0	E
03:00 PM - 04:00 PM	0.4	62.0	ENE	0.8	111.0	ESE	1.7	102.0	ESE	0.7	130.0	SE	0.3	97.0	E	1.0	74.0	ENE	0.5	83.0	E
04:00 PM - 05:00 PM	1.0	84.0	E	1.8	103.0	ESE	1.3	93.0	E	0.8	0.0	N	0.3	84.0	E	0.1	-	-	0.6	77.0	ENE
05:00 PM - 06:00 PM	1.2	92.0	E	1.4	99.0	E	0.7	106.0	ESE	0.4	130.0	SE	1.9	83.0	E	0.9	187.0	S	0.4	164.0	SSE
06:00 PM - 07:00 PM	0.0	-	-	0.2	-	-	0.6	105.0	ESE	0.2	-	-	0.2	-	-	0.6	174.0	S	0.0	-	-
07:00 PM - 08:00 PM	0.6	198.0	SSW	0.1	-	-	0.3	111.0	ESE	0.2	-	-	0.0	-	-	0.3	189.0	S	0.3	192.0	SSW
08:00 PM - 09:00 PM	0.0	-	-	0.1	-	-	0.0	-	-	0.3	132.0	SE	0.2	-	-	0.0	-	-	0.0	-	-
09:00 PM - 10:00 PM	0.0	-	-	0.5	210.0	SSW	0.4	118.0	ESE	0.5	132.0	SE	0.5	219.0	SW	0.2	-	-	0.0	-	-
10:00 PM - 11:00 PM	0.5	220.0	SW	0.0	-	-	0.2	-	-	0.0	-	-	0.0	-	-	0.0	-	-	0.3	215.0	SW
11:00 PM - 12:00 AM	0.2	-	-	0.2	-	-	0.0	-	-	0.2	-	-	0.3	198.0	SSW	0.5	196.0	SSW	0.4	198.0	SSW
12:00 AM - 01:00 AM	0.0	-	-	0.0	-	-	0.1	-	-	0.0	-	-	0.0	-	-	0.0	-	-	0.1	-	-
01:00 AM - 02:00 AM	0.0	-	-	0.3	203.0	SSW	0.2	-	-	0.1	-	-	0.0	-	-	0.0	-	-	0.0	-	-
02:00 AM - 03:00 AM	0.1	-	-	0.0	-	-	0.0	-	-	0.0	-	-	0.5	199.0	SSW	0.2	-	-	0.2	-	-
03:00 AM - 04:00 AM	0.3	191.0	S	0.2	-	-	0.0	-	-	0.3	201.0	SSW	0.7	199.0	SSW	0.5	199.0	SSW	0.4	192.0	SSW
04:00 AM - 05:00 AM	0.0	-	-	0.5	203.0	SSW	0.3	144.0	SE	0.5	201.0	SSW	0.3	199.0	SSW	0.7	205.0	SSW	0.6	201.0	SSW
05:00 AM - 06:00 AM	0.0	-	-	0.0	-	-	0.5	151.0	SSE	0.0	-	-	0.0	-	-	0.3	201.0	SSW	0.5	203.0	SSW
06:00 AM - 07:00 AM	0.5	191.0	S	0.2	-	-	0.4	151.0	SSE	0.0	-	-	0.7	199.0	SSW	0.9	195.0	SSW	0.7	195.0	SSW
07:00 AM - 08:00 AM	0.4	164.0	SSE	1.0	215.0	SW	0.0	-	-	0.2	-	-	0.9	79.0	E	0.8	109.0	ESE	1.0	162.0	SSE
08:00 AM - 09:00 AM	1.0	102.0	ESE	0.0	-	-	0.8	162.0	SSE	0.7	230.0	SW	0.2	-	-	1.6	107.0	ESE	0.4	168.0	SSE
09:00 AM - 10:00 AM	1.6	106.0	ESE	0.5	93.0	E	0.5	102.0	ESE	0.8	52.0	NE	0.8	126.0	SE	0.8	105.0	ESE	0.9	95.0	E
10:00 AM - 11:00 AM	1.0	69.0	ENE	1.0	171.0	S	1.1	100.0	E	1.2	52.0	NE	1.0	73.0	ENE	1.2	98.0	E	0.5	84.0	E

Reference Method : Cup Anemometer & Anodized Aluminium Vane Method

The above results are valid only for the analyzed/tested sample(s) as indicated in this report. No part of this report or certificate may be reproduced in any form without written consent from the Laboratory. ALS Laboratory Group (Thailand) strongly recommends that this report is not reproduced except in full.

Approved by

Assistant General Manager



Analysis / Test Report

Client : Rojana Industrial Park Public Co., Ltd.

3/7 Moo 2, Rojana Industrial Park (Rayong), Banbung-Bankhai Rd., Nongbua, Bankhai,
Rayong Thailand 21120

P/O : RJN-104/68

Project Name : Rayong Bankhai

Project Location :

Lot ID: 2634619


Date Received : May 23, 2026

Date Reported : May 29, 2026


Report Number : 3557199-1

Page 2 of 2


Wind Rose

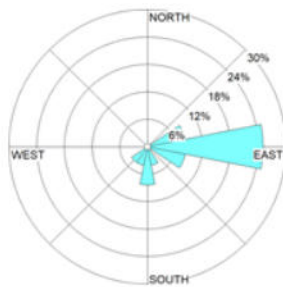


Date : May 16-17, 2026

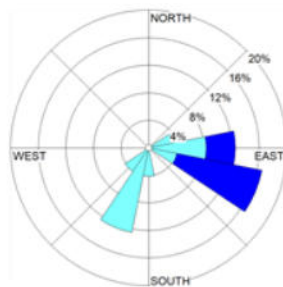


Date : May 17-18, 2026

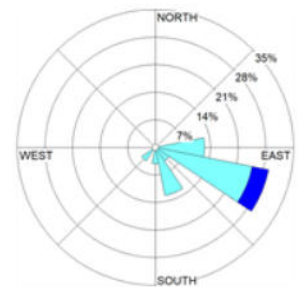


Date : May 18-19, 2026

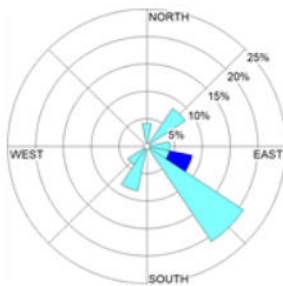


Date : May 19-20, 2026

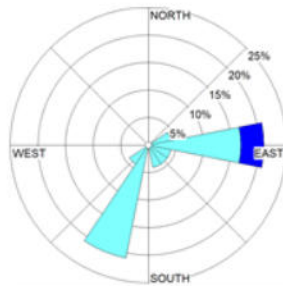


Date : May 20-21, 2026

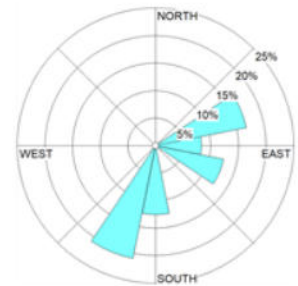

Date : May 21-22, 2026

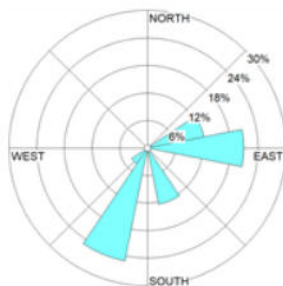

Date : May 22-23, 2026

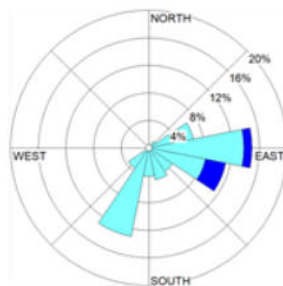

Date : May 16-23, 2026

WS (m/s)	%
≥ 10.0	0.00
8.0-10.0	0.00
5.5-8.0	0.00
3.3-5.5	0.00
1.7-3.3	4.17
0.3-1.7	60.12
Calms	35.71

Location : วัดหินโค้ง (A2) (GPS 47P 0755491, 1424157)

The above results are valid only for the analyzed/tested sample(s) as indicated in this report. No part of this report or certificate may be reproduced in any form without written consent from the Laboratory. ALS Laboratory Group (Thailand) strongly recommends that this report is not reproduced except in full.

Approved by



Assistant General Manager

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand | PHONE +66 0 3304 8555 | FAX +66 0 3304 8556
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER

คุณภาพน้ำทิ้ง



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italhai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310

P/O :

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location: Factory

TESTING

No.0042

Lot ID: 25115915

Date Received : Jan 05, 2026

Date Reported : Jan 13, 2026

Report Number : 3481553-1

Page 1 of 2

Sample Number	25115915-1						
Sampled Date	Jan 05, 2026 11:28 AM						
Sample Description	Wastewater						
Location	บริษัท ไทยโตโกคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited						
Date Analysis Commenced	Jan 05, 2026						
Condition of Sample	Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)						

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
BOD (5 days at 20 Degree C)	mg/L	-	2.0	<2.0	≤500	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5210 B, part 4500 - O G	Rayong
COD	mg/L	1.5	25	<25	≤750	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5220 D	Rayong
pH at 25 degree C		-	-	7.6	5.5-9.0	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500 - H (B)	Rayong
Temperature *	Degree C	-	-	30.9	≤40	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2550 B	Rayong
Total Dissolved Solids Dried at 180 degree C	mg/L	-	5	120	≤3000	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 C	Rayong
Total Kjeldahl Nitrogen as N	mg/L	-	1.0	6.4	≤100	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500-Norg (C), part NH3 (D)	Rayong
Total Suspended Solids Dried at 103-105 degree C	mg/L	-	5	<5	≤200	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 D	Rayong

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management



Scientist (2)

ทะเบียนเลขที่ [REDACTED]

Approved by



Senior Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand PHONE +66 0 3304 8555 FAX +66 0 3304 8556
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER

14016-53/ EMAIL

S:\Reports_All_GL.rpt (1:00PM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italhai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310

P/O :

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location: Factory

Lot ID: 25115915

Date Received : Jan 05, 2026

Date Reported : Jan 08, 2026

Report Number : 3481553-2

Page 1 of 1

Sample Number	25115915-1						
Sampled Date	Jan 05, 2026 11:28 AM						
Sample Description	Wastewater						
Location	บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited						
Date Analysis Commenced	Jan 06, 2026						
Condition of Sample	Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)						
Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
Oil & Grease	mg/L	-	3	<3	≤10	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5520 D	Bangkok

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management



Scientist (3)

ทะเบียนเลขที่ [REDACTED]

Approved by



Assistant General Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand PHONE +66 0 2760 3000 FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER

14016-53/ EMAIL

S:\Reports\All_GL.rpt (4:34PM)



Analysis / Test Report

TESTING

No.0042

Lot ID: 266892

Date Received : Feb 03, 2026

Date Reported : Feb 10, 2026

Report Number : 3494894-1

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italhai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location: Factory

Page 1 of 2

Sample Number	266892-1						
Sampled Date	Feb 03, 2026 2:11 PM						
Sample Description	Wastewater						
Location	บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited						
Date Analysis Commenced	Feb 03, 2026						
Condition of Sample	Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)						
Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
BOD (5 days at 20 Degree C)	mg/L	-	2.0	10.9	≤500	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5210 B, part 4500 - O G	Rayong
COD	mg/L	1.5	25	40	≤750	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5220 D	Rayong
pH at 25 degree C		-	-	7.5	5.5-9.0	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500 - H (B)	Rayong
Temperature *	Degree C	-	-	32.1	≤40	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2550 B	Rayong
Total Dissolved Solids Dried at 180 degree C	mg/L	-	5	1556	≤3000	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 C	Rayong
Total Kjeldahl Nitrogen as N	mg/L	-	1.0	14.0	≤100	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500-Norg (C), part NH3 (D)	Rayong
Total Suspended Solids Dried at 103-105 degree C	mg/L	-	5	17	≤200	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 D	Rayong

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management



Scientist (4)

ทะเบียนเลขที่ [REDACTED]

Approved by



Senior Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5, T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand PHONE +66 0 3304 8555 FAX +66 0 3304 8556

ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italthai Tower, New Petchburi Road, Bangkok, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location : Factory

Lot ID: 266892

Date Received : Feb 03, 2026

Date Reported : Feb 09, 2026

Report Number : 3494894-2

Page 1 of 1

Sample Number 266892-1
Sampled Date Feb 03, 2026 2:11 PM
Sample Description Wastewater
Location บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced Feb 04, 2026
Condition of Sample Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
Oil & Grease	mg/L	-	3	<3	≤10	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5520 D	Bangkok

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

[REDACTED]

Supervisor

ทะเบียนเลขที่ [REDACTED]

Approved by

[REDACTED]

Assistant General Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250, Thailand PHONE +66 0 2760 3000 FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER

14016-53/ EMAIL

S:\Reports\All_GL.rpt (1:54PM)



Analysis / Test Report

TESTING
No.0042

Lot ID: 2616508

Date Received : Mar 05, 2026

Date Reported : Mar 12, 2026

Report Number : 3513268-1

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italthai Tower, New Petchburi Road, Bangkok, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location : Factory

Page 1 of 2

Sample Number	2616508-1
Sampled Date	Mar 05, 2026 11:00 AM
Sample Description	Wastewater
Location	บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced	Mar 05, 2026
Condition of Sample	Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
BOD (5 days at 20 Degree C)	mg/L	-	2.0	<2.0	≤500	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5210 B, part 4500 - O G	Rayong
COD	mg/L	1.5	25	<25	≤750	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5220 D	Rayong
pH at 25 degree C		-	-	7.7	5.5-9.0	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500 - H (B)	Rayong
Temperature *	Degree C	-	-	33.8	≤40	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2550 B	Rayong
Total Dissolved Solids Dried at 180 degree C	mg/L	-	5	1104	≤3000	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 C	Rayong
Total Kjeldahl Nitrogen as N	mg/L	-	1.0	4.1	≤100	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500-Norg (C), part NH3 (D)	Rayong
Total Suspended Solids Dried from 103-105 degree C	mg/L	-	5	12	≤200	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 D	Rayong

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management



Scientist (4)

ทะเบียนเลขที่ [REDACTED]

Approved by



Senior Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand PHONE +66 0 3304 8555 FAX +66 0 3304 8556
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports_All_GL_rpt (10:58AM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.
2034/115 26TH Fl. ItalThai Tower, New Petchburi Road, Bangkok, Huaykwang, Bangkok
Thailand 10310
P/O : RIM-RY/LAW005/2568
Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)
Project Location : Factory

Lot ID: 2616508

Date Received : Mar 05, 2026
Date Reported : Mar 11, 2026
Report Number : 3513268-2

Page 1 of 1

Sample Number 2616508-1
Sampled Date Mar 05, 2026 11:00 AM
Sample Description Wastewater
Location บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced Mar 06, 2026
Condition of Sample Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
Oil & Grease	mg/L	-	3	<3	≤10	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5520 D	Bangkok

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

[REDACTED]

Supervisor

ทะเบียนเลขที่ [REDACTED]

Approved by

[REDACTED]

Assistant General Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand PHONE +66 0 2760 3000 FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports\All_GL.rpt (3:26PM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.
2034/115 26TH Fl. ItalThai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310
P/O : RIM-RY/LAW005/2568
Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยะที่ 1 (โรจนะบ้านค่าย)
Project Location : Factory

TESTING
No.0042

Lot ID: 2624491

Date Received : Apr 02, 2026

Date Reported : Apr 08, 2026

Report Number : 3532458-1

Page 1 of 2

Sample Number 2624491-1
Sampled Date Apr 02, 2026 10:50 AM
Sample Description Wastewater
Location บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced Apr 02, 2026
Condition of Sample Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
BOD (5 days at 20 Degree C)	mg/L	-	2.0	<2.0	≤500	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5210 B, part 4500 - O G	Rayong
COD	mg/L	1.5	25	<25	≤750	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5220 D	Rayong
pH at 25 degree C		-	-	7.7	5.5-9.0	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500 - H (B)	Rayong
Temperature *	Degree C	-	-	34.8	≤40	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2550 B	Rayong
Total Dissolved Solids Dried at 180 degree C	mg/L	-	5	1096	≤3000	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 C	Rayong
Total Kjeldahl Nitrogen as N	mg/L	-	1.0	3.1	≤100	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500-Norg (C), part NH3 (D)	Rayong
Total Suspended Solids Dried from 103-105 degree C	mg/L	-	5	12	≤200	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 D	Rayong

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

Scientist (4)

ทะเบียนเลขที่ [REDACTED]

Approved by

Senior Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand PHONE +66 0 3304 8555 FAX +66 0 3304 8556
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports_All_GL.rpt (3:23PM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. ItalThai Tower, New Petchburi Road, Bangkok, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location : Factory

Lot ID: 2624491

Date Received : Apr 02, 2026

Date Reported : Apr 06, 2026

Report Number : 3532458-2

Page 1 of 1

Sample Number	2624491-1						
Sampled Date	Apr 02, 2026 10:50 AM						
Sample Description	Wastewater						
Location	บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited						
Date Analysis Commenced	Apr 03, 2026						
Condition of Sample	Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)						
Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
Oil & Grease	mg/L	-	3	<3	≤10	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5520 D	Bangkok

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

[REDACTED]

Supervisor

ทะเบียนเลขที่ [REDACTED]

Approved by

[REDACTED]

Assistant General Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand PHONE +66 0 2760 3000 FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER

14016-53/ EMAIL

S:\Reports\All_GL.rpt (3:59PM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. ItalThai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location : Factory

TESTING

No.0042

Lot ID: 2634547

Date Received : May 05, 2026

Date Reported : May 12, 2026

Report Number : 3557091-1

Page 1 of 2

Sample Number 2634547-1
Sampled Date May 05, 2026 9:50 AM
Sample Description Wastewater
Location บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced May 05, 2026
Condition of Sample Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
BOD (5 days at 20 Degree C)	mg/L	-	2.0	19.1	≤500	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5210 B, part 4500 - O G	Rayong
COD	mg/L	1.5	25	73	≤750	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5220 D	Rayong
pH at 25 degree C		-	-	7.6	5.5-9.0	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500 - H (B)	Rayong
Temperature *	Degree C	-	-	30.6	≤40	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2550 B	Rayong
Total Dissolved Solids Dried at 180 degree C	mg/L	-	5	780	≤3000	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 C	Rayong
Total Kjeldahl Nitrogen as N	mg/L	-	1.0	25.3	≤100	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500-Norg (C), part NH3 (D)	Rayong
Total Suspended Solids Dried from 103-105 degree C	mg/L	-	5	22	≤200	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 D	Rayong

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By :

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

Approved by

Scientist (4)

Senior Manager

ทะเบียนเลขที่

ทะเบียนเลขที่

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand PHONE +66 0 3304 8555 FAX +66 0 3304 8556
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

RIGHT SOLUTIONS RIGHT PARTNER

14016-53/ EMAIL

S:\Reports\All_GL_rpt (1:50PM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.
2034/115 26TH Fl. ItalThai Tower, New Petchburi Road, Bangkok, Huaykwang, Bangkok
Thailand 10310
P/O : RIM-RY/LAW005/2568
Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)
Project Location : Factory

Lot ID: 2634547

Date Received : May 05, 2026
Date Reported : May 12, 2026
Report Number : 3557091-2

Page 1 of 1

Sample Number 2634547-1
Sampled Date May 05, 2026 9:50 AM
Sample Description Wastewater
Location บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced May 06, 2026
Condition of Sample Contained in one amber glass bottle and three plastic bottles. Sample containers comply to pretreatment - preservation standards (APHA / USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
Oil & Grease	mg/L	-	3	4	≤10	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5520 D	Bangkok

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

Scientist (3)

ทะเบียนเลขที่ [REDACTED]

Approved by

Assistant General Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand PHONE +66 0 2760 3000 FAX +66 0 2760 3197
ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports_All_GL.rpt (3:23PM)



Analysis / Test Report

TESTING

No.0042

Lot ID: 2645212

Date Received : Jun 05, 2026

Date Reported : Jun 12, 2026

Report Number : 3579929-1

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italhai Tower, New Petchburi Road, Bangkok, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยะของ (โรจนะบ้านค่าย)

Project Location: Factory

Page 1 of 2

Sample Number	2645212-1
Sampled Date	Jun 05, 2026 10:45 AM
Sample Description	Wastewater
Location	บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced	Jun 05, 2026
Condition of Sample	Contained in one amber glass bottle and three plastic bottles, sample containers comply to pretreatment - preservation standards (APHA, USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
BOD (5 days at 20 Degree C)	mg/L	-	2.0	13.8	≤500	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5210 B, part 4500 - O G	Rayong
COD	mg/L	1.5	25	32	≤750	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5220 D	Rayong
pH at 25 degree C		-	-	7.8	5.5-9.0	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500 - H (B)	Rayong
Temperature *	Degree C	-	-	31.7	≤40	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2550 B	Rayong
Total Dissolved Solids Dried at 180 degree C	mg/L	-	5	988	≤3000	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 C	Rayong
Total Kjeldahl Nitrogen as N	mg/L	-	1.0	21.9	≤100	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 4500-Norg (C), part NH3 (D)	Rayong
Total Suspended Solids Dried from 103-105 degree C	mg/L	-	5	11	≤200	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 2540 D	Rayong

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management



Scientist (4)

ทะเบียนเลขที่ [REDACTED]

Approved by



Senior Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand | PHONE +66 0 3304 8555 | FAX +66 0 3304 8556

ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports\All_GL.rpt (11:37AM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italthai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location: Factory

TESTING

No.0042

Lot ID: 2645212

Date Received : Jun 05, 2026

Date Reported : Jun 12, 2026

Report Number : 3579929-1

Page 2 of 2

- Analyte(s) marked * is/are not included in scope of Accreditation ISO/IEC 17025.
- Sampling is not included in scope of accreditation ISO/IEC 17025

Technical Management

Scientist (4)
ทะเบียนเลขที่ _____

Approved by

Senior Manager
ทะเบียนเลขที่ _____

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 616/10 Moo 5 T. Maenam Khu A. Pluakdaeng Rayong 21140 Thailand PHONE +66 0 3304 8555 FAX +66 0 3304 8556

ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports_All_GL.rpt (11:37AM)



Analysis / Test Report

Client : Rojana Industrial Management Co., Ltd.

2034/115 26TH Fl. Italhai Tower, New Petchburi Road, Bangkapi, Huaykwang, Bangkok
Thailand 10310

P/O : RIM-RY/LAW005/2568

Project Name : โครงการเขตประกอบการอุตสาหกรรมโรจนะ ระยอง (โรจนะบ้านค่าย)

Project Location : Factory

Lot ID: 2645212

Date Received : Jun 05, 2026

Date Reported : Jun 11, 2026

Report Number : 3579929-2

Page 1 of 1

Sample Number	2645212-1
Sampled Date	Jun 05, 2026 10:45 AM
Sample Description	Wastewater
Location	บริษัท ไทยโตไคคาร์บอนโปรดักท์โรจนะ จำกัด : Thai Tokai Carbon Product Rojana Company Limited
Date Analysis Commenced	Jun 06, 2026
Condition of Sample	Contained in one amber glass bottle and three plastic bottles, sample containers comply to pretreatment - preservation standards (APHA, USEPA)

Analyte	Unit	LOD	LOQ (LOR)	Result	Guideline / Specification	Method	Testing Location
Water Testing							
Oil & Grease	mg/L	-	3	<3	≤10	Standard Methods for the Examination of Water and Wastewater. APHA, AWWA & WEF, 24th ed., 2023, part 5520 D	Bangkok

Guideline : Standard of Rojana Industrial park (Rayong), Criteria of wastewater drainage from the factory to central wastewater treatment plant, dated 1 January, 2018 (B.E.2561)

Sampling By : [REDACTED]

Remark :

- LOD : Limit of Detection
- "<" : Lower than LOQ (Limit of Quantitation) / LOR (Limit of Reporting)

Technical Management

Section Head

ทะเบียนเลขที่ [REDACTED]

Approved by

Assistant General Manager

ทะเบียนเลขที่ [REDACTED]

Results apply to the sample(s) as submitted, unless the sampling was conducted by ALS. The report shall not be reproduced except in full without the written approval of the laboratory.

ADDRESS 104 Phatthanakan 40, Phatthanakan Rd., Khwaeng Phatthanakan, Khet Suan Luang, Bangkok 10250 Thailand | PHONE +66 0 2760 3000 | FAX +66 0 2760 3197

ALS LABORATORY GROUP (THAILAND) CO., LTD. An ALS Limited Company

Life Sciences

www.alsglobal.com

14016-53/ EMAIL

RIGHT SOLUTIONS RIGHT PARTNER

S:\Reports\All_GL.rpt (8:36AM)

ภาคผนวก ข

ใบรับรองการสอบเทียบเครื่องมือ



right solutions.
right partner.

รายการเครื่องมือที่ใช้ในการวิเคราะห์ / ทดสอบ

Sample Name	Parameter	Equipment Name	ID No.	Calibrated Date	Next Cal	Freq. Calibrate (Months)
Ambient	Particulate Matter (PM-10)	High Volume	RYG_FS0185	-	-	On site Calibration
Ambient	Particulate Matter (PM-10)	Digital Balance	RYG_BN0001	3-Feb-26	3-Feb-27	12
Ambient	Total Suspended Particulate	High Volume	RYG_FS0177	-	-	On site Calibration
Ambient	Total Suspended Particulate	Digital Balance	RYG_BN0001	3-Feb-26	3-Feb-27	12
Ambient	Nitrogen Dioxide	NO ₂ Analyzer	RYG_FS0255	5-Jan-26	5-Jul-26	6
Ambient	Sulfur Dioxide	SO ₂ Analyzer	RYG_FS0254	5-Jan-26	5-Jul-26	6
Ambient	Ozone	Ozone Analyzer	BKK_FS0761	5-Jan-26	5-Jul-26	6
Ambient	Wind Speed / Wind Direction	Wind Speed / Wind Direction	RYG_FS0647	15-Jan-25	14-Jul-26	18



High Volume Air Sampler Calibration Worksheet

Project Site : Rojana Industrial Park Public Co., Ltd. Barometric Pressure (mm Hg) : 755.4

Calibrate Location : วัดหินโค้ง(A2) Temperature (°C) : 32.6

Calibrate Date : 16-May-26 High Volume ID : RYG_FS0185


Calibration Sheet No. : C-160526-RYG_FS0185 High Volume Model : TE-S009X

Calibrator ID : RYG_FS0205 High Volume S/N : 4793

Calibrator Model : TE-S028A Calibrator Slope : 0.95091

Calibrator S/N : 1166 Calibrator Intercept : -0.01856

Test No.	Delta H ₂ O (inch)	Qa (m ³ /min)	I: Chart (CFM)	Linear Regression
1	1.6	0.865	32	Slope : <u>32.5178</u> Intercept : <u>3.4412</u> Correlation Coefficient : <u>0.9978</u>
2	2.2	1.011	36	
3	2.8	1.138	40	
4	3.4	1.252	44	
5	4.0	1.356	48	

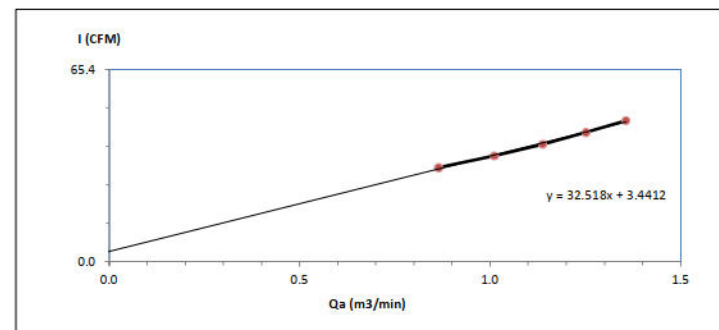

Calibrated by



RYG Field Services Scientist (1)

Approved by



Field Services Section Head



Accredited by

NSC-TISI-TIS 17025

Calibration 0426

Calibration certificate

Calibration Certificate No. 26BCI0067

Object	Electronic non-automatic weighing instrument	This calibration certificate documents the traceability to national standards.
Manufacturer	Sartorius	Uncertainties of measurements are taken into account when only statements of compliance are made.
Type	LA130S-F	This certificate was prepared by Sartorius Corporation in accordance to the current ISO/IEC 17025:2017 standard and Sartorius Work Instruction (Method) SOP WI 08.
Serial QM Ident. no.	25409664 RYG_EN0001	This certificate relate and apply this equipment only.
Customer	ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch) 616/10 Moo 5 T.Maenamkoo, A.Pluak Daeng, Rayong 21140, Thailand.	
Order no.	278579	REVIEW BY [REDACTED]
Number of pages	4	APPROVED BY..... [REDACTED]
Date of calibration	03 Feb 2026	NEXT CAL DATE.....03/02/27.....

This calibration certificate may not be reproduced other than in full except with the permission of NSC-TISI-TIS-17025 and the issuing laboratory. Calibration certificates without signature are not valid.

The user is obliged to have the object recalibrated at appropriate intervals.

Date of issue	03 Feb 2026	Approval of the Calibration Certificate	Person in charge
		[REDACTED]	[REDACTED]
		[REDACTED]	[REDACTED]

Calibration certificate No.: 26BCI0067

Calibration Certificate

Calibration object

Single range instrument

Model	LA130S-F
Serial Number	25409664
QM Ident. no Inventory no.	RYG_EN0001 --

Maximum capacity (Max. load)	150.0000 g
Measured up to	150.0000 g
Scale interval	0.0001 g

Place of calibration

Address	According to page 1
Department Cost center	Laboratory Department, --
Building Floor	-- 1st Floor.
Room	Balance Room.
Maximum temperature variation at place of calibration	5 K

Calibration procedure

EURAMET Calibration Guide No. 18, Version 4.0 (11/2015) - Guidelines on the Calibration of Non-Automatic Weighing Instruments

Test equipment

Test equipment type	Test equipment ID	Valid until
Thermometer	Testo 174H H/T250743 (Traceable to SI unit through ENTECH)	18 Nov 2026
Test weight set OIML R111 E2	Certificate No.M2508149S ,E2(Traceable to SI unit through TCS)	19 Aug 2027

Adjustment Status

The measuring device was internally adjusted before the calibration.

Environmental and measuring conditions

Date of calibration	03 Feb 2026
Temperature at place of calibration Temp. diff. <i>T</i> weights - <i>T</i> place	24.5 °C 0.5 K
Measuring conditions	The installation site is suitable. The device is level. Balance was loaded up to Max before test.
Comments	Humidity 52.0 %RH.

Measurement results | Measurement uncertainties

Repeatability			Eccentricity	
Test load (nominal): 10 g 100 g			Test load (nominal): 50 g	
	10 g	100 g		
1	10.0000 g	100.0000 g	Center	50.0000 g
2	10.0000 g	99.9998 g	Front left	50.0001 g
3	9.9999 g	100.0000 g	Back left	50.0001 g
4	10.0001 g	100.0000 g	Back right	50.0000 g
5	10.0000 g	99.9999 g	Front right	50.0001 g
6	9.9999 g	100.0000 g	Maximum deviation from centric loading indication	
7	9.9999 g	99.9999 g	Δ _{ecc} _{max} = 0.0001 g	
8	9.9999 g	100.0000 g		
9	9.9999 g	100.0000 g		
10	9.9999 g	99.9999 g		
<i>s</i> = 0.00007 g		<i>s</i> = 0.00007 g		

Error of indication

Testload <i>L</i>	Indication <i>I</i>	Error <i>E</i>	Expansion factor <i>k</i>	Uncertainty <i>U</i> (<i>E</i>)	Uncertainty relative <i>U</i> _{rel} (<i>E</i>)
0.0100 g	0.0100 g	0.0000 g	2.00	0.00016 g	1.6 %
0.0500 g	0.0500 g	0.0000 g	2.00	0.00016 g	0.33 %
0.1000 g	0.1000 g	0.0000 g	2.00	0.00016 g	0.16 %
0.5000 g	0.5000 g	0.0000 g	2.00	0.00016 g	0.033 %
1.0000 g	1.0000 g	0.0000 g	2.00	0.00016 g	0.016 %
2.0000 g	2.0000 g	0.0000 g	2.00	0.00017 g	0.0083 %
5.0000 g	5.0001 g	0.0001 g	2.00	0.00017 g	0.0033 %
10.0000 g	10.0001 g	0.0001 g	2.00	0.00017 g	0.0017 %
20.0000 g	20.0000 g	0.0000 g	2.00	0.00017 g	0.00086 %
100.0000 g	100.0001 g	0.0001 g	2.00	0.00023 g	0.00023 %
150.0000 g	150.0001 g	0.0001 g	2.00	0.00030 g	0.00020 %
Maximum error of indication		<i>E</i> _{max} = 0.0001 g			

*U*_{rel}(*E*) is the quotient of *U*(*E*) and test load *L*. The uncertainty of measurement *U*(*E*) is valid only if error *E* is considered. You will find reference notes on the uncertainty of measurement in use under: Appendix to the calibration certificate | Interpretation of measurement results.
Reference note: The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the documented Expansion factor, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

End of calibration certificate

Uncertainty of measurement in use


Device adjusted before measurement	Yes
Temperature deviation considered	1.5 K (isoCAL active)
Temperature coefficient considered	1 · 10 ⁻⁵ /K

Uncertainty of the weighing result *U*_{g1}(*W*) *U*_{g1}(*W*) = 0.00016 g + 1.95 · 10⁻⁵ · *R*

Reference note: The current uncertainty of measurement is calculated by entering of the reading *R* into this formula. In relation to this, there is no need for a correction of the indication error. The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied with an Expansion factor of 2, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

Indication in % from max load	Net indication <i>R</i>	Uncertainty <i>U</i> _{g1} (<i>W</i>)	Uncertainty relative <i>U</i> _{g1} (<i>W</i>) _{rel}
1 %	1.5000 g	0.00019 g	0.013 %
25 %	37.5000 g	0.00089 g	0.0024 %
50 %	75.0000 g	0.0016 g	0.0022 %
75 %	112.5000 g	0.0024 g	0.0021 %
100 %	150.0000 g	0.0031 g	0.0021 %

Graphic realization of the relative uncertainty of measurement | process accuracy

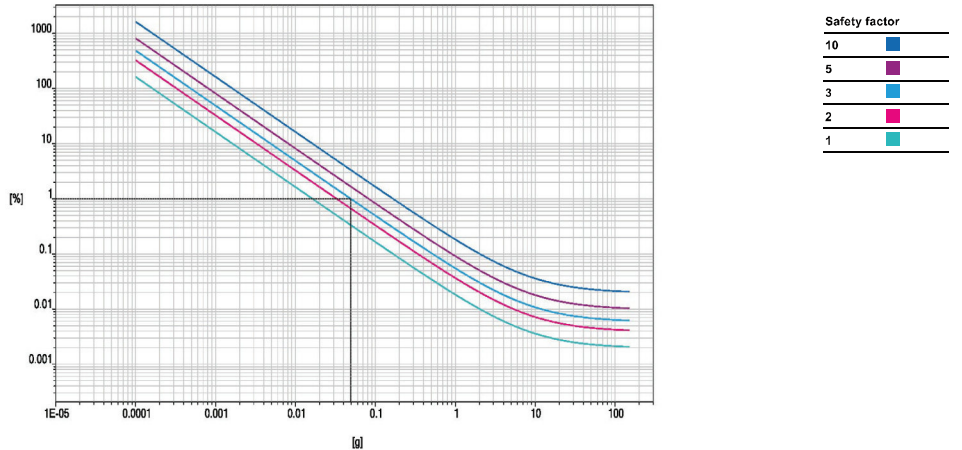

Displayed example

Process accuracy	1.00 %
Safety factor	3
Minimum sample weight	0.0493 g



High Volume Air Sampler Calibration Worksheet

Project Site : Rojana Industrial Park Public Co., Ltd. Barometric Pressure (mm Hg) : 755.4

Calibrate Location : วัดหินโค้ง(A2) Temperature (°C) : 32.6

Calibrate Date : 16-May-26 High Volume ID : RYG_FS0177


Calibration Sheet No.: C-160526-RYG_FS0177 High Volume Model : TE-5170D

Calibrator ID : RYG_FS0205 High Volume S/N : 4803

Calibrator Model : TE-5028A Calibrator Slope : 1.51825

Calibrator S/N : 1166 Calibrator Intercept : -0.02964

Test No.	Delta H ₂ O (inch)	Q _{std} (m ³ /min)	I : Chart (CFM)	Linear Regression
1	2.8	1.1147	40	Slope : 37.2555 Intercept : -1.6808 Correlation Coefficient : 0.9991
2	3.4	1.2253	44	
3	4.4	1.3898	50	
4	5.2	1.5083	54	
5	6.2	1.6442	60	

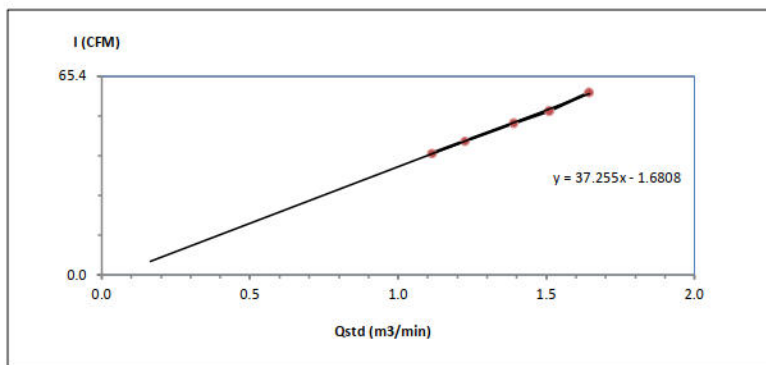

Calibrated by

[Signature]
RYG Field Services Scientist (1)

Approved by :

[Signature]
Field Services Section Head

FORM NO.: F 06-073 REVISION NO.:2 ISSUE DATE: 20/11/23



MULTIPOINT CALIBRATION REPORT

Calibration Date : 5-Jan-26 Equipment Name : NOx Analyzer

Manufacturer : Teledyne API Model : T200

Serial No. : 2197 Equipment ID : RYG_FS0255

Calibrator Manufacturer : Teledyne API Model : 700


Serial No. : 947

Std. Gas Concentration (PPM) : 55.88 Cylinder No. : GN0027222

Cylinder Pressure (psi) : 1800 Certified By : Airgas Inc.

Certified Date : 9-Feb-22 Expired Date : 9-Feb-30

Point	CALIBRATION RESULTS						
	Ideal	Actual NO	Error NO	%Error NO	Actual NOx	Error NOx	%Error NOx
ZERO	0.00	0.10	0.10	0.10	0.10	0.10	0.10
1	100.00	99.70	-0.30	-0.30	100.10	0.10	0.10
2	200.00	198.10	-1.90	-0.95	198.80	-1.20	-0.60
3	300.00	299.40	-0.60	-0.20	298.70	-1.30	-0.43
4	400.00	398.40	-1.60	-0.40	398.90	-1.10	-0.28
AVERAGE (%)				-0.35			-0.22

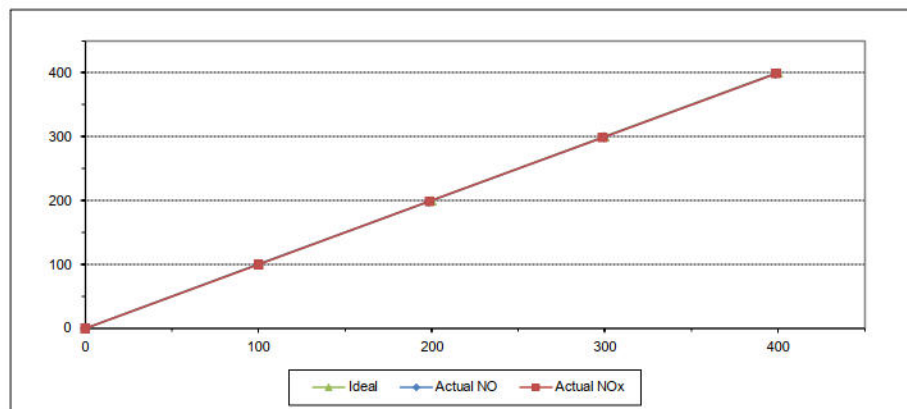

Calibrated By

[Signature]
Field Environmental Scientist (3)

Approved By

[Signature]
Assistant General Manager


ALS Laboratory Group
FORM NO.: F 06-056 REVISION NO.: - ISSUE DATE: 02/04/12



MULTIPOINT CALIBRATION REPORT

Calibration Date	5-Jan-26	Equipment Name	SO2 Analyzer
Manufacturer	Teledyne API	Model	T100
Serial No.	1772	Equipment ID	RYG_FS0254
Calibrator Manufacturer	Teledyne API	Model	700
Serial No.	947	Cylinder No.	GN0027222
Std. Gas Concentration (PPM)	56.3	Certified By	Airgas Inc.
Cylinder Pressure (psi)	1800	Expired Date	9-Feb-30
Certified Date	9-Feb-22		

Point	CALIBRATION RESULTS			
	Ideal	Actual	Error	%Error
ZERO	0.00	0.05	0.05	0.05
1	100.00	99.00	-1.00	-1.00
2	200.00	199.70	-0.30	-0.15
3	300.00	298.50	-1.50	-0.50
4	400.00	398.50	-1.50	-0.38
AVERAGE (%)				-0.40

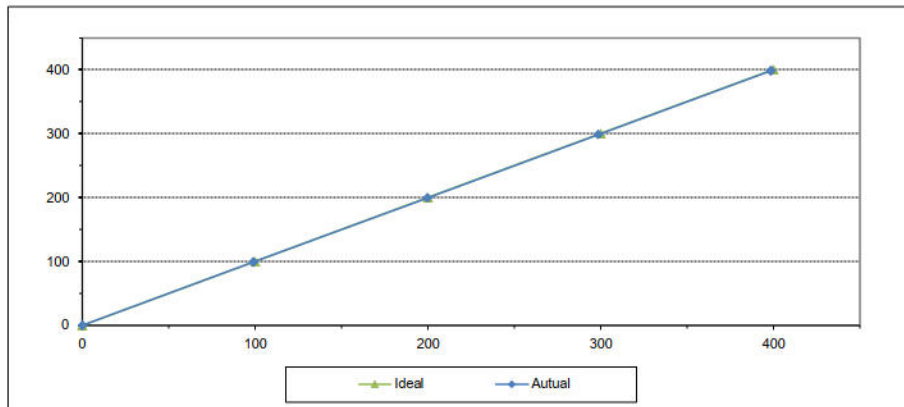

Calibrated By

[Redacted Signature]

Field Environmental Scientist (3)

Approved By

[Redacted Signature]


Assistant General Manager



MULTIPOINT CALIBRATION REPORT

Calibration Date	5-Jan-26	Equipment Name	O3 Analyzer
Manufacturer	Teledyne API	Model	400E
Serial No.	3002	Equipment ID	BKK_FS0761
O3 Generator Manufacturer	Tanabyte	Model	SA2-734
Serial No.	115		

Point	CALIBRATION RESULTS			
	Ideal	Actual	Error	%Error
ZERO	0.00	0.10	0.10	0.10
1	100.00	99.60	-0.40	-0.40
2	200.00	199.20	-0.80	-0.40
3	300.00	296.50	-3.50	-1.17
4	400.00	397.60	-2.40	-0.60
AVERAGE (%)				-0.49

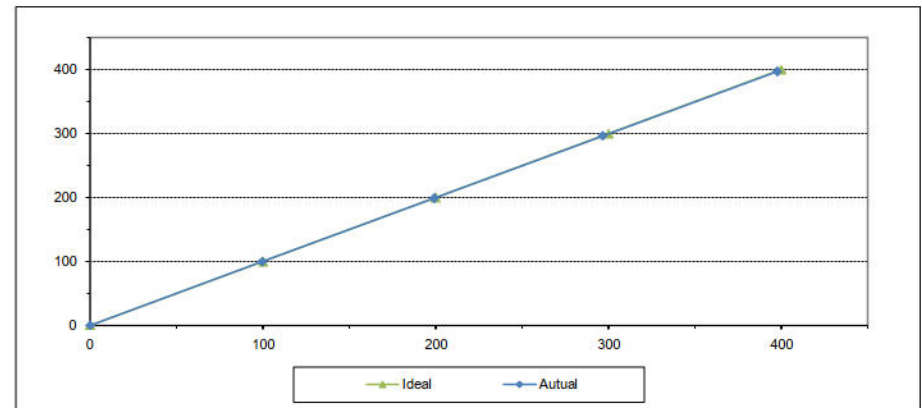

Calibrated By

[Redacted Signature]

Field Environmental Scientist (3)

Approved By

[Redacted Signature]

Assistant General Manager

Certificate Number

CW/S-004-68

CERTIFICATE OF CALIBRATION

Page 1 of 2 Pages

MEASUREMENT ITEM MANUFACTURER MODEL/TYPE

: Cup anemometer
: Novalynx
: Sensor: WS-02FA
Data logger: 110-WS-25DL-D

SERIAL NUMBER

: Sensor: WSD-A5977
Data logger: A5977

ID NUMBER

: RYG_F50647

CONDITION AS-RECEIVED

: Used item

CUSTOMER

: ALS laboratory group (Thailand) Co., Ltd.
104 Phatthanakan 40, Phatthanakan Rd, Khwaeng Suan Luang,
Khet Suan Luang, Bangkok 10250 Thailand.

RECEIVED DATE

: 10 Jan 2025

MEASUREMENT DATE

: 15 Jan 2025

ISSUE DATE

: 20 Jan 2025

ENVIRONMENTAL CONDITIONS:

Ambient condition in the laboratory are as follow:

Temperature : 23.0 ± 3.0 °C
Relative Humidity : 55.0 ± 15.0 %RH
Atmospheric Pressure : 1010 ± 10 hPa

PLACE OF CALIBRATION

: Eiffel-type wind tunnel of Jiranatee Associates Co., Ltd.

CALIBRATION CONDITIONS

: Wind tunnel cross-section area¹ 900 cm²
Wind direction frontal area² 100 cm²
Diameter of mounting pipe³ - mm
Blockage ratio of test object⁴ 0.111 [-]

Preconditioning

: 24 hours at ambient conditions.

Measurement Condition

: The average values during measurement are (24.1) °C, (54.2) %RH and (1016.4) hPa.

TABULATION OF RESULTS:

The table on next page give the measured values.

Calibrated by:

☒ Mr. Sorawit Thachalad
☐ Miss Jitraporn Lehtsomporn



Approved signatory: _____

Calibration Department Manager

REVIEW BY: _____

APPROVED BY: _____

NEXT CAL DATE 14/ 07/ 26

Remark:

¹ Nozzle cross-section area of the wind tunnel

² Projected cross-section area of the tested object include mounting pipe

³ Diameter of mounting pipe

⁴ Ratio "to"

THIS CERTIFICATE OF CALIBRATION MAY NOT BE REPRODUCED EXCEPT IN FULL UNLESS PERMISSION FOR REPRODUCTION HAS BEEN OBTAINED IN WRITING FROM THE LABORATORY

Certificate Number

CW/S-004-68

Page 2 of 2 Pages

MEASUREMENT RESULTS⁵

The Cup anemometer, Unit Under Calibration (UUC) was exercise at 10 m/s for 5 minutes prior to calibration being performed. The standard air velocity 0.5 m/s to 5 m/s was calculated by a standard air velocity transducer which was installed 50 mm away from wind tunnel nozzle and installed 40 mm away from top of the test section and the standard air velocity 5 m/s to 30 m/s was calculated by a pitot tube with precision differential pressure meter which was installed 50 mm away from wind tunnel nozzle and installed 40 mm away from top of the test section, UUC was mounted on a round vertical tube of the lower plate at center of test section. The calibration was carried out under both rising and falling air velocity in the range of 1 m/s to 16 m/s at calibration interval of 1 m/s. The results of calibration and associated measurement uncertainties are reported in the table below.

V_{std} ⁶ (m/s)	Temp. wind tunnel (°C)	Temp. room (°C)	V_{UUC} ⁷ (m/s)	Error (m/s)	U (k=2) (m/s)
0.990	24.10	24.05	0.9	-0.1	0.45
2.203	24.20	24.05	2.1	-0.1	0.31
3.010	24.10	24.05	2.9	-0.1	0.55
4.200	24.10	24.05	4.1	-0.1	0.31
4.95	24.20	24.05	5.0	0.1	0.68
5.97	24.10	24.05	5.9	-0.1	0.36
7.03	24.20	24.05	6.9	-0.1	0.43
7.96	24.10	24.05	7.9	-0.1	0.61
9.01	24.10	24.05	9.0	-0.1	0.54
9.95	24.10	24.05	9.9	-0.1	0.66
11.06	24.00	24.05	10.9	-0.2	0.71
11.99	24.28	24.05	11.8	-0.2	0.63
13.03	24.04	24.05	13.0	0.0	0.89
13.95	24.30	24.05	14.0	0.0	0.83
15.02	24.12	24.05	14.9	-0.1	0.69
15.95	24.26	24.05	15.9	0.0	0.71

Remark:

⁵ Calibration results only count for the tested circumstances and environmental conditions during which calibration took place

⁶ Velocity of standard

⁷ Velocity of Unit Under Calibration

PHOTO OF CALIBRATION SET-UP



Calibration set-up of the Cup anemometer calibration in the wind tunnel of Jiranatee Associates Co., Ltd. The Cup anemometer shown may differ from the calibrated one. Remark: The proportion of the set-up is not true to scale due to imaging geometry.



CERTIFICATE OF CALIBRATION

Page 1 of 2 Pages

MEASUREMENT ITEM MANUFACTURER MODEL/TYPE

: Wind Direction Sensor
: Novallux
: Sensor: WS-02FA
Data logger: 110-WS-25DL-D

SERIAL NUMBER

: Sensor: WSD-A5977
Data logger: A5977

ID NUMBER

: RYG_F50647

CONDITION AS-RECEIVED

: Used item

CUSTOMER

: ALS laboratory group (Thailand) Co., Ltd.
104 Phatthanakan 40, Phatthanakan Rd, Khwaeng Suan Luang,
Khet Suan Luang, Bangkok 10250 Thailand.

RECEIVED DATE

: 10 Jan 2025

MEASUREMENT DATE

: 15 Jan 2025

ISSUE DATE

: 20 Jan 2025

ENVIRONMENTAL CONDITIONS:

Ambient condition in the laboratory are as follow:

Temperature : 23.0 ± 3.0 °C
Relative Humidity : 55.0 ± 15.0 %RH
Atmospheric Pressure : 1010 ± 10 hPa

PLACE OF CALIBRATION

: Eiffel-type wind tunnel of Jiranatee Associates Co., Ltd.

CALIBRATION CONDITION

: Wind tunnel cross-section area¹ 900 cm²
Wind direction frontal area² 129 cm²
Diameter of mounting pipe³ - mm
Blockage ratio of test object⁴ 0.143 [-]

Preconditioning

: 24 hours at ambient conditions.

Measurement Condition

: The average values during measurement are (24.4)°C, (59.7) %RH and (1011.0) hPa.

TABULATION OF RESULTS:

The table on next page give the measured values.

Calibrated by:

☒ Mr. Sorawit Thachalad
☐ Miss Jittrapa Lertsamphol



Approved signatory:



Calibration Department Manager

Remark:

- ¹ Nozzle cross-section area of the wind tunnel
- ² Projected cross-section area of the tested object include mounting pipe
- ³ Diameter of mounting pipe
- ⁴ Ratio ² to ¹

Certificate Number

CWD-004-68

Page 2 of 2 Pages

MEASUREMENT RESULTS⁵

The wind direction sensor was calibrated against standard rotary encoder by comparison method. During calibration, the measurement was carried out at 45° intervals in clockwise and counterclockwise directions after offset adjustment has been made. The flow speed of wind tunnel (usually 5 m/s) is kept constant while the sensor is rotated around its vertical axis. The results of calibration and associated measurement uncertainties are reported in the table below.

Air speed m/s	D ^{std} Degree (°)	D ^{unc} Degree (°)	Error Degree (°)	U (k=2) Degree (°)
	0.000	0	0	0.80
	45.000	41	-4	0.80
	90.000	87	-3	0.80
4.99	135.000	131	-4	0.80
	180.000	177	-3	0.80
	225.000	225	0	0.80
	270.000	274	4	0.80
	315.000	319	4	0.80

Remark:

⁵ Calibration results only count for the tested circumstances and environmental conditions during which calibration took place

⁶ Direction of standard

⁷ Direction of Unit Under Calibration

End of Certificate of Calibration



CERTIFICATE OF CALIBRATION

Certificate No. : CDT-028-68

Page 1 of 2 Pages

MEASUREMENT ITEM : Data Logger with Temperature sensor
MANUFACTURER : Novalynx
MODEL/TYPE : 110-WS-25DL-D
SERIAL NUMBER : A5977
ID NUMBER : RYG_FS0647
CONDITION AS-RECEIVED : Used item
CUSTOMER : ALS laboratory group (thailand) Co., Ltd.
104 Phatthanakan 40, Phatthanakan Rd.,
Khwaeng Suan Luang, Khet Suan Luang,
Bangkok 10250 Thailand.

RECEIVED DATE : 10 Jan 2025
MEASUREMENT DATE : 15 Jan 2025
ISSUE DATE : 20 Jan 2025

ENVIRONMENTAL CONDITIONS:

Ambient condition in the laboratory are as follow:
Temperature : 23.0 ± 3.0 °C
Relative Humidity : 55.0 ± 15.0 %RH

NOTED: The certificate is valid only to the item calibrated on date and place of calibration.

TABULATION OF RESULTS:

The table on next page give the measured values.

Calibration procedure:

The temperature calibration was done by In-House calibration method as WHCL-001 according to comparison method with standard digital temperature indicator and standard temperature probe. The temperature scale use was based on ITS-90.

Traceability:

The measurement results are traceable to the international system of units (SI) through National Institute of Metrology Thailand (NIMT) Certificate number: TT-0047-24, Certificate number: ER-0113-24

Reference Used During Calibration:

1. Standard Temperature Probe
Model: STS-100 A500, Serial No.: 667682-09,
Due date: 26 Mar 2025
2. Digital Temperature Indicator
Model: DTI-1000-A MK II, Serial No.: 671407-00591 Due date: 21 Oct 2025

Uncertainty of Measurement:

The reported uncertainty of measurement is based on the standard uncertainty multiplied by a coverage factor $k=2$, Which for a normal distribution corresponds to a coverage probability of approximately 95%. The standard uncertainty has been determined in accordance with the GUM 'Evaluation of measurement data - Guide to the expression of uncertainty in measurement'

Result of Calibration: ☒ Without Adjustment ☐ With Adjustment

Calibration Range: 20 °C to 40 °C

Function:

Table 1: This equipment was connected with temperature sensor Model: HMP60 S/N: V1920212.
Dimension: Diameter 12 mm. Length 80 mm.

Immersion Depth (mm)	Standard Reading (°C)	UUC Reading (°C)	Error (°C)	Uncertainty (°C)
80	20.077	19.8	-0.3	0.099
80	25.066	24.8	-0.3	0.099
80	30.053	29.8	-0.3	0.099
80	35.034	34.7	-0.3	0.099
80	40.019	39.7	-0.3	0.099

UUC*: Unit Under Calibration

End of Certificate of Calibration



Calibrated by:



Approved signatory:



Calibration Department Manager

CERTIFICATE OF CALIBRATION

Certificate No. : CRT-002-68

Page 1 of 2 Pages

MEASUREMENT ITEM : Relative humidity with data logger
MANUFACTURER : Novalynx
MODEL/TYPE : Data Logger: 110-WS-25DL-D
Sensor: HMP60

SERIAL NUMBER : Data Logger: A5977
Sensor: V1920212

ID NUMBER : RYG_FS0647

CONDITION AS-RECEIVED : Used item

CUSTOMER : ALS laboratory group (Thailand) Co., Ltd.
104 Phatthanakan 40, Phatthanakan Rd, Khwaeng Suan Luang,
Khet Suan Luang, Bangkok 10250 Thailand.

RECEIVED DATE : 10 Jan 2025

MEASUREMENT DATE : 15 Jan 2025

ISSUE DATE : 20 Jan 2025

ENVIRONMENTAL CONDITIONS:

Ambient condition in the laboratory are as follow:

Temperature : 23.0 ± 3.0 °C
Relative Humidity : 55.0 ± 15.0 %RH

NOTED: The certificate is valid only to the item calibrated on date and place of calibration.

TABULATION OF RESULTS:

The table on next page give the measured values.

Calibration procedure:

The Relative humidity and Air Temperature calibration was done by In-House calibration method as WI-CL-009 and WI-CL-010 according to comparison method with Standard Chilled Mirror hygrometer with Temperature sensor and standard Humidity generator chamber.

Traceability:

The measurements are traceable to the international system of units (SI) through National Institute of Metrology Thailand (NIMT). Certificate number: TH-0146-24 and Jiranatee Associates Co., Ltd. Certificate number: CDT-026-68.

Uncertainty of Measurement:

The reported uncertainty of measurement is based on the standard uncertainty multiplied by a coverage factor $k=2$. Which for a normal distribution corresponds to a coverage probability of approximately 95%. The standard uncertainty has been determined in accordance with the GUM 'Evaluation of measurement data - Guide to the expression of uncertainty in measurement'

Continuation of Certificate of Calibration Number: CRT-002-68

Page 2 of 2 Pages

Measurement Results:

The results of calibration and associated measurement uncertainties are reported in the table below.

Result of Calibration: ☒ Without Adjustment ☐ With Adjustment

Table 1: The results of calibration of relative humidity at 30 °C are reported in table below.

Calibration Range: 20%RH to 80%RH

Air Temperature (°C)	Standard Reading (%RH)	UUC Reading (%RH)	Error (%RH)	Uncertainty ±(%RH)
29.72	19.84	18.6	-1.3	0.78
29.73	51.26	49.0	-2.3	1.3
29.74	82.85	79.7	-3.2	2.1

UUC*: Unit Under Calibration

End of Certificate of Calibration



Calibrated by:

☐
☒
☐



Approved signatory:

Calibration Department Manager

CERTIFICATE OF CALIBRATION

Certificate No. : CPR-002-68

Page 1 of 2 Pages

MEASUREMENT ITEM : Digital barometer
MANUFACTURER : Novalynx
MODEL/TYPE : Sensor: 110-WS-25BP
Data logger: 110-WS-25DL-D
SERIAL NUMBER : Sensor: BP-A5977
Data logger: A5977
ID NUMBER : RYG_FS0647
CONDITION AS-RECEIVED : Used item
CUSTOMER : ALS laboratory group (Thailand) Co., Ltd.
104 Phatthanakan 40, Phatthanakan Rd,
Khwaeng Suan Luang, Khet Suan Luang,
Bangkok 10250 Thailand.

RECEIVED DATE : 10 Jan 2025
MEASUREMENT DATE : 15 Jan 2025
ISSUE DATE : 20 Jan 2025

Calibration procedure:

The Digital barometer was calibrated against Digital pressure calibration. The WI-CI-003 was used as a calibration guideline.

Traceability:

The measurement results are traceable to the international system of units (SI) through the NIMT (National Metrology Institute of Thailand) via Certificate number: MP-0009-24

Reference Used During Calibration:

1. Absolute Pressure Transducer
Model: CPG 2500, Serial No.: 4100126P

Uncertainty of Measurement:

The reported uncertainty of measurement is based on the standard uncertainty multiplied by a coverage factor $k=2$. Which for a normal distribution corresponds to a coverage probability of approximately 95%. The standard uncertainty has been determined in accordance with the GUM 'Evaluation of measurement data - Guide to the expression of uncertainty in measurement'

CONDITION OF THIS RESULT OF CALIBRATION:

- Calibration effort for calibration sequence C
- The UUC* was installed in vertical orientation above reference standard instrument and center of UUC* was used as the reference level.
- Calibration conditions:

- Condition : ☒ Normal ☐ Abnormal
Pressure transmitting medium : Air
 ρ_{H_2O} (20°C, 1 bar) : 1.19 kg/m³
 H_{amb} : (62.4±2.6) %
 t_{amb} : (23.5±0.1) °C
 p_{amb} : (1011.0±1.6) mbar

- The certificate is valid only to the item calibrated on date and place of calibration



Calibrated by:

☒ [Signature]
☐ [Signature]

Approved signatory:

[Signature]
Calibration Department Manager

CERTIFICATE OF CALIBRATION

Certificate No. : CPR-002-68

Page 2 of 2 Pages

MEASUREMENT RESULTS : ☐ Without adjustment ☒ With adjustment
CALIBRATION IN THE RANGE OF : 950 mbar to 1050 mbar

The results of calibration and associated measurement uncertainties are reported in the table below.

STD (mbar)	UUC* (mbar)	Error (mbar)	Uncertainty (k=2) (mbar)
950.02	951.4	1.4	0.37
970.08	971.3	1.2	0.38
990.07	990.8	0.8	0.38
1010.07	1010.4	0.3	0.38
1030.02	1029.9	-0.1	0.37
1050.08	1049.5	-0.6	0.37

Note: UUC* Unit Under Calibration

: To convert the result in report unit to Pa should be multiply by 100

End of certificate





Cert.No.: 25CH393
Page.: 3 of 3

Calibration Results

Function : pH Measurement

Performing three buffers standard curve by using buffer nominal pH (4,7,10)

Unit Under Calibration	Standard pH Buffer Solution	Actual pH Reading	Actual mV Reading (mV)	Uncertainty of pH Measurement ($\pm$)	Coverage factor k
pH Electrode	4.007	4.01	175	0.0085	2.05
S/N.: 2015870	6.999	7.01	1	0.0095	2.00
	10.010	10.02	-164	0.0096	2.00

Function : Temperature Measurement

(*) Without adjustment

This equipment was connected with Temperature Probe;

- Model : InlabExpert Go-ISM
- Serial No. : 2015870

Dimension of probe

- Length : 120 mm.
- Diameter : 12 mm.
- Immersion Depth : 100 mm.

Calibration Point ($^{\circ}\text{C}$)	Standard Temperature ($^{\circ}\text{C}$)	UUC* Reading ($^{\circ}\text{C}$)	Error ($^{\circ}\text{C}$)	Uncertainty of measurement ($\pm$ $^{\circ}\text{C}$)	Coverage factor k
25.0	25.002	25.0	-0.002	0.13	2.00
45.0	45.000	45.1	0.100	0.13	2.00

Remark - UUC* = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-o0o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL.0-2717-3000-29 FAX.0-2719-9484



Certificate of Calibration

Cert.No.: 26CH374
Page.: 1 of 3

Equipment : pH Meter
Manufacturer : Mettler Toledo
Model : Seven2Go TM pH/mV S2
Serial No. : C202355606
ID No. : RYG_FS0574
Condition As-Received: Used Item
Received Date : 31 March 2026
Calibration Date : 01 April 2026
Reference : 2603-1015DSC-1
Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd.
104 Phatthanakan 40, Phatthanakan Rd.,
Khwaeng Phatthanakan, Khet Suan Luang,
Bangkok 10250 Thailand

Ambient Temperature : (25 $\pm$ 2.5) $^{\circ}\text{C}$
Relative Humidity : (50 $\pm$ 15) %
Calibration Procedure : In - house method :
- CP-CH5 by direct measurement with DC voltage standard and direct measurement with certified reference material (CRM)
- CP-CH8 by comparison with temperature standard

REVIEW BY

APPROVED BY

NEXT CAL DATE: 01/04/27

Calibrated by : Warakorn Lerngagtrakul

Approved by :

Approved Signatory

()
()
(✓)

Issue Date :

02 April 2026

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.



Cert.No.: 26CH374
Page.: 2 of 3

Condition of this calibration result

1. Reference Standard Instrument

Instrument	Serial No.	ID No.	Cert. No.	Due Date
1) Document Process Calibrator	54030049	130RC116	25E2743	25 Aug 2026
2) Ref. Standard Thermometer	4982054	110RC044	25I708	03 Jul 2026

- This measurement result is traceable to SI through Technology Promotion Association (Thailand - Japan)

2. Certified Reference Materials :The measurement results are traceable to SI through Hach Lenge GmbH Ltd.,
Deutsche Akkreditierungsstelle, Accredited No.D-RM-15184-01-00
:The measurement results are traceable to SI through CPA chem Ltd.,
ANSI-ASQ National Accreditation Board, Accredited No. AR-1835

Buffer Solution	Manufacturer	Lot No.	Exp. date
pH 4.008	CPA chem	1187328	18 Jan 2028
pH 7.000	Hach Lenge GmbH	C03319	17 Oct 2027
pH 10.010	CPA chem	1187332	18 Jan 2027

3. This certificate is valid only to the item calibrated on date and place of calibration.

Calibration Results

Function : mV Measurement

Performing standard curve by Document Process Calibrator at pH (4,7,10)

Unit Under Calibration	Nominal Value	Standard Voltage Input	Actual Reading		Uncertainty of Measurement (±mV)	Coverage factor <i>k</i>
	pH	mV	mV	pH		
pH Meter S/N.: C202355606	4.00	177.48	177	4.00	0.58	2.00
	7.00	0.00	0	7.00	0.58	2.00
	10.00	-177.48	-178	10.00	0.58	2.00



Cert.No.: 26CH374
Page.: 3 of 3

Calibration Results

Function : pH Measurement

Performing three buffers standard curve by using buffer nominal pH (4,7,10)

Unit Under Calibration	Standard pH Buffer Solution	Actual pH Reading	Actual mV Reading (mV)	Uncertainty of pH Measurement (±)	Coverage factor <i>k</i>
pH Electrode S/N.: 5232470	4.008	4.00	173	0.0085	2.05
	7.000	7.00	-3	0.0095	2.00
	10.010	10.01	-176	0.0095	2.00

Function : Temperature Measurement

(*) Without adjustment

This equipment was connected with Temperature Probe;

- Model : InLab®Expert Go-ISM

- Serial No. : 5232470

Dimension of probe

- Length : 120 mm.

- Diameter : 12 mm.

- Immersion Depth : 100 mm.

Calibration Point (°C)	Standard Temperature (°C)	UUC* Reading (°C)	Error (°C)	Uncertainty of measurement (± °C)	Coverage factor <i>k</i>
25.0	25.002	25.3	0.298	0.13	2.00
45.0	45.004	45.4	0.396	0.13	2.00

Remark - UUC* = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor *k*, providing a level of confidence of approximately 95 %.

-o-o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL.0-2717-3000-29 FAX.0-2719-9484



Cert.No.: 25CH847
Page.: 2 of 3

Certificate of Calibration

Cert.No.: 25CH847
Page.: 1 of 3

Equipment : pH Meter
Manufacturer : Mettler Toledo
Model : SevenCompact S220
Serial No. : C104059460
ID No. : RYG_EN0183
Condition As-Received: Used Item
Received Date : 17 July 2025
Calibration Date : 18 July 2025
Reference : 2507-0561DSC-3
Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd.
Rayong Branch
616/10 Moo 5, T.Maenam Khu,
A.Pluakdaeng, Rayong 21140, Thailand
Ambient Temperature : (25 ± 2.5) °C
Relative Humidity : (50 ± 15) %
Calibration Procedure : In - house method :
- CP-CH5 by direct measurement with DC voltage
standard and direct measurement with
certified reference material (CRM)
- CP-CH8 by comparison with temperature standard

Calibrated by : Walalak Sirithean

Approved by :

Approved Signatory

()
()
(✓)

Issue Date :

21 July 2025

Condition of this calibration result

1. Reference Standard Instrument

Instrument	Serial No.	ID No.	Cert. No.	Due Date
1) Document Process Calibrator	54030049	130RC116	24E2759	25 Aug 2025
2) Ref. Standard Thermometer	3240076	60RC033	25I394	01 Apr 2026

- This measurement result is traceable to SI through Technology Promotion Association (Thailand - Japan)

2. Certified Reference Materials : The measurement results are traceable to SI through CPA chem Ltd., ANSI-ASQ National Accreditation Board, Accredited No. AR-1835

Buffer Solution	Manufacturer	Lot No.	Exp. date
pH 4.007	CPA chem	1066665	18 Jan 2027
pH 6.965	CPA chem	1066667	18 Jan 2026
pH 10.010	CPA chem	1114385	08 June 2026

3. This certificate is valid only to the item calibrated on date and place of calibration.

Calibration Results

Function : mV Measurement

Performing standard curve by Document Process Calibrator at pH (4.7,10)

Unit Under Calibration	Nominal Value	Standard Voltage Input	Actual Reading		Uncertainty of Measurement (±mV)	Coverage factor k
	pH		mV	pH		
pH Meter	4.000	177.48	177.3	4.000	0.058	2.00
S/N.: C104059460	7.000	0.00	-0.2	7.000	0.058	2.00
	10.000	-177.48	-177.6	10.000	0.058	2.00

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.



Cert.No.: 25CH847
Page.: 3 of 3

Calibration Results

Function : pH Measurement

Performing three buffers standard curve by using buffer nominal pH (4,7,10)

Unit Under Calibration	Standard pH Buffer Solution	Actual pH Reading	Actual mV Reading (mV)	Uncertainty of pH Measurement ($\pm$)	Coverage factor k
pH Electrode	4.007	4.008	184.6	0.0044	2.00
S/N.: 5240606	6.965	6.966	10.2	0.0084	2.00
	10.010	10.009	-164.9	0.0065	2.00

Function : Temperature Measurement

(*) Without adjustment

This equipment was connected with Temperature Probe;

- Model : InLabExpert Pro-ISM

- Serial No. : 5240606

Dimension of probe

- Length : 120 mm.

- Diameter : 12 mm.

- Immersion Depth : 100 mm.

Calibration Point (°C)	Standard Temperature (°C)	UUC* Reading (°C)	Error (°C)	Uncertainty of measurement ($\pm$ °C)	Coverage factor k
25.0	25.001	25.0	-0.001	0.13	2.00

Remark - UUC* = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-o0o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG, BANGKOK 10250
TEL. 0-2717-3000-24 FAX. 0-2719-9484



Certificate of Calibration

Certificate No. : 25E2372

Page : 1 of 2

Equipment : pH Meter
Manufacturer: Mettler Toledo
Model : SevenCompact S220
Serial No.: C104059460
ID No.: RYG_EN0183
Condition As-Received: Used Item
Received Date: 17 July 2025
Calibration Date: 22 July 2025

Reference: 2507-0561DSC
Ambient Temperature: (23 $\pm$ 2) °C
Relative Humidity: (50 $\pm$ 10) %

Submitted by: ALS Laboratory Group (Thailand) Co.,Ltd. Rayong Branch

616/10 Moo 5, T.Maenam Khu, A.Pluakdaeng,
Rayong 21140, Thailand

Procedure used: Calibration were conducted using calibration procedure No. CP-E17 according to EURAMET cg-15.

Condition of this result of calibration

1.Reference standards instruments :

Instrument	Model	Serial No.	Certificate No.	Due Date
1) Multi-Product Calibrator	5500A	6315011	25E1627	19 May 2026

2.This result of calibration was made on requested at the point specified by customer.

3.The certificate is valid only to the item calibrated on date and place of calibration.

4.This measurement result is traceable to the International System of Unit maintained through:-

-Technology Promotion Association (Thailand-Japan), NSC-ONSC Accredited No. Calibration 0008

Calibrated by : Napachanok Prasomsoosiri
Issue Date : 23 July 2025

Approved Signatory :

[Signature]



Cert. No.: 25E2372

Page.: 2 of 2

Result of calibration :- (*) Without adjustment () After adjustment

Function: DC voltage measurement

Range: 2000 mV

Standard Value	UUC* Reading	Error	Uncertainty
(mV)	(mV)	(mV)	($\pm$ μ V)
-200.0000	-200.0	0.0	68
-150.0000	-150.0	0.0	65
-100.0000	-100.0	0.0	63
-50.0000	-50.0	0.0	61
0.0000	0.0	0.0	58
50.0000	49.9	-0.1	61
100.0000	99.9	-0.1	63
150.0000	149.9	-0.1	65
200.0000	199.9	-0.1	68

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor $k = 2$, providing a level of confidence of approximately 95 %

UUC* = Unit Under Calibration.

-o0o-

SARTORIUS



NSC-TISI-TIS 17025
CALIBRATION 0426

Accredited by

NSC-TISI-TIS 17025

Calibration 0426

Calibration certificate

Calibration Certificate No. 25BKL0002

Object	Electronic non-automatic weighing instrument	This calibration certificate documents the traceability to national standards.
Manufacturer	Sartorius	Uncertainties of measurements are taken into account when only statements of compliance are made.
Type	MCE224S-2S00-U	This certificate was prepared by Sartorius Corporation in accordance to the current ISO/IEC 17025:2017 standard and Sartorius Work Instruction (Method) SOP WI 08.
Serial QM Ident. no.	38101399 RYG_EN0163	This certificate relate and apply this equipment only.
Customer	ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch)	
	616/10 Moo 5 T.Maenam Khu, A.Pluak Daeng, Rayong 21140, Thailand.	REVIEW BY
Order no.	2230	APPROVED BY
Number of pages	4	NEXT CAL DATE.....20/02/26
Date of calibration	20 Feb 2025	

This calibration certificate may not be reproduced other than in full except with the permission of NSC-TISI-TIS-17025 and the issuing laboratory. Calibration certificates without signature are not valid.

The user is obliged to have the object recalibrated at appropriate intervals.

Date	06 Mar 2025	Approval of the Calibration Certificate	Person in charge
		Mr.	

Sartorius (Thailand) Co., Ltd.
129 Rama 9 Road, Huaykwang
10310 Bangkok

Verical®
Version 6.5

Page 1 | 4

Calibration object

Single range instrument

Model	MCE224S-2S00-U
Serial Number	38101399
QM Ident. no Inventory no.	RYG_EN0163 ---
Maximum capacity (Max. load)	220.0000 g
Measured range	220.0000 g
Scale interval	0.0001 g

Place of calibration

Address	According to page 1
Department Cost center	Laboratory Department. ---
Building Floor	--- 1st Floor.
Room	Balance Room.
Maximum temperature variation at place of calibration	5 K

Calibration procedure

EURAMET cg-18, V4.0 - Guidelines on the Calibration of Non-Automatic Weighing Instruments

Test equipment

Test equipment type	Test equipment ID	Valid until
Thermometer	MHB-382SD s/nB011342 Traceable to SI unit through DKSH	21 Aug 2025
Test weight set OIML R111 E2	Certificate No.M2308197S ,E2(Traceable to SI unit through TCS)	23 Aug 2025

Adjustment Status

The measuring device was internally adjusted before the calibration.

Environmental and measuring conditions

Date of calibration	20 Feb 2025
Temperature at place of calibration Temp. diff. <i>T</i> _{weights} - <i>T</i> _{place}	24.4 °C 0.6 K
Measuring conditions	The installation site is suitable. The device was levelled. Balance was loaded up to Max before test.
Comments	Humidity 58.0 %RH.

Measurement results | Measurement uncertainties

Repeatability			Eccentricity	
Test load (nominal): 10 g 200 g			Test load (nominal): 100 g	
	10 g	200 g	Center	100.0000 g
1	10.0000 g	200.0000 g	Front left	100.0000 g
2	10.0000 g	200.0000 g	Back left	100.0000 g
3	10.0000 g	200.0001 g	Back right	100.0000 g
4	9.9999 g	200.0000 g	Front right	99.9999 g
5	9.9999 g	200.0000 g	Maximum deviation from centric loading indication Δ <i>f</i> _{ecc} max = 0.0001 g	
6	10.0000 g	200.0001 g		
7	10.0000 g	200.0000 g		
8	10.0000 g	200.0000 g		
9	9.9999 g	200.0001 g		
10	10.0000 g	200.0000 g		
<i>s</i> = 0.00005 g		<i>s</i> = 0.00005 g		

Error of indication

Testload	Indication	Error	Expansion factor	Uncertainty	Uncertainty relative
<i>L</i>	<i>I</i>	<i>E</i>	<i>k</i>	<i>U</i> (<i>E</i>)	<i>U</i> _{rel} (<i>E</i>)
0.0100 g	0.0100 g	0.0000 g	2.00	0.00013 g	1.3 %
0.1000 g	0.1000 g	0.0000 g	2.00	0.00013 g	0.13 %
0.5000 g	0.5000 g	0.0000 g	2.00	0.00013 g	0.026 %
1.0000 g	1.0000 g	0.0000 g	2.00	0.00013 g	0.013 %
5.0000 g	5.0000 g	0.0000 g	2.00	0.00013 g	0.0026 %
10.0000 g	9.9999 g	-0.0001 g	2.00	0.00013 g	0.0013 %
20.0000 g	20.0000 g	0.0000 g	2.00	0.00014 g	0.00068 %
50.0000 g	50.0001 g	0.0001 g	2.00	0.00015 g	0.00029 %
100.0000 g	100.0000 g	0.0000 g	2.00	0.00018 g	0.00018 %
200.0000 g	200.0000 g	0.0000 g	2.00	0.00028 g	0.00014 %
220.0000 g	220.0000 g	0.0000 g	2.00	0.00032 g	0.00015 %
Maximum error of indication		<i>E</i> _{max} = 0.0001 g			

*U*_{rel}(*E*) is the quotient of *U*(*E*) and test load *L*. The uncertainty of measurement *U*(*E*) is valid only if error *E* is considered. You will find reference notes on the uncertainty of measurement in use under: Appendix to the calibration certificate | Interpretation of measurement results.
Reference note: The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the documented Expansion factor, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

End of calibration certificate


Uncertainty of measurement in use

Device adjusted before measurement	Yes
Temperature deviation considered	1.5 K (isoCAL active)
Temperature coefficient considered	$1 \cdot 10^{-9}/K$
Uncertainty of the weighing result $U_{gI}(W)$	$U_{gI}(W) = 0.00013 \text{ g} + 1.16 \cdot 10^{-5} \cdot R$

Reference note: The current uncertainty of measurement is calculated by entering of the reading R into this formula. In relation to this, there is no need for a correction of the indication error. The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied with an Expansion factor of 2, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

Indication in % from max load	Net indication R	Uncertainty $U_{gI}(W)$	Uncertainty relative $U_{gI}(W)_{rel}$
1 %	2.2000 g	0.00016 g	0.0071 %
25 %	55.0000 g	0.00077 g	0.0014 %
50 %	110.0000 g	0.0014 g	0.0013 %
75 %	165.0000 g	0.0020 g	0.0012 %
100 %	220.0000 g	0.0027 g	0.0012 %

Graphic realization of the relative uncertainty of measurement | process accuracy

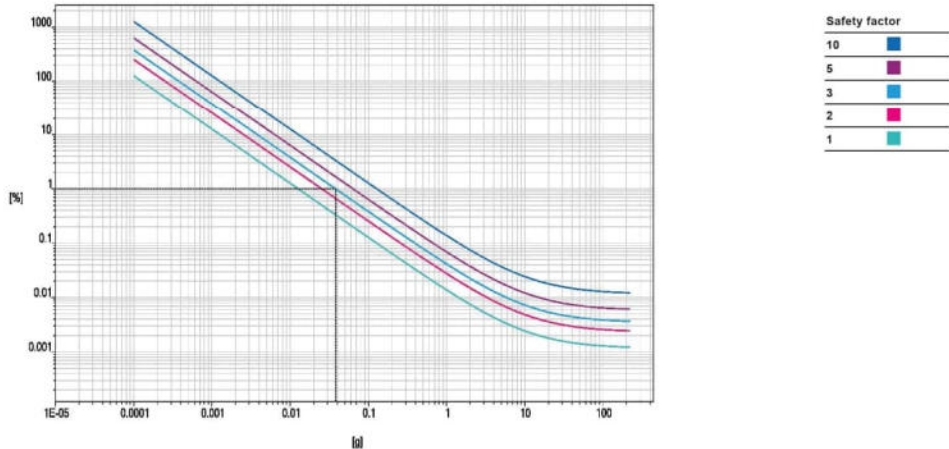

Displayed example

Process accuracy	1.00 %
Safety factor	3
Minimum sample weight	0.0381 g



Accredited by
NSC-TISI-TIS 17025
Calibration 0426

Calibration certificate

Calibration Certificate No. 26BCI0064

Object	Electronic non-automatic weighing instrument	This calibration certificate documents the traceability to national standards.
Manufacturer	Sartorius	Uncertainties of measurements are taken into account when only statements of compliance are made.
Type	MCE224S-2S00-U	This certificate was prepared by Sartorius Corporation in accordance to the current ISO/IEC 17025:2017 standard and Sartorius Work Instruction (Method) SOP WI 08.
Serial QM Ident. no.	38101399 RYG_EN0163	This certificate relate and apply this equipment only.
Customer	ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch) 616/10 Moo 5 T.Maenamkoo, A.Pluak Daeng, Rayong 21140, Thailand.	
Order no.	278579	
Number of pages	4	
Date of calibration	03 Feb 2026	

REVIEW BY
APPROVED BY
NEXT CAL DATE.....03/02/27

This calibration certificate may not be reproduced other than in full except with the permission of NSC-TISI-TIS-17025 and the issuing laboratory. Calibration certificates without signature are not valid.
The user is obliged to have the object recalibrated at appropriate intervals.

Date of issue	03 Feb 2026	Approval of the Calibration Certificate	Person in charge

Calibration object

Single range instrument

Model	MCE224S-2S00-U
Serial Number	38101399
QM Ident. no Inventory no.	RYG_EN0163 ---
Maximum capacity (Max. load)	220.0000 g
Measured up to	220.0000 g
Scale interval	0.0001 g

Place of calibration

Address	According to page 1
Department Cost center	Laboratory Department. ---
Building Floor	--- 1st Floor.
Room	Balance Room.
Maximum temperature variation at place of calibration	5 K

Calibration procedure

EURAMET Calibration Guide No. 18, Version 4.0 (11/2015) - Guidelines on the Calibration of Non-Automatic Weighing Instruments

Test equipment

Test equipment type	Test equipment ID	Valid until
Thermometer	Testo 174H H/T250743 (Traceable to Si unit through ENTECH)	18 Nov 2026
Test weight set OIML R111 E2	Certificate No.M2508149S ,E2(Traceable to SI unit through TCS)	19 Aug 2027

Adjustment Status

The measuring device was internally adjusted before the calibration.

Environmental and measuring conditions

Date of calibration	03 Feb 2026
Temperature at place of calibration Temp. diff. <i>T</i> _{weights} - <i>T</i> _{place}	25 °C 0.5 K
Measuring conditions	The installation site is suitable. The device is level. Balance was loaded up to Max before test.
Comments	Humidity 49.0 %RH.

Measurement results | Measurement uncertainties

Repeatability	Eccentricity
Test load (nominal): 10 g 200 g	Test load (nominal): 100 g
10 g200 g	Center100.0001 g
110.0000 g200.0000 g	Front left100.0002 g
210.0000 g199.9999 g	Back left100.0002 g
310.0000 g200.0000 g	Back right100.0000 g
410.0000 g200.0001 g	Front right100.0000 g
59.9999 g199.9999 g	Maximum deviation from centric loading indication Δ <i>f</i> _{ecc} max = 0.0001 g
610.0000 g200.0000 g	
710.0000 g199.9999 g	
810.0000 g200.0000 g	
99.9999 g200.0001 g	
1010.0000 g200.0000 g	
s = 0.00004 gs = 0.00007 g	

Error of indication

Testload	Indication	Error	Expansion factor	Uncertainty	Uncertainty relative
<i>L</i>	<i>I</i>	<i>E</i>	<i>k</i>	<i>U</i> (<i>E</i>)	<i>U</i> _{rel} (<i>E</i>)
0.0100 g	0.0100 g	0.0000 g	2.00	0.00012 g	1.2 %
0.1000 g	0.1000 g	0.0000 g	2.00	0.00017 g	0.17 %
0.5000 g	0.5000 g	0.0000 g	2.00	0.00017 g	0.034 %
1.0000 g	1.0000 g	0.0000 g	2.00	0.00017 g	0.017 %
5.0000 g	5.0000 g	0.0000 g	2.00	0.00017 g	0.0034 %
10.0000 g	10.0000 g	0.0000 g	2.00	0.00017 g	0.0017 %
20.0000 g	20.0000 g	0.0000 g	2.00	0.00018 g	0.00088 %
50.0000 g	50.0000 g	0.0000 g	2.00	0.00018 g	0.00037 %
100.0000 g	100.0001 g	0.0001 g	2.00	0.00021 g	0.00021 %
200.0000 g	200.0000 g	0.0000 g	2.00	0.00030 g	0.00015 %
220.0000 g	220.0001 g	0.0001 g	2.00	0.00034 g	0.00015 %
Maximum error of indication		<i>E</i> _{max} = 0.0001 g			

*U*_{rel}(*E*) is the quotient of *U*(*E*) and test load *L*. The uncertainty of measurement *U*(*E*) is valid only if error *E* is considered. You will find reference notes on the uncertainty of measurement in use under: Appendix to the calibration certificate | Interpretation of measurement results.
Reference note: The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the documented Expansion factor, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

End of calibration certificate

Uncertainty of measurement in use


Device adjusted before measurement	Yes
Temperature deviation considered	1.5 K (isoCAL active)
Temperature coefficient considered	$1 \cdot 10^{-6}/K$

Uncertainty of the weighing result $U_{91}(W)$ $U_{91}(W) = 0.00017 \text{ g} + 4.25 \cdot 10^{-6} \cdot R$

Reference note: The current uncertainty of measurement is calculated by entering of the reading R into this formula. In relation to this, there is no need for a correction of the indication error. The reported expanded uncertainty of measurement is stated as the standard uncertainty multiplied with an Expansion factor of 2, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

Indication in % from max load	Net indication R	Uncertainty $U_{91}(W)$	Uncertainty relative $U_{91}(W)_{rel}$
1 %	2.2000 g	0.00018 g	0.0082 %
25 %	55.0000 g	0.00040 g	0.00073 %
50 %	110.0000 g	0.00064 g	0.00058 %
75 %	165.0000 g	0.00087 g	0.00053 %
100 %	220.0000 g	0.0011 g	0.00050 %

Graphic realization of the relative uncertainty of measurement | process accuracy

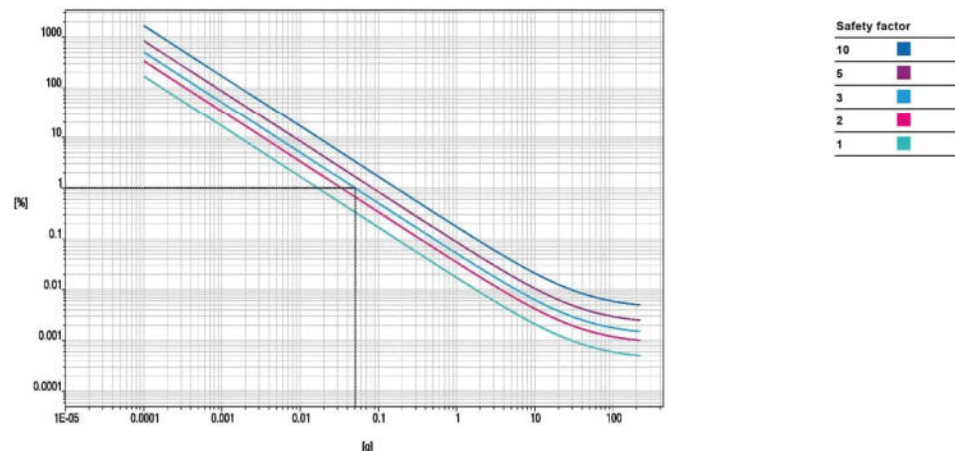

Displayed example

Process accuracy	1.00 %
Safety factor	3
Minimum sample weight	0.0507 g



Metrology Center SCI ECO Services Company Limited

51 Moo 8, Tubkwang, Kaeng Khoi, Saraburi, Thailand 18260

Bangkok Tel : +668 9205 6851 , +669 81924 0059

Saraburi Tel : +669 8247 2360

Website : www.scieco.co.th E-Mail : calibrate@scg.co.th



Certificate No. T251530

Page 1 of 3

Certificate of Calibration

Equipment : Chamber (Oven)

Manufacturer : MEMMERT

Model : UF 110

Serial No. : B416.2420

Customer Code : RYG_EN0012

ID No. : T6444A5

Customer : ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch)

616/10 Moo 5 T.Maenamkoo,

A.Pluakdaeng, Rayong 21140

Customer Location : ENVIRONMENT LABORATORY

Date of Receipt : 3 September 2025

Calibrated By : Sujjar Naknakred (Site Calibration Manager)

Approved By : [Signature] (Site Calibration Manager)

Date of Issue : 17 SEP 2025



The uncertainties are for a confidence probability of approximately 95%.

This Certificate is issued in accordance with the conditions of accreditation granted by the Thai Laboratory Accreditation Scheme which has assessed the measurement capability of the laboratory and its traceability to recognized national standards and to the units of measurement realized at the corresponding national standard laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the Metrological Center.



Certificate No. T251530

Page 2 of 3

Calibration Report

Equipment : Chamber (Oven)
Date of Calibration : 10 September 2025
Environment : Temperature : 35.7-36.6 °C
Line Voltage : 226.8-233.7 V
Relative Humidity : 55 - 65 %RH

Condition of this results of calibration :

- This equipment was calibrated by insert nine resistance thermometer detectors into its chamber , the other one resistance thermometer detector use for ambient temperature measurement . The calibration was done in according to WI-T20 (based on ASTM E145-94 (Reapproved 2019) and AS2853-1986).
All data show below were final values and the initial data from customer request . The temperature scale used was based on ITS - 90 .

2. Reference Standard Instrument :

Instrument	Model	Instrument No.	Certificate No.	Due Date
RTD	100 ohm	30-(CH1-10)	T242203	9 November 2025
DATA LOGGER	34970A	T47	T242203	9 November 2025

3. This certificate is traceable to :

National Institute of Metrology (Thailand) through Metrological Center (NSC-TISI-TIS 17025 CALIBRATION 0244.

4. Condition of calibrated item : good

Equipment Description :

Time Constant 3 Hour 29 Minute At 104 °C
Fresh Air Damper ☒ Open ☒ Min ☐ Medium ☐ Max
☐ Close
☐ Not Available

5. Adjustment :

() without adjustment

(X) after adjustment


Approved By. _____



Certificate No. T251530

Page 3 of 3

Calibration Report

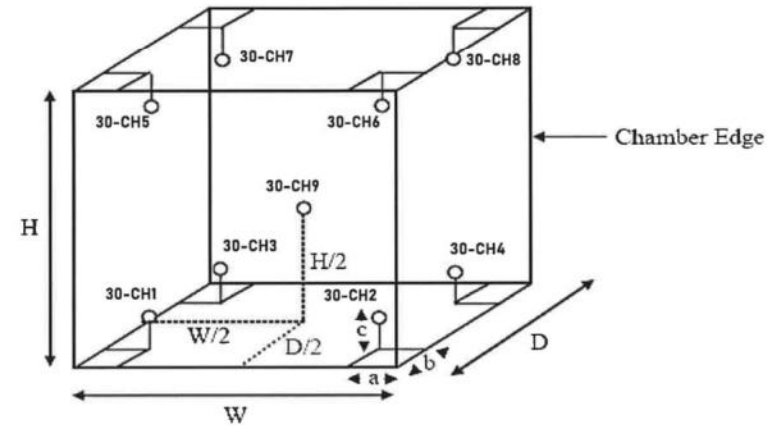

Remark : Internal Dimensions of Chamber : W (Width) = 56 cm. , H (Height) = 48 cm. and D (Depth) = 40 cm.
Size of Installed Standard sensor number 30-CH1 to number 30-CH8 : a = 5 cm. , b = 5 cm. and c = 5 cm.
Size of Installed Standard sensor number 30-CH9 : W/2 = 56 cm./2 , H/2 = 48 cm./2 and D/2 = 40cm./2

Measurement Results

Calibration Point	Average Standard Reading at each position (°C)								
	30-CH1	30-CH2	30-CH3	30-CH4	30-CH5	30-CH6	30-CH7	30-CH8	30-CH9
104	104.02	103.70	104.01	104.16	104.11	104.08	104.01	104.33	103.61
180	180.67	178.78	180.38	179.85	179.16	180.27	180.98	181.04	179.49

Chamber (Oven)			Temperature Distribution				
Setting °C	Reading (°C)		Average (°C)	Stability (± °C)	Uniformity (°C)	Uncertainty (± °C)	Coverage Factor k
	Min , Max	Average					
104.0	103.9 , 104.1	104.0	104.00	0.08	0.61	0.42	2.00
180.0	179.9 , 180.1	180.0	180.07	0.21	1.51	0.52	2.00

* The quoted uncertainty exclude "uniformity"

The calibration result apply only the above calibrated item.

The result of test was found accurate as shown on date and place of test only.

The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k which for a t-distribution, providing a level of confidence of approximately 95 % .

End of Certificate.

Approved By. _____



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL.0-2717-3000-29 FAX.0-2719-9484



Equipment : DO Meter with Sensor
Condition As-Received : Used Item
Reference : 2501-0600DSC-2
Procedure Used :-

Cert. No.: 25LM10
Page.: 2 of 2

Certificate of Calibration

Cert. No.: 25LM10
Page.: 1 of 2

Equipment : DO Meter with Sensor

Manufacturer : YSI

Model : 5000-115V

Serial No. : 15E102796

ID No. : RYG_EN0032

Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd.
(Rayong Branch)
616/10 Moo 5 T. Maenam Khu, A. Pluakdaeng,
Rayong 21140 Thailand

Location : TPA On Site Calibration Laboratory

Received Order : 17 January 2025

Calibrated Date : 20 January 2025

Ambient Temperature : (26 ± 10) °C

Relative Humidity : (50 ± 30) %

AC Line Voltage : (220 ± 22) V

Calibrated by : Warakorn Lernagatrakul

Approved by :

Approved Signatory

Issue Date : 23 January 2025

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.

Calibration were conducted using in-house calibration procedure CP-OT01 according to comparison with Industrial Platinum Resistance Thermometer (IPRT) into Temperature Bath.

The temperature scale used was based on ITS-90.

Condition of this result of calibration

1. Reference standard instrument:-

Instrument	Serial No.	Cert. No.	Traceable	Due Date
1) Digital Thermometer	2188080	2411022	TPA	17 Sep 2025

2. This certificate is valid only to the item calibrated on date and place of calibration.

3. This certification is traceable to the International System of Unit.

Remark : TPA : Technology Promotion Association (Thailand - Japan)

Result of Calibration :- (*) Without Adjustment

Function : Temperature measurement.

This instrument was connected with temperature sensor, S/N.: 15E100464

Calibration Point	Immersion Depth	Standard Temperature	UUC* Reading	Error	Uncertainty	Coverage Factor
(°C)	(mm)	(°C)	(°C)	(°C)	(± °C)	k
20.00	60	20.002	19.81	-0.192	0.15	2.00

UUC* : Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor *k*, providing a level of confidence of approximately 95 %.



-o0o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3 : EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL. 0-2717-3000 FAX. 0-2719-9484

Certificate of Testing

Cert.No.: 25TW15
Page.: 1 of 2

Equipment : DO Meter
Manufacturer : YSI
Model : 5000-115V
Serial No. : 15E102796
ID No. : RYG_EN0032
Received Date : 17 January 2025
Test Date : 20 January 2025
Reference : 2501-0600DSC-1
Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd.
(Rayong Branch)
616/10 Moo 5, T.Maenam Khu, A.Pluakdaeng,
Rayong 21140, Thailand
Laboratory Condition : Temperature (25 ± 5) °C
Humidity (50 ± 20) %
Test Procedure : In - house method : CP-CH9
by Comparison Technique with Azide Modification Method
Tested by : Walalak Sirithean
Approved by : 
Approved Signatory
() 
() 
(✓) 
Issue Date : 21 January 2025



Cert.No.: 25TW15
Page.: 2 of 2

Condition of this result of calibration

1. Reference Standard Instruments :

This certification is traceable to the International System of Unit through the reference standards laboratory of Industrial Calibration Center, Technology Promotion Association (Thailand-Japan).

Instruments	Serial No.	ID No.	Certificate No.	Due Date
1. Burette	-	130BU10	23CG1172	22 Mar 2025
2. Balance	14233821	110RC001	24MM131	04 July 2025

2. Standard Material :-

Material	Manufacturer	Lot.No.	Assay
Sodium Thiosulfate 5-Hydrate AR	KEMAUS	2203162447	99.6%

Result : Dissolved Oxygen Meter Adjustment With Air 100 %
Dissolved Oxygen Probe No.: 15E100464

Titration Method (Azide Modification Method) (mg/L)	DO Meter Reading (mg/L)	Standard Deviation (mg/L)
8.20	8.20	0.0084

This report was certified only for the instrument we tested.It is allowable to use for study
Intend to use for advertising and referral purpose is prohibited.This report may not be reproduced
other in full, without written approval of the laboratory

-o0o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL.0-2717-3000-29 FAX.0-2719-9484



Equipment : Low Temp. Incubator
Condition As-Received : New Item
Reference : 2603-0502OC-2
Procedure Used :-

Cert. No.: 26TM461
Page : 2 of 3

Certificate of Calibration

Cert. No.: 26TM461
Page : 1 of 3

Equipment : Low Temp. Incubator
Manufacturer : Memmert
Model : IPP750
Serial No. : V818.0084
ID No. : RYG_EN0154

Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd. Rayong Branch
616/10 Moo 5, T.Maenamkoo, A.Pluakdaeng,
Rayong 21140, Thailand

Location : BOD Room

Received Order : 18 March 2026
Calibration Date : 18 March 2026
Ambient Temperature : $(26 \pm 10) ^\circ\text{C}$
Relative Humidity : $(50 \pm 30) \%$
AC Line Voltage : $(220 \pm 22) \text{ V}$

Calibrated by : Preecha Hlahib

Approved by :

()
()
(✓)

Issue Date : 31 March 2026

REVIEW BY
APPROVED BY.....
NEXT CAL DATE.....18/09/27

Calibration were conducted using calibration procedure CP-OT02 based on TLAS G-20 according to direct measurement method with Data Acquisition which connected with Resistance Temperature Detector (RTD).

The temperature scale used was based on ITS-90.

Condition of this result of calibration

1. Reference standard instrument:-

Instrument	Serial No.	Cert. No.	Traceable	Due Date
1) Data Acquisition	MY49023932	25LM121	TPA,	27 Jul 2026

2. This certificate is valid only to the item calibrated on date and place of calibration.

3. This measurement result is traceable to the International System of Unit maintained through :


Remark : TPA : Technology Promotion Association (Thailand - Japan)

Result of Calibration :- (*) Without Adjustment

Function of UUC* : Temperature Source

Fresh air setting : Not Available

Environment during calibration		
	Beginning	Finished
Temp. (°C)	23	21
REL.Humid. (%)	37	33
AC Supply (Volt)	220	221

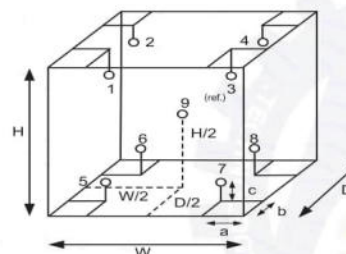

Probe Installation Details :

a = 10 cm
b = 10 cm
c = 10 cm

Dimension of Chamber :

D = 0.60 m
W = 1.0 m
H = 1.2 m
Capacity = 0.72 m³

Position :	Ref. Std. ID No.:
1	19-16RTD-01
2	19-16RTD-02
3	19-16RTD-03
4	23-16RTD-04
5	19-16RTD-05
6	19-14RTD-06
7	21-16RTD-07
8	19-16RTD-08
9 (ref.)	19-16RTD-09

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.



Equipment : Low Temp. Incubator
 Condition As-Received : New Item
 Reference : 2603-0502OC-2
 Result of Calibration :- (*) Without Adjustment
 Function of UUC* : Temperature Source
 Fresh air setting : Not Available

Cert. No.: 26TM461
 Page : 3 of 3

Calibration Point (°C)	UUC* Setting (°C)	UUC* Reading (°C)	Temperature stability (± °C)	Temperature uniformity (°C)	Overall Variation (°C)	Coverage Factor <i>k</i>
20.0	20.0	20.0	0.019	0.19	0.34	2

Calibration Point (°C)	Measured Temperature (°C)									Uncertainty (± °C)
	Position									
	1	2	3	4	5	6	7	8	9 (ref.)	
20.0	20.185	20.132	20.303	20.160	20.001	20.054	19.983	20.060	20.163	0.30

Average* : The average of 30 values in each position.

Temperature stability : One-half of the greatest maximum difference of measured temperature at any one sensor.

Temperature uniformity : The maximum difference of measured temperatures at any sensors and the measured temperature at the reference location which are observed at the same time or at as close an observation time as possible to determine the temperature pattern or homogeneity within the chamber under steady-state conditions.

Overall Variation : The Difference of the maximum and minimum measured temperatures throughout observation.

UUC* : Unit Under Calibration

Note : The reported uncertainty of measurement was included stability and excluded uniformity .

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor *k*, providing a level of confidence of approximately 95 %.

-o0o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
 CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
 534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
 TEL.0-2717-3000-29 FAX.0-2719-9484



Certificate of Calibration

Cert.No.: 25CG3668
 Page.: 1 of 2

Equipment :	Burette	REVIEW BY  APPROVED BY NEXT CAL DATE 18/09/26
Capacity :	50 mL	
Serial No. :	-	
ID. No. :	RYG_EN0216	
Manufacturer :	Witeg	
Made in :	Germany	
Submitted by :	ALS Laboratory Group (Thailand) Co.,Ltd. Rayong Branch 616/10 Moo 5 T.MaenamKoo, A.Pluakdaeng Rayong 21140, Thailand	
Ambient Temperature :	(20 ± 2.5) °C	
Relative Humidity :	(50 ± 10) %	
Barometric Pressure :	753 mmHg	
Calibration Procedure :	ASTM E 542 - 01	
Calibrated by :		
Approved by :		
()		
(✓)		
Issue Date :	19 September 2025	

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.



Equipment : Burette
Received Date : 16 September 2025
Condition As-Received : Used Item
Calibration Date : 18 September 2025
Reference : 2509-0564DSC-3

Cert.No.: 25CG3668
Page.: 2 of 2

Condition of this result of calibration

1. Reference Standard Instruments :

Instruments	Model	Serial No.	ID. No.	Certificate No.	Traceability	Due date
1) Balance	XP205	B134206712	140RC007	25MM296	TPA	16 July 2026
2) Humidity/Baro/Temp	MHB-382SD	AM.42259	140EC016	25H1616	TPA	14 Aug 2026
3) Digital Thermometer	HH376	230806555	140EC013	25I1740	TPA	17 Jan 2026

This measurement result is traceable to SI Unit

- The certificate is valid only to the item calibrated on date and place of calibration.
- True value is converted to true volume at the standard temperature of 20 °C

Calibration result :

Nominal capacity (mL)	Reading (mL)	Uncertainty (± mL)	k Factor
10	10.0264	0.0082	2.00
25	25.0141	0.0087	2.00
50	49.9952	0.010	2.00

Remark mL = cm³

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-o-o-



Certificate of Calibration

Equipment: SPECTROPHOTOMETER
Model: DR6000
Serial No. (or ID.): 1627845 (RYG_EN0037)
Manufacturer: HACH
Condition: In Condition

Certificate No.: C06250108
Issued Date: 18 March 2025
Job No.: WO-00064379
Page: 1 of 3

Customer: ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch)
616/10 Moo 5 T.Maenam Khu,
A.Pluakdaeng, Rayong 21140, Thailand.

APPROVED BY

NEXT CAL. DATE 18/09/26

Environment Condition: Temperature 24.4 °C ± 0.3 °C
Humidity 60.8 %RH ± 3.5 %RH

Calibration Place: ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch)
(Wet Chemistry Lab)
616/10 Moo 5 T.Maenam Khu, A.Pluakdaeng, Rayong 21140, Thailand.

Calibration By: Mr.Preecha Phooarsai

Calibration Date: 18 March 2025

The Method used: In house method, CAL-WI-24, base on ASTM E 275-08 and ASTM E 387-04

Traceability: This certificate is traceable to the CRM maintained by National Institute of Standards and Technology (NIST) through Starna Scientific Limited.

The standard for Wavelength Certificate No. 111583 and 111584

The standard for Photometric Certificate No. 9114984 and 111588

The standard for Stray light Certificate No. 111586 and 111585

The standard for Spectral resolution Certificate No. 111587

Person in charge

Authorized signatory

This certificate is issued the units of measurement according to the International System of Units (SI). It provides traceability of measurement to international or national standard or other recognized national standard laboratories.

The measurement uncertainty stated is the expanded uncertainty which is obtained from the standard uncertainty multiplied by the coverage factor ($k=2$) to provide a level of confidence of approximately 95%. It is determined in accordance with the Guide to Expression of Uncertainty in Measurement (GUM).

These results may be affected by deviations from specified conditions. The results relate only to the items tested, calibrated or sampled. The report shall not be reproduced except in full without approval of DKSH Technology Limited.

บริษัท ดีเคเอส อีเซีย จำกัด
DKSH Technology Limited

2533 Sukhumvit Road, Bangkok, Phrakhanong, Bangkok 10260
Phone: +66 2639 7000 Email: info.calibration@dksh.com Website: www.dksh.com/scientific-thailand

Delivering Growth - in Asia and Beyond.

CAL-FM-C06-16: 11 Mar 2024



Certificate No.: C06250108

Page 2 of 3

Calibration Results:

Without Adjustment

Wavelength Accuracy (nm), The spectral bandwidth of Std at 2 nm and UUC at 2 nm

Standard Wavelength	Unit Under Calibration	Correction	Uncertainty
418.61	418.5	0.11	0.13
536.66	536.7	-0.04	0.13
637.98	638.3	-0.32	0.13
748.48	748.8	-0.32	0.13
807.03	807.5	-0.47	0.13

Photometric Accuracy (Absorbance)

Wavelength	Standard absorbance	Unit Under Calibration	Correction	Uncertainty
420 nm	0.0000	0.000	0.0000	0.0045
	0.2930	0.291	0.0020	0.0045
	0.5168	0.518	-0.0012	0.0045
	1.0298	1.031	-0.0012	0.0045
440 nm	0.0000	0.000	0.0000	0.0045
	0.2867	0.285	0.0017	0.0045
	0.5073	0.508	-0.0007	0.0045
	1.0083	1.009	-0.0007	0.0045
465 nm	0.0000	0.000	0.0000	0.0045
	0.2516	0.250	0.0016	0.0045
	0.4595	0.461	-0.0015	0.0045
	0.9334	0.935	-0.0016	0.0045
546.1 nm	0.0000	0.000	0.0000	0.0045
	0.2461	0.246	0.0001	0.0045
	0.4652	0.466	-0.0008	0.0045
	0.9468	0.948	-0.0012	0.0045
590 nm	0.0000	0.000	0.0000	0.0045
	0.2594	0.259	0.0004	0.0045
	0.5040	0.505	-0.0010	0.0045
	1.0032	1.004	-0.0008	0.0045
635 nm	0.0000	0.000	0.0000	0.0045
	0.2579	0.258	-0.0001	0.0045
	0.4971	0.497	0.0001	0.0045
	0.9720	0.973	-0.0010	0.0045

บริษัท ดีเคเอสเอช เทคโนโลยี จำกัด
DKSH Technology Limited
2533 ถนนสุขุมวิท แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร 10260
2533 Sukhumvit Road, Bangchak, Phrakhanong, Bangkok 10260
Phone: +66 2639 7000 Email: info.calibration@dksh.com Website: www.dksh.com/scientific-thailand

Delivering Growth – in Asia and Beyond.

CAL-FM-C06-16: 11 Mar 2024



Certificate No.: C06250108

Page 3 of 3

Calibration Results:

Without Adjustment

Photometric Accuracy (Absorbance)

Wavelength	Standard absorbance	Unit Under Calibration	Correction	Uncertainty
235 nm	0.0000	0.000	0.0000	0.0080
	0.7355	0.738	-0.0025	0.0080
257 nm	0.0000	0.000	0.0000	0.0080
	0.8574	0.857	0.0004	0.0080
313 nm	0.0000	0.000	0.0000	0.0080
	0.2864	0.290	-0.0036	0.0080
350 nm	0.0000	0.000	0.0000	0.0080
	0.6374	0.637	0.0004	0.0080

Stray light *

Standard: cut-off	UUC: Wavelength (nm)	UUC: Transmission (%T)	Absorbance (A)
260.62 +/- 0.11 nm	260.6	1.7	1.770
391.44 +/- 0.11 nm	391.4	1.4	1.854

Spectral Resolution *

Nominal Concentration 0.02 % v/v	Peak	Trough	Ratio	SBW
Standard Wavelength (nm)	268.66	266.69	1.38	2.00
UUC: Wavelength (nm)	268.2	266.2		
Std Absorbance (A)	0.4566	0.2780		
UUC: Absorbance (A)	0.413	0.299		

* Calibration Marked " Not TISI Accredited " in this Certificate have been included for completeness.

The End of Certificate

บริษัท ดีเคเอสเอช เทคโนโลยี จำกัด
DKSH Technology Limited
2533 ถนนสุขุมวิท แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร 10260
2533 Sukhumvit Road, Bangchak, Phrakhanong, Bangkok 10260
Phone: +66 2639 7000 Email: info.calibration@dksh.com Website: www.dksh.com/scientific-thailand

Delivering Growth – in Asia and Beyond.

CAL-FM-C06-16: 11 Mar 2024



ใบตรวจสอบสภาพเครื่องวัดสิ่งแวดล้อม

เลขที่ใบงาน: WO-00064379

ชนิดเครื่องมือ: SPECTROPHOTOMETER รุ่น: DR6000

หมายเลขเครื่อง: 1627845

ตรวจสอบ (รับ)		รายการตรวจเช็ค	ตรวจสอบ (ส่ง)		หมายเหตุ
18 Mar 2025			18 Mar 2025		
ปกติ	ไม่ปกติ		ปกติ	ไม่ปกติ	
		General			
☒	☐	1. ความสมบูรณ์เครื่อง	☒	☐	
☒	☐	2. ความสะอาด (ช่องใส่ตัวอย่าง, ภายใน-นอกเครื่อง)	☒	☐	
☒	☐	3. สวิทช์ ปิด – เปิด เครื่อง (On-Off Swich)	☒	☐	
☒	☐	4. ปุ่มกด (Keypad)	☒	☐	
☒	☐	5. หน้าจอ (Display, Screen Contrast)	☒	☐	
		Spectrophotometer			
☐	☐	6. แรงดันไฟฟ้า (Battery Backup) >= 2.5 VDC	☐	☐	
☐	☐	7. ตัวหมุนเลือกความยาวคลื่น (Wavelength Control)	☐	☐	
☒	☐	8. ความยาวคลื่น (Wavelength Check)	☒	☐	*
☒	☐	9. แหล่งกำเนิดแสง (UV < 3,000 hour)	☒	☐	13.5 Hours
☒	☐	10. แหล่งกำเนิดแสง (Visible < 5,000 hour)	☒	☐	893.0 Hours
☒	☐	11. ซองวัดหลายตัวอย่าง (Carousel Module)	☒	☐	
		pH Meter and Conductivity Meter			
☐	☐	12. อิเล็กโทรด (Electrode and Connection Cable)	☐	☐	
☐	☐	13. ระดับสารละลายใน Electrode (Level KCl)	☐	☐	
☐	☐	14. ฝาปิดกันปลาย Electrode (Dust Protection Hood)	☐	☐	
☐	☐	15. ขาจับอิเล็กโทรด (Stand)	☐	☐	
		Turbidimeter			
☐	☐	16. ค่าความขุ่นที่ต่ำสุด (No Sample)	☐	☐	
☐	☐	17. ระดับการส่องสว่างของแสง (>= 2.5 ไม่นเกิน 3.0)	☐	☐	
		Automatic titrator			
☐	☐	18. สภาพ Piston Burettes	☐	☐	
☐	☐	19. Function Rinsing and Dosing	☐	☐	
☐	☐	20. ระบบท่อสายยางและอุปกรณ์ประกอบ	☐	☐	

เพิ่มเติม/ข้อแนะนำ: * 656.1nm = 656.1nm

* 486.0nm = 485.7nm

Mr.Preecha Phooarsai
Service Engineer

บริษัท ดีเคเอส เอช เทคโนโลยี จำกัด
DKSH Technology Limited
2533 ถนนสุขุมวิท แขวงบางจาก เขตพระโขนง กรุงเทพมหานคร 10260
2533 Sukhumvit Road, Bangchak, Phra Khanong, Bangkok 10260
Phone: +66 2639 7000 Email: info.calibration@dksh.com Website: www.dksh.com/scientific-thailand

Delivering Growth - in Asia and Beyond.



Metrology Center SCI ECO Services Company Limited

51 Moo 8, Tubkwang, Kaeng Khoi, Saraburi, Thailand 18260

Bangkok Tel: +668 9205 6851, +669 81924 0059

Saraburi Tel: +669 8247 2360

Website: www.scieco.co.th E-Mail: calibrate@scg.co.th

Certificate No. T251529

Certificate of Calibration

Page 1 of 3

Equipment : DIGESTION UNIT

Manufacturer : Gerhardt, Germany

Model : KT - 20S

Serial No. : 572021009

Customer Code : RYG_EN0188

ID No. : T6452A5

Customer : ALS Laboratory Group (Thailand) Co.,Ltd. (Rayong Branch)

616/10 Moo 5 T.Maenamkoo,

A.Pluakdaeng, Rayong 21140

Customer Location : ENVIRONMENT LABORATORY

Date of Receipt : 3 September 2025

Calibrated By : Sujjar Naknakred (Site Calibration Manager)

Approved By : (Site Calibration Manager)

Date of Issue : 17 SEP 2025

The uncertainties are for a confidence probability of approximately 95%.



This Certificate is issued in accordance with the conditions of accreditation granted by the Thai Laboratory Accreditation Scheme which has assessed the measurement capability of the laboratory and its traceability to recognized national standards and to the units of measurement realized at the corresponding national standard laboratory. This certificate may not be reproduced other than in full except with the prior written approval of the Metrology Center.



Metrology Center

SCI ECO Services Company Limited

51 Moo 8, Tubkwang, Kaeng Khoi, Saraburi, Thailand 18260

Certificate No. T251529

Page 2 of 3

Calibration Report

Equipment : DIGESTION UNIT
 Date of Calibration : 10 September 2025
 Environment : Temperature : 21.7 - 24.3 °C
 Line Voltage : 226.9 - 232.1 V
 Relative Humidity : 55 - 65 %RH

Condition of this results of calibration :

- This equipment was calibrated by insert four standard thermocouples type S into its chamber , the other one thermocouple type T use for ambient temperature measurement . The calibration was done in according to WI-T10.
- Reference Standard Instrument :

Instrument	Model	Instrument No.	Certificate No.	Due Date
TC	Type S	M20A1-(CH1-CH4)	T250750	14 May 2026
DATA LOGGER	34970A	T261	T250750	14 May 2026
- This certificate is traceable to :
 National Institute of Metrology (Thailand) through Metrological Center (NSC-TISI-TIS 17025 CALIBRATION 0244.)
- Condition of calibrated item : good
 Equipment Description :
 Time Constant 1 Hour 46 Minute At 380 °C
 Fresh Air Damper ☐ Open ☐ Min ☐ Medium ☐ Max
☐ Close
☒ Not Available
- Adjustment :
 (X) without adjustment () after adjustment

Approved By. _____

FM-TL05 102/27-03-68



Metrology Center


SCI ECO Services Company Limited

51 Moo 8, Tubkwang, Kaeng Khoi, Saraburi, Thailand 18260

Certificate No. T251529

Page 3 of 3

Calibration Report

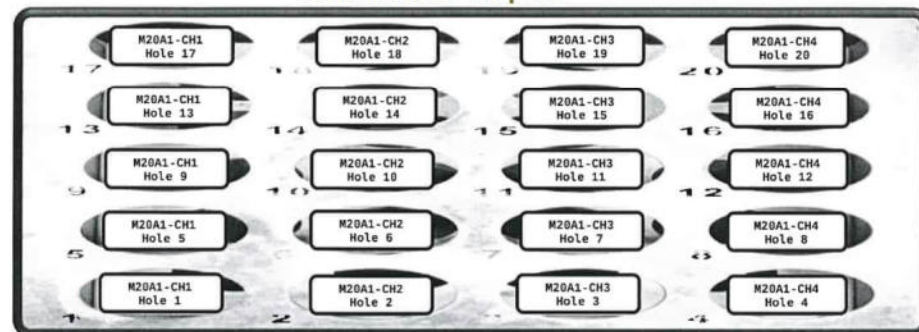

DISPLAY CONTROL (FRONT)

Measurement Results

Cal.Point	Setting	Reading	STD.	Position of Standards at Block									
(°C)	(°C)	(°C)	Reading	M20A1 - CH1 Hole 1	M20A1 - CH2 Hole 2	M20A1 - CH3 Hole 3	M20A1 - CH4 Hole 4	M20A1 - CH1 Hole 5	M20A1 - CH2 Hole 6	M20A1 - CH3 Hole 7	M20A1 - CH4 Hole 8	M20A1 - CH1 Hole 9	M20A1 - CH2 Hole 10
380	360	360	Max °C	381.2	380.5	381.0	381.0	379.2	380.8	381.3	377.7	382.8	381.5
			Min °C	380.7	380.0	380.4	380.5	378.6	380.1	380.9	377.2	381.9	380.9
			Average °C	381.0	380.3	380.7	380.8	378.9	380.4	381.1	377.5	382.4	381.2
			Stability ±°C	0.3	0.3	0.3	0.2	0.3	0.3	0.2	0.2	0.5	0.3

Cal.Point	Setting	Reading	STD.	Position of Standards at Block									
(°C)	(°C)	(°C)	Reading	M20A1 - CH3 Hole 11	M20A1 - CH4 Hole 12	M20A1 - CH1 Hole 13	M20A1 - CH2 Hole 14	M20A1 - CH3 Hole 15	M20A1 - CH4 Hole 16	M20A1 - CH1 Hole 17	M20A1 - CH2 Hole 18	M20A1 - CH3 Hole 19	M20A1 - CH4 Hole 20
380	360	360	Max °C	382.5	377.2	378.7	378.8	378.5	379.9	383.3	381.0	382.4	381.1
			Min °C	381.7	376.5	378.5	378.5	378.1	379.5	382.7	380.6	381.6	380.4
			Average °C	382.1	376.8	378.6	378.7	378.3	379.7	383.0	380.8	382.0	380.8
			Stability ±°C	0.4	0.4	0.1	0.2	0.2	0.2	0.3	0.2	0.4	0.4

The expanded uncertainty of temperature measurement was ± 1.8 °C

The calibration result apply only the above calibrated item.

The result of test was found accurate as shown on date and place of test only.

The reported expanded uncertainty is based on a standard uncertainty multiplied by a coverage factor k=2 , providing a level of confidence of approximately 95 % .

End of Certificate.

Approved By. _____

FM-TL05 102/27-03-68



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
TEL.0-2717-3000-29 FAX.0-2719-9484



Cert.No.: 25CH709/1
Page.: 2 of 3

Certificate of Calibration

Cert.No.: 25CH709/1
Page.: 1 of 3

This Certificate was issued to replace the Certificate No.25CH709

Equipment : pH Meter
Manufacturer : Mettler Toledo
Model : SevenExcellence
Serial No. : B834291445
ID No. : RYG_EN0152
Condition As-Received: Used Item
Received Date : 12 June 2025
Calibration Date : 18 June 2025
Reference : 2506-0407DSC-2
Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd.
Rayong Branch
616/10 Moo 5, T.Maenam Khu,
A.Pluakdaeng, Rayong 21140, Thailand

Ambient Temperature : (25 ± 2.5) °C
Relative Humidity : (50 ± 15) %
Calibration Procedure : In - house method :
- CP-CH5 by direct measurement with DC voltage
standard and direct measurement with
certified reference material (CRM)
- CP-CH8 by comparison with temperature standard

Calibrated by : Walalak Sirithean

Approved by :

Approved Signatory

()
()
(✓)

Issue Date : 1 July 2025

REVIEW BY

APPROVED BY

NEXT CAL DATE.....18/12/26

Condition of this calibration result

1. Reference Standard Instrument

Instrument	Serial No.	ID No.	Cert. No.	Due Date
1) Document Process Calibrator	54030049	130RC116	24E2759	25 Aug 2025
2) Ref. Standard Thermometer	4982054	110RC044	24I757	14 July 2025

- This measurement result is traceable to SI through Technology Promotion Association (Thailand - Japan)

2. Certified Reference Materials :The measurement results are traceable to SI through Hach Lenge GmbH Ltd.,
Deutsche Akkreditierungsstelle, Accredited No.D-RM-15184-01-00
:The measurement results are traceable to SI through CPA chem Ltd.,
ANSI-ASQ National Accreditation Board, Accredited No. AR-1835

Buffer Solution	Manufacturer	Lot No.	Exp. date
pH 4.007	CPA chem	1066665	18 Jan 2027
pH 7.000	Hach Lenge GmbH	C03232	02 Dec 2026
pH 10.010	CPA chem	1066669	18 Jan 2026

3. This certificate is valid only to the item calibrated on date and place of calibration.

Calibration Results

Function : mV Measurement

Performing standard curve by Document Process Calibrator at pH (4,7,10)

Unit Under Calibration	Nominal Value	Standard Voltage Input	Actual Reading		Uncertainty of Measurement (±mV)	Coverage factor k
	pH	mV	mV	pH		
pH Meter S/N.: B834291445	4.000	177.48	177.3	4.000	0.058	2.00
	7.000	0.00	-0.1	7.000	0.058	2.00
	10.000	-177.48	-177.5	10.000	0.058	2.00

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written
Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.



Cert.No.: 25CH709/1
Page.: 3 of 3

Calibration Results

Function : pH Measurement

Performing three buffers standard curve by using buffer nominal pH (4,7,10)

Unit Under Calibration	Standard pH Buffer Solution	Actual pH Reading	Actual mV Reading (mV)	Uncertainty of pH Measurement ($\pm$)	Coverage factor k
pH Electrode	4.007	4.006	181.1	0.0044	2.00
S/N.: 5211504	7.000	7.000	4.9	0.0084	2.00
	10.010	10.007	-170.6	0.0066	2.00

Function : Temperature Measurement

(*) Without adjustment

This equipment was connected with Temperature Probe;

- Model : InLabEXpert Pro-ISM

- Serial No. : 5211504

Dimension of probe

- Length : 120 mm.

- Diameter : 12 mm.

- Immersion Depth : 100 mm.

Calibration Point (°C)	Standard Temperature (°C)	UUC* Reading (°C)	Error (°C)	Uncertainty of measurement ($\pm$ °C)	Coverage factor k
25.0	25.001	25.1	0.099	0.13	2.00

Remark - UUC* = Unit Under Calibration

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor k , providing a level of confidence of approximately 95 %.

-o0o-



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG, BANGKOK 10250
TEL. 0-2717-3000-24 FAX. 0-2719-9484



Certificate of Calibration

Certificate No. : 25E1979/1

Page : 1 of 2

This Certificate was issued to replace to the Certificate No. 25E1979

Equipment : pH Meter
Manufacturer: Mettler Toledo
Model : SevenExcellence
Serial No.: B834291445
ID No.: RYG_EN0152
Condition As-Received: Used Item
Received Date: 12 June 2025
Calibration Date: 16 June 2025
Reference: 2506-0407DSC
Ambient Temperature: (23 $\pm$ 2) °C
Relative Humidity: (50 $\pm$ 10) %

This certificate may not be reproduced other than in full, except with the prior written approval of the head of Corporate Services 3: Equipment Calibration and Testing Services.

Submitted by: ALS Laboratory Group (Thailand) Co.,Ltd. Rayong Branch

616/10 Moo 5, T.Maenam Khu, A.Pluakdaeng,
Rayong 21140, Thailand

Procedure used: Calibration were conducted using calibration procedure No. CP-E17 According to EURAMET cg-15.

Condition of this result of calibration

1.Reference standards instruments :

Instrument	Model	Serial No.	Certificate No.	Due Date
1) Multi-Product Calibrator	5500A	6315011	25E1627	19 May 2026

2.This result of calibration was made on requested at the point specified by customer.

3.The certificate is valid only to the item calibrated on date and place of calibration.

4.This measurement result is traceable to the International System of Unit maintained through:-

-Technology Promotion Association (Thailand-Japan), NSC-ONSC Accredited No. Calibration 0008

Calibrated by :
Issue Date : 01 July 2025

Approved Signatory :

[]
[X]
[]



Cert. No.: 25E1979/1

Page.: 2 of 2

Result of calibration :- (*) Without adjustment () After adjustment

Function: DC voltage measurement

Range: 2000 mV

Standard Value	UUC* Reading	Error	Uncertainty
(mV)	(mV)	(mV)	($\pm$ μ V)
-200.0000	-199.9	0.1	68
-150.0000	-150.0	0.0	65
-100.0000	-100.0	0.0	63
-50.0000	-50.0	0.0	61
0.0000	0.0	0.0	58
50.0000	50.0	0.0	61
100.0000	100.0	0.0	63
150.0000	149.9	-0.1	65
200.0000	199.9	-0.1	68

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor $k = 2$, providing a level of confidence of approximately 95 %

UUC* = Unit Under Calibration.

-o0o-

SARTORIUS



NSC-TISI-TIS 17025
CALIBRATION 0426

Accredited by

NSC-TISI-TIS 17025

Calibration 0426

Calibration certificate

Calibration Certificate No. 25BCI0265

Object	Electronic non-automatic weighing instrument	This calibration certificate documents the traceability to national standards.
Manufacturer	Sartorius	Uncertainties of measurements are taken into account when only statements of compliance are made.
Type	MSE224S-100-DU	This certificate was prepared by Sartorius Corporation in accordance to the current ISO/IEC 17025:2017 standard and Sartorius Work Instruction (Method) SOP WI 08.
Serial QM Ident. no.	27405555 BKK_EN0003	This certificate relate and apply this equipment only.
Customer	ALS Laboratory Group (Thailand)Co., Ltd. 104 Phatthanakarn 40,Phattanakarn Rd.,Khwaeng Phatthanakarn ,Khet Suan Luang,Bangkok 10250	
Order no.	265054	
Number of pages	4	
Date of calibration	17 Jul 2025	

REVIEW BY

APPROVED BY

NEXT CAL DATE.....17/07/26

This calibration certificate may not be reproduced other than in full except with the permission of NSC-TISI-TIS-17025 and the issuing laboratory. Calibration certificates without signature are not valid.

The user is obliged to have the object recalibrated at appropriate intervals.

Date of issue	17 Jul 2025	Approval of the Calibration Certificate	Person in charge
		Mr.	

Sartorius (Thailand) Co., Ltd.
129 Rama 9 Road, Huaykwang
10310 Bangkok

Verical®
Version 6.6

Page

1 | 4

Calibration object

Single range instrument

Model	MSE224S-100-DU
Serial Number	27405555
QM Ident. no Inventory no.	BKK_EN0003 ---
Maximum capacity (Max. load)	220.0000 g
Measured up to	220.0000 g
Scale interval	0.0001 g

Place of calibration

Address	According to page 1
Department Cost center	ENVI Department ---
Building Floor	--- 1st Floor.
Room	Laboratory Room.
Maximum temperature variation at place of calibration	5 K

Calibration procedure

EURAMET Calibration Guide No. 18, Version 4.0 (11/2015) - Guidelines on the Calibration of Non-Automatic Weighing Instruments

Test equipment

Test equipment type	Test equipment ID	Valid until
Thermometer	Testo 174(Traceable to SI unit through ENTECH)	11 Nov 2025
Test weight set OIML R111 E2	Certificate No.M2308197S ,E2(Traceable to SI unit through TCS)	23 Aug 2025

Adjustment Status

The measuring device was internally adjusted before the calibration.

Environmental and measuring conditions

Date of calibration	17 Jul 2025
Temperature at place of calibration Temp. diff. <i>T</i> _{weights} - <i>T</i> _{place}	22.5 °C 0.7 K
Measuring conditions	The installation site is suitable. The device is level. Balance was loaded up to Max before test.
Comments	Humidity 58.0 %RH.

Measurement results | Measurement uncertainties

Repeatability	Eccentricity
Test load (nominal): 10 g 200 g	Test load (nominal): 100 g
10 g200 g	Center100.0000 g
110.0000 g200.0000 g	Front left100.0001 g
210.0000 g199.9999 g	Back left100.0000 g
310.0000 g200.0000 g	Back right100.0001 g
410.0000 g200.0000 g	Front right100.0001 g
510.0001 g199.9999 g	Maximum deviation from centric loading indication Δ <i>f</i> _{ecc} max = 0.0001 g
610.0000 g200.0000 g	
710.0000 g200.0000 g	
810.0001 g200.0000 g	
910.0000 g200.0000 g	
1010.0000 g199.9999 g	
s = 0.00004 g s = 0.00005 g	

Error of indication

Testload	Indication	Error	Expansion factor	Uncertainty	Uncertainty relative
<i>L</i>	<i>I</i>	<i>E</i>	<i>k</i>	<i>U</i> (<i>E</i>)	<i>U</i> _{rel} (<i>E</i>)
0.0100 g	0.0100 g	0.0000 g	2.00	0.00012 g	1.2 %
0.1000 g	0.1000 g	0.0000 g	2.00	0.00013 g	0.13 %
1.0000 g	1.0000 g	0.0000 g	2.00	0.00013 g	0.013 %
2.0000 g	2.0000 g	0.0000 g	2.00	0.00013 g	0.0065 %
5.0000 g	5.0000 g	0.0000 g	2.00	0.00013 g	0.0026 %
10.0000 g	10.0000 g	0.0000 g	2.00	0.00013 g	0.0013 %
20.0000 g	20.0000 g	0.0000 g	2.00	0.00014 g	0.00068 %
50.0000 g	50.0000 g	0.0000 g	2.00	0.00015 g	0.00029 %
100.0000 g	100.0000 g	0.0000 g	2.00	0.00018 g	0.00018 %
200.0000 g	200.0000 g	0.0000 g	2.00	0.00028 g	0.00014 %
220.0000 g	220.0001 g	0.0001 g	2.00	0.00032 g	0.00015 %
Maximum error of indication		<i>E</i> _{max} = 0.0001 g			

*U*_{rel}(*E*) is the quotient of *U*(*E*) and test load *L*. The uncertainty of measurement *U*(*E*) is valid only if error *E* is considered. You will find reference notes on the uncertainty of measurement in use under: Appendix to the calibration certificate | Interpretation of measurement results.
Reference note: The reported expanded uncertainty of measurement is stated as the standard uncertainty of measurement multiplied by the documented Expansion factor, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

End of calibration certificate

Uncertainty of measurement in use


Device adjusted before measurement Yes
 Temperature deviation considered 1.5 K (isoCAL active)
 Temperature coefficient considered $1 \cdot 10^{-6}/K$

Uncertainty of the weighing result $U_{gI}(W)$ $U_{gI}(W) = 0.00013 \text{ g} + 4.19 \cdot 10^{-6} \cdot R$

Reference note: The current uncertainty of measurement is calculated by entering of the reading R into this formula. In relation to this, there is no need for a correction of the indication error. The reported expanded uncertainty of measurement is stated as the standard uncertainty multiplied with an Expansion factor of 2, determined in accordance with the European Calibration Guideline EURAMET cg-18, V4.0. There is a 95 % probability that the value of the measurand will be in the assigned value range.

Indication in % from max load	Net indication R	Uncertainty $U_{gI}(W)$	Uncertainty relative $U_{gI}(W)_{rel}$
1 %	2.2000 g	0.00014 g	0.0063 %
25 %	55.0000 g	0.00036 g	0.00066 %
50 %	110.0000 g	0.00059 g	0.00054 %
75 %	165.0000 g	0.00082 g	0.00050 %
100 %	220.0000 g	0.0011 g	0.00048 %

Graphic realization of the relative uncertainty of measurement | process accuracy

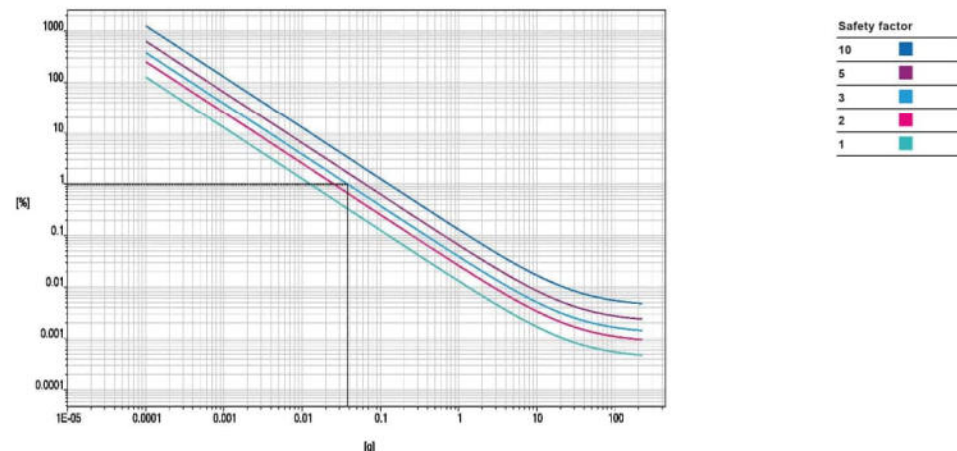

Displayed example

Process accuracy 1.00 %
 Safety factor 3
 Minimum sample weight 0.0380 g



TECHNOLOGY PROMOTION ASSOCIATION (THAILAND-JAPAN)
 CORPORATE SERVICES 3: EQUIPMENT CALIBRATION AND TESTING SERVICES
 534/4 PATTANAKARN ROAD SOI 18, SUANLUANG, SUANLUANG BANGKOK 10250
 TEL.0-2717-3000-29 FAX.0-2719-9484



Certificate of Calibration

Cert. No.: 25TM528

Page : 1 of 3

Equipment : Water Bath

Manufacturer : Memmert

Model : WNE 29

Serial No. : L622.0282

ID No. : BKK_EN0439

Submitted by : ALS Laboratory Group (Thailand) Co.,Ltd.
 104 Phatthanakan 40, Phatthanakan Rd.,
 Khwaeng Phatthanakan, Khet Suan Luang,
 Bangkok 10250 Thailand

Location : Organic Preparation Lab

Received Order : 08 October 2025

Calibration Date : 09 October 2025

Ambient Temperature : $(26 \pm 10) ^\circ C$

Relative Humidity : $(50 \pm 30) \%$

AC Line Voltage : $(220 \pm 22) V$

Calibrated by :

Approved by :

()

()

(✓)

Approved Signatory

Issue Date : 28 October 2025

The Uncertainties are for a confidence probability of approximately 95%

This certificate may not be reproduced other than in full, except with the prior written Approval of the head of Corporate Services 3 : Equipment Calibration and Testing Services.



Equipment : Water Bath
Condition As-Received : Used Item
Reference : 2510-0042OC-13
Procedure Used :-

Cert. No.: 25TM528
Page : 2 of 3

Calibration were conducted using in-house calibration procedure CP-OT04 Based on ASTM E715 according to direct measurement method with Data Acquisition which connected with Industrial Platinum Resistance Thermometer (IPRT).

The temperature scale used was based on ITS-90.

Condition of this result of calibration

1. Reference standard instrument:-

<u>Instrument</u>	<u>Serial No.</u>	<u>Cert. No.</u>	<u>Traceable</u>	<u>Due Date</u>
1) Data Acquisition	MY58041391	25LM20	TPA	08 Feb 2026

2. This certificate is valid only to the item calibrated on date and place of calibration.

3. This measurement result is traceable to the International System of Unit maintained through :


Remark : TPA : Technology Promotion Association (Thailand - Japan)

Result of Calibration :- (*) Without Adjustment

Function of UUC* : Temperature Source

Heat transfer medium used : Water

	Environmental		AC Voltage Supply
	(°C)	(%R.H.)	
Beginning of Calibration	24	63	224
Finished of Calibration	24	58	224

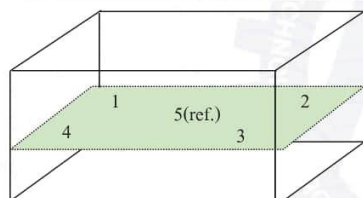

Front

Position :	Ref. Std. ID No.:
1	70RC143
2	70RC144
3	70RC145
4	70RC146
5(ref.)	70RC147



Equipment : Water Bath
Condition As-Received : Used Item
Reference : 2510-0042OC-13
Result of Calibration :- (*) Without Adjustment
Function of UUC* : Temperature Source

Cert. No.: 25TM528
Page : 3 of 3

Calibration point (°C)	UUC* Setting (°C)	UUC* Reading (°C)	Average* Standard Reading (°C)					Uncertainty (± °C)
			Position					
			1	2	3	4	5 (ref.)	
85.0	85.0	85.0	84.863	84.748	84.869	84.990	84.966	0.21

Calibration point (°C)	Uniformity (°C)	Stability (± °C)	Coverage Factor <i>k</i>
85.0	0.33	0.12	2

Average* : The average of 30 values in each position.

Uniformity : The maximum difference of measured temperatures at any sensors and the measured temperature at the reference location which are observed at the same time or at as close an observation time as possible to determine the temperature pattern or homogeneity within the chamber under steady-state conditions.

Stability : One-half of the greatest maximum difference of measured temperature at any one probe.

UUC* : Unit Under Calibration

Note : The reported uncertainty of measurement was included stability and excluded uniformity.

The reported uncertainty of measurement was based on a standard uncertainty multiplied by a coverage factor *k*, providing a level of confidence of approximately 95 %.

-o0o-

ภาคผนวก ค

สำเนาหนังสืออนุญาตขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

ที่ อก ๐๓๑๐(๑)/ ๑ ๖ ๑ ๖ ๘



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒ ๐ พฤศจิกายน ๒๕๖๖

เรื่อง ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด
อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๔ สิงหาคม ๒๕๖๖

- สิ่งที่ส่งมาด้วย ๑. รายชื่อผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๑ แผ่น
๒. รายชื่อเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๕ แผ่น
๓. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๓๑ แผ่น

ตามหนังสือที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ขอต่ออายุหนังสือ
รับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๒๐๔ สถานที่ตั้งเลขที่ ๑๐๔ ซอยพัฒนาการ ๔๐
ถนนพัฒนาการ แขวงพัฒนาการ เขตสวนหลวง กรุงเทพมหานคร ต่อกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด
ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน โดยมีองค์ประกอบดังนี้

- ก. ผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๖ ราย ตามสิ่งที่ส่งมาด้วย ๑
ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ ๑๘๑ ราย ตามสิ่งที่ส่งมาด้วย ๒
ค. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนให้วิเคราะห์ในน้ำเสีย น้ำใต้ดิน อากาศเสีย สิ่งปฏิกูล
หรือวัสดุที่ไม่ใช้แล้ว และดิน ตามสิ่งที่ส่งมาด้วย ๓

หนังสือฉบับนี้จะหมดอายุในวันที่ ๒ กันยายน ๒๕๖๙ หากประสงค์จะต่ออายุหนังสือ
รับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ให้ยื่นคำขอต่ออายุพร้อมเอกสารประกอบคำขอต่อ
กรมโรงงานอุตสาหกรรม ภายใน ๓๐ วัน ก่อนวันสิ้นอายุของหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ทั้งนี้ สามารถยื่นคำขอผ่านระบบอิเล็กทรอนิกส์ได้ที่หน้าเว็บไซต์กรมโรงงานอุตสาหกรรม

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ



นักวิทยาศาสตร์เชี่ยวชาญ วิชาการการแพทย์
ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการการแพทย์อชีวพิษกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๔

ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th




"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด เลขทะเบียน ๖-๒๐๔
ที่ อก ๐๓๑๐(๑)/ ๑ ๖ ๑ ๖ ๘ ลงวันที่ ๒ ๐ พฤศจิกายน ๒๕๖๖

ก. ผู้ควบคุมดูแลห้องปฏิบัติการวิเคราะห์ จำนวน ๖ ราย

- ๑)
๒)
๓)
๔)
๕)
๖)

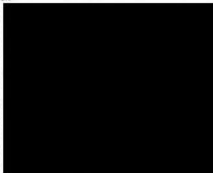

ทะเบียนเลข
ทะเบียนเลข
ทะเบียนเลข
ทะเบียนเลข
ทะเบียนเลข
ทะเบียนเลข



เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด เลขทะเบียน ว-๒๐๔
ที่ อก ๐๓๑๐(๑)/ ๑๖๑๖๘ ลงวันที่ ๒๐ พฤศจิกายน ๒๕๖๖

ข. เจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๑๘๑ ราย

[illegible]

၈၁၆)

a) aa) ad) al) eo) et) ei) ee) ed) eb) ej) es) el) em) en) eñ) er) es) et) eu) ev) ew)

๓๖
 ๓๗
 ๓๘
 ๓๙
 ๔๐
 ๔๑
 ๔๒
 ๔๓
 ๔๔
 ๔๕
 ๔๖
 ๔๗
 ๔๘
 ๔๙
 ๕๐
 ๕๑
 ๕๒
 ๕๓
 ๕๔
 ๕๕
 ๕๖
 ๕๗
 ๕๘
 ๕๙
 ๖๐
 ๖๑
 ๖๒
 ๖๓
 ๖๔
 ๖๕
 ๖๖
 ๖๗
 ๖๘
 ๖๙
 ๗๐
 ๗๑
 ๗๒
 ๗๓
 ๗๔
 ๗๕
 ๗๖
 ๗๗
 ๗๘
 ๗๙
 ๘๐
 ๘๑
 ๘๒
 ๘๓
 ๘๔
 ๘๕
 ๘๖
 ๘๗
 ๘๘
 ๘๙
 ๙๐
 ๙๑
 ๙๒
 ๙๓
 ๙๔
 ๙๕
 ๙๖
 ๙๗
 ๙๘
 ๙๙
 ๑๐๐

৭৬)

๗๕)
๗๖)
๗๗)
๗๘)
๗๙)
๘๐)
๘๑)
๘๒)
๘๓)
๘๔)
๘๕)
๘๖)
๘๗)
๘๘)
๘๙)
๙๐)
๙๑)
๙๒)
๙๓)
๙๔)
๙๕)
๙๖)
๙๗)
๙๘)
๙๙)
๑๐๐)
๑๐๑)
๑๐๒)
๑๐๓)
๑๐๔)
๑๐๕)
๑๐๖)
๑๐๗)
๑๐๘)
๑๐๙)
๑๑๐)
๑๑๑)
๑๑๒)
๑๑๓)
๑๑๔)
๑๑๕)
๑๑๖)
๑๑๗)
๑๑๘)
๑๑๙)
๑๒๐)
๑๒๑)
๑๒๒)
๑๒๓)
๑๒๔)
๑๒๕)
๑๒๖)
๑๒๗)
๑๒๘)
๑๒๙)
๑๓๐)
๑๓๑)
๑๓๒)
๑๓๓)
๑๓๔)
๑๓๕)
๑๓๖)
๑๓๗)
๑๓๘)
๑๓๙)
๑๔๐)
๑๔๑)
๑๔๒)
๑๔๓)
๑๔๔)
๑๔๕)
๑๔๖)
๑๔๗)
๑๔๘)
๑๔๙)
๑๕๐)
๑๕๑)
๑๕๒)
๑๕๓)
๑๕๔)
๑๕๕)
๑๕๖)
๑๕๗)
๑๕๘)
๑๕๙)
๑๖๐)
๑๖๑)
๑๖๒)
๑๖๓)
๑๖๔)
๑๖๕)
๑๖๖)
๑๖๗)
๑๖๘)
๑๖๙)
๑๗๐)
๑๗๑)
๑๗๒)
๑๗๓)
๑๗๔)
๑๗๕)
๑๗๖)
๑๗๗)
๑๗๘)
๑๗๙)
๑๘๐)
๑๘๑)
๑๘๒)
๑๘๓)
๑๘๔)
๑๘๕)
๑๘๖)
๑๘๗)
๑๘๘)
๑๘๙)
๑๙๐)
๑๙๑)
๑๙๒)
๑๙๓)
๑๙๔)
๑๙๕)
๑๙๖)
๑๙๗)
๑๙๘)
๑๙๙)
๒๐๐)

୧୧୫)

๑๓๖	ทะเบียนเลขที่
๑๓๕	ทะเบียนเลขที่
๑๓๖	ทะเบียนเลขที่
๑๓๗	ทะเบียนเลขที่
๑๓๘	ทะเบียนเลขที่
๑๓๙	ทะเบียนเลขที่
๑๔๐	ทะเบียนเลขที่
๑๔๑	ทะเบียนเลขที่
๑๔๒	ทะเบียนเลขที่
๑๔๓	ทะเบียนเลขที่
๑๔๔	ทะเบียนเลขที่
๑๔๕	ทะเบียนเลขที่
๑๔๖	ทะเบียนเลขที่
๑๔๗	ทะเบียนเลขที่
๑๔๘	ทะเบียนเลขที่
๑๔๙	ทะเบียนเลขที่
๑๕๐	ทะเบียนเลขที่
๑๕๑	ทะเบียนเลขที่
๑๕๒	ทะเบียนเลขที่
๑๕๓	ทะเบียนเลขที่
๑๕๔	ทะเบียนเลขที่
๑๕๕	ทะเบียนเลขที่
๑๕๖	ทะเบียนเลขที่
๑๕๗	ทะเบียนเลขที่
๑๕๘	ทะเบียนเลขที่
๑๕๙	ทะเบียนเลขที่
๑๖๐	ทะเบียนเลขที่
๑๖๑	ทะเบียนเลขที่
๑๖๒	ทะเบียนเลขที่

๑๕๓) น

- ๕ -

๑๕๓	ทะเบียนเลขที่
๑๕๔	ทะเบียนเลขที่
๑๕๕	ทะเบียนเลขที่
๑๕๖	ทะเบียนเลขที่
๑๕๗	ทะเบียนเลขที่
๑๕๘	ทะเบียนเลขที่
๑๕๙	ทะเบียนเลขที่
๑๖๐	ทะเบียนเลขที่
๑๖๑	ทะเบียนเลขที่
๑๖๒	ทะเบียนเลขที่
๑๖๓	ทะเบียนเลขที่
๑๖๔	ทะเบียนเลขที่
๑๖๕	ทะเบียนเลขที่
๑๖๖	ทะเบียนเลขที่
๑๖๗	ทะเบียนเลขที่
๑๖๘	ทะเบียนเลขที่
๑๖๙	ทะเบียนเลขที่
๑๗๐	ทะเบียนเลขที่
๑๗๑	ทะเบียนเลขที่
๑๗๒	ทะเบียนเลขที่
๑๗๓	ทะเบียนเลขที่
๑๗๔	ทะเบียนเลขที่
๑๗๕	ทะเบียนเลขที่
๑๗๖	ทะเบียนเลขที่
๑๗๗	ทะเบียนเลขที่
๑๗๘	ทะเบียนเลขที่
๑๗๙	ทะเบียนเลขที่
๑๘๐	ทะเบียนเลขที่
๑๘๑	ทะเบียนเลขที่

เอกสารแนบท้ายหนังสือรับต่ออายุขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด เลขทะเบียน ว-๒๐๔

ที่ อก ๐๓๑๐(๑)/ ๑๖ ๑ ๖ ๘ ลงวันที่ ๒๐ พฤศจิกายน ๒๕๖๖

ค. ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๓๗๔ รายการ

น้ำเสีย จำนวน 60 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aldicarb	High-Performance Liquid Chromatographic Method ⁽⁴⁾
2	Aldicarb Sulfone	High-Performance Liquid Chromatographic Method ⁽⁴⁾
3	Aldicarb Sulfoxide	High-Performance Liquid Chromatographic Method ⁽⁴⁾
4	Aldrin	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
5	Arsenic	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
6	Barium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
7	α-BHC	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
8	β-BHC	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
9	δ-BHC	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
10	γ-BHC	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
11	Biochemical Oxygen Demand	1) 5-Day BOD Test, Azide Modification Method ⁽⁴⁾ 2) 5-Day BOD Test, Membrane Electrode Method ⁽⁴⁾
12	Carbaryl	High-Performance Liquid Chromatographic Method ⁽⁴⁾
13	Carbofuran	High-Performance Liquid Chromatographic Method ⁽⁴⁾
14	Cadmium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
15	Chemical Oxygen Demand	1) Closed Reflux, Colorimetric Method ⁽⁴⁾ 2) Closed Reflux, Titrimetric Method ⁽⁴⁾
16	Chlordane	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
17	Chromium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
18	Color	ADMI Weighted-Ordinate Spectrophotometric Method ⁽⁴⁾

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
19	Copper	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
20	Cyanide	Distillation, Colorimetric Method ⁽⁴⁾
21	2,4'-DDD	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
22	4,4'-DDD	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
23	2,4'-DDE	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
24	4,4'-DDE	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
25	2,4'-DDT	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
26	4,4'-DDT	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
27	Dieldrin	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
28	Endosulfan Sulfate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
29	Endosulfan I	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
30	Endosulfan II	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
31	Endrin	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
32	Endrin Aldehyde	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
33	Formaldehyde	Distillation, Colorimetric Method ⁽³⁾
34	Free Chlorine	1) DPD Ferrous Titrimetric Method ⁽⁴⁾ 2) DPD Colorimetric Method ⁽⁴⁾
35	Heptachlor	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
36	Heptachlor Epoxide	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
37	Hexavalent Chromium	Colorimetric Method ⁽⁴⁾
38	3-Hydroxycarbofuran	High-Performance Liquid Chromatographic Method ⁽⁴⁾
39	Lead	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾

40 Manganese...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
40	Manganese	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
41	Mercury	1) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass spectrometric Method ⁽⁴⁾
42	Methiocarb	High-Performance Liquid Chromatographic Method ⁽⁴⁾
43	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
44	Methomyl	High-Performance Liquid Chromatographic Method ⁽⁴⁾
45	Nickel	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
46	Oil & Grease	1) Liquid-Liquid, Partition-Gravimetric Method ⁽⁴⁾ 2) Soxhlet Extraction Method ⁽⁴⁾
47	Oxamyl	High-Performance Liquid Chromatographic Method ⁽⁴⁾
48	Propoxur	High-Performance Liquid Chromatographic Method ⁽⁴⁾
49	pH	Electrometric Method ⁽⁴⁾
50	Phenols	1) Distillation, Chloroform Extraction Method ⁽⁴⁾ 2) Distillation, Direct Photometric Method ⁽⁴⁾
51	Selenium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
52	Sulfide	Iodometric Method ⁽⁴⁾
53	Temperature	Laboratory and Field Methods ⁽⁴⁾
54	Total Dissolved Solids	Dried at 180 °C ⁽⁴⁾
55	Total Kjeldahl Nitrogen	Semi-Micro Kjeldahl Method ⁽⁴⁾
56	Total Phosphorous	Digestion, Colorimetric Method ⁽⁴⁾
57	Total Suspended Solids	Dried from 103-105 °C ⁽⁴⁾
58	Toxaphene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
59	Trivalent Chromium	1) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method; Colorimetric Method; Calculation ⁽⁴⁾
60	Zinc	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁴⁾

น้ำได้คืบ...

น้ำใต้ดิน จำนวน 126 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
2	Acetone	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
3	Aldrin	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
4	Anthracene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
5	Antimony	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
6	Arsenic	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
7	Atrazine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
8	Barium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
9	Benz(a)anthracene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
10	Benzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
11	Benzo(b)fluoranthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
12	Benzo(k)fluoranthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
13	Benzoic Acid	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
14	Benzo(a)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
15	Benzo(g,h,i)perylene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
16	Beryllium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
17	Bis(2-chloroethyl)ether	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾

18 Bis(2-ethylhexyl)phthalate...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
18	Bis(2-ethylhexyl)phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
19	Bromodichloromethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
20	Bromoform	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
21	Butanol	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
22	Butyl benzyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
23	Cadmium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
24	Carbazole	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
25	Carbon disulfide	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
26	Carbon tetrachloride	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
27	Chlordane	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
28	p-Chloroaniline	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
29	Chlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
30	Chlorodibromomethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
31	Chloroform	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
32	2-Chlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
33	Chromium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ⁽⁴⁾
34	Chromium (III)	1) Digestion, Inductively Coupled Plasma Method; Colorimetric Method; Calculation ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method; Colorimetric Method; Calculation ⁽⁴⁾
35	Chromium (VI)	Colorimetric Method ⁽⁴⁾

36 Chrysene...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
36	Chrysene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
37	Cyanide	Distillation, Colorimetric Method ⁽⁴⁾
38	2,4-D	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
39	DDD	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
40	DDE	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
41	DDT	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
42	Dibenz(a,h)anthracene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
43	Di-n-Butyl Phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
44	1,2-Dichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
45	1,3-Dichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
46	1,4-Dichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
47	3,3-Dichlorobenzidine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
48	1,1-Dichloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
49	1,2-Dichloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
50	1,1-Dichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
51	cis-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
52	trans-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
53	2,4-Dichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
54	1,2-Dichloropropane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
55	1,3-Dichloropropane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾

56 1,3-Dichloropropene...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
56	1,3-Dichloropropene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
57	Dieldrin	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
58	Diethyl Phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
59	2,4-Dimethylphenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
60	2,4-Dinitrophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
61	2,4-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
62	2,6-Dinitrotoluene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
63	Di-n-octyl phthalate	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
64	Endosulfan	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
65	Endrin	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
66	Ethylbenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
67	Fluoranthene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
68	Fluorene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
69	Heptachlor	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
70	Heptachlor epoxide	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
71	Hexachlorobenzene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
72	Hexachloro-1,3-butadiene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
73	n-Hexane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
74	α-HCH	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾
75	β-HCH	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ⁽⁴⁾

76 γ-HCH...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
76	γ -HCH	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
77	Hexachlorocyclopentadiene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
78	Hexachloroethane	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
79	Indeno(1,2,3-cd)pyrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
80	Isophorone	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
81	Lead	1) Digestion, Inductively Coupled Plasma Method ^[4] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4]
82	Manganese	1) Digestion, Inductively Coupled Plasma Method ^[4] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4]
83	Mercury	1) Digestion, Cold Vapor Atomic Absorption Spectrometric Method ^[4] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4]
84	Methanol	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
85	Methoxychlor	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
86	Methyl bromide	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
87	Methylene chloride	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
88	2-Methylphenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
89	2-Methylnaphthalene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
90	Methyl tert-butyl Ether	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
91	Naphthalene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
92	Nickel	1) Digestion, Inductively Coupled Plasma Method ^[4] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4]
93	Nitrobenzene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]

94 N-Nitrosodiphenylamine...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
94	N-Nitrosodiphenylamine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
95	N-Nitrosodi-n-Propylamine	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
96	Polychlorinated Biphenyls - PCB 1016 - PCB 1221 - PCB 1232 - PCB 1242 - PCB 1248 - PCB 1254 - PCB 1260	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
97	Pentachlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
98	pH	Electrometric Method ^[4]
99	Phenanthrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
100	Phenol	1) Distillation, Chloroform Extraction Method ^[4] 2) Distillation, Direct Photometric Method ^[4] 3) Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
101	Pyrene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
102	Selenium	1) Digestion, Inductively Coupled Plasma Method ^[4] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4]
103	Silver	1) Digestion, Inductively Coupled Plasma Method ^[4] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4]
104	Styrene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
105	1,1,2,2-Tetrachloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
106	Tetrachloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
107	Toluene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[4]
108	Toxaphene	Liquid-Liquid Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[4]
109	TPH (C ₅ -C ₉)	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[14,25]

110 TPH (C₅-C₁₆)...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
110	TPH (C ₁₀ -C ₁₆)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(9,22)
111	TPH (C ₁₆ -C ₃₅)	Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic Method ^(9,22)
112	1,2,4-Trichlorobenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
113	1,1,1-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
114	1,1,2-Trichloroethane	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
115	Trichloroethylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
116	2,4,5-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
117	2,4,6-Trichlorophenol	Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
118	1,3,5-Trimethylbenzene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
119	Vanadium	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁴⁾
120	Vinyl acetate	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
121	Vinyl chloride	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
122	m-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
123	o-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
124	p-Xylene	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
125	Xylene (Total)	Purge and Trap, Gas Chromatographic/Mass Spectrometric Method ⁽⁴⁾
126	Zinc	1) Digestion, Inductively Coupled Plasma Method ⁽⁴⁾ 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁴⁾

อากาศเสีย...

อากาศเสีย (ปล่อยระบาย) จำนวน 28 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Antimony	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
2	Arsenic	2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁵⁾ 1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
3	Beryllium	2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁵⁾ 1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
4	Cadmium	2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁵⁾ 1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
5	Carbon Monoxide	1) Instrumental Analyzer Method ⁽⁵⁾
6	Chlorine	2) Sampling Bag Non-Dispersive Infrared Method ⁽⁵⁾ 1) Absorption Sampling, Ion Chromatographic Method ⁽⁵⁾
7	Chromium	2) Isokinetic Sampling, Ion Chromatographic Method ⁽⁵⁾ 1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
8	Cobalt	2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁵⁾ 1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
9	Copper	2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ⁽⁵⁾ 1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ⁽⁵⁾
10	Cresol	Adsorption Sampling, Gas Chromatographic Method ⁽⁵⁾
11	Dioxins	Isokinetic Sampling ⁽⁵⁾
12	Hydrogen Chloride	1) Absorption Sampling, Ion Chromatographic Method ⁽⁵⁾ 2) Isokinetic Sampling, Ion Chromatographic Method ⁽⁵⁾
13	Hydrogen Fluoride	1) Absorption Sampling, Ion Chromatographic Method ⁽⁵⁾ 2) Isokinetic Sampling, Ion Chromatographic Method ⁽⁵⁾
14	Hydrogen Sulfide	Absorption Sampling, Iodometric Method ⁽⁵⁾

15 Lead...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
15	Lead	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
16	Manganese	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
17	Mercury	1) Isokinetic Sampling, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^[5] 2) Isokinetic Sampling, Digestion, Cold-Vapor Atomic Fluorescence Spectrometric Method ^[5]
18	Nickel	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
19	Opacity	Ringelmann's Method ^[2]
20	Oxides of Nitrogen	1) Absorption Sampling, Phenoldisulfonic Acid Method ^[5] 2) Absorption Sampling, Alkaline Permanganate/Colorimetric Method ^[5] 3) Instrumental Analyzer Method ^[5]
21	Selenium	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
22	Sulfur Dioxide	1) Absorption Sampling, Barium-Thorin Titrimetric Method ^[5] 2) Instrumental Analyzer Method ^[5]
23	Sulfuric Acid	Isokinetic Sampling, Barium-Thorin Titrimetric Method ^[5]
24	Tellurium	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
25	Tin	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
26	Total Suspended Particulate	1) Isokinetic Sampling, Gravimetric Method ^[5] 2) Paired Train, Isokinetic Sampling, Gravimetric Method ^[5]

27 Vanadium...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
27	Vanadium	1) Isokinetic Sampling, Digestion, Inductively Coupled Plasma Method ^[5] 2) Isokinetic Sampling, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[5]
28	Xylene	Adsorption Sampling, Gas Chromatographic Method ^[5]

สิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว จำนวน 35 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aldrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^[1,9,26] 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[10,26] 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^[11,26]
2	Antimony	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,16] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,6,17] 3) Digestion, Inductively Coupled Plasma Method ^[7,16] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[7,17]
3	Arsenic	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,16] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,6,17] 3) Digestion, Inductively Coupled Plasma Method ^[7,16] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[7,17]
4	Barium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,6,16] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,6,17] 3) Digestion, Inductively Coupled Plasma Method ^[7,16] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[7,17]

5 Beryllium...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
5	Beryllium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
6	Cadmium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
7	Chlordane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(11,26)
8	Chromium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
9	Chromium (II)	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method; Waste Extraction, Colorimetric Method; Calculation Method ^(1,6,16,19) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method; Waste Extraction, Colorimetric Method; Calculation Method ^(1,6,17,19) 3) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^(7,8,16,19) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^(7,8,17,19)

10 Chromium (VI)...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
10	Chromium (VI)	1) Waste Extraction, Colorimetric Method ^(1,6,19) 2) Alkaline Digestion, Colorimetric Method ^(8,19)
11	Cobalt	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
12	Copper	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
13	2,4-D	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(11,26)
14	DDD	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(11,26)
15	DDE	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(11,26)
16	DDT	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26)

2) Soxhlet...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
17	Dieldrin	2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26) 1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
18	Endrin	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
19	Heptachlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
20	Lead	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
21	Lindane	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)

22 Mercury...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
22	Mercury	1) Waste Extraction, Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ^(1,5,20) 2) Waste Extraction, Digestion, Cold-Vapor Atomic Fluorescence Spectrometric Method ^(1,6,30) 3) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ⁽²⁰⁾ 4) Digestion, Cold-Vapor Atomic Fluorescence Spectrometric Method ⁽³⁰⁾ 5) Thermal Decomposition Amalgamation and Atomic Absorption Spectrometric Method ⁽²¹⁾
23	Methoxychlor	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic /Mass Spectrometric Method ^(11,26)
24	Mirex	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic /Mass Spectrometric Method ^(11,26)
25	Molybdenum	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
26	Nickel	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
27	Polychlorinated biphenyls (PCBs) - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic Method ^(11,26)

- 2-Chlorobiphenyl...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
28	- 2-Chlorobiphenyl - 2,3-Dichlorobiphenyl - 2,2',5-Trichlorobiphenyl - 2,4',5-Trichlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'-Pentachlorobiphenyl - 2,2',4,5,5'-Pentachlorobiphenyl - 2,3,3',4',6-Pentachlorobiphenyl - 2,2',3,4,4',5'-Hexachlorobiphenyl - 2,2',3,4,5,5'-Hexachlorobiphenyl - 2,2',3,5,5',6-Hexachlorobiphenyl - 2,2',4,4',5,5'-Hexachlorobiphenyl - 2,2',3,3',4,4',5-Heptachlorobiphenyl - 2,2',3,4,4',5,5'-Heptachlorobiphenyl - 2,2',3,4,4',5,6-Heptachlorobiphenyl - 2,2',3,4',5,5',6-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6-Nonachlorobiphenyl - Pentachlorophenol	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(11,26) Electrometric Method ^(23,24)
29	pH	
30	Selenium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)

31 Silver...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
31	Silver	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
32	Thallium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
33	Toxaphene	1) Waste Extraction, Separatory Funnel Liquid-Liquid Extraction, Gas Chromatographic/Mass Spectrometric Method ^(1,9,26) 2) Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(10,26) 3) Automated Soxhlet Extraction, Gas Chromatographic/Mass Spectrometric Method ^(11,26)
34	Vanadium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)
35	Zinc	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^(1,6,16) 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(1,6,17) 3) Digestion, Inductively Coupled Plasma Method ^(7,16) 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^(7,17)

ดิน...

ดิน จำนวน 125 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Acenaphthene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
2	Acetone	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
3	Aldrin	1) Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
4	Anthracene	2) Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method ⁽¹³⁾
5	Antimony	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
6	Arsenic	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
7	Atrazine	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
8	Barium	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
9	Benz(a)anthracene	1) Digestion, Inductively Coupled Plasma Method ^(7,16)
10	Benzene	2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)

11 Benzo(b)fluoranthene

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
11	Benzo(b)fluoranthene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
12	Benzo(k)fluoranthene	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
13	Benzoic acid	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
14	Benzo(a)pyrene	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
15	Benzo(g,h,i)perylene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
16	Beryllium	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
17	Bis(2-chloroethyl)ether	1) Digestion, Inductively Coupled Plasma Method ^(7,16)
18	Bis(2-ethylhexyl)phthalate	2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
19	Bromodichloromethane	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
20	Bromoform	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
21	Butanol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26)
22	Butyl Benzyl Phthalate	2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)

23 Cadmium...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
23	Cadmium	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
24	Carbazole	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
25	Carbon Disulfide	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
26	Carbon tetrachloride	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
27	Chlordane	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
28	p-Chloroaniline	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
29	Chlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
30	Chlorodibromomethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
31	Chloroform	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
32	2-Chlorophenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
33	Chromium	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
34	Chromium (III)	1) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^(7,8,16,19) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^(7,8,17,19)
35	Chromium (VI)	Alkaline Digestion, Colorimetric Method ^(8,19)

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
36	Chrysene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
37	Cyanide	Extraction, Distillation, Colorimetric Method ^(27,28,29)
38	2,4-D	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
39	DDD	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
40	DDE	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
41	DDT	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
42	Dibenz(a,h)anthracene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
43	Di-n-Butyl Phthalate	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
44	1,2-Dichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
45	1,3-Dichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
46	1,4-Dichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
47	3,3-Dichlorobenzidine	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
48	1,1-Dichloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
49	1,2-Dichloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
50	1,1-Dichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
51	cis-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
52	trans-1,2-Dichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
53	2,4-Dichlorophenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
54	1,2-Dichloropropane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
55	1,3-Dichloropropane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
56	1,3-Dichloropropene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
57	Dieldrin	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
58	Diethyl Phthalate	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
59	2,4-Dimethylphenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
60	2,4-Dinitrophenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
61	2,4-Dinitrotoluene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)
62	2,6-Dinitrotoluene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,25)

63 Di-n-Octyl Phthalate...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
63	Di-n-Octyl Phthalate	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
64	Endosulfan	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
65	Endrin	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
66	Ethylbenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
67	Fluoranthene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
68	Fluorene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
69	Heptachlor	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
70	Heptachlor epoxide	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
71	Hexachlorobenzene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
72	Hexachloro-1,3-butadiene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
73	n-Hexane	1) Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25) 2) Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method ⁽¹¹⁾

73 n-Hexane...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
74	α -HCH	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
75	β -HCH	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
76	γ -HCH	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
77	Hexachlorocyclopentadiene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
78	Hexachloroethane	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
79	Indeno(1,2,3-cd)pyrene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
80	Isophorone	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
81	Lead	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
82	Manganese	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
83	Mercury	1) Digestion, Cold-Vapor Atomic Absorption Spectrometric Method ⁽²⁰⁾ 2) Thermal Decomposition, Amalgamation, and Atomic Absorption Spectrophotometry ⁽²¹⁾ 3) Digestion, Cold-Vapor Atomic Fluorescence Spectrometric Method ⁽³⁰⁾

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
84	Methanol	1) Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25) 2) Equilibrium Headspace, Gas Chromatographic/ Mass Spectrometric Method ^(13,25)
85	Methoxychlor	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
86	Methyl Bromide	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
87	Methylene Chloride	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
88	2-methylphenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
89	2-Methylnaphthalene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
90	Methyl tert-Butyl Ether	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
91	Naphthalene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
92	Nickel	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
93	Nitrobenzene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
94	N-Nitrosodiphenylamine	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
95	N-Nitrosodi-n-propylamine	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
96	Polychlorinated biphenyls (PCBs) - Aroclor 1016 - Aroclor 1221 - Aroclor 1232 - Aroclor 1242 - Aroclor 1248 - Aroclor 1254 - Aroclor 1260 - 2-Chlorobiphenyl - 2,2',3,5'-Tetrachlorobiphenyl - 2,2',5,5'-Tetrachlorobiphenyl - 2,3',4,4'-Tetrachlorobiphenyl - 2,2',3,4,5'-Pentachlorobiphenyl - 2,2',4,5,5'-Pentachlorobiphenyl - 2,3,3',4',6-Pentachlorobiphenyl - 2,2',3,4,4',5'-Hexachlorobiphenyl - 2,2',3,4,5,5'-Hexachlorobiphenyl - 2,2',3,5,5',6-Hexachlorobiphenyl - 2,2',4,4',5,5'-Hexachlorobiphenyl - 2,2',3,3',4,4',5'-Heptachlorobiphenyl - 2,2',3,4,4',5,5'-Heptachlorobiphenyl - 2,2',3,4,4',5',6-Heptachlorobiphenyl - 2,2',3,4',5,5',6-Heptachlorobiphenyl - 2,2',3,3',4,4',5,5',6-Nonachlorobiphenyl	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,26] 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,26]
97	Pentachlorophenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,26] 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,26]
98	Phenanthrene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,26] 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,26]

99 Phenol...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
99	Phenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,26] 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,26]
100	Pyrene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,26] 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,26]
101	Selenium	1) Digestion, Inductively Coupled Plasma Method ^[7,16] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[7,17]
102	Silver	1) Digestion, Inductively Coupled Plasma Method ^[7,16] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[7,17]
103	Styrene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
104	1,1,2,2-Tetrachloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
105	Tetrachloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
106	Toluene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
107	Toxaphene	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[10,26] 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^[11,26]
108	TPH (C ₅ -C ₈)	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
109	TPH (C ₈ -C ₁₆)	1) Automate Extraction, Gas Chromatographic Method ^[11,22] 2) Solvent Extraction, Gas Chromatographic Method ^[12,22] 3) Ultrasonic Extraction, Gas Chromatographic Method ^[22,31]
110	TPH (C ₁₆ -C ₃₅)	1) Automate Extraction, Gas Chromatographic Method ^[11,22] 2) Solvent Extraction, Gas Chromatographic Method ^[12,22] 3) Ultrasonic Extraction, Gas Chromatographic Method ^[22,31]
111	1,2,4-Trichlorobenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
112	1,1,1-Trichloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
113	1,1,2-Trichloroethane	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]
114	Trichloroethylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^[15,25]

115 2,4,5-Trichlorophenol...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
115	2,4,5-Trichlorophenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
116	2,4,6-Trichlorophenol	1) Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(10,26) 2) Automated Soxhlet Extraction, Gas Chromatographic/ Mass Spectrometric Method ^(11,26)
117	1,3,5-Trimethylbenzene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
118	Vanadium	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)
119	Vinyl Acetate	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
120	Vinyl Chloride	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
121	m-Xylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
122	o-Xylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
123	p-Xylene	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
124	Xylene (Total)	Purge and Trap, Gas Chromatographic/ Mass Spectrometric Method ^(15,25)
125	Zinc	1) Digestion, Inductively Coupled Plasma Method ^(7,16) 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^(7,17)

เอกสารอ้างอิง

- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2566. เรื่อง การจัดการสิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว. ราชกิจจานุเบกษา. 31 พฤษภาคม 2566. เล่มที่ 140 ตอนพิเศษ 126 ง.
- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2549. เรื่อง กำหนดค่าปริมาณเขม่าควันที่เจือปนในอากาศที่ระบายออกจากปล่องของหม้อน้ำโรงสีข้าวที่ใช้แก๊สเป็นเชื้อเพลิง. ราชกิจจานุเบกษา. 4 ธันวาคม 2549. เล่มที่ 123 ตอนพิเศษ 125 ง.
- สมาคมวิศวกรรมสิ่งแวดล้อมแห่งประเทศไทย. คู่มือวิเคราะห์น้ำเสีย. พิมพ์ครั้งที่ 4. กรุงเทพฯ: เรือนแก้วการพิมพ์, 2547.
- APHA, AWWA, WEF. Standard Methods for the Examination of Water and Wastewater. 24th ed. Washington, DC: APHA, 2023.

5. United States...

- United States Environmental Protection Agency. Standards of Performance for New Stationary Sources. 40 CFR 60. Appendix A, 2023.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. SW-846, 2014.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Acid Digestion of Sludges and Sediments and Soils. SW-846 Method 3050B, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Alkaline Digestion for Hexavalent Chromium. SW-846 Method 3060A, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Separatory Funnel Liquid-Liquid Extraction. SW-846 Method 3510C, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Soxhlet Extraction. SW-846 Method 3540C, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Automated Soxhlet Extraction. SW-846 Method 3541, 1994.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Microscale Solvent Extraction (MSE). SW-846 Method 3570, 2002.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Volatile Organic Compounds (VOCs) in Various Sample Matrices Using Equilibrium Headspace Analysis. SW-846 Method 5021A, 2014.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Purge-and-Trap for Aqueous Samples. SW-846 Method 5030B, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Closed-System Purge-and-Trap and Extraction for Volatile Organics in Soil and Waste Samples. SW-846 Method 5035, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Inductively Coupled Plasma-Atomic Emission Spectrometry. SW-846 Method 6010B, 1996.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Inductively Coupled Plasma-Mass Spectrometry. SW-846 Method 6020A, 2007.
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Antimony and Arsenic (Atomic Absorption, Borohydride Reduction). SW-846 Method 7062, 1994. เพิ่มใหม่
- United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Chromium, Hexavalent (Colorimetric). SW-846 Method 7196A, 1992.

20. United States...

20. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Mercury in Solid or Semisolid Waste (Manual Cold-Vapor Technique). SW-846 Method 7471B, 2007.

21. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Mercury in Solids and Solutions by Thermal Decomposition, Amalgamation, and Atomic Absorption Spectrophotometry. SW-846 Method 7473, 2007.

22. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Nonhalogenated Organics by Gas Chromatography. SW-846 Method 8015C, 2007.

23. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. pH Electrometric Measurement. SW-846 Method 9040C, 2004.

24. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Soil and Waste pH. SW-846 Method 9045D, 2004.

25. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Volatile Organic Compounds by Gas Chromatography/Mass Spectrometry (GC/MS). SW-846 Method 8260D, 2018.

26. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Semivolatile Organic Compounds by Gas Chromatography/Mass Spectrometry (GC/MS). SW-846 Method 8270E, 2018.

27. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Total and Amenable Cyanide: Distillation SW-846 Method 9010B, 1996.

28. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Cyanide Extraction Procedure for Solids and Oil. SW-846 Method 9013A, 1996.

29. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Cyanide in Waters and Extracts Using Titrimetric and Manual Spectrophotometric Procedures. SW-846 Method 9014, 2014.

30. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Mercury in Sediment and Tissue Samples by Atomic Fluorescence Spectrometry. SW-846 Method 7474, 2007.

31. United States Environmental Protection Agency. Test Methods for Evaluating Solid Waste Physical/Chemical Methods. Ultrasonic Extraction. SW-846 Method 3550C, 2007.



ที่ อก ๐๓๑๐(๑)/ ๔๑ ๒๒

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๕ เมษายน ๒๕๖๗

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๔ มีนาคม ๒๕๖๗

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๒๐๔ สถานที่ตั้งเลขที่ ๑๐๔ ซอยพัฒนาการ ๔๐ ถนนพัฒนาการ แขวงพัฒนาการ
เขตสวนหลวง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

๑. ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๓ ราย

๑)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๒)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๓)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]

๒. ให้เพิ่มเจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน จำนวน ๑๒ ราย

๑)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๒)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๓)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๔)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๕)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๖)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๗)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๘)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๙)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๑๐)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๑๑)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]
๑๒)	[REDACTED]	ทะเบียนเลขที่	[REDACTED]

อนึ่ง หนังสือฉบับนี้...

อนึ่ง หนังสือฉบับนี้จะหมดอายุพร้อมหนังสือต่ออายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ในวันที่ ๒ กันยายน ๒๕๖๔

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ



รองอธิบดี ปฏิบัติราชการแทน
อธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน
กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ
โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕
โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๙
ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



ที่ อก ๐๓๑๐(๑)/ ๑๒๓๖ ๘ /

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๑๘ ธันวาคม ๒๕๖๗

เรื่อง ยกเลิกบุคลากรของห้องปฏิบัติ ารวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท แอลแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒ ธันวาคม ๒๕๖๗

ตามคำ อ้างถึง เ เอส (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขที่ ว-๒๐๔ ที่ ที่ ๑ ๔๐ ถนนพัฒนาการ แขวงพัฒนาการ
เขตสวนหลวง กรุงเทพมหานคร ขอยกเลิกบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์
จำนวน ๘ ราย ได้แก่

๑)		ทะเบียนเลขที่	
๒)		ทะเบียนเลขที่	
๓)		ทะเบียนเลขที่	
๔)		ทะเบียนเลขที่	
๕)		ทะเบียนเลขที่	
๖)		ทะเบียนเลขที่	
๗)		ทะเบียนเลขที่	
๘)		ทะเบียนเลขที่	

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ



รองอธิบดี ปฏิบัติราชการแทน
อธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน
กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ
โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕
โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๙
ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th

๘๖๖

“อุตสาหกรรมก้าวหน้า ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”



ที่ อก ๐๓๑๐(๑)/ ๓ ๑ ๕ ๐



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐
๑๐ เมษายน ๒๕๖๘

เรื่อง ยกเลิกบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒ เมษายน ๒๕๖๘

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๒๐๔ สถานที่ตั้งเลขที่ ๑๐๔ ซอยพัฒนาการ ๔๐ ถนนพัฒนาการ แขวงพัฒนาการ
เขตสวนหลวง กรุงเทพมหานคร ขอยกเลิกบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์
จำนวน ๒ ราย ได้แก่

- | | | | |
|----|------------|---------------|------------|
| ๑) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๒) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ



รองอธิบดี ปฏิบัติราชการแทน
อธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๙

ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



ที่ อก ๐๓๑๐(๑)/ ๕ ๖ ๗ ๓



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๐ ๕ มิถุนายน ๒๕๖๘

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๗ พฤษภาคม ๒๕๖๘

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๒๐๔ สถานที่ตั้งเลขที่ ๑๐๔ ซอยพัฒนาการ ๔๐ ถนนพัฒนาการ แขวงพัฒนาการ
เขตสวนหลวง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้เพิ่มเจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน
จำนวน ๑๑ ราย ได้แก่

- | | | | |
|-----|------------|---------------|------------|
| ๑) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๒) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๓) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๔) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๕) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๖) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๗) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๘) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๙) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๑๐) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |
| ๑๑) | [REDACTED] | ทะเบียนเลขที่ | [REDACTED] |

อนึ่ง หนังสือฉบับนี้จะส่งอายุพร้อมหนังสือต่ออายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ในวันที่ ๒ กันยายน ๒๕๖๙

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ



นักวิทยาศาสตร์เชี่ยวชาญ วิศวกรรม

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน

ปฏิบัติการทางเคมีและชีวเคมีโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๙

ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"





ที่ อก ๐๓๑๐(๑)/ ๖๙ ๐ ๘

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๑ สิงหาคม ๒๕๖๔

เรื่อง เปลี่ยนแปลงสารมลพิษที่วิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๗ มิถุนายน ๒๕๖๔

สิ่งที่ส่งมาด้วย เอกสารแนบท้ายหนังสือเปลี่ยนแปลงสารมลพิษที่วิเคราะห์
บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด จำนวน ๖ แผ่น

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๒๐๔ สถานที่ตั้งเลขที่ ๑๐๔ ซอยพัฒนาการ ๔๐ ถนนพัฒนาการ แขวงพัฒนาการ
เขตสวนหลวง กรุงเทพมหานคร ขอเปลี่ยนแปลงสารมลพิษที่วิเคราะห์ ต่อกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด
เพิ่มขอขยายชนิดสารมลพิษที่วิเคราะห์ในน้ำได้ดิน สิ่งปฏิกูลและวัสดุที่ไม่ใช้แล้ว และดิน ตามสิ่งที่ส่งมาด้วย

อนึ่ง หนังสือฉบับนี้จะสิ้นสุดอายุพร้อมหนังสือต่ออายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ในวันที่ ๒ กันยายน ๒๕๖๔

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

ผู้อำนวยการกองวิจัยและเฝ้าระวังมลพิษโรงงาน
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเฝ้าระวังมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๕๔

ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



"อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว"



เอกสารแนบท้ายหนังสือเปลี่ยนแปลงสารมลพิษที่วิเคราะห์

บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

เลขทะเบียน ว-๒๐๔

ที่ อก ๐๓๑๐(๑)/ ๖๙ ๐ ๘

ลงวันที่

๒๑ สิงหาคม ๒๕๖๔

ขอขยายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๔๐ รายการ

น้ำได้ดิน จำนวน ๔ รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aluminum	Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[2]
2	Copper	Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[2]
3	Iron	Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[2]
4	Molybdenum	Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[2]

สิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว จำนวน 17 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Antimony	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]
2	Arsenic	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]
3	Barium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]

Beryllium

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
4	Beryllium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
5	Cadmium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
6	Chromium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
7	Chromium (III)	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method; Waste Extraction, Colorimetric Method; Calculation Method ^[1,3,6,8] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method; Waste Extraction, Colorimetric Method; Calculation Method ^[1,3,7,8] 3) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^[4,5,6,8] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^[4,5,7,8]
8	Cobalt	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7]

3) Digestion...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
9	Copper	3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7] 1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
10	Lead	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
11	Molybdenum	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
12	Nickel	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
13	Selenium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]

14 Silver...

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
14	Silver	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
15	Thallium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
16	Vanadium	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
17	Zinc	1) Waste Extraction, Digestion, Inductively Coupled Plasma Method ^[1,3,6] 2) Waste Extraction, Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[1,3,7] 3) Digestion, Inductively Coupled Plasma Method ^[4,6] 4) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]

ดิน จำนวน 19 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aluminum	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
2	Antimony	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
3	Arsenic	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
4	Barium	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
5	Beryllium	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
6	Cadmium	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
7	Chromium	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
8	Chromium (III)	1) Digestion, Inductively Coupled Plasma Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^[4,5,6,8] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method; Alkaline Digestion, Colorimetric Method; Calculation Method ^[4,5,7,8]
9	Copper	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
10	Iron	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
11	Lead	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
12	Manganese	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
13	Molybdenum	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]
14	Nickel	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/Mass Spectrometric Method ^[4,7]

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
15	pH	Electrometric Method ^[9]
16	Selenium	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]
17	Silver	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]
18	Vanadium	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]
19	Zinc	1) Digestion, Inductively Coupled Plasma Method ^[4,6] 2) Digestion, Inductively Coupled Plasma/ Mass Spectrometric Method ^[4,7]

เอกสารอ้างอิง

- กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2566. เรื่อง การจัดการสิ่งปฏิกูลหรือวัสดุที่ไม่ใช้แล้ว. **ราชกิจจานุเบกษา**. 31 พฤษภาคม 2566. เล่มที่ 140 ตอนพิเศษ 126 ง.
- APHA, AWWA, WEF. **Standard Methods for the Examination of Water and Wastewater**. 24th ed. Washington, DC: APHA, 2023.
- United States Environmental Protection Agency. **Test Methods for Evaluating Solid Waste Physical/Chemical Methods**. SW-846.
- United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods**. **Acid Digestion of Sediments, Sludges, and Soils**. SW-846 Method 3050B, 1996.
- United States Environmental Protection Agency. **Test Methods for Evaluating Solid Waste Physical/Chemical Methods**. **Alkaline Digestion for Hexavalent Chromium**. SW-846 Method 3060A, 1996.
- United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods**. **Inductively Coupled Plasma-Optical Emission Spectrometry**. SW-846 Method 6010D, 2018.
- United States Environmental Protection Agency. **Test Methods for Evaluating Solid Waste Physical/Chemical Methods**. **Inductively Coupled Plasma-Mass Spectrometry**. SW-846 Method 6020B, 2014.
- United States Environmental Protection Agency. **Test Methods for Evaluating Solid Waste Physical/Chemical Methods**. **Chromium, Hexavalent (Colorimetric)**. SW-846 Method 7196A, 1992.
- United States Environmental Protection Agency. **Test Methods for Evaluation Solid Waste Physical/Chemical Methods**. **Soil and Waste pH**. SW-846 Method 9045D, 2004.



ที่ อก ๐๓๑๐(๑)๕๐ ๑ ๑

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๖ กันยายน ๒๕๖๕

เรื่อง เปลี่ยนแปลงบุคลากร ชื่อตัวและชื่อสกุลของบุคลากร

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๒๑ สิงหาคม ๒๕๖๔

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัดห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ๖-๒๐๔ สถานที่ตั้งเลขที่ ๑๐๔ ซอยพัฒนาการ ๔๐ ถนนพัฒนาการ แขวงพัฒนาการ เขตสวนหลวง กรุงเทพมหานคร ขอเปลี่ยนแปลงบุคลากร ชื่อตัวและชื่อสกุลของบุคลากร ต่อกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว มีความเห็นดังนี้

๑. ให้ยกเลิกเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จำนวน ๒ ราย

๑) [REDACTED] ทะเบียนเลขที่ [REDACTED]

๒) [REDACTED] ทะเบียนเลขที่ [REDACTED]

๒. ให้เปลี่ยนชื่อตัวและชื่อสกุลของเจ้าหน้าที่ประจำห้องปฏิบัติการวิเคราะห์ จากเดิม

อนึ่ง หนังสือฉบับนี้จะสิ้นสุดอายุพร้อมหนังสือต่ออายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ในวันที่ ๒ กันยายน ๒๕๖๕

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน

กลุ่มมาตรฐานวิธีการวิเคราะห์ทดสอบมลพิษและทะเบียนห้องปฏิบัติการ

โทร. ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๐๓-๕

โทรสาร ๐ ๒๔๓๐ ๖๓๑๒ ต่อ ๒๑๔๔

ไปรษณีย์อิเล็กทรอนิกส์ saraban@diw.mail.go.th



“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”



ที่ อก ๐๓๒๐/ ๗ ๕๓ ๘



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๕๐๐

๐๘ สิงหาคม ๒๕๖๗

เรื่อง ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน ลงวันที่ ๒๗ พฤษภาคม ๒๕๖๗

สิ่งที่ส่งมาด้วย เอกสารแนบท้ายหนังสือต่ออายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด จำนวน ๓ แผ่น

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ขอต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน เลขทะเบียน ว-๓๒๓ สถานที่ตั้งเลขที่ ๖๑๖/๑๐ หมู่ที่ ๕ ตำบลแม่ไม้คู้ อำเภอลำลูกเกด จังหวัดระยอง ต่อกรมโรงงานอุตสาหกรรม นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ต่ออายุหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน โดยมีองค์ประกอบดังนี้

ก. ผู้ควบคุมห้องปฏิบัติการวิเคราะห์เอกชน

๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓) [REDACTED]	ทะเบียนเลขที่ [REDACTED]

ข. เจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน

๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๕) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๖) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๗) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๘) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๙) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๐) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๒) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๓) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๔) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๕) [REDACTED]	ทะเบียนเลขที่ [REDACTED]

๑๖) [REDACTED]

-๒-

๑๖) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๗) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๘) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๑๙) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๐) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๒) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๓) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๔) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๕) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๖) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๗) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๘) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๒๙) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๐) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๒) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๓) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๔) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๕) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๖) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๗) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๘) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๓๙) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๐) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๒) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๓) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๔) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๕) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๖) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๗) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๘) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๔๙) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๕๐) [REDACTED]	ทะเบียนเลขที่ [REDACTED]
๕๑) [REDACTED]	ทะเบียนเลขที่ [REDACTED]

๕๒) [REDACTED]


๕๒)		ทะเบียนเลขที่	
๕๓)		ทะเบียนเลขที่	
๕๔)		ทะเบียนเลขที่	
๕๕)		ทะเบียนเลขที่	
๕๖)		ทะเบียนเลขที่	
๕๗)		ทะเบียนเลขที่	
๕๘)		ทะเบียนเลขที่	
๖๐)		ทะเบียนเลขที่	
๖๑)		ทะเบียนเลขที่	

ค. ขอบข่ายชนิดสารมลพิษที่ได้รับขึ้นทะเบียนให้วิเคราะห์ในน้ำเสีย น้ำใต้ดิน อากาศเสีย ตามสิ่งที่ส่งมาด้วย

หนังสือฉบับนี้จะหมดอายุในวันที่ ๒๘ มิถุนายน ๒๕๗๑ หากประสงค์จะต่ออายุหนังสือ รับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน ให้ยื่นคำขอต่ออายุพร้อมเอกสารประกอบคำขอต่อกรมโรงงาน อุตสาหกรรมภายใน ๖๐ วัน ก่อนวันสิ้นสุดของหนังสือรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

()
รองอธิบดี ปฏิบัติราชการแทน
อธิบดีกรมโรงงานอุตสาหกรรม

ศูนย์วิจัยและเตือนภัยมลพิษโรงงานภาคตะวันออก
โทร. ๐ ๓๓๑๓ ๖๐๕๔ ต่อ ๕๐๐๑-๒
ไปรษณีย์อิเล็กทรอนิกส์ erw@diw.mail.go.th



“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”



เอกสารแนบท้ายหนังสือเปลี่ยนแปลงสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด เลขทะเบียน ว-๓๒๓
ที่อก ๐๓๒๐/ ๗ ๕๓ ๘ ลงวันที่ ๐๔ สิงหาคม ๒๕๖๗

ขอบข่ายสารมลพิษที่ได้รับขึ้นทะเบียนจากกรมโรงงานอุตสาหกรรม จำนวน ๒๔ รายการ
น้ำเสีย จำนวน 14 รายการ

ลำดับ ที่	สารมลพิษ	วิธีวิเคราะห์
1	Biochemical Oxygen Demand	1) 5-Day BOD Test, Membrane Electrode Method ^[2]
2	Chemical Oxygen Demand	2) 5-Day BOD Test, Azide Modification Method ^[2]
3	Color	1) Open Reflux, Titrimetric Method ^[2] 2) Closed Reflux, Colorimetric Method ^[2] 3) Closed Reflux, Titrimetric Method ^[2] ADMI Weighted-Ordinate Spectrophotometric Method ^[2]
4	Cyanide	Distillation, Colorimetric Method ^[2]
5	Formaldehyde	Distillation, Colorimetric Method ^[1]
6	Free Chlorine	DPD Ferrous Titrimetric Method ^[2]
7	Oil and Grease	Liquid-Liquid, Partition-Gravimetric Method ^[2]
8	pH	Electrometric Method ^[2]
9	Phenols	1) Distillation, Chloroform Extraction Method ^[2] 2) Distillation, Direct Photometric Method ^[2]
10	Sulfide	ZnS Precipitation, Iodometric Method ^[2]
11	Temperature	Field Method ^[2]
12	Total Dissolved Solids	Dried at 180 °C ^[2]
13	Total Kjeldahl Nitrogen	Semi-Macro Kjeldahl Method ^[2]
14	Total Suspended Solids	Dried at 103-105 °C ^[2]

น้ำใต้ดิน จำนวน 3 รายการ

ลำดับ ที่	สารมลพิษ	วิธีวิเคราะห์
1	Cyanide	Distillation, Colorimetric Method ^[2]
2	pH	Electrometric Method ^[2]
3	Phenols	Distillation, Direct Photometric Method ^[2]

อากาศเสีย...

อากาศเสีย (ปล่อยระบาย) จำนวน 7 รายการ

ลำดับ ที่	สารมลพิษ	วิธีวิเคราะห์
1	Carbon Monoxide	1) Sampling Bag, Non-Dispersive Infrared Method ^[5] 2) Instrumental Analyzer Method ^[9]
2	Hydrogen Sulfide	Absorption Sampling, Iodometric Method ^[5]
3	Opacity	Ringelmann's Method ^[5,4]
4	Oxide of Nitrogen	1) Absorption Sampling, Phenoldisulfonic Acid Method ^[8] 2) Instrumental Analyzer Method ^[10]
5	Sulfur Dioxide	1) Absorption Sampling, Barium-Thorin Titrimetric Acid Method ^[5] 2) Instrumental Analyzer Method ^[11]
6	Sulfuric Acid	Isokinetic Sampling, Barium – Titrimetric Method ^[6]
7	Total Suspended Particulate	Isokinetic Sampling, Gravimetric Method ^[7]

เอกสารอ้างอิง

1. ธงชัย พรหมสวัสดิ์ และวิบูลย์ลักษณ์ วิสุทธีศักดิ์, บรรณาธิการ. (2547) คู่มือวิเคราะห์น้ำเสีย. พิมพ์ครั้งที่ 4. กรุงเทพฯ: สมาคมวิศวกรรมสิ่งแวดล้อมแห่งประเทศไทย.
2. APHA, AWWA, WEF. **Standard Methods for the Examination of Water and Wastewater.** 24th ed. Washington, DC : APHA, 2023
3. กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2549. เรื่อง กำหนดค่าปริมาณเขม่าควันที่เจือปนในอากาศที่ระบายออกจากปล่องของหม้อน้ำโรงงานที่ใช้แก๊สเป็นเชื้อเพลิง. ราชกิจจานุเบกษา. 4 ธันวาคม 2549. เล่มที่ 123 ตอนพิเศษ 125ง
4. กระทรวงอุตสาหกรรม. ประกาศกระทรวงอุตสาหกรรม, พ.ศ. 2549. เรื่อง กำหนดค่าปริมาณเขม่าควันที่เจือปนในอากาศที่ระบายออกจากปล่องของหม้อน้ำของโรงงาน. ราชกิจจานุเบกษา. 4 ธันวาคม 2549. เล่มที่ 123 ตอนพิเศษ 125ง
5. United States Environmental Protection Agency. **Standards of Performance for New Stationary Sources.** 40 CFR 60. Appendix A, 2017.
6. United States Environmental Protection Agency. **Standards of Performance for New Stationary Sources.** 40 CFR 60. Appendix A, 2019.

7.United States...

7. United States Environmental Protection Agency. **Standards of Performance for New Stationary Sources.** 40 CFR 60. Appendix A, 2020.
8. United States Environmental Protection Agency. **Standards of Performance for New Stationary Sources.** 40 CFR 60. Appendix A, 2023.
9. United States Environmental Protection Agency. **Determination of Carbon Monoxide Emission from Stationary Sources; Instrumental Analyzer Procedure.** 40 CFR 60. Appendix A Method 10, 2017.
10. United States Environmental Protection Agency. **Determination of Oxide of Nitrogen Emission from Stationary Sources; Instrumental Analyzer Procedure.** 40 CFR 60. Appendix A Method 7E, 2023.
11. United States Environmental Protection Agency. **Determination of Sulfur dioxide Emission from Stationary Sources; Instrumental Analyzer Procedure.** 40 CFR 60. Appendix A Method 6C, 2017.

ที่ อก ๐๓๒๐/ ๑๐๐๙ ๙



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๐๔ ตุลาคม ๒๕๖๗

เรื่อง แก้ไขรายชื่อเจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง หนังสือ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด เลขที่ Env 2024/005
ลงวันที่ ๓๐ สิงหาคม ๒๕๖๗

ตามหนังสือที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๓๒๓ สถานที่ตั้งเลขที่ ๖๑๖/๑๐ หมู่ที่ ๕ ตำบลแม่น้ำคู้ อำเภอลำลูกนาง
จังหวัดระยอง ขอแก้ไขชื่อเจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน เนื่องจากมีความคลาดเคลื่อน ความละเอียด
แจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรม ได้รับทราบและดำเนินการแก้ไขรายชื่อเจ้าหน้าที่ห้องปฏิบัติการ
วิเคราะห์เอกชน จำนวน ๕ ราย ตามที่แจ้งเรียบร้อยแล้ว เป็นดังนี้

ลำดับที่ ๒๗

ลำดับที่ ๒๘

ลำดับที่ ๓๐

ลำดับที่ ๓๖

ลำดับที่ ๔๒

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

(น

รองอธิบดี ปฏิบัติราชการแทน
อธิบดีกรมโรงงานอุตสาหกรรม

ศูนย์วิจัยและเตือนภัยมลพิษโรงงานภาคตะวันออก
โทร. ๐ ๓๓๑๓ ๖๐๕๔ ต่อ ๕๐๐๑-๒
ไปรษณีย์อิเล็กทรอนิกส์ eirw@diw.mail.go.th



“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”



ที่ ยก ๐๓๑๐(๓)/ ๔ ๒ ๔ ๖

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๐ พฤษภาคม ๒๕๖๘

เรื่อง ยกเลิกบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการ การ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๑๐ เมษายน ๒๕๖๘

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๓๒๓ สถานที่ตั้งเลขที่ ๖๑๖/๑๐ หมู่ที่ ๕ ตำบลแม่น้ำคู้ อำเภอลำลูกนาง
จังหวัดระยอง ขอยกเลิกบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้ยกเลิกเจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน
จำนวน ๑ ราย ได้แก่ น

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติการราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

ศูนย์วิจัยและเตือนภัยมลพิษโรงงานภาคตะวันออก
โทร. ๐ ๓๓๑๓ ๖๐๕๔ ต่อ ๕๐๐๑-๒
ไปรษณีย์อิเล็กทรอนิกส์ eirw@diw.mail.go.th

“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”

๒๕๖๘๐๘



ที่ อก ๐๓๓๐(๓)/ ๕๕๐๕

กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท
เขตราชเทวี กรุงเทพฯ ๑๐๔๐๐

๒๗ พฤษภาคม ๒๕๖๔

เรื่อง เปลี่ยนแปลงชื่อ-สกุลบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการ การ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอ ทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๑๕ พฤษภาคม ๒๕๖๔

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๓๒๓ สถานที่ตั้งเลขที่ ๖๑๖/๑๐ หมู่ที่ ๕ ตำบลแม่น้ำคู้ อำเภอบลวกแดง
จังหวัดระยอง ขอเปลี่ยนแปลงชื่อ-สกุลบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้เปลี่ยนแปลงชื่อ-สกุลบุคลากร จำนวน ๑ ราย

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

ศูนย์วิจัยและเตือนภัยมลพิษโรงงานภาคตะวันออก
โทร. ๐ ๓๓๑๓ ๖๐๕๔ ต่อ ๕๐๐๑-๒
ไปรษณีย์อิเล็กทรอนิกส์ eirw@diw.mail.go.th

“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”



๕๗๖๔

๐๒ ธันวาคม

เรื่อง เปลี่ยนแปลงสารมลพิษที่วิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แ

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลง
ลงวันที่ ๓๑ ตุลาคม ๒๕๖๔

สิ่งที่ส่งมาด้วย เอกสารแนบท้ายหนังสือเปลี่ยน
บริษัท เอแอลเอส แลบบอราทอรี

ตามคำขอที่อ้างถึง บริษัท เอ
วิเคราะห์เอกชน เลขทะเบียน ว-๓๒๓ สถาน
จังหวัดระยอง ขอเปลี่ยนแปลงสารมลพิษที่วิเคราะห์

กรมโรงงานอุตสาหกรรมพิจารณา
เพิ่มขอบข่ายชนิดสารมลพิษที่วิเคราะห์ในน้ำเส

อนึ่ง หนังสือฉบับนี้จะสิ้นสุดอายุ
ในวันที่ ๒๘ มิถุนายน ๒๕๗๑

จึงเรียนมาเพื่อทราบ

เกิด

ห้องปฏิบัติการวิเคราะห์เอกชน

น ๒ แผ่น

ทศไทย) จำกัด ห้องปฏิบัติการ
เบลแมนน้ำคู้ อำเภอบลวกแดง
นั้น

าทอรี กรุ๊ป (ประเทศไทย) จำกัด
)

ห้องปฏิบัติการวิเคราะห์เอกชน

ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน
ศูนย์วิจัยและเตือนภัยมลพิษโรงงานภาคตะวันออก
โทร. ๐ ๓๓๑๓ ๖๐๕๔ ต่อ ๕๐๐๑-๒
ไปรษณีย์อิเล็กทรอนิกส์ eirw@diw.mail.go.th

een Industry

๒๕๖๔-๒๕๖๕

“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Arsenic	Digestion, Inductively Coupled Plasma Method
2	Barium	Digestion, Inductively Coupled Plasma Method
3	Cadmium	Digestion, Inductively Coupled Plasma Method
4	Chromium	Digestion, Inductively Coupled Plasma Method
5	Copper	Digestion, Inductively Coupled Plasma Method
6	Hexavalent Chromium	Colorimetric Method
7	Lead	Digestion, Inductively Coupled Plasma Method
8	Manganese	Digestion, Inductively Coupled Plasma Method
9	Mercury	Digestion, Cold-Vapor Atomic Absorption Spectrometric Method
10	Nickel	Digestion, Inductively Coupled Plasma Method
11	Selenium	Digestion, Inductively Coupled Plasma Method
12	Trivalent Chromium	Calculation
13	Zinc	Digestion, Inductively Coupled Plasma Method

น้ำใต้ดิน จำนวน 20 รายการ

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
1	Aluminum	Digestion, Inductively Coupled Plasma Method
2	Antimony	Digestion, Inductively Coupled Plasma Method
3	Arsenic	Digestion, Inductively Coupled Plasma Method
4	Barium	Digestion, Inductively Coupled Plasma Method
5	Beryllium	Digestion, Inductively Coupled Plasma Method
6	Cadmium	Digestion, Inductively Coupled Plasma Method
7	Chromium	Digestion, Inductively Coupled Plasma Method
8	Chromium (III)	Calculation
9	Chromium (VI)	Colorimetric Method
10	Copper	Digestion, Inductively

ลำดับที่	สารมลพิษ	วิธีวิเคราะห์
11	Iron	Digestion, Inductively Coupled Plasma Method
12	Lead	Digestion, Inductively Coupled Plasma Method
13	Manganese	Digestion, Inductively Coupled Plasma Method
14	Mercury	Digestion Cold-Vapor Atomic Absorption Spectrometric Method
15	Molybdenum	Digestion, Inductively Coupled Plasma Method
16	Nickel	Digestion, Inductively Coupled Plasma Method
17	Selenium	Digestion, Inductively Coupled Plasma Method
18	Silver	Digestion, Inductively Coupled Plasma Method
19	Vanadium	Digestion, Inductively Coupled Plasma Method
20	Zinc	Digestion, Inductively Coupled Plasma Method

APHA, AWWA, WEF. **Standard Methods for the Examination of Water and Wastewater**. 24th ed. Washington, DC: APHA, 2023.



กรมโรงงานอุตสาหกรรม
ถนนพระรามที่ ๖ แขวงทุ่งพญาไท

๐๖ มีนาคม ๒๕๖๔

เรื่อง เปลี่ยนแปลงบุคลากรของห้องปฏิบัติการวิเคราะห์

เรียน กรรมการผู้จัดการ บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด

อ้างถึง คำขอขึ้นทะเบียน/ต่ออายุ/เปลี่ยนแปลงบุคลากร และชนิดสารมลพิษของห้องปฏิบัติการวิเคราะห์เอกชน
ลงวันที่ ๖ กุมภาพันธ์ ๒๕๖๔

ตามคำขอที่อ้างถึง บริษัท เอแอลเอส แลบบอราทอรี กรุ๊ป (ประเทศไทย) จำกัด ห้องปฏิบัติการ
วิเคราะห์เอกชน เลขทะเบียน ว-๓๒๓ สถานที่ตั้งเลขที่ ๖๑๖/๑๐ หมู่ที่ ๕ ตำบลแม่น้ำคู้ อำเภอบลวกแดง
จังหวัดระยอง ขอเปลี่ยนแปลงบุคลากร ความละเอียดแจ้งแล้ว นั้น

กรมโรงงานอุตสาหกรรมพิจารณาแล้ว ให้เพิ่มเจ้าหน้าที่ห้องปฏิบัติการวิเคราะห์เอกชน
จำนวน ๗ ราย ได้แก่

๑)		ทะเบียนเลขที่	
๒)		ทะเบียนเลขที่	
๓)		ทะเบียนเลขที่	
๔)		ทะเบียนเลขที่	
๕)		ทะเบียนเลขที่	
๖)		ทะเบียนเลขที่	
๗)		ทะเบียนเลขที่	

อนึ่ง หนังสือฉบับนี้จะสิ้นสุดอายุพร้อมหนังสือต่ออายุรับขึ้นทะเบียนห้องปฏิบัติการวิเคราะห์เอกชน
ในวันที่ ๒๘ มิถุนายน ๒๕๗๑

จึงเรียนมาเพื่อทราบ

ขอแสดงความนับถือ

นักวิทยาศาสตร์เชี่ยวชาญ วิชาการการแทน
ผู้อำนวยการกองวิจัยและเตือนภัยมลพิษโรงงาน
ปฏิบัติราชการแทนอธิบดีกรมโรงงานอุตสาหกรรม

กองวิจัยและเตือนภัยมลพิษโรงงาน
ศูนย์วิจัยและเตือนภัยมลพิษโรงงานภาคตะวันออก
โทร. ๐ ๓๓๓๓ ๖๐๕๕ ต่อ ๕๐๐๑-๒
ไปรษณีย์อิเล็กทรอนิกส์ eirw@diw.mail.go.th

“อุตสาหกรรมก้าวไกล ประเทศไทยก้าวหน้า ร่วมกันพัฒนา อุตสาหกรรมสีเขียว”

When you need to be sure

SGS (THAILAND) LIMITED

238 TRR Tower, 19th- 21st Floor,
Naradhiwas Rajanagarindra Road,
Chong Nonsi, Yannawa, Bangkok 10120
t: +66 (0)2 678 18 13
e: enquiry.thailand@sgs.com
www.sgs.co.th

SGS